



TV is not included.

2 Grow-with-Me Levels!

Get baby moving, playing and learning with so much variety—and so much fun! The Learn & Move Music Station easily connects to your TV, with five interactive worlds to discover on two levels. Baby can press the colorful piano keys or move the monkey, puppy and kitty to explore plenty of active learning. C'mon, let's play!

9M+ Level 1

Character friends come to life as baby plays! Hear songs, learn about body movements, animals, numbers, first words, greetings and more.

18M+ Level 2

Interactive games as baby grows! Play "Head, Shoulders, Knees & Toes" with Puppy, have a talent show with shapes and colors, and lots more!

5 Places to Play!

- Body Moves Dance Party
- Rhythm & Numbers Farm
- Melody Garden
- Movin' ABC Zoo
- Shapes & Colors Music Show



Consumer Information

Safety Tips

- The receiver is not a toy. Adult set-up is required for TV connect mode.

Notes

- Please keep this owner's manual for future reference, as it contains important information.
- Requires three "AA" (LR6) and three "C" (LR14) **alkaline** batteries for operation. Batteries are not included.
- Adult assembly is required. Tool required for battery installation: Phillips screwdriver (not included).
- This product is intended for use indoors.
- Bright sunlight or incandescent light may affect the range between the piano and the receiver. Try dimming the light in the room.

Care

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not use bleach. Do not use harsh or abrasive cleaners. Do not immerse.
- This product has no consumer serviceable parts. Do not take this product apart.

 
FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Parts

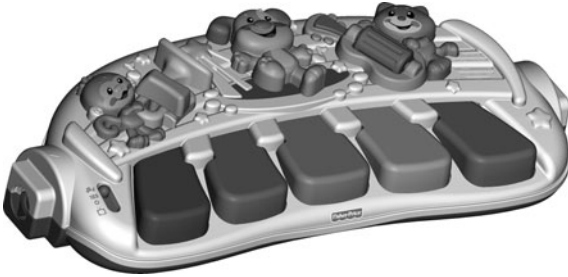

Keyboard



Receiver
(Not a Toy)



2 Legs
(Left and Right)



2 Supports

Assembly - Sit & Play

 


Support
Star Button



Leg
Large Slot

1

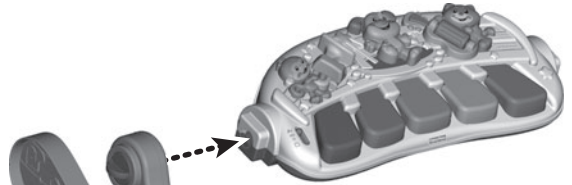- While pressing the star button on a support, fit the end of the support into the large slot in one of the legs, as shown. Make sure you hear a **"click"**.
- Repeat this procedure to assemble the other support and leg.



2

- Position the keyboard so it is facing up, as shown.
- Align the  symbol on a leg assembly with the arrow  on the keyboard.
- Fit the leg assembly onto the side of the keyboard.



Knob

3

 
- Turn the knob on the leg assembly to secure it to the keyboard.
- Repeat this procedure to assemble the other leg assembly to the keyboard.


 
Assembly - Stand & Dance




Note: If you are converting the toy from Sit & Play mode to Stand & Dance, first turn the knobs on each side of the keyboard to remove the leg assemblies. Then, press the star buttons to remove the supports from each leg.

2

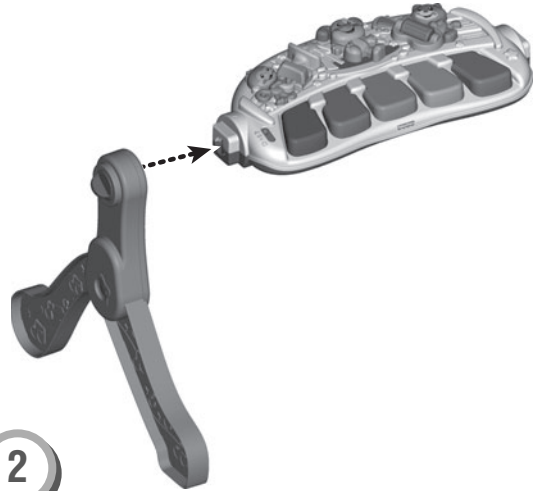


- Position the keyboard so it is facing up, as shown.
- Align the  symbol on a leg assembly with the arrow  on the keyboard.
- Fit the leg assembly onto the side of the keyboard.

 1

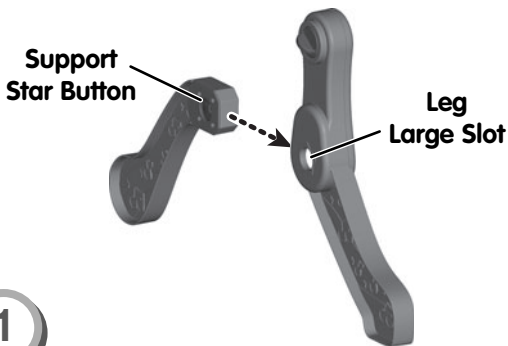

- While pressing the star button on a support, fit the end of the support into the large slot in one of the legs, as shown. Make sure you hear a **"click"**.
- Repeat this procedure to assemble the other support and leg.


 
3

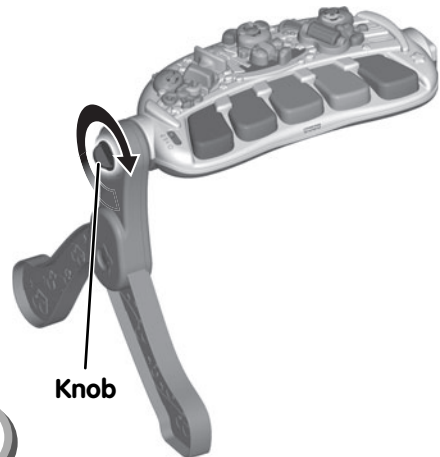

- Turn the knob on the leg assembly to secure it to the keyboard.
- Repeat this procedure to assemble the other leg assembly to the keyboard.

Battery Installation

 
 
When function is erratic or stops, it's time for an adult to change the batteries!
We recommend using **alkaline** batteries for longer battery life.

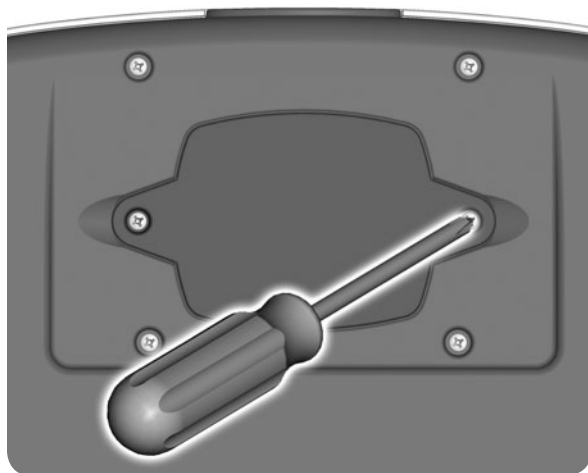


- Locate the battery compartment door on the bottom of the keyboard.
- Loosen the screws in the battery compartment door. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.



  Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

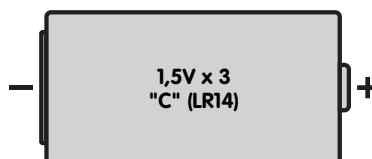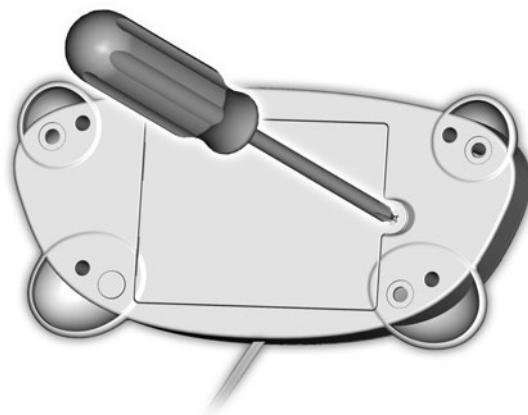

- Locate the battery compartment door on the bottom of the receiver.
- Loosen the screw in the battery compartment door. Remove the battery compartment door.
- Insert three "C" (LR14) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.

Hint: When receiver battery power is weak, you will see a low battery symbol  on your TV screen.

Battery Installation

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

 
ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.


NMB-003


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Adult Set-Up (TV Connect Mode)


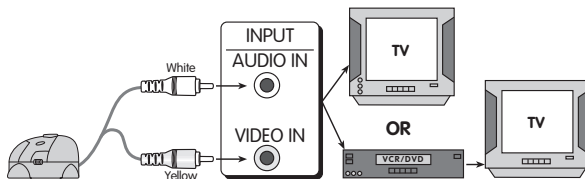


IMPORTANT! Your TV or VCR/DVD must have audio and video input jacks.

   - Plug the audio-video pins on the receiver into the matching colored input jacks on your TV or VCR/DVD (yellow for "Video In" and white for "Audio In").
 - Place the piano in front of the receiver.
 - The piano should be at least 3 but no more than 15 feet from the receiver.
 - Make sure the receiver is placed on a flat surface, either on ground level or no more than 5 feet off of the ground.
 - Make sure the receiver is centered in front of the piano.
 - Make sure there is a clear path between the piano and the receiver.
 - Turn your TV or VCR/DVD power **ON**.
 - Slide the power switch on the receiver to **ON** ● . Slide the power/mode switch on the piano to **TV Connect** .
- Hint: The L.E.D. on the receiver should always be on and will flash when there is a wireless connection to the piano.*
- To find the picture on your TV screen, set your TV's or VCR's/DVD's mode selector to INPUT or VIDEO IN.
 - To adjust sound in TV Connect Mode, use your TV or VCR/DVD volume control.

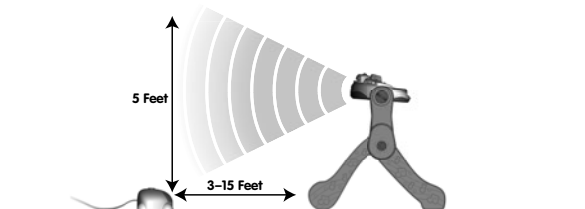

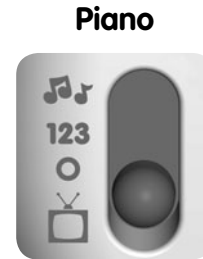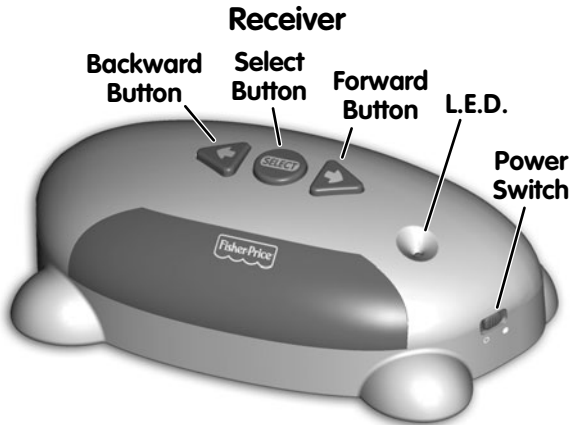


Adult Set-up (TV Connect Mode)



**Power/Mode
Switch**

- Power/Mode Switch – Slide this switch to **TV Connect**  mode.

- Power Switch – Slide the switch to **ON** ● or **OFF** ○.
- Backward Button  – Press to scroll backward on screen.
- Forward Button  – Press to scroll forward on screen.
- Select Button  – Press to make a selection on screen.

Adult Set-Up (TV Connect Mode)



 
Levels

- Use the backward and forward buttons on the receiver to scroll through levels. Levels can only be changed by an adult.
 - Level 1 - 9M+
 - Level 2 - 18M+

- Press the select button on the receiver to choose a level.

Background Music

- Use the backward and forward buttons on the receiver to toggle background music on or off. Press the select button to make a choice.

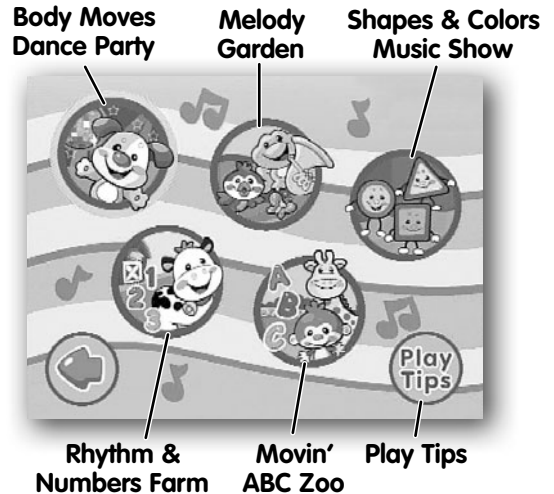

Activities

- Use the backward and forward buttons on the receiver to scroll through activities. When you find one that you like, press the select button.
- The piano will turn off (sleep mode) if it is not used for three minutes. Press a key on the piano to turn on again.

Body Moves Dance Party



Level 1

- Press a key on the piano to learn about different parts of the body. Keep pressing keys to hear a song!
- Slide the trumpet, turn the puppy or spin the roller to change the animal on screen.



Level 2

- Press a key on the piano to hear a body part. Watch the animals to see what they do. Now it's your turn! "Toes, touch your toes!" "Wiggle your hips side to side."
- Slide the trumpet, turn the puppy or spin the roller for special effects!

Rhythm & Numbers Farm



Level 1

- Press a key on the piano to learn about animals! Listen to the name of the animal and the sound it makes.
- Keep pressing the keys to hear a song!
- Slide the trumpet, turn the puppy or spin the roller to watch the animals on screen.



Level 2

- Press a key on the piano to count animals on the farm. Keep pressing keys to hear a song!
- Slide the trumpet, turn the puppy or spin the roller for special effects!

Melody Garden



Level 1

- Press a key on the piano to learn about instruments! Listen to the name of the instrument and the sound it makes.
- Keep pressing the keys to hear a song.
- Slide the trumpet, turn the puppy or spin the roller to watch the animals on screen.



Level 2


- Press the keys on the piano to play the instruments and build a song!
- Slide the trumpet, turn the puppy or spin the roller for different sound effects!

Movin' ABC Zoo



Level 1

 
- Press a key on the piano to learn about zoo animals! Listen to the name of the animal and watch it move.
- Keep pressing the keys to hear a song!
- Slide the trumpet, turn the puppy or spin the roller to watch the animals on screen.

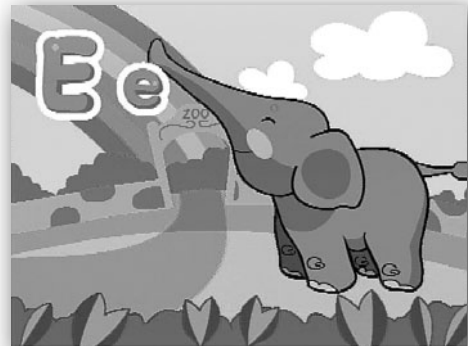

Level 2


- Press a key on the piano for letters in the alphabet. Keep pressing the keys to learn the whole alphabet. See if you can find an animal that starts with that letter!
- Slide the trumpet, turn the puppy or spin the roller for special effects!

 Shapes & Colors Music Show

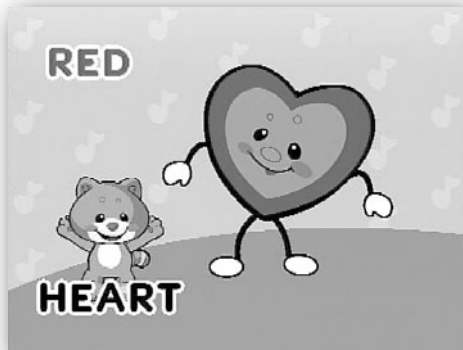

Level 1

 - Press a key on the piano to learn about shapes and colors! Listen to the color of the shape and its name.
- Keep pressing the keys to hear a song!
- Slide the trumpet, turn the puppy or spin the roller to watch the animals on the screen!

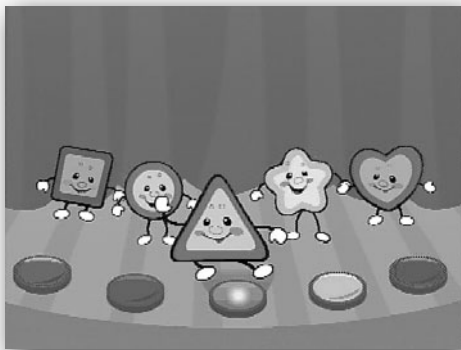

Level 2

- Press a piano key to hear a dance song for that shape. Keep pressing the keys to see the shapes and colors music show!
- Try another button.
- Slide the trumpet, turn the puppy or spin the roller to see the shapes slide, wiggle and spin!

Play Tips

 


- From the menu, use the backward and forward buttons on the receiver to scroll to Play Tips.
- Press the select button on the receiver to select play tips and view fun tips for you and your child.



- Use the backward or forward buttons to scroll to the arrows. Press the select button to go to the next page and view more play tips.

Learning and Music Modes

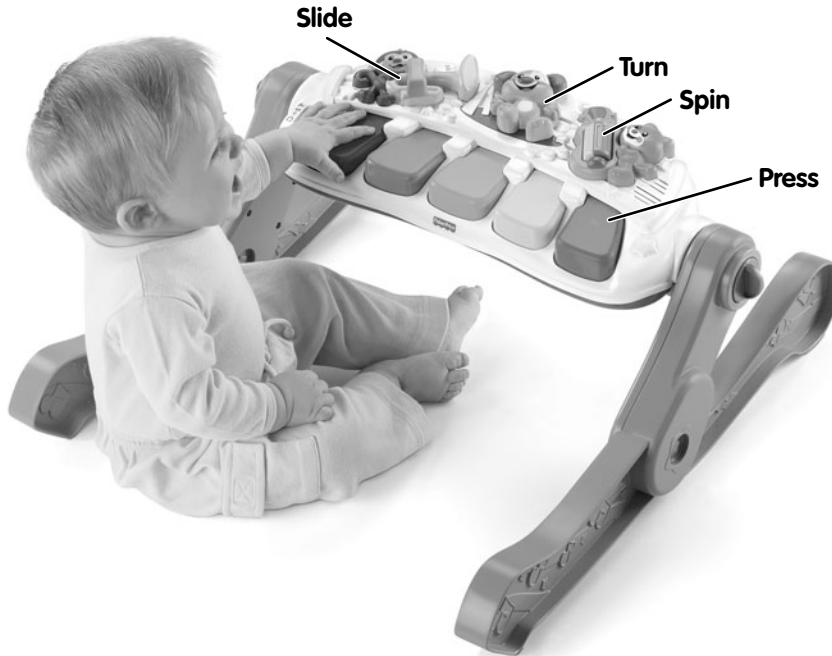

Power/Mode Switch



Volume Switch

- Slide the power/mode switch on the piano to **Learning 123** or **Music** mode.
- Slide the volume switch to **low volume** or **high volume**.

Hint: This volume control switch controls sound only in **Learning 123** and **Music** modes. It does not control sound when using this toy in TV connect mode.

123 Learning


Press the piano keys to learn the key colors. Slide the trumpet, turn the puppy or spin the roller to learn about the animals.

Music

Press the piano keys to play a tune. Slide the trumpet, turn the puppy or spin the roller for more instrument sounds!

- If the piano begins to operate erratically, you may need to reset the electronics. Slide the power/mode switch **OFF** and then back **Learning 123** or **Music**.
- When you are finished playing, slide the power/mode switch **OFF**.

Troubleshooting Guide

Problem	Cause	Solution
No image on the TV	TV or VCR/DVD is not set to proper input	Press the channel down button on the VCR/DVD or TV and check for an INPUT channel below channel 2.
		Use the menu system on your TV or VCR/DVD to find INPUT or SOURCE. Change to INPUT or SOURCE.
		Refer to your TV's or VCR/DVD's instruction manual.
	Batteries in the piano/receiver are weak or dead	Replace the batteries in the piano with three, new "AA" (LR6) alkaline batteries and the receiver with three, new "C" (LR14) alkaline batteries.
		Fully tighten both screws in the battery compartment door.
	No wireless connection (L.E.D. on receiver is off)	Distance between piano and receiver must be 3-15 feet.
		Receiver must be placed flat on ground level or no more than 5 feet off the ground.
		Make sure receiver is centered in front of piano.
		Make sure you have a clear path between the piano and the receiver. Do not place the receiver in a closed cabinet.
		Make sure receiver power is on. Slide the power switch ON ●.
Receiver is in sleep mode (after 1 hour of non-use). Press any button on the receiver to wake it up.		
Receiver audio-video pins not connected to TV or VCR/DVD input jacks.		
No wireless connection (L.E.D. on receiver is on but not flashing)	Piano power is off or it is in Learning or Music mode. Slide the power/mode switch to TV Connect <input type="checkbox"/> mode.	
	Piano is in sleep mode (after 3 minutes of non-use). Press a key on the piano to wake it up.	
Low battery symbol  appears on TV screen	Batteries in the receiver are weak	Replace the batteries in the receiver with three, new "C" (LR14) alkaline batteries.
Response on TV from piano is intermittent	Interference from another infrared device (ie.: remote control)	Do not use a remote control in the same room when using this toy.
	Software is not designed to interrupt an animated learning sequence from constant button pressing, sliding, turning or spinning.	Once an animated learning sequence is complete, the software is ready to respond to a press, slide, turn or spin by baby.
Image is stretched or distorted on a wide screen TV	TV aspect ratio set incorrectly	This product is designed for use with a 4:3 aspect ratio (display setting) and you should see black bars on the sides of the image. For best picture, do not use a 16:9 aspect ratio (stretched) wide screen setting. For more information on changing this setting, refer to your TV owner's manual.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.
©2010 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>