

Fisher-Price®

Grow with Me Stroller

Instructions Model No. FP3456

Your Fashion May Vary



Please save these instructions for future reference,
as they contain important information.

Adult assembly is required. (Tools are not needed for assembly.)

Maximum weight of child: Not to exceed 40 lbs (18 kg)

Maximum height of child: Not to exceed 43 in (109 cm)

Maximum storage weight for lower storage basket: 8 lbs (3.6 kg).

Message To Parents

Thank you for purchasing the Fisher-Price® Grow with Me Stroller, a lightweight stroller designed to comfortably accommodate one infant or child. Special features meet the different needs of both infant and toddlers. We hope you will find the features and styling of this product a perfect fit in satisfying the needs of both you and your children.

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us, toll-free, rather than returning it to the store. Usually we can solve the problem over the telephone or by sending you replacement parts.

 
If you have a question or a problem, call J. Mason Customer Service at 800-242-1922 (or 818-768-8688) from 8:30am. to 5:00pm. PST. for quick service. You can also reach us by e-mail at: customerservice@jmason.com

WARNING

The safety of your child while in the stroller depends on you! Please read and understand the following warnings and instructions before use.

- Read any caution labels on the frame before setting child in seat.
- **ONLY** one child should be seated in the stroller at a time.
- Remove and destroy all packing materials including silica gel bags.
- **NEVER** leave children unattended. Always keep child in view.
- Avoid serious injury from falling or sliding out. **ALWAYS** use seat belt.
- **DO NOT** carry additional children, goods or accessories in or on the stroller, except as recommended in the instructions.
- When making adjustments to your stroller, always ensure that all parts of your child's body are clear of moving parts.
- The stroller may become unstable if the maximum weight of the storage area is exceeded. **DO NOT** exceed the maximum weight limit of 8 lbs. (3.6 kg) in the storage basket.
- The stroller may become unstable if items are hanging from or placed on the handle. **DO NOT** hang shopping bags, purses or accessories on the handle.
- This stroller is for use by one child only who weighs less than 40 lbs. (18 kg) and who is no taller than 43 in. (109 cm.). Excessive weight may cause a hazardous, unstable condition to exist.
- **ALWAYS** use the brakes when the stroller is stopped! **DO NOT** leave stroller unattended on a hill or incline even when brakes are latched. The stroller may roll down hill.
- To avoid burns, **NEVER** put hot liquids in tray.
Avoid possible tipping. **DO NOT** place more than 2 lb. (0.9 kg) on the parent cup tray.
- **NEVER** lift stroller by tray!
- **DO NOT** allow child to climb unassisted into stroller, or to play with or hang onto stroller, as stroller may tip over.
- **DO NOT** use stroller on stairs or escalators with child in it. Child could fall out and become injured.
- Care must be taken when folding and unfolding the product to prevent finger entrapment.
- Before each usage or assembly, inspect product for damaged hardware, loose joints, missing parts or sharp edges. **DO NOT** use product if any parts are missing or broken. Ask your dealer or contact J. Mason for replacements parts and instructional literature if needed. **DO NOT** use substitute parts.

Parts

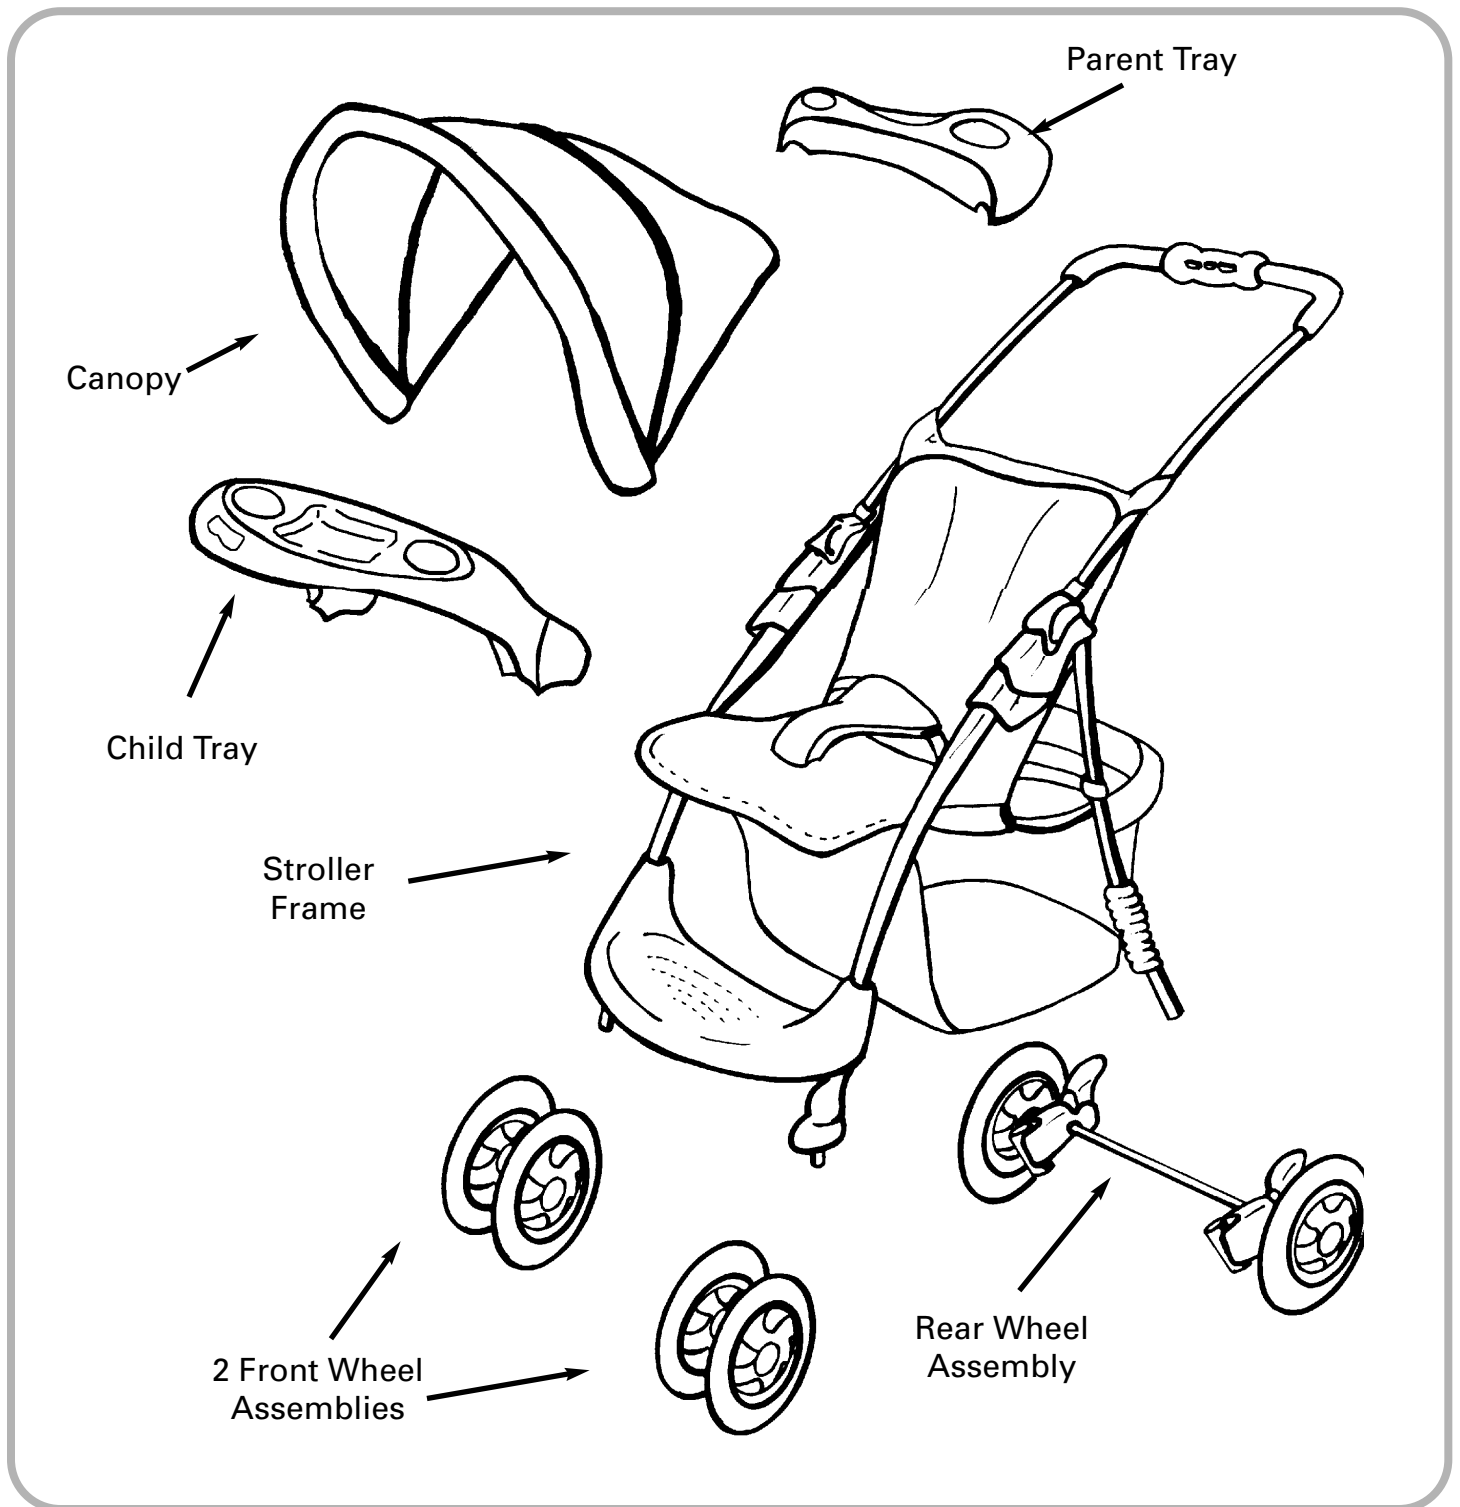

WARNING

Please keep plastic bags out of children's reach.
Dispose of plastic bags properly.

 
Assembly & Use

WARNING

When making adjustments to your stroller, always ensure that all parts of your child's body are clear of moving parts.




Lift storage clip.

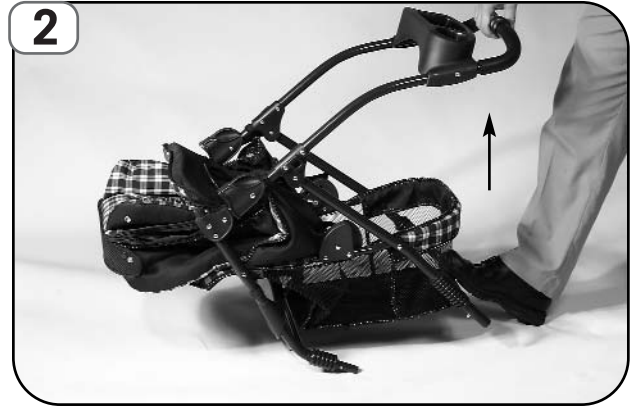

Place your foot on the rear frame tube and lift the handle until the frame locks snap into position.



 Turn the frame face down. Position rear axle assembly so brakes are pointed toward you. Push rear axle assembly firmly onto each leg so that the buttons "snap" into the holes in the wheel brackets.

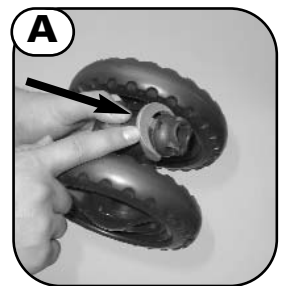

IMPORTANT! Lock wheel swivel into place before inserting wheel assembly (A). There is a right side assembly for the right side of the stroller. Fit a front wheel assembly to each front leg. Push assembly firmly onto each leg so that the buttons "snap" into the holes in the wheel brackets.



Adjust the canopy by lifting or lowering to desired positions.

IMPORTANT:

Pull firmly on all wheel assemblies to be sure that they are securely attached.

Assembly & Use

WARNING

Never lift stroller by tray!



Child Tray

Position tray onto front of frame.



Snap latches in place.



Parent Tray

Position parent tray onto handlebar. Push parent tray down to "snap" in place.

WARNING

**To avoid burns, never put hot liquids in this tray.
Avoid possible tipping. DO NOT place more than 2 lb. (0.9 kg) on this tray.**

Assembly & Use



 
WARNING

To prevent serious injury or death from falls or sliding out, always use the restraint belts.



Restraint Belts

Place your child in the stroller. Pull the crotch belt up between your child's legs. Fasten both waist belts to the crotch belt. **Make sure you hear a "click" on both sides.**

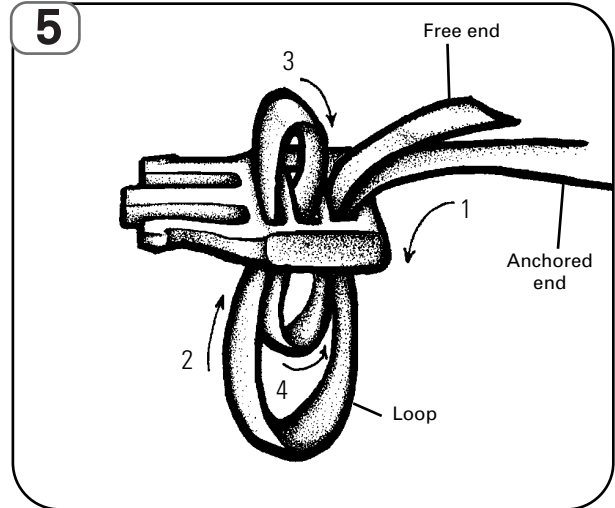

To tighten waist belt, feed the anchored end of the waist belt up through the buckle to form a loop. Pull the free end of the waist belt through.

To loosen waist belt, feed the free end of the waist belt down through the buckle to form a loop. Pull the anchored end of the waist belt.

Assembly & Use (continued)



WARNING

Always use the brakes when the stroller is stopped! Do not leave stroller unattended on a hill or incline even when brakes are latched. The stroller may roll down hill.



Safety Brakes

Press down on each rear brake lever with your foot until each clicks into position. Lift brake levers with foot to release.



Footrest

Push down footrest until it "snaps" into place.

Infant Seat Set Up



Undo buckles behind seat.



Grasp infant seat bottom and seat top and pull to open.



Ensure that the lock is set.



Secure by snapping buckles on each side of infant seat.

IMPORTANT:

Buckles must be attached when using infant seat!

Toddler Seat Set Up



1 Release infant seat lock.



2 Grasp infant seat top and bottom. Bring together.



3 Snap buckles behind seat to secure.



Recline

The toddler seat has two positions: upright and medium recline. Snap together two pair of buckles, one on each side of the seat to achieve the upright position. For medium recline position, buckles are not joined.

 
To Fold

IMPORTANT!

**Before folding stroller for storage,
remove all objects from storage basket.**



Recline infant seat.

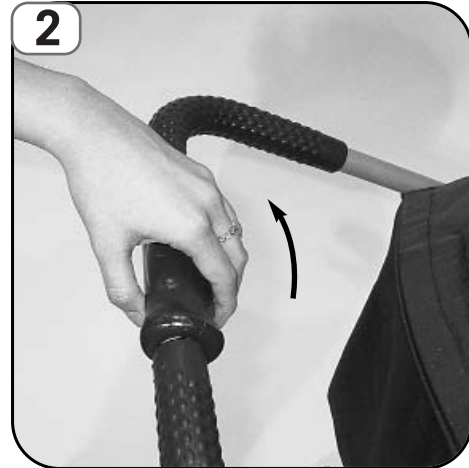

To fold your stroller, push the red button toward the center and twist backward on grip until side latches disengage.



Push handle down to fold stroller.



Lower the clip to the lock post located on the side of the stroller frame.

Maintainance

- Wipe down all plastic and cloth surfaces with a soft cloth. Use lukewarm water and mild detergent, air dry.
- Wipe metal parts clean with a soft damp cloth. Then wipe down with a soft dry cloth. Do not use abrasive or solvents.
- Dry off stroller with a soft cloth if used in inclement weather to assure longer life.

J. Mason Warranty

We would like to thank you for your purchase of this product and welcome you to our growing family of satisfied owners. We are very proud of our fine quality products and are confident that you will find the same in our workmanship. However, we recommend you retain this warranty so that should a problem arise, we will be able to respond quickly and efficiently.

J. Mason warrants the original components of our products. J. Mason will repair, or at its option, replace any original parts due to defects in material and workmanship. This warranty is limited to the original retail purchaser only, and under ordinary usage. This warranty is further limited to replacing the defective part without charge. The company shall not be responsible for consequential or special damages or damages resulting from use in any activities outside the realm of normal use.

This warranty will remain in effect for five (5) years on the frame and ninety (90) days on parts (excluding wearable parts), from the date of purchase as shown on the original bill of sale.

This warranty does not apply to any J. Mason product that has been abused, misused, altered by parts substitution, or used for daycare, rental and/ or other commercial purposes.

Transportation expenses are not covered in this warranty. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Proof of purchase is required to validate protection under this limited warranty.

Be a safe parent. NEVER leave child unattended!



10671 Lanark Street, Sun Valley, CA 91352
Toll Free: 1-800-242-1922 Outside USA: (818) 768-8688
www.jmason.com

Fisher-Price and related trademarks and copyrights are used under license from Fisher-Price, Inc.,
a subsidiary of Mattel, Inc., East Aurora, NY 14052. U.S.A. ©2002 Mattel, Inc.
All Rights Reserved. Manufactured for and distributed by J. Mason.
Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>