



CARE AND CLEANING

To Clean Appliance:

Open appliance door (D), while holding the appliance with two hands, press two Release Buttons (K) with your thumbs, rotate appliance away from you, and allow appliance to rest on the counter. After cleaning, hold appliance with two hands and rotate upright until the latches lock.

Check Foam Gasket (M) around Drip Tray (O) and Upper Gasket (Q) which surrounds the Upper Bag Detection Tray (P) to make sure they are free from food materials and the lower Foam Gasket is properly inserted into gasket channel.

For important product maintenance information and helpful tips, please refer to the FoodSaver® Reference Guide included in your kit.

Antibacterial Drip Tray & Upper Bag Detection Tray

Empty Drip Tray after each use (See Fig. 7). Wash in warm soapy water or place in top rack of dishwasher. The Food Sensors in the Drip Tray (O) will not function correctly if liquid is allowed to remain in Drip Tray.

This appliance has a Tray Full indicator 2. When excess liquid fills the Drip Tray, the unit will turn off and the Tray Full Indicator light will activate. To resume normal operation, open Appliance Door (D), press two release buttons (K), rotate appliance away from you, and allow appliance to rest on the counter. Remove the Drip Tray, empty liquid, clean Drip Tray and replace in housing. When replacing drip tray, set the right end of the drip tray into place, then firmly snap the left side down (See Fig. 8). Appliance can be used without Drip Tray, however the Adjustable Food Sensor setting 6 will not function without the Drip Tray.

REMOVE FOR CLEANING



Fig. 7

Clean Upper Bag Detection Tray after each use. The Upper Bag Detection Tray (P) is removable for cleaning, remove by lifting the tabs on each end. Do not pull on the Upper Bag Detection Flags to remove the Upper Bag Detection Tray. Clean Upper Bag Detection Tray by washing in warm soapy water or placing in top rack of dishwasher. Upper Bag Detection Tray MUST be inserted to use the appliance. Without the Upper Bag Detection Tray, your FoodSaver® Appliance will not detect bag when inserted in the Vacuum Channel (E).

For important safety information and helpful tips, please refer to the FoodSaver® Reference Guide included in your kit. Questions? Visit us at www.foodsaver.com to get tips on vacuum sealing and order FoodSaver® brand accessories, bags and rolls, or call 1-877-777-8042 (U.S.).

©2008 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

Printed in China.




Quick Start Guide & User Manual for V3800 series appliances

Registering your appliance is quick and easy at www.prodregister.com/foodsaver. If you register on our website, you will have the opportunity to receive special bag and accessory introductory offers. Refer to the registration card in the box.

For more usage tips and safety information, please refer to the FoodSaver® Reference Guide or visit our website at www.foodsaver.com.

FEATURES OF YOUR FOODSAVER® APPLIANCE

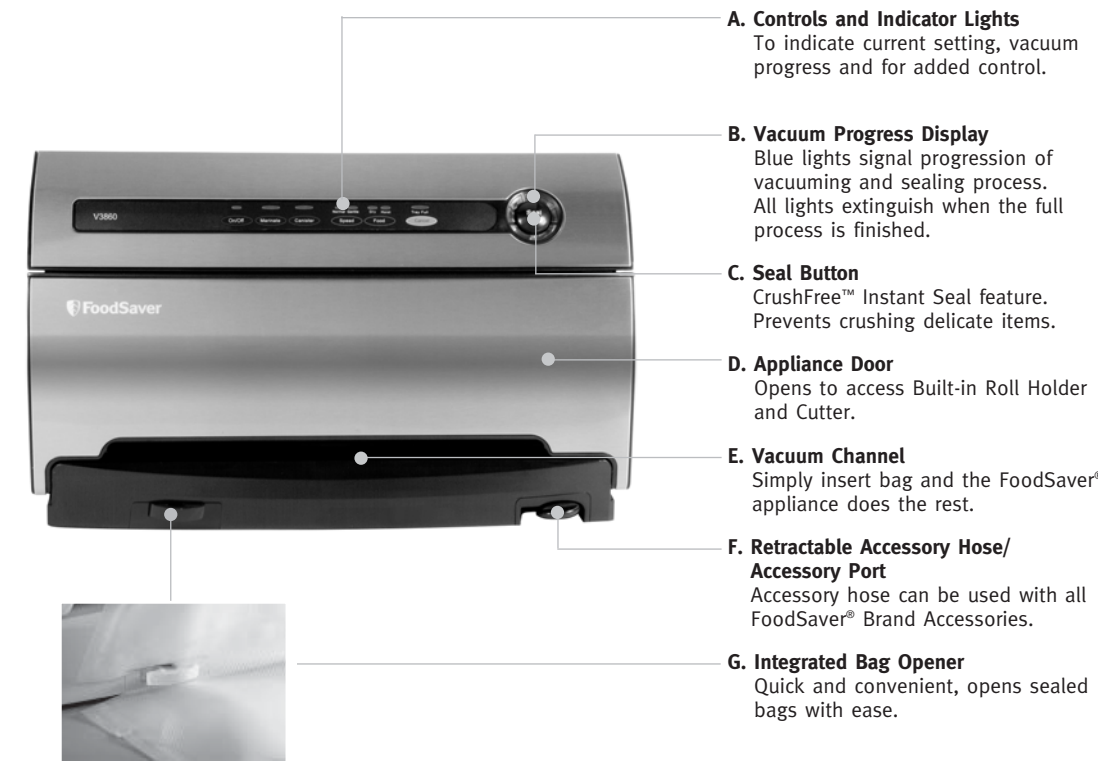

A. Controls and Indicator Lights
To indicate current setting, vacuum progress and for added control.

B. Vacuum Progress Display
Blue lights signal progression of vacuuming and sealing process. All lights extinguish when the full process is finished.

C. Seal Button
CrushFree™ Instant Seal feature. Prevents crushing delicate items.

D. Appliance Door
Opens to access Built-in Roll Holder and Cutter.

E. Vacuum Channel
Simply insert bag and the FoodSaver® appliance does the rest.


F. Retractable Accessory Hose/Accessory Port
Accessory hose can be used with all FoodSaver® Brand Accessories.

G. Integrated Bag Opener
Quick and convenient, opens sealed bags with ease.

P.N.128164

T180-00455

FEATURES OF YOUR FOODSAVER® APPLIANCE

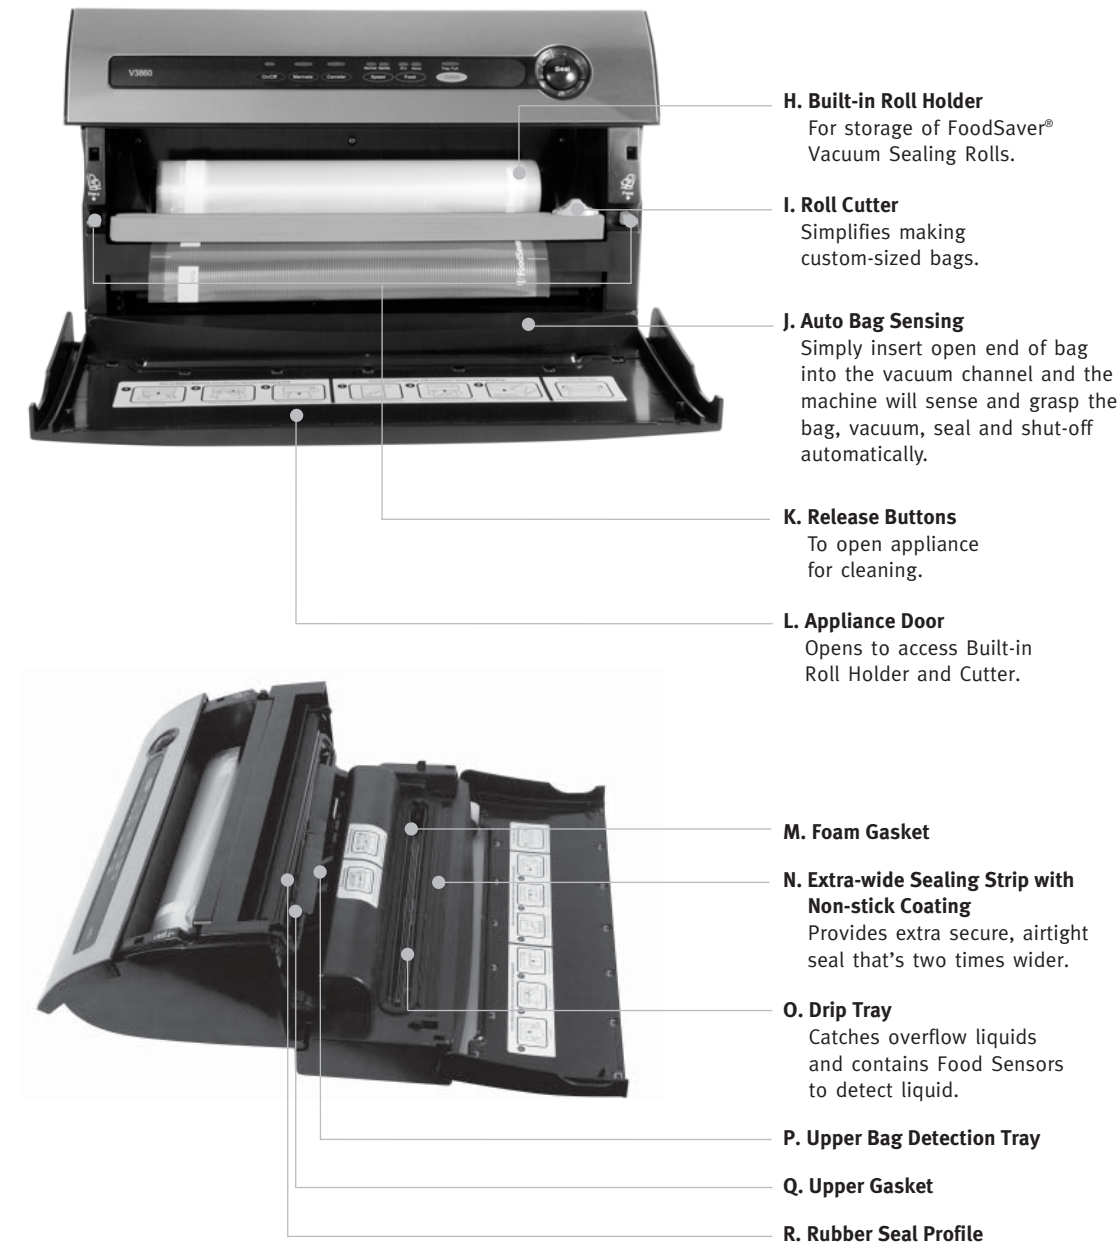

H. Built-in Roll Holder
For storage of FoodSaver® Vacuum Sealing Rolls.

I. Roll Cutter
Simplifies making custom-sized bags.

J. Auto Bag Sensing
Simply insert open end of bag into the vacuum channel and the machine will sense and grasp the bag, vacuum, seal and shut-off automatically.

K. Release Buttons
To open appliance for cleaning.

L. Appliance Door
Opens to access Built-in Roll Holder and Cutter.

M. Foam Gasket

N. Extra-wide Sealing Strip with Non-stick Coating
Provides extra secure, airtight seal that's two times wider.


O. Drip Tray
Catches overflow liquids and contains Food Sensors to detect liquid.

P. Upper Bag Detection Tray

Q. Upper Gasket

R. Rubber Seal Profile

FEATURES OF YOUR FOODSAVER® APPLIANCE

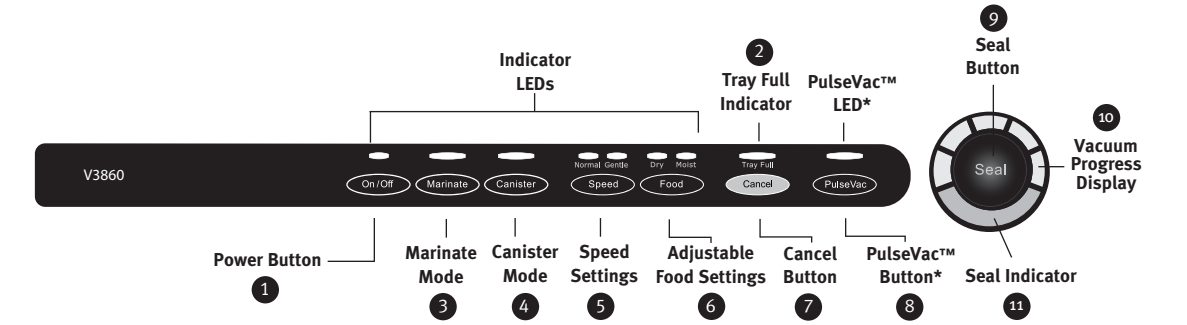

1 POWER BUTTON:
Press the power button to begin. The Power Indicator, Speed Indicator and Food Indicator lights will become illuminated. After Vacuum Sealing, press Power Button to turn appliance Off. Note: After 12 minutes, the appliance will turn Off automatically.

2 TRAY FULL INDICATOR LIGHT:
During the vacuum sealing process, small amounts of liquids, crumbs or food particles can be inadvertently pulled into the Drip Tray (O). When excess liquid fills the Drip Tray, the unit will turn off and the Tray Full Indicator 2 will activate. To resume normal operation, remove the Drip Tray, empty liquid, wash in warm soapy water or place in top rack of dishwasher. Dry and replace Drip Tray in trough. (See Care and Cleaning)

3 MARINATE MODE BUTTON
A ten minute predetermined sequence of vacuum pulse to rest ratio allowing foods to get optimum flavor infusion in the least amount of time. See "Marinating with your FoodSaver™" section on page 5.

4 CANISTER MODE BUTTON
Press to achieve best vacuum for canisters and accessories. Push Canister Vacuum Button 4 to begin vacuum process. Motor will run until Vacuum Sealing Process is complete.

5 SPEED SETTINGS BUTTON
When vacuum sealing delicate items, press Speed Setting Button 5 so that the gentle speed indicator light is illuminated. For more control you may press Seal Button 9 at any time to stop vacuum and begin automatic sealing process. Note: Appliance will default to Normal speed upon pressing the Power On Button or when power has been interrupted.

6 ADJUSTABLE FOOD SETTINGS BUTTON
For optimal vacuuming and sealing of moist or juicy foods, press the Adjustable Food Setting Button 6 until the Moist Indicator Light is illuminated. Choose the dry food setting for foods without liquid.

The Moist Food Indicator light will flash when Food Sealing Sensors automatically detect any moisture or liquid in the drip tray (O). Note: Appliance will default to Dry setting upon pressing the Power Button or when power has been interrupted, unless liquid is detected in the Drip Tray. (See Care and Cleaning section of this Quick Start Guide).

7 CANCEL BUTTON
Immediately halts the current function opening the Vacuum Channel.

8 PAUSE OR PulseVac™ CONTROL BUTTON (*not available on all models)
Use to manually control the vacuum process and avoid crushing delicate items. See tips section for further information.

9 SEAL BUTTON
CrushFree™ Instant Seal feature- This button has four uses:

1. Press to immediately stop the vacuum process and begin sealing the bag. This prevents crushing delicate items such as bread, cookies and pastries.
2. Press to create a seal when making bags from a FoodSaver® Roll.
3. Press to create a seal on Mylar bags (such as a potato chip bag) to keep food sealed airtight.
4. Press during PulseVac™ mode to seal bag.

10 VACUUM PROGRESS DISPLAY
Displays vacuum levels as the bag/canister is evacuated.

11 SEAL INDICATOR LIGHT
Constant Red light indicates sealing process is engaged. (Flashing light indicates error)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>