

This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.



Ford Motor Company Customer Relationship Center
P.O. Box 6248 | Dearborn, MI 48121
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)



9T4J 19G217 AA

August 2008 | First Printing | Quick Reference Guide | Edge | Litho in U.S.A.



SEATING

FOLD FLAT FRONT PASSENGER SEATBACK (if equipped)

The front passenger seatback can be folded to a horizontal position to make room for a long load. To fold the seatback, move the seat as far back as possible. Push the head restraint release button and move the head restraint fully down. Pull up on the recliner handle **A** located on the outboard side of the seat to fold the front passenger seatback. Without releasing the handle, push the seatback forward. Move the seat as far forward as possible.

2ND ROW SEAT RECLINE


To adjust the second row seatback to the desired position, while seated, pull the release lever **B** up and push the seatback rearward.

2ND ROW FOLD FLAT SEATBACK

To fold down the rear seat, pull up on the lever **B** on the outboard side of the seat cushion and let the seatback rotate downward into the load floor position. To return to the upright position, rotate the seatback upward until the seatback latches. The seatback will click when it is locked into position.

2ND ROW EASYFOLD™ SEATBACK RELEASE (if equipped)

The control buttons are located on the left-hand rear quarter trim panel (accessible from the liftgate area). Press and hold the control to lower the seat. The top portion lowers the RIGHT (40%) seatback, and the bottom portion lowers the LEFT (60%) seatback.

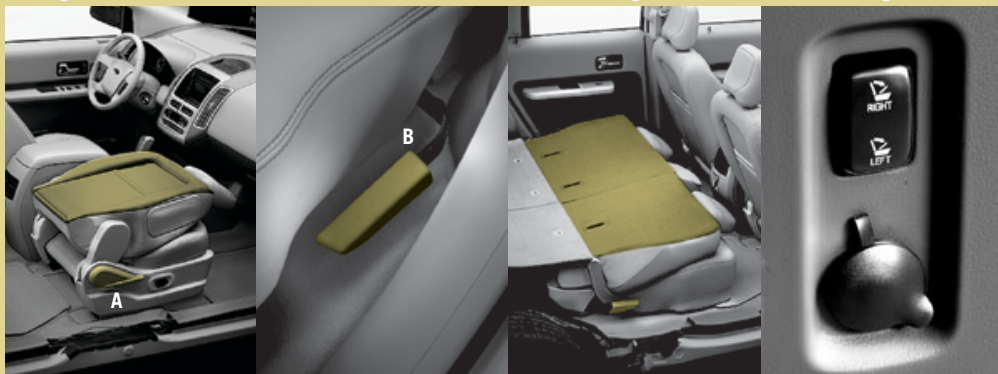

CLIMATE CONTROLS

DUAL AUTOMATIC TEMPERATURE CONTROL SYSTEM (DATC) WITH HEATED SEATS (if equipped)

1. DRIVER/PASSENGER TEMPERATURE CONTROLS

Press to increase or decrease the temperature on the driver or passenger side of the vehicle. Pressing the passenger side control will activate dual zone where the driver and passenger are able to select their own individual settings. If the passenger side controls are not activated, the driver side controls will determine the temperature

lights), twice for low heat (one light) and a third time to deactivate (no lights).

5. MANUAL OVERRIDE CONTROLS

Allows you to manually determine where airflow is directed (floor vents, instrument panel vents, rear seat floor vents or a combination). To return to fully automatic control, press AUTO.


the vehicle and may also help reduce undesired odors from reaching the interior of the vehicle.

9. DEFROST

Distributes outside air through the windshield defroster and demister vents to clear fog or thin ice from the windshield.

10. REAR WINDOW DEFROSTER

Press to clear the rear window of thin ice and fog. Press again to deactivate.

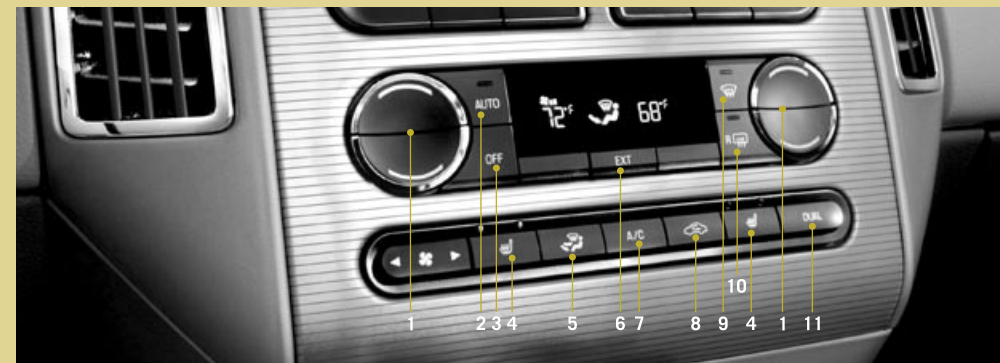

setting for the entire vehicle (single zone).

2. AUTO

Press to activate automatic temperature control. The system will automatically determine fan speed, airflow location, A/C (on or off) and outside or recirculated air based on your temperature selection.

3. OFF

Outside air is shut out and the fan will not operate.

4. DRIVER/PASSENGER HEATED SEATS

Press once for high heat (two

6. EXT Press to display the outside air temperature. Press again to return to interior temperature.

7. A/C

Press to activate/deactivate air conditioning. For a MAX A/C setting, press A/C, and set the temperature to 60°F (16°C) and the highest blower setting.

8. RECIRCULATION CONTROL

Press to recirculate cabin air. Recirculated air may reduce the amount of time to cool down the interior of

If your vehicle is equipped with both a rear defroster and heated mirrors, the same button will activate both.

11. DUAL (Single/dual temperature control)

Press to activate dual zone mode where the driver and passenger have control of their individual temperature settings. Press again to return to single zone where the driver's settings will determine the temperature for the entire vehicle.

ESSENTIAL INFORMATION

FUEL TYPE AND TANK CAPACITY

Front wheel drive vehicles have a fuel tank capacity of 19.2 gallons (72.7 L) while All Wheel drive vehicles have a fuel tank capacity of 20.8 gallons (78.7L). Your vehicle is designed to use "Regular" unleaded gasoline with an octane rating of 87. Do not use gasoline labeled as "Regular" in high altitude areas that are sold with Octane ratings less than 87. Do not use E85 fuels that are blended with a maximum of 85% ethanol.

TIRE PRESSURE

Your tire pressure is properly set at the dealership according to the recommended specifications found on the Safety Compliance Certification Label or Tire Label located on the on the B-Pillar or the edge of the driver's door. Check your tire pressure at least once a month and before long trips (including spare). As an added safety feature, your vehicle has a Tire Pressure Monitoring System (TPMS) that illuminates a low tire pressure warning light when one or more of your tires is significantly under-inflated. Improperly inflated tires can affect vehicle handling and can fail suddenly, possibly resulting in loss of vehicle control. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more information.

FUEL PUMP SHUT-OFF SWITCH

The fuel pump shut-off switch stops the electric fuel pump from sending fuel to your engine when your vehicle has sustained a substantial jolt. This switch is located behind a panel on

the left side of the cargo area. For more information, refer to the Roadside Emergencies chapter of your Owner's Guide.

LOCATION OF SPARE TIRE

If you get a flat tire while driving, do not apply the brake heavily. Instead, gradually decrease your speed. Hold the steering wheel firmly and slowly move to a safe place on the side of the road. Your vehicle is equipped with a temporary spare tire. The spare tire and tools are located in the rear cargo area of the vehicle, under the carpeted floor panel. For complete details on how to change your tire, please refer to the Roadside Emergencies chapter in your Owner's Guide.

REVERSE SENSING SYSTEM (if equipped)

Your vehicle may be equipped with a reverse sensing system which can warn you if there is a large object behind the vehicle that may be too low for you to see. The system will sound a warning tone that increases in frequency as the object gets closer and will sound continuously when the object is less than 10 inches away. Refer to your Owner's Guide for safety information and more details.

S.O.S. POST CRASH ALERT SYSTEM

Your vehicle is equipped with the S.O.S. Post Crash Alert system. This system provides audible and visual alarms in the event of a crash which causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate the system, press

the hazard flasher control, or you can press on your remote transmitter.

ROADSIDE ASSISTANCE

Your new Ford Edge comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, towing, and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006. For more information on coverage period and details of service, refer to your roadside assistance information.

ALL WHEEL DRIVE (AWD, if equipped)

Your vehicle may be equipped with All Wheel Drive (AWD). The AWD system is always active and uses all four wheels to power the vehicle. This increases traction, enabling you to drive over terrain and road conditions that a conventional two-wheel drive vehicle cannot. Refer to your Owner's Guide for more information. **Note:** If your vehicle is equipped with AWD, a spare tire of a different size (other than the tire provided) should never be used. Using a different size could cause the AWD system to stop functioning and default to front wheel drive. Your vehicle is not intended for off-road use.

INTEGRATED KEYHEAD TRANSMITTER (IKT) AND REMOTE ENTRY SYSTEM FEATURES

Your vehicle comes equipped with two specially programmed Integrated Keyhead Transmitters (IKTs). IKTs are both a programmed ignition key and a remote keyless entry transmitter. Press once to unlock the driver's door. The interior lamps will illuminate. Press twice to unlock all the doors. Press within three seconds to unlatch and open the power liftgate (if equipped). Press to lock all doors. Press again to confirm that all doors are closed. The horn will chirp and the turn lamps will flash. Press to activate the panic

ADDITIONAL FEATURES

PANORAMIC VISTA ROOF™ WITH DUAL POWER SUNSHADES (if equipped)

The panoramic Vista Roof™ and power sunshades are equipped with an automatic one-touch, express opening feature. To open, press and release. The front and rear sunshades will open simultaneously. Press again and the panoramic Vista Roof will open to the 'comfort' position. Press once more for the roof to fully open. To stop the one touch open feature at any time, press the control again. To close, pull down until the glass panel closes. Firmly pull the control again to fully close the Vista Roof™. Pull and hold the control down again to close the front and rear sunshades. To vent from a closed position, press TILT. To close, pull and hold TILT.

INTEGRATED KEYHEAD TRANSMITTER (IKT) AND REMOTE ENTRY SYSTEM FEATURES

Your vehicle comes equipped with two specially programmed Integrated Keyhead Transmitters (IKTs). IKTs are both a programmed ignition key and a remote keyless entry transmitter. Press once to unlock the driver's door. The interior lamps will illuminate. Press twice to unlock all the doors.

Press within three seconds to unlatch and open the power liftgate (if equipped). Press to lock all doors. Press again to confirm that all doors are closed. The horn will chirp and the turn lamps will flash.

Press to activate the panic alarm. The horn will sound and the turn lamps will flash. Press again or turn the ignition on to deactivate the panic alarm. **CAR FINDER:** Press twice within three seconds. The horn will chirp and the turn lamps will flash. It is recommended that this method be used to locate your vehicle, rather than using the panic alarm. Ensure that you keep the IKT adhesive security label in a safe place for future reference. Replacement Integrated Keyhead Transmitters are only available through your authorized dealer.

POWER LIFTGATE (if equipped)

To open the power liftgate (if equipped), press on the instrument panel, or press twice within three seconds on your remote entry transmitter, or press and hold the control button located on the liftgate. To close, press located on the left rear quarter panel in the rear cargo area or press twice on your remote entry transmitter. Keep clear of the liftgate when operating the rear switch. Your power liftgate is equipped with an obstacle detection feature which will either stop or revert to a full open position when it encounters a solid object. For complete information, please refer to your Owner's Guide.

SECURILOCK™

SecuriLock™ passive anti-theft system is an engine immobilization system. This system is designed to help prevent the engine from being started unless a coded Integrated Keyhead Transmitter (IKT) programmed to your vehicle is used. Using the wrong type of coded key may lead to a "no start" condition.

SYNC® (if equipped)

Your vehicle may be equipped with SYNC® – a hands-free communications and entertainment system with special phone and media features. For more information, please refer to the SYNC® Supplement

or to the SYNC® section in the Navigation Supplement. Please also feel free to visit www.SyncMyRide.com.

USB PORT (if equipped)

If you have SYNC® your vehicle will be equipped with a USB port inside the center console. This feature allows you to plug in media playing devices, memory sticks, and also to charge devices if they support this feature. For more information, please refer to Accessing and Using your USB port in the SYNC® supplement or the Navigation system supplement.

AMBIENT LIGHTING (if equipped)

Your vehicle may be equipped with an ambient lighting feature. The control is located on the center console and, when activated, illuminates footwells, storage bins and cupholders with a choice of seven colors. Ambient lighting is operational when the ignition is on or in the accessory position. Press the control repeatedly to turn on, cycle through your color choices, and turn off.

2009 FORD EDGE QUICK REFERENCE GUIDE



Welcome to the Edge - the definitive modern crossover. Bold design and flexibility, sporty handling and energetic performance with efficient fuel economy, the Ford Edge has it all.

Take a few minutes to use this Quick Reference Guide to acquaint yourself with many of the features you'll use most. For more detailed information including important safety information, please consult your Owner's Guide.

Use extreme caution with any device that may take your attention off the road. Your primary responsibility is safe operation of your vehicle. Only use non-essential features and devices when it is safe to do so.



INSTRUMENT PANEL FEATURES

1. HEADLAMPS AND FOG LAMPS (if equipped)

Turn the control one position to the right P² to turn on the parking lamps, instrument panel lamps, license plate lamps and tail lamps. Turn the control to the second position on the right to turn on the headlamps. Turn the control one position to the left to activate the autolamp feature, which automatically turns the exterior lamps on and off, based on available daylight. Pull the control towards you to activate the fog lamps (if equipped). (The fog lamps will not operate when the headlamps are turned off (O) or when the high beams are on).

2. POWERTRAIN MALFUNCTION/REDUCED POWER LIGHT

This light illuminates when a powertrain or an AWD malfunction has been detected. Contact an authorized dealer as soon as possible.

3. MULTI-FUNCTION LEVER

Rotate the end of the control up to increase the speed of the wipers and rotate down to decrease the speed of the wipers. Briefly press the end of the stalk for a single swipe of the wipers without washer fluid. A quick push and hold results in three swipes with washer fluid while a longer push and hold activates the wash

pattern for up to five seconds. For better visibility, your vehicle will also automatically turn on your headlights if your windshield wipers and auto lamps are on. To operate your rear window wiper, turn the rear wiper control to 1 (intermittent speed), 2 (normal speed), or 0 (off). For a rear wash cycle, turn the rear wiper control to the position.

4. SERVICE ENGINE SOON LIGHT

This light illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

5. MESSAGE CENTER (if equipped)

The message center displays important vehicle information through a constant monitoring of vehicle systems. The system will also notify you of potential vehicle problems with a display of system warnings followed by a long indicator chime. Refer to your Owner's Guide for more information.

6. AIRBAG READINESS LIGHT

The airbag readiness light illuminates briefly when the ignition is turned on. If this light fails to illuminate, remains

on or continues to flash after the engine is started, contact your authorized dealer as soon as possible. A chime will also sound if a malfunction in the supplemental restraint system is detected.

7. ABS WARNING LIGHT

The ABS light illuminates briefly when the ignition is turned on. If the ABS light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible. Normal braking (less ABS) is still functional unless the brake warning light is also illuminated.

8. TILT/TELESCOPIC STEERING WHEEL LEVER

Pull the lever down to unlock the steering column. Move the steering wheel to the desired position. While holding the steering wheel in place, pull the lever up to lock the steering column.

9. STEERING WHEEL CONTROLS

To set the speed control, press and release **ON**. Accelerate to the desired speed. Press and release the **SET +** or **SET -** control. Take your foot off the accelerator pedal. The speed control indicator light will illuminate in the cluster. To set a higher speed: press and hold **SET +** until the desired speed is reached, or briefly press **SET +**

to increase the speed by small amounts. To set a lower speed: press and hold **SET -** until the desired speed is reached, or briefly press **SET -** to decrease the speed by small amounts. Press **RESUME** to return to the previously set speed. To turn speed control off, depress the brake pedal or press **OFF**. Press **-VOL +** to decrease/increase the volume. Press **◀ ▶** to access the previous/next preset radio station, CD track or preset satellite radio channel. Press **☎** to activate the Voice recognition system. Refer to your SYNC[®] or Navigation supplement (if equipped) for more information. Press **MEDIA** repeatedly to scroll through all possible media sources (AM, FM1, FM2, CD . . . etc). Press **☎** to answer a call if equipped with SYNC[®]. Press and hold to end a call. Refer to your SYNC[®] supplement for more information.

10. CHECK FUEL CAP LIGHT

This light illuminates when the fuel cap may not be properly installed. If you continue to drive with this light illuminated, the Service Engine Soon warning light may come on.

11. AUXILIARY POWER POINT

Your vehicle is equipped with four auxiliary power points. One on the instrument panel, one in the center console utility compartment, one on the back of the center console and a rear auxiliary power point located on the left rear quarter panel. Do not use power points over the capacity of 12VDC/180W.

12. ADVANCETRAC[®] WITH ROLL STABILITY CONTROL[™] STABILITY ENHANCEMENT SYSTEM

Your vehicle is equipped with an AdvanceTrac[®] stability system. This system focuses on three main areas: Traction Control[™] (which helps avoid wheel spin and loss of traction), Electronic Stability Control (which helps avoid skids or lateral slides), and Roll Stability Control[™] (which helps avoid a vehicle roll-over). These features work together to help you to maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck in the snow, mud or sand, try turning off the AdvanceTrac[®] system to allow wheel spin and help increase momentum to dig the vehicle out. The system defaults to on and the control will illuminate when turned off. Refer to your Owner's Guide for safety information and more details.

13. HAZARD FLASHER

Press to activate the front and rear direction signals when your vehicle is disabled and is creating a safety hazard for other motorists. Press again to turn off. The hazard flashers will operate when the ignition is in any position or when the ignition is turned off.

14. OVERDRIVE CONTROL/CANCEL WITH GRADE ASSIST

Drive with the vehicle in Overdrive (D) for the best fuel economy. You can deactivate overdrive by pressing the transmission control switch on the side of the shift handle. Your vehicle is equipped with a special Grade Assist feature which is automatically activated when overdrive is turned off. Grade assist helps to provide optimal gear selection and additional engine braking on hilly terrain. It is recommended that you return to O/D (Overdrive) once you return to flat terrain. To return to overdrive, simply press the transmission control switch again.

AUDIO

1. ON/OFF/VOLUME
Press to turn on/off. Turn to increase/decrease volume.

2. SEEK
Press to access the previous (◀) or next (▶) strong station, track or satellite radio channel (if equipped).

3. TEXT/SCAN
Press and hold for a brief sampling of radio stations, CD tracks or satellite radio channels. Press again to stop. In MP3 mode, press TEXT to display track title, artist name and disc title.

Autoset: Allows you to set the strongest local radio stations without losing your original stored stations. Use ▲/▼ to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.

Occupancy mode: Use ▲/▼ to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.

4. SHUFFLE

Press to play all tracks on the current disc in random order.

5. (Phone)
If your vehicle is equipped with SYNC[®] press to access SYNC[®] PHONE features. For further information please refer to your SYNC[®] supplement. If your vehicle is not equipped with SYNC[®] the display will read NO PHONE.

6. MENU
Press repeatedly to cycle through the following features among others:

4. SHUFFLE

Press to play all tracks on the current disc in random order.

5. (Phone)

If your vehicle is equipped with SYNC[®] press to access SYNC[®] PHONE features. For further information please refer to your SYNC[®] supplement. If your vehicle is not equipped with SYNC[®] the display will read NO PHONE.

6. MENU
Press repeatedly to cycle through the following features among others:

4. SHUFFLE

Press to play all tracks on the current disc in random order.

5. (Phone)

If your vehicle is equipped with SYNC[®] press to access SYNC[®] PHONE features. For further information please refer to your SYNC[®] supplement. If your vehicle is not equipped with SYNC[®] the display will read NO PHONE.

6. MENU

Press repeatedly to cycle through the following features among others:

SPEED VOL (Speed sensitive volume)

Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. SPEED OFF turns the feature off and level 7 is the maximum setting.

Setting the clock

Press MENU until SET HOURS and SET MINUTES is displayed. Press ▲/▼ to set the time.

Satellite radio menu (if equipped)

Press OK and then press ▲/▼ to cycle through: Category, Save Song, Delete

SIRIUS SATELLITE RADIO (if equipped)

Your vehicle may be equipped with satellite radio. SIRIUS Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS at 1-888-539-7474.

SIRIUS SATELLITE RADIO (if equipped)

Your vehicle may be equipped with satellite radio. SIRIUS Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS at 1-888-539-7474.

SIRIUS SATELLITE RADIO (if equipped)

Your vehicle may be equipped with satellite radio. SIRIUS Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS at 1-888-539-7474.

SIRIUS SATELLITE RADIO (if equipped)

Your vehicle may be equipped with satellite radio. SIRIUS Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS at 1-888-539-7474.

SIRIUS SATELLITE RADIO (if equipped)

Your vehicle may be equipped with satellite radio. SIRIUS Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS at 1-888-539-7474.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>