




Freestyle®

**ANALOG/DIGITAL
#749 ORBITAL™/#520 CUBE™
WATCH INSTRUCTIONS**

FEATURES:

- CURRENT TIME
- DAY/MONTH/DATE
- CHRONOGRAPH WITH SPLIT FUNCTION
- ANALOG AND DIGITAL MOVEMENT
- DAILY ALARM
- OPTIONAL 24-HOUR TIME
- WATER-RESISTANT TO 330FT/100M
- NIGHT VISION™ ILLUMINATION

KEY REFERENCES

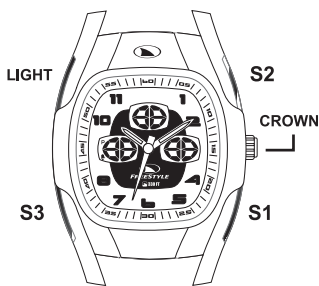

In normal time mode, the button functions are as follows:

- LIGHT - Turns on the Night Vision™
- S1 - Shows alarm time
- S2 - Shows the month and date
- S3 - Changes the function

HOW TO SET ANALOG TIME

Pull the crown out all the way. Advance the hands by turning the crown. Once you have set the correct time, press the crown in all the way.

HOW TO SET DIGITAL TIME

NOTE: Blue digits represent flashing segments.

In normal time mode, press the S3 button three times. The seconds digits will flash.



Push the S2 button, and the seconds will reset to zero. Push the S1 button to flash the minutes.



Press the S2 button to set the minutes. Press the S1 button again to flash the hour.




Press the S2 button to set the hour. AM and PM are represented by an "A" or a "P" on the seconds display screen. To set the watch in 24-hour mode, continue pressing the S2 button until an "H" appears on the seconds display screen. This represents 24-hour mode. Set the hour to the desired time.

Press the S1 button to flash the date digits. Set the date by pressing the S2 button to advance the digits.



Press the S1 button to flash the month digits. Set the month by pressing the S2 button to advance the digits.

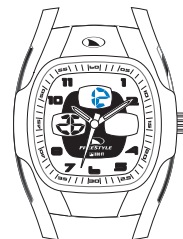

Once the time is set, press the S3 button to resume normal time.

HOW TO SET THE ALARM

From normal time mode, push the S3 button twice to enter the alarm setting mode. The hour digits will flash. Advance the hour digits by pressing the S2 button.

Once the hours are set, press the S1 button to flash the minutes. Advance the minutes by pressing the S2 button. Press the S3 button to exit the alarm setting mode and return to normal time mode.

USING THE CHRONOGRAPH

In normal time mode, press the S3 button once to enter the chronograph mode. Push the S2 button to operate the chronograph using cumulative time.

To use the lap time function, press the S1 button while the chronograph is running. The lap time will appear on the display, while the chronograph continues to run. Press the S1 button again to return to the chronograph.

Push the S2 button to stop the chronograph. Push the S3 button to reset it to zero.

HOW TO OPERATE THE NIGHT VISION™ ILLUMINATION

Press the LIGHT button to activate the Night Vision™ illumination. The light will remain illuminated for approximately four seconds.

CARE AND MAINTENANCE

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.
3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

WARRANTY INFORMATION

FreeStyle U.S.A. warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating and strap/bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: FreeStyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or FreeStyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Should your FreeStyle® watch require warranty service, send it along with the following:

1. A copy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. A brief description of the problem
5. Please include \$8.50 for processing and handling, using one of the following payment methods:

- Check
- Money order
- Credit card (be sure to include card number and expiration date)

REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER PERSONAL ARTICLES OF VALUE IN YOUR SHIPMENT.

Send to the following address:

FreeStyle
Attn: Individual Returns
47-50 33rd Street
Long Island City, NY, 11101

(718) 729-8890

Please allow 30 days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized FreeStyle® dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating) or refurbishing, complete the return form (next column) and return with your watch. Be sure to include a check, money order or credit card information for desired replacement parts. Please include \$8.50 for processing and handling.

Visit our website at:
www.freestyleusa.com



Freestyle®

Freestyle
Attn: Individual Returns
47-50 33rd Street
Long Island City, NY. 11101

Phone: 718-729-8890

Battery	\$ 4.00
Case	10.00
Bezel	6.00
Band(Polyurethane)	12.00
Band(Metal)	20.00
Band(Nylon)	7.00
California residents add 7.25% tax	
Processing and handling	8.50
Total	\$ _____

Check or Money Order
Master Card
Visa

Account# _____ Expiration Date _____

Printed Name _____

Address _____

Phone Number _____

Signature _____

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>