



Freestyle®

**818 OUTSIDER™
WATCH INSTRUCTIONS**


FEATURES:

- TWO TIME ZONES WITH AUTO CALENDAR
- THERMOMETER RANGE FROM -20 DEGREES C TO +60 DEGREES C
- HI AND LO TIDE TIME DATA FOR THE PRESENT AND FUTURE TIMES
- TIDE DATA FOR 30 PRESET AND 5 CUSTOM LOCATIONS
- CHRONOGRAPH MODE WITH SPLIT FUNCTION
- SEQUENTIAL HEAT TIMER WITH 4 ADJUSTABLE PRESET VALUES
- WATER-RESISTANT TO 500 FT./150M
- NIGHT VISION™ ELECTRO-LUMINESCENT BACKLIGHTING

KEY REFERENCES



- S1- EL/ SET
- S2- MODE
- S3- RESET/ SCROLL DOWN
- S4- START/ SCROLL UP

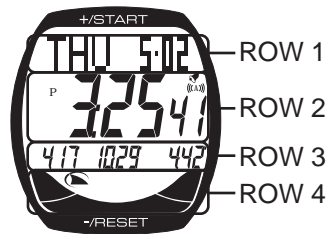

There are seven modes of operation: TIME, TEMP, TIDE, BEACH, HEAT, CHRONO and ALARM. These are sequentially arranged in a cycle.

HOW TO SET TIME, DATE AND 24-HOUR FORMAT

From TIME mode: press and hold the EL/SET button for approximately three seconds to enter the time setting mode. The setting will be done in a cycle of sequences beginning with CHIME, HOUR, MINUTE, SECOND, 12/24 hour format, YEAR, MONTH-DAY/ DAY-

MONTH format, DATE and Daylight Savings Time (DST). The chime setting will start first. Press S3 to turn the chime on or off.

Press S2 to move on to the next setting sequence then press S3 or S4 to adjust. Once the setting is completed press S1 to exit this mode and return to normal time.


To view the second time zone (T2), simply press the S4 button. Holding this down for at least four seconds will switch you between T1 and T2.

TEMPERATURE MODE

In TIME mode, press the MODE button once to enter the TEMPERATURE mode. The temperature sensor is located on the right side of the watch case. The sensor reads ambient temperature, which is an average of body, air or water temperature.

The accuracy of this sensor is +/- 1.8°F if the reading is between 23°F and 122°F and +/-3.6°F if the reading is below 23°F and over 122°F.

Pressing S4 shows the offset temperature reading in row 1. This can be applied to offset your body temperature when it is worn on your wrist.

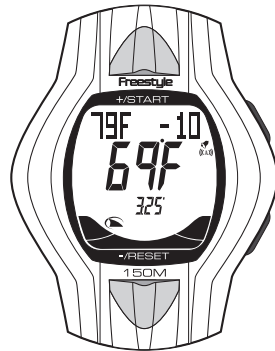

To adjust the values and offset press down S1 for at least three seconds until the temperature unit flashes. Select between FHT for fahrenheit or CEL for celsius. Pressing S2 moves you on to the offset setting. Press S3 or S4 to adjust the reading.

The concept of offsetting can be best explained with an example.


Wear the watch on your wrist and wait for at least 10 minutes until the sensor factors out your body heat. If the temperature reads 10 °F above the mercury thermometer then this means that your body (and other internal watch components) causes the watch to be 10 °F warmer. 10°F is the value that you would be offsetting.

TIDE MODE

From TIME mode, press S2 twice to go to TIDE mode. Rows 2 and 3 indicates the tide times for the day including the ones that have past.

The wave graphic in row 4 corresponds to the tide times in row 3.

To view future tide press S4 button to advance one day. Hold down the button to advance the dates faster. The return to the current date press S3.

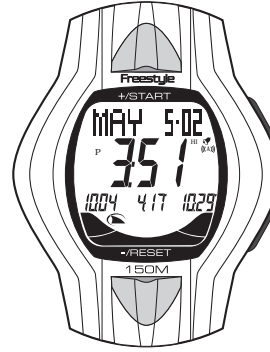


BEACH MODE

From TIME mode, press S2 three times to enter the BEACH mode. This mode shows the current location of the tide reading as well as upcoming tide information. You can select through five different locations by pressing S4.

To set your location press S1 for at least three seconds until the wave graph turns off. Press S3 to toggle between the preset and custom location settings. Under preset mode, press S4 to select from the 30 preset locations stored. Once this is set press S2 to move on to setting the time difference. Since a formula is used to predict the tide times, they are average data which are not affected by more recent weather conditions. Compare this tide data with more recent and certified versions like that provided by NOAA (National Oceanic and Atmospheric Administration). If there is a great variance between the tide data you can adjust the time difference by pressing S3 or S4. You can adjust this up to +/- 99 minutes.

If you want to choose a custom beach setting toggle S3 until Custom 1 shows on the screen. There are five spaces available for custom location. You would need to find the high tide time and date of the specific location you want to input. Press S2 to enter the tide setting mode. The setting will be done in a sequence of: HOUR, MINUTE, YEAR, MONTH, DAY and LOCATION. To type in the location name press S4 to select the letter and press S3 to move to the next space. To move back select the arrow symbol then press S3. Once everything is set press S1. This process can be repeated to set the rest of the locations.

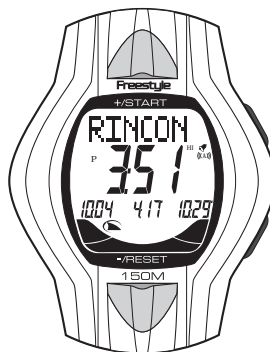

HEAT TIMER MODE

From TIME mode, press the MODE button four times to enter the HEAT timer mode.

There are four sequential countdown timers and one independent timer for you to set. There are preset values on them but this could be adjusted to suite your needs.

To select which preset timer you want to use press S3. To start and stop the countdown press S4. To reset to the preset value or 0 press S3.

To change the preset values press S1 for three seconds until the hour numbers flash. Press S3 or S4 to adjust to the desired setting.

To proceed to the next HEAT press S1. After you have confirm all preset values you can adjust the number of repetitions (RP) in HEAT 4. Press S1 to exit the setting mode.

To start or stop the countdown, press S4 button to reset press S3.

CHRONOGRAPH MODE

In TIME mode, press MODE button five times to enter the CHRONOGRAPH mode.

To measure elapsed time, press the S4 ST/STP button to start and stop the counter. To get split times press S3 while the counter is running.

To reset the chronograph, press the S3 button when the counter is stopped.

ALARM MODE

In TIME mode, press MODE button six times to enter the ALARM mode. This watch has two daily, two weekly and one scheduled alarm.

You can turn each alarm on or off individually by pressing S4 and scroll through them by pressing S3.

To set the daily alarm press and hold S1 for at least 2 seconds. The setting sequence starts with the hour then minutes. Once you are done press S1 to exit the setting mode.

To set the weekly alarm press and hold S1 for at least 2 seconds. The setting sequence is: hour, minute, day and preset. Presets are common events that help remind you what the alarm is for. The available presets are: PARTY, DATE, SURF, CALL, MEETING, REMINDER.

In TIME mode, the fin logo and bell symbol would indicate that an alarm is activated.

HOW TO OPERATE THE NIGHT VISION™ ELECTRO-LUMINESCENT BACKLIGHT

Press the EL/SET button to activate the Night Vision™ electro-luminescent backlight. The light will remain illuminated for approximately five seconds.

TIDE LOCATIONS:

Below is the list of preset locations with tide data up to the year 2099:

1. BODEGA BAY, CA
2. SANTA CRUZ POINT, CA
3. RINCON, CA
4. SAN CLEMENTE, CA
5. SAN DIEGO, CA
6. PENSACOLA, FLA
7. VIRGINIA BEACH, VA
8. CAPE HATTERAS, N
9. SEBASTIAN INLET, FLA
10. SAN JUAN, PUERTO RICO
11. RECIFE, BRAZIL
12. RIO DE JANIERO, BRAZIL
13. CAP FERRET, FRANCE
14. CORPUS CHRISTI, TX
15. DURBAN, SOUTH AFRICA
16. REUNION ISLAND, INDIAN OCEAN
17. COLOMBO, SRI LANKA
18. BALI, INDONESIA
19. GOLD COAST AUSTRALIA
20. SYDNEY, AUSTRALIA
21. SENDAI, JAPAN
22. ENOSHIMA, JAPAN
23. MIYAZAKI, JAPAN
24. HILO, HAWAII
25. LAHAINA, MAUI
26. HONOLULU, OAHU
27. HANAPEPE BAY, KAUAI
28. CABO SAN LUCAS, MEXICO
29. PUERTO ESCONDIDO, MX
30. DOMINICAL, COSTA RICA

CARE AND MAINTENCE

1. Back case cover should only be removed by an authorized watch repair specialist.
2. Always rinse your watch in fresh water after immersion in salt or chlorinated water.
3. Do not expose watch or band to chemicals such as gasoline, aerosol sprays, paint or solvents.
4. Periodically clean with a soft cloth and fresh water.

NOTE: Extreme electrostatic discharge can cause the LCD to 'freeze up'. In this event you could reset the watch by pressing all 4 buttons together for 5 seconds.

DISCLAIMER ON TIDE DATA

Not for navigation. This program is furnished in the hope that it will be useful, without the implied warranty of merchantability or fitness for a particular purpose. Do not use this program as a basis for any decisions that could result in harm to people, other organisms, or property. Check these predictions against officially sanctioned tables. Agencies like NOAA exist because there is a need for certifiably correct tide predictions. Do not rely on these predictions if you need guaranteed results.

Remember that weather conditions affect tidal ranges and current speeds, sometimes very strongly.

WARRANTY INFORMATION

Freestyle U.S.A. warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The

warranty excludes batteries, crystal, watch case plating, and strap/bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: Freestyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or Freestyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Should your Freestyle® watch require warranty service, send it along with the following:

1. A copy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. A brief description of the problem
5. Please include \$8.50 for processing and handling, using one of the following payment methods:

- Check
- Money order
- Credit card (be sure to include card number and expiration date)

REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER PERSONAL ARTICLES OF VALUE IN YOUR SHIPMENT.

Send to the following address:

Freestyle
Attn: Individual Returns
47-50 33rd Street
Long Island City, NY 11101

(718)-729-8890

Please allow 30 days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized Freestyle® dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating), or refurbishing, complete the return form (next column) and return with your watch.



Freestyle®

Attn: Individual Returns
47-50 33rd Street
Long Island City, NY 11101
(718)-729-8890

Battery	\$ 4.00
Case	10.00
Bezel	6.00
Band(Polyurethane)	12.00
Band(Leather)	12.00
Band(Metal)	20.00
Band(Nylon)	7.00
Processing and handling	8.50

Total \$ _____

- Check or Money Order
 Master Card
 Visa

Account# _____ Expiration Date _____

Printed Name _____

Address _____

Phone Number _____

Signature _____

818004-4

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>