

# Charge-Only Cradle User's Guide

FPCCR05

## I N S T R U C T I O N S

The charge-only cradle is designed for a desktop, counter top, or wall-mounted installation where a quick connection to a DC power source is needed. The Tablet PC can be placed in the charge-only cradle and used while external DC power is supplied to the cradle. The connector pins on the cradle are “high-usage” type pins and are designed to withstand a large number of insertions and removals. The cradle includes two adapters that fit over the Tablet PC’s DC-in port to make it more suitable for the high-usage environment.


The cradle can accommodate a Tablet PC with a standard main battery or an optional high-capacity battery. A removable spacer is included with the cradle to make the cradle usable with either battery.

## Installing the System in the Cradle

To install the Tablet PC in the charge-only cradle, you must first attach a DC adapter to the system's DC port.

### Attaching the DC Adapter

1. Hold your system so that the left side (when viewed in portrait mode) with the DC-in port is facing you (*Figure 1*).

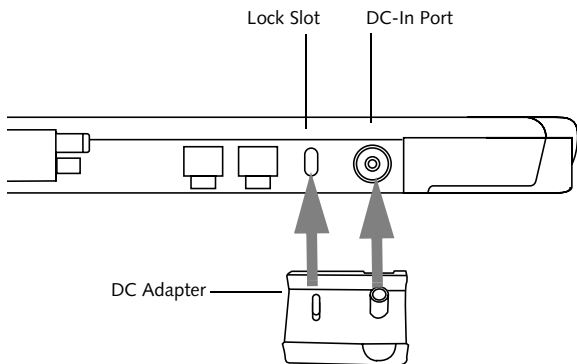

**Figure 1. Attaching the DC Adapter**

2. Attach the DC adapter to the system by inserting the plugs inside of the adapter into the lock slot and the DC-in port on the system (*Figure 1*). The adapter should fit snugly into position.



When powering your charge-only cradle, use only the AC Adapter that is compatible with your Tablet PC.

---

---


## Verifying Battery Size

Determine whether your Tablet PC has a standard main battery or an optional high-capacity main battery installed.

- If your Tablet PC has a high-capacity main battery installed, remove the spacer (*Figure 2*) that is located inside the cradle on the right. Pull it upwards to remove it from the slot.

Stow the spacer in the spacer tray inside the charge-only cradle so that it will be available for occasions in which you use the standard battery. To remove the spacer from the tray, press down on the right side of the spacer, causing its left side to lift up.


- If your Tablet PC has a standard main battery installed, be sure the spacer is installed in the slot on the inside right of the cradle (*Figure 2*).

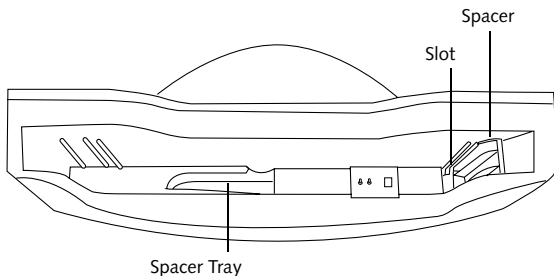

**Figure 2. Inside the Charge-Only Cradle**


### Installing the Tablet PC in the Charge-Only Cradle

1. Place the cradle on the flat, stable location in which it will be used.
2. After verifying that the spacer is configured correctly and the DC adapter is attached to the DC-in port, hold the system in landscape mode, with the buttons arranged across the top (*Figure 3*).

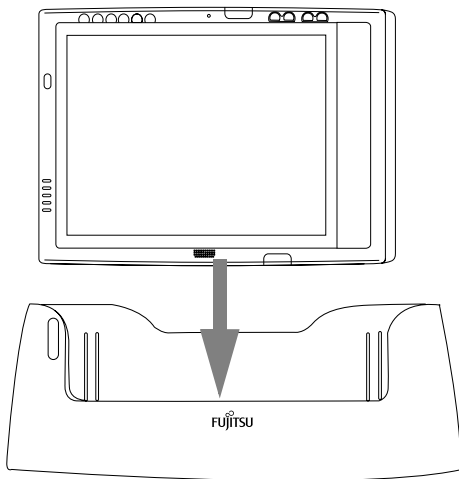

**Figure 3. Installing the Tablet PC in the Cradle**

3. Insert the tablet into the cradle until it rests securely on the bottom of the cradle.
4. Plug the system AC adapter into the DC-in port on the right side of the cradle, and the other end into a power outlet.

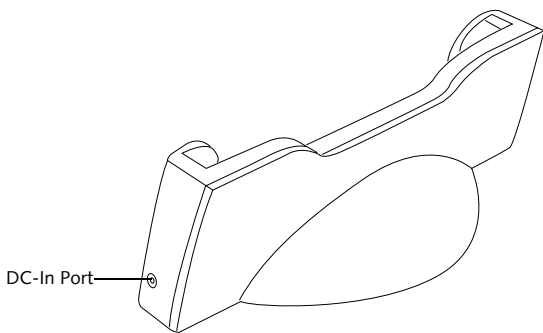

**Figure 4. DC-In Port on Cradle**

### **Removing the Tablet PC from the Charge-Only Cradle**


While holding the base of the cradle with one hand, gently pull the Tablet PC out of the cradle.

## **Mounting the Cradle on a Wall**

The charge-only cradle is designed so that it can be easily mounted to a wall. The cradle consists of two large components: a base and a cradle. Before mounting the cradle to a wall, the base component must be removed.


To separate the two components, perform the following steps:

1. Holding the cradle portion with one hand and the base portion with the other, lift the cradle section while pushing down on the base section until the two halves disengage at the separation point (*Figure 5*).

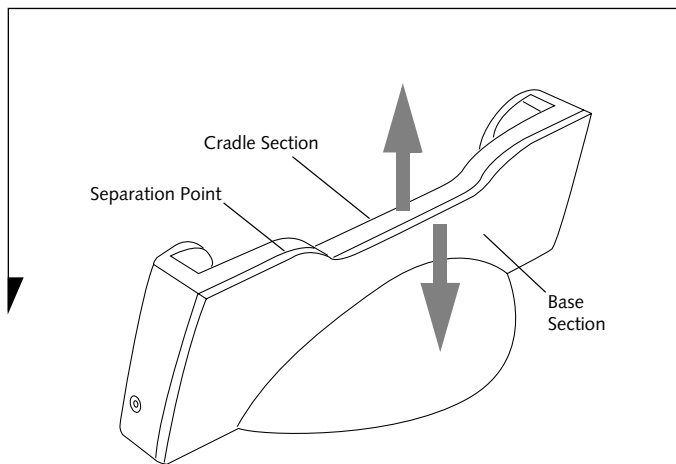


**Figure 5. Separating the Cradle**

2. Once disengaged, store the base section in a safe place for future use.
3. The back of the cradle section has four holes for wall-mounting and six holes for reattaching the base section.

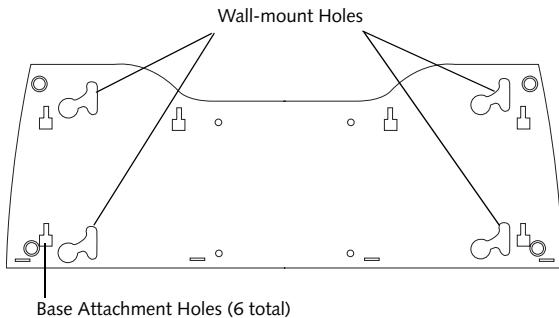


**Figure 6. Wall-Mount holes**

- Attach four screws (sheet metal, #14 panhead, zinc-plated recommended, or equivalent) to the wall as shown in Figure 7. The screw heads should extend from the wall approximately 0.25".

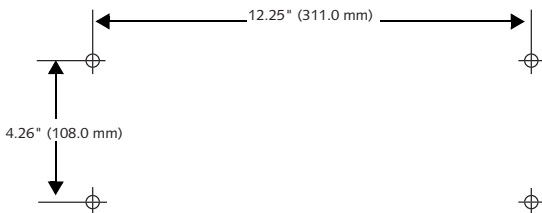

**Figure 7. Wall-mount Screw Dimensions**

- Align the wall-mount holes on the cradle (Figure 6) with the mounting screws so that the screw heads extend into the round portions of the wall-mount holes. (Figure 8)

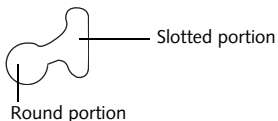

**Figure 8. Wall-mount Hole**

- When the four screw heads are aligned, press the cradle firmly against the wall and slide it to the right and downwards, so that the screws move to the top of the slotted portion of the holes, locking it in place.



**Fujitsu Computer Systems Corporation**

1250 E. Arques Avenue (M/S 122)  
Sunnyvale, CA 94085

For more information, visit our Web site  
at: **[us.fujitsu.com/computers](http://us.fujitsu.com/computers)**

For technical support call:  
**1-800-8Fujitsu (1-800-838-5487)**  
or e-mail us at: **[8fujitsu@us.fujitsu.com](mailto:8fujitsu@us.fujitsu.com)**

Fujitsu and the Fujitsu logo are registered trademarks of Fujitsu, Ltd. All other trademarks mentioned herein are the property of their respective owners. We cannot guarantee the accuracy of the contents of this document. We disclaim liability for errors, omissions or future changes.

© 2004 Fujitsu Computer Systems Corporation. All rights reserved.

FPC58-1087-01



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>