

# World-wide AC Adapter

## Operating Instructions


These instructions provide details on using the Fujitsu FPCAC14A (US), FPCAC14B (UK), and FPCAC14C (Euro) AC adapters.

**Note:** *The only difference between the three AC adapter models is a variation in the supplied AC power cords. These operating instructions are applicable to all three adapter models.*


The AC adapter is designed for use with your Fujitsu computer. Note that the AC adapter can also be used with external battery chargers, docking stations, port replicators, and cradles designed for use with your system.

### Caution

- This AC adapter is for indoor use only. Do not use where exposure to water or excessive moisture is possible.
- This AC adapter generates a magnetic field that can damage your floppy disk drive. Maintain a safe minimum distance (about 3 inches or 8 centimeters) between the AC adapter and your floppy disk drive.

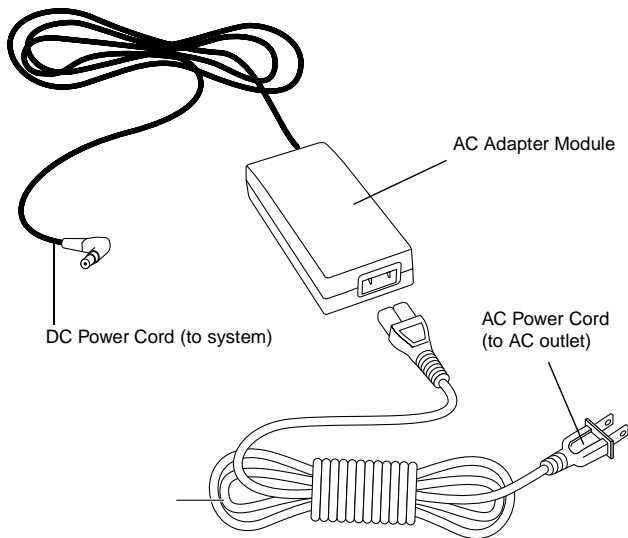

AC Adapter Features

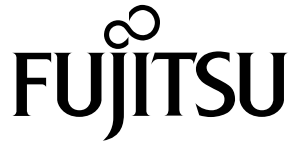

## Connecting the AC Adapter

To connect the AC adapter to your system:

1. Plug the AC power cord into the AC adapter.
2. Plug the outlet end of the AC power cord into your AC wall outlet.
3. Plug the DC power cord into the DC input connector on your computer, port replicator, docking station, or cradle.
4. Confirm that the AC adapter is now supplying power to your computer or other device. Refer to the user documentation for your system, if necessary, to determine how computer indicates external power is connected.

You can now use your system with external power supplied by the AC adapter.

## Disconnecting the AC Adapter

To disconnect the AC adapter:

1. Disconnect the DC output cord from your computer or other device.
2. Unplug the AC adapter from your AC wall outlet.

## Troubleshooting

If the AC adapter is not supplying power to your computer, check the following:

- Ensure that power is supplied to your AC wall outlet.
- Ensure that the AC power cord is firmly plugged into the AC adapter and the AC wall outlet.
- Ensure that the DC Power Cord is firmly seated in the DC input connector.

## Specifications

Specifications for the AC adapter are shown in the following table.

AC Adapter Specifications

<b>Input</b>	100-240 VAC 50-60 Hz 1.2 A max
<b>Output</b>	16 VDC, 3.36 A max
<b>DC output plug polarity</b>	Center: positive (+) Sleeve: negative (-)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>