

### Contents

|  | Page | Page   |      |
|--|------|--|------|
| <b>Before Use</b>  |      |  |      |
| • SAFETY PRECAUTIONS .....                               | E-2  | • ADJUSTING SCREEN POSITION AND SIZE .....   | E-46 |
| • INFORMATION .....                                      | E-4  | • OTHER ADJUSTMENTS .....                    | E-47 |
| • ADDITIONAL PRECAUTIONS .....                           | E-6  | • INITIALIZATION OF USER ADJUSTMENT VALUE .. | E-53 |
| • INSTALLATION .....                                     | E-9  | • CLEANING AND MAINTENANCE .....             | E-54 |
| <b>Usage</b>   |      | <b>Others</b>                                |      |
| • PART NAMES AND FUNCTIONS .....                         | E-12 | • OPTIONS .....                              | E-59 |
| • USING THE REMOTE CONTROL .....                         | E-18 | • MAIN SUPPORTED SIGNALS .....               | E-60 |
| • CONNECTING THE DISPLAY TO EXTERNAL<br>EQUIPMENT .....  | E-20 | • SPECIFICATION .....                        | E-61 |
| • BASIC OPERATIONS .....                                 | E-29 |  |      |
| • SELECTING INPUT MODE .....                             | E-34 |  |      |
| • OTHER BASIC OPERATIONS .....                           | E-35 |  |      |
| • WATCHING PICTURES ON THE WIDE SCREEN....               | E-36 |  |      |
| <b>Adjustments</b>                                       |      |  |      |
| • ADJUSTMENT MENU .....                                  | E-38 |  |      |
| • BASIC PROCEDURE OF ADJUSTMENT MENU<br>OPERATIONS ..... | E-39 |  |      |
| • ADJUSTING THE PICTURE .....                            | E-40 |  |      |

Before using the display, read this manual carefully so that you know how to use the display correctly. Refer to this manual whenever questions or problems about operation arise. Be sure to read and observe the safety precautions. Keep this manual where the user can see it easily.  
\* Installation and removal require special expertise. Consult your product dealer for details.

# SAFETY PRECAUTIONS

Dear Customer:

We have prepared this USER'S MANUAL to assist you in the operation of your new LCD Projector. We thank you for your purchase and hope you will be satisfied with the quality and performance of this projector. Please read the instructions carefully, and keep them available for future reference.

## IMPORTANT INFORMATION

### IMPORTANT



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT REMOVE SCREWS EXCEPT  
IF SPECIFIED USER-SERVICE  
SCREWS MARKED

CAUTION:  
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** THIS UNIT HAS AN EXTREMELY BRIGHT LIGHT SOURCE. DO NOT STARE INTO THE BEAM OF LIGHT. BE ESPECIALLY CAREFUL THAT CHILDREN DO NOT STARE DIRECTLY INTO THE LIGHT.

**WARNING:** TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

### FCC NOTICE

- A Class A digital device

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

- A Class B digital device

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
## IMPORTANT SAFETY INSTRUCTIONS

Electrical energy can perform many useful functions. This unit has been engineered and manufactured to assure your personal safety. But **IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD**. In order not to defeat the safeguards incorporated into this product, observe the following basic rules for its installation, use and service. Please read these "Important Safeguards" carefully before use.


- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifier's) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.




- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
  - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
  - Do not use immediately after moving from a low temperature to high temperature, as this causes condensation, which may result in fire, electric shock, or other hazards.
  - The apparatus shall not be exposed to dripping or splashing.
  - No objects filled with liquids, such as vases, shall be placed on the apparatus.
  - Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. The product should be mounted according to the manufacturer's instructions, and should use a mount recommended by the manufacturer.
  - When the product is used on a cart, care should be taken to avoid quick stops, excessive force, and uneven surfaces which may cause the product and cart to overturn, damaging equipment or causing possible injury to the operator.
  - Slots and openings in the cabinet are provided for ventilation. These ensure reliable operation of the product and protect it from overheating. These openings must not be blocked or covered. (The openings should never be blocked by placing the product on bed, sofa, rug, or other similar surface. It should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided and the manufacturer's instructions have been adhered to.)  
For proper ventilation, separate the product from other equipment, which may prevent ventilation, and keep distance more than 10 cm.
  - This product should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supply of your home, consult your product dealer or local power company.
  - This product is equipped with a three-wire plug. This plug will fit only into a grounded power outlet. If you are unable to insert the plug into the outlet, contact your electrician to install the proper outlet. Do not defeat the safety purpose of the grounded plug.
  - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at doors, plugs, receptacles, and the point where they exit from the product.
  - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the cable system. This will prevent damage to the product due to lightning and power line surges.
  - Do not overload wall outlets, extension cords, or convenience receptacles on other equipment as this can result in a risk of fire or electric shock.
  - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
  - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltages and other hazards. Refer all service to qualified service personnel.
  - Unplug this product from the wall outlet and refer service to qualified service personnel if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the Operation Manual, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or with same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
  - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
  - The product should be placed more than one foot away from heat sources such as radiators, heat registers, stoves, and other products (including amplifiers) that produce heat.
  - When connecting other products such as VCR's, and personal computers, you should turn off the power of this product for protection against electric shock.
  - Do not place combustibles behind the cooling fan. For example, cloth, paper, matches, aerosol cans or gas lighters that present special hazards when overheated.
  - Use only the accessory cord designed for this product to prevent shock.
- The power supply voltage rating of this product is AC110–240 V and the power cord attached conforms to the following power supply voltage. Use only the power cord designated by our dealer to ensure Safety and EMC.  
When it is used with other power supply voltage, the power cable must be changed.  
Use the standard power plug and cord set of the specified country.  
Consult your product dealer.

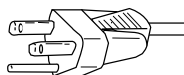

AC 100–125 V

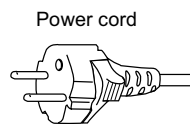

AC 200–240 V

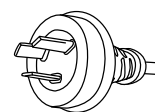 

AC 240 V (SAA TYPE)

Power supply voltage:

About the lithium battery

**Warning**

- Keep the lithium battery out of reach of children. Should the battery be swallowed, immediately consult a doctor.

**CAUTION**

- Do not recharge, disassemble, short-circuit, modify, heat or dispose of battery in fire.
- Use batteries within the use-by date.
- Do not handle the battery with metallic tools.
- Do not store the lithium battery with metallic materials.
- When disposing of used batteries, please comply with governmental regulations or environmental public institution's rules that apply in your country/area.
- Always check carefully that you are loading battery with its (+) and (-) poles facing in the proper directions.

# INFORMATION

- Receptacle

Make sure that the power cable's grounding wire is grounded.

The display comes with a 3-prong power plug; one prong is connected to the grounding wire. If you have only a 2-hole receptacle, you will need to have it replaced. Contact your dealer for more information.

- Have the display inspected and cleaned by your dealer at regular intervals.
- The liquid crystal panels are manufactured with very precision techniques resulted in 99.99% or more effective pixels. Please understand that some panels lack 0.01% or less pixels and keep the light on at all times.
- This projector is equipped with a heat-emitting fan for prevention of increasing temperature inside during operation. Note that heated air blows out of the fan.
- Contact your dealer if you find that the display does not seem to function properly when used with other audio-visual equipment.  
You may need to move your display if it produces degraded pictures or noise due to electromagnetic radiation, or if the infrared remote control does not function properly.
- Pictures may not be displayed properly if you connect a non-standard PC to the RGB input terminal. In this case, contact your dealer for more information.
- The protective circuit, built into the display, automatically turns off the power if the display has a problem. In this case, you will see that the power indicator lamp flashes red or green.
- The ventilation should not be impeded by covering the ventilation openings with items , such as newspapers , table-cloths, curtains,etc.:
  - no naked flames sources , such as lighted candles, should be placed on the apparatus:
  - no object filled with liquids, such as vases, shall be placed on the apparatus.

## **Warning**

If the power indicator lamp flashes red or green, this signifies that the display has developed a problem. When this happens, be sure to remove the power plug from the receptacle to prevent fire or electric shock. Then contact your dealer.

- Install the display in a location close to a main power supply outlet, and where the emergency stop button can be easily reached.

## **Note**

 
- Cables for connecting the display to external equipment are not supplied. Contact your dealer for more information on these products.
- For clarity of explanation, the devices, accessories, etc. depicted in the photographs and illustrations included herein may differ from the actual ones in some way or other.

# CHECKING ACCESSORIES

One remote control



Two AAA batteries

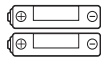


One user's manual




Two power cables


One System cable  
(PICTURE)

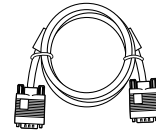


Three ferrite cores

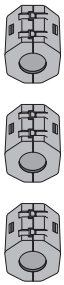 

Four air filters

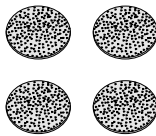

Two Antivibration cushions

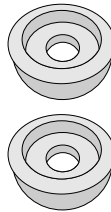 


# ADDITIONAL PRECAUTIONS

## TRANSPORTATION

When transporting the projector unit, take care not to apply undue force to it. Otherwise, lens and other breakable parts may be damaged.

## LIGHT SOURCE LAMP

- The light source lamp loses its brightness with use. When the lamp replacement warning is given, or when the lamp will not light, the picture becomes dim or its color becomes dull, replace the lamp with a new one. (The light source lamp for replacement can be purchased from your dealer.)
- When the warning message at right is shown, replace the light source lamp with a new one.
- For the method of replacing the light source lamp, see page E-56.

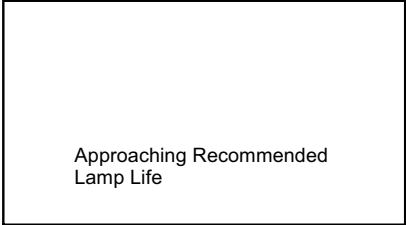

Approaching Recommended  
Lamp Life

Warning display for light source lamp  
replacement


 
## GROUNDING


- Make sure that the grounding work should be performed only by a professional electrician.
- Be sure to make the grounding connection before inserting the power plug into the receptacle. When removing the grounding connection, pull out the power plug from the receptacle beforehand.





### Note

 - Turning on and off the power frequently will slightly shorten the life of the light source lamp.
- This device conforms to the harmonic guideline.

## MONITOR INDICATION ON PROJECTOR

- Two monitor indicator lamps provided on the top of the projector signal the abnormal conditions inside it. (See the illustration at right.)
- After the power plug is inserted into the receptacle, pressing  / I on the right hand side of the projector's rear and  on the left hand side of AV selector's front will light up the power indicator lamp in red to indicate that the projector is on standby.
- While the projector is on standby, pressing "POWER" button will light up the power indicator lamp in green, and the light source lamp will light up.
- Press POWER while the lamp is on and select OFF on the confirmation screen, the power monitor indicator lamp blinks in orange letting the lamp cool for about 2 minutes, which follows that the power monitor lamp lights up in red resulting in a standby state.
- In the case of a trouble, the power, temperature/lamp indicator lamps lights up or blinks, and the monitors shut off the power automatically. Take the following measures.

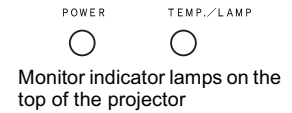
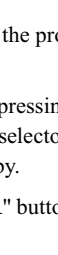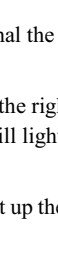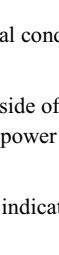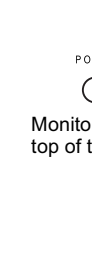
| Monitor indication<br><small>POWER TEMP./LAMP</small>  | Abnormal condition   | Measures to take   |
|--|--|--|
|  <p>The power indicator lamp lights up in red, and the temperature/lamp indicator lamp blinks in red.</p>     | The temperature inside the projector has risen to an extraordinary level.  | If the ventilation openings are blocked with foreign matters, remove them and re-install the projector so that proper ventilation is maintained. Check the air filters and lamp protection filter for accumulation of dust. If they are soiled, clean them or replace them with new ones (see page E-54). If the abnormal condition persists despite the above measures, call your dealer for service. |
|  <p>The power indicator lamp and temperature/lamp indicator lamp light up in red.</p>                         | The light source lamp will not light up.   | Leave the projector untouched for 2 minutes, and then, restart the projection. By doing so, the cooling fan rotates for approximately 1 minute to cool the inside of the projector. If the abnormal condition persists despite the above measures, call your dealer for service.   |
|  <p>The power indicator lamp blinks in red and green, and the temperature/lamp indicator lamp turns off.</p> | Abnormal operation of the projector.   | If the rotation of the cooling fan is blocked by any foreign matters, remove them. Pull out the power plug from the receptacle, and leave the projector untouched until its inside cools down. Then, turn on the power of the projector again. If the abnormal condition persists despite the above measures, call your dealer for service.  |
|  <p>Lighting up    Blinking    Turned off</p>   | The monitor indication as shown on the left figure indicates to light up in red and green, to blink in red and green, and to turn off. |  |

### Note

- While the light source lamp is cooled, do not pull out the power plug from the receptacle, as this may cause damage to the projector as well as shorten the life of the lamp.


## ADDITIONAL PRECAUTIONS (Continued)

### ILLUMINATION NEAR THE PROJECTOR UNIT

Both the projector and AV selector have a signal receiver for the wireless remote control on their front. If a strong light such as fluorescent light strikes upon the signal receivers, the wireless remote control may not work properly. In that case, keep the projector unit away from the illumination source such as fluorescent light, or re-install it at a place where light will not directly strike on the signal.

#### To keep the projector unit away from the illumination source:

As a guideline, keep the projector unit more than 2 m away from the illumination source such as fluorescent light. Also, check that the signal receivers are not exposed to direct sunlight.

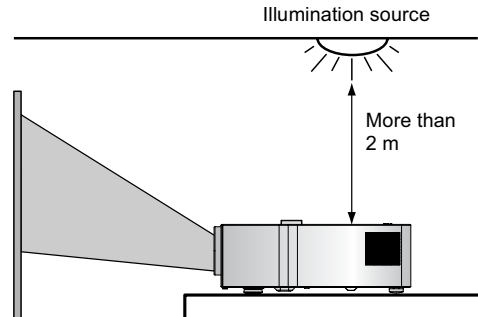

### PICTURE CHARACTERISTICS

This projector unit uses an LCD panel to project pictures on the screen. Please note, therefore, that the projected picture may differ from that of the CRT indicator lamp of television and personal computer in color tone and contrast.

### PROJECTION SCREEN

When purchasing a projection screen, carefully check the characteristics to select one that best suits your purpose of use. Do not use a polarizing screen with the projector unit. The screen may be tinged with red.


### USE OF A MOBILE PHONE NEAR THE PROJECTION UNIT

Using a mobile phone, transceiver and other device emitting radio waves near the projector unit may disturb the picture. When using those devices, keep a sufficient distance from the projector unit.



## TAKING OUT THE PROJECTOR FROM THE CARTON

Remove the cushioning material for lens protection.  
 Be sure to remove the cushioning material. If operating focus, zoom, and shift of the lens with the cushioning material attached, this may cause damage to the lens.

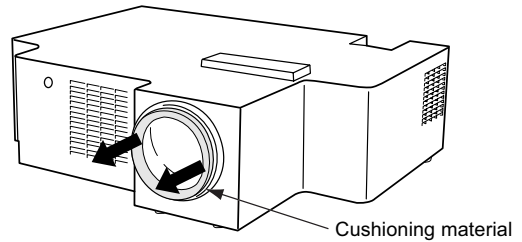

## INSTALLATION

To prevent increase of temperatures inside the projector, provide a space for draft surrounding the projector. For better heat release, also provide a space of a minimum distance surrounding the projector, as shown in the figure below.

When installing the projector, be sure to use suspended unit (option) from the ceiling. Call for installation to the local dealer.


See the appropriate instruction manual for more information on the installation hardware you select.

To prevent an accident and ensure safety in the event of an earthquake, fix the display securely into position as described below.


To ensure proper heat radiation, provide at least as much space around the display as shown below.

- \* Be sure to install the projector at a place that can keep the ambient temperature ranging from 5 to 35 °C .
- \* Run the power cords and connection cables along the wall and at the corners of the floor.
- \* Connect the projector and the AV selector with optical DVI-D cable with care not to bend the cable sharply. Otherwise the cable may cause damage.
- \* To prevent the accident and ensure safety against an earthquake, make measures for prevention of falling.

### Projector Section

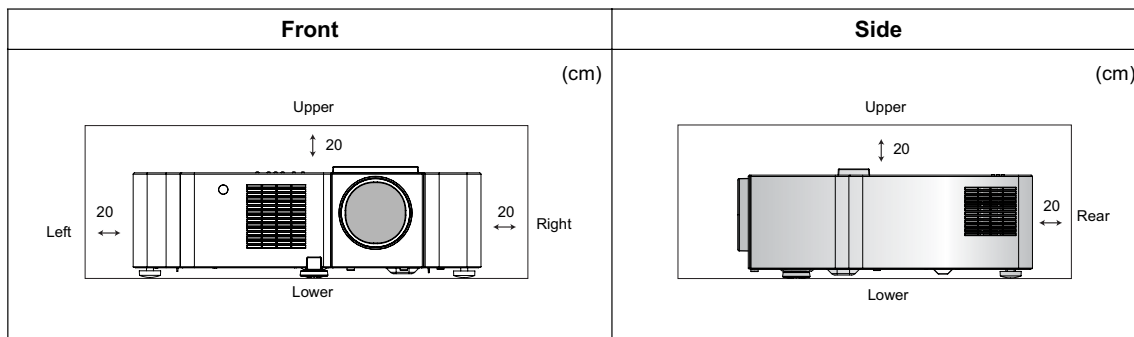

### AV Selector section

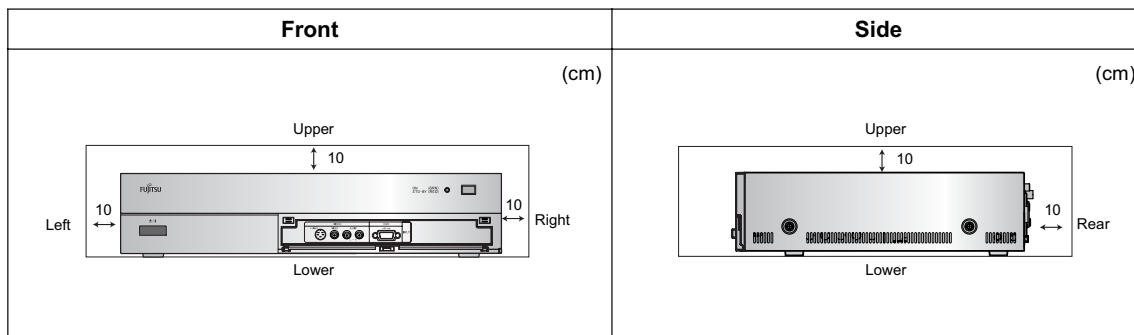


# INSTALLATION (Continued)

## PROJECTION

- Three types of installation are available; front projection, rear projection and ceiling mount projection.
- By adjusting the zoom (see page E-31), the screen size can be selected as shown in the table below.
- By adjusting the lens shift (see page E-31), a suitable projection position can be selected on the screen.
- Projectors have an error of 5% in projection distance and lens shift.
- Optimum projection screen size is 120 to 150 inches.

| Projected screen size |             |            | Projection distance     | Lens shift    |                 |
|-----------------------|-------------|------------|-------------------------|---------------|-----------------|
| Angle of view (inch)  | Height (cm) | Width (cm) | Minimum (m)-Maximum (m) | Vertical (cm) | Horizontal (cm) |
| 60                    | 74.7        | 132.8      | 2.26-2.85               | 4.15          | 7.52            |
| 70                    | 87.2        | 155.0      | 2.65-3.35               | 4.85          | 8.78            |
| 80                    | 99.6        | 177.1      | 3.04-3.84               | 5.54          | 10.03           |
| 90                    | 112.1       | 199.2      | 3.43-4.34               | 6.23          | 11.28           |
| 100                   | 124.5       | 221.4      | 3.82-4.84               | 6.92          | 12.54           |
| 110                   | 137.0       | 243.5      | 4.21-5.33               | 7.62          | 13.79           |
| 120                   | 149.4       | 265.7      | 4.60-5.83               | 8.31          | 15.05           |
| 130                   | 161.9       | 287.8      | 4.99-6.32               | 9.00          | 16.30           |
| 140                   | 174.3       | 309.9      | 5.38-6.82               | 9.69          | 17.55           |
| 150                   | 186.8       | 332.1      | 5.77-7.32               | 10.38         | 18.81           |
| 160                   | 199.2       | 354.2      | 6.16-7.81               | 11.08         | 20.06           |
| 170                   | 211.7       | 376.3      | 6.55-8.31               | 11.77         | 21.32           |
| 180                   | 224.1       | 398.5      | 6.94-8.80               | 12.46         | 22.57           |
| 190                   | 236.6       | 420.6      | 7.33-9.30               | 13.15         | 23.82           |
| 200                   | 249.1       | 442.8      | 7.72-9.80               | 13.85         | 25.08           |

\* "Angle of view" refers to the length of diagonal line of the projected screen.

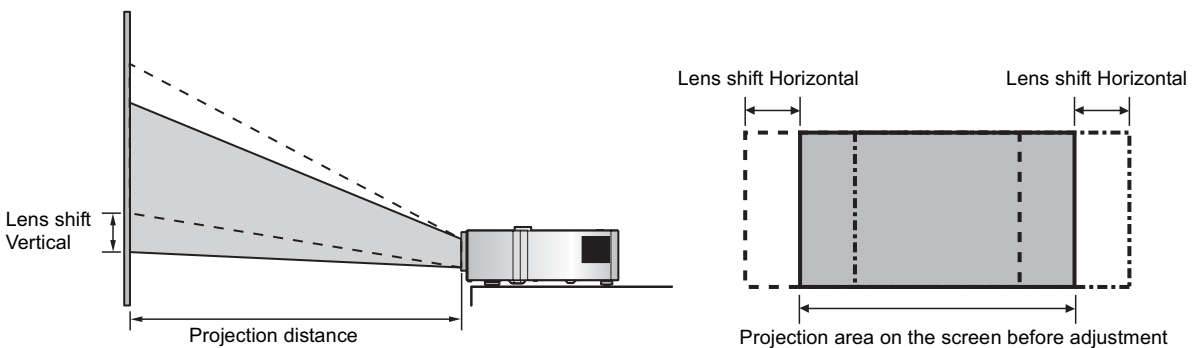

## ADJUSTMENT OF PROJECTION POSITION


- Use the three adjusters on the bottom of the projector (one on the front end and two on the rear) to adjust the projection position.
- Unless the projector and projector screen are aligned properly, distorted picture will result.

### 1 Lift the front portion of the projector, and turn the adjuster on the bottom to adjust its height.

The length of the adjuster extends as it is turned.

### 2 If the picture is tilted rightward or leftward against the projector screen, turn either of the two adjusters at the rear portion of the projector to adjust the picture position.

The length of the adjuster extends as it is turned.

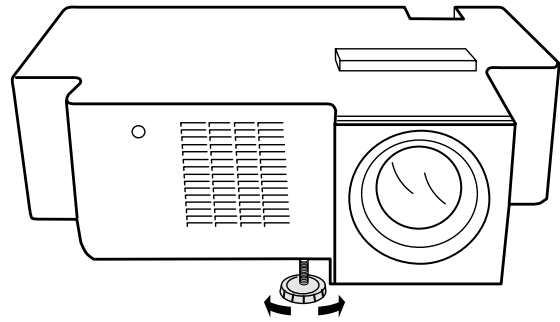


#### Warning

- Place the projector at least 20 cm away from the wall. Do not install it at ill-ventilated places. Otherwise, there is the risk of fire.
- Do not install the projector on a carpet or bedding.  
Do not block the ventilation openings. Otherwise, a fire will be caused.
- To suspend the projector from the ceiling, request ask your dealer for help. Do not use mounting fittings other than specified by the manufacturer. Otherwise, risk of the projector falling from the ceiling, personal injury, fire and electric shock will result.
- Use the receptacle near the projector unit that allows easy connection and disconnection of the projector's power plug. When installing the projector to a place on a permanent basis such as ceiling mount, request a professional electrician to attach a circuit breaker. While the projector is out of use, be sure to turn off the main power source using the circuit breaker or the like.
- If you find anything unusual about the projector unit, pull out the power plug from the receptacle, or turn off the circuit breaker immediately. If the projector left as it is, a fire or an electric shock may result.
- When the front of the projector is raised by using the adjuster, do not put your hand on one side of the projector. It will lurch to cause personal injury or malfunction.

## ATTACHMENT OF ANTIVIBRATION CUSHION

- When you make this equipment to project by putting on a desk etc., a small vibration might transfer to the desk etc. Please attach 2 antivibration cushions to 2 rear adjuster for reducing the vibration transfer.

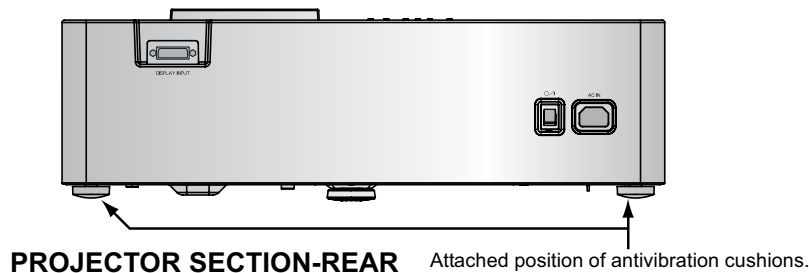

#### Note


The display is a highly precise piece of equipment and therefore must be packed properly before transportation. Be sure to use only those packing materials originally supplied with the display when repacking it.

#### Reference

See P. E-59 for more information on options.


# PART NAMES AND FUNCTIONS

## PROJECTOR SECTION - FRONT

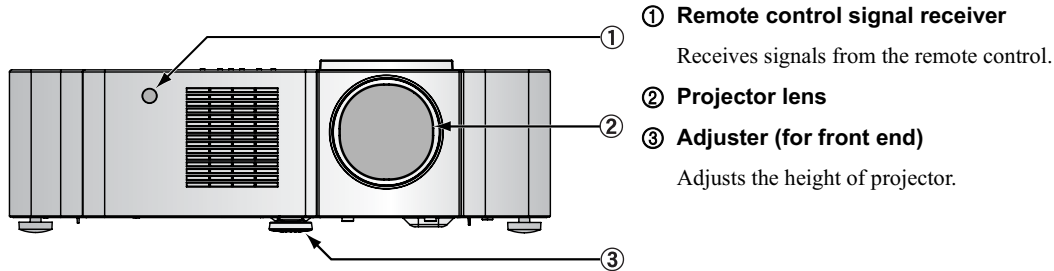


- ① **Remote control signal receiver**  
Receives signals from the remote control.
- ② **Projector lens**
- ③ **Adjuster (for front end)**  
Adjusts the height of projector.

## PROJECTOR SECTION - REAR

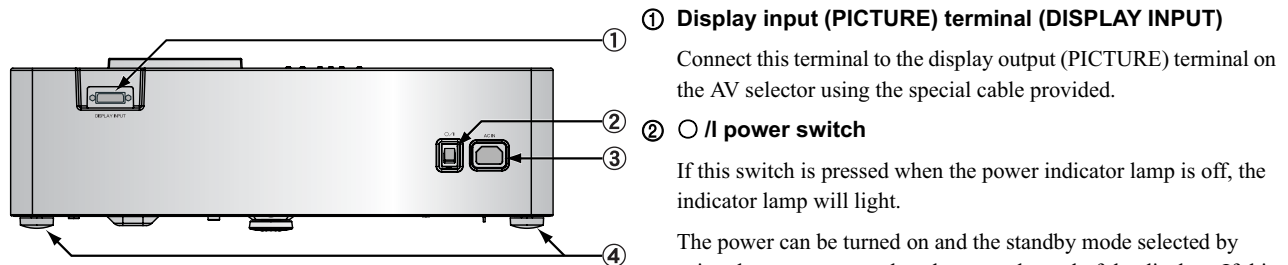

- ① **Display input (PICTURE) terminal (DISPLAY INPUT)**  
Connect this terminal to the display output (PICTURE) terminal on the AV selector using the special cable provided.
- ② **○ / I power switch**  
If this switch is pressed when the power indicator lamp is off, the indicator lamp will light.  
The power can be turned on and the standby mode selected by using the remote control or the control panel of the display . If this switch pressed when the power indicator monitor is lit will go out.
- ③ **Power input terminal**  
Connect the power cable supplied with the projector to this terminal.
- ④ **Adjusters (for rear end)**  
Adjust the height of projector.

## PROJECTOR SECTION - TOP

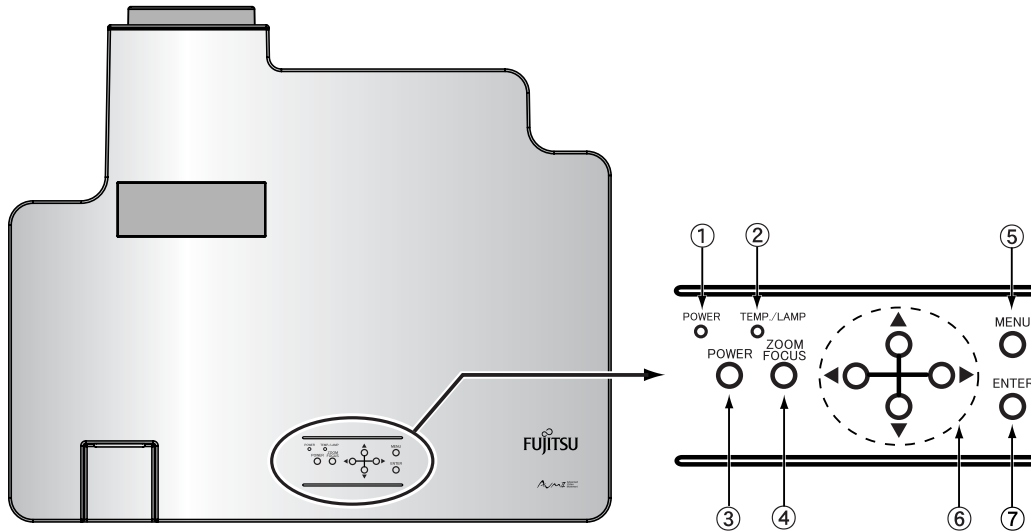

① **Power indicator lamp**

This lamp shows the state of the power supply.

Lit (red): Standby state

Lit (green): Power ON state

② **Temperature/lamp indicator lamp**

Signals the abnormal condition inside the projector. (See "MONITOR INDICATOIN ON PROJECTOR" on page E-7.)

③ **Power button**

Turns the power on and select the standby mode.

④ **Zoom/focus button**

Adjusts the size and focus of the picture.

⑤ **Menu button (MENU)**

Shows the menu display for adjusting the picture.

⑥ **4-way button (◀ / ▶ / ▲ / ▼)**

Selects the item and adjusts the value in the Menu display.

⑦ **Enter button**


Fixes the entry in the ADJUSTMENT MENU.

**Warning**

If the power indicator lamp flashes red or green, this signifies that the display has developed a problem. When this happens, be sure to remove the power plug from the receptacle and contact your dealer. Leaving the display power ON can result in fire or electric shock.

# PART NAMES AND FUNCTIONS (Continued)

## AV SELECTOR SECTION - FRONT

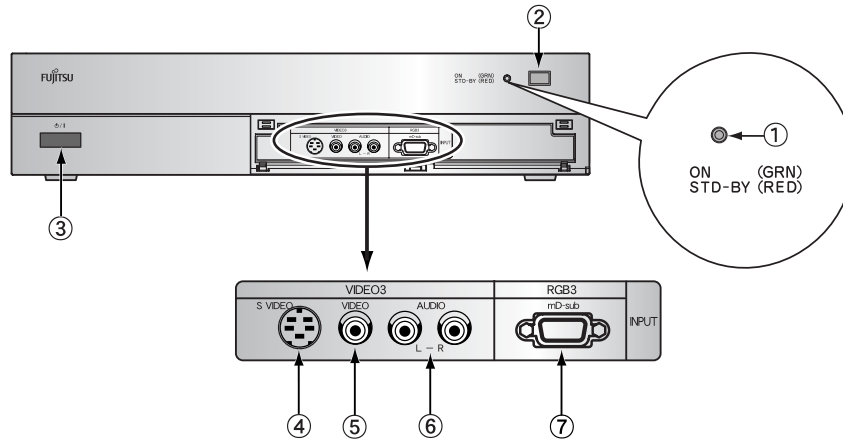

### ① Power indicator lamp

This lamp shows the state of the power supply.

Lit (red): Stand-by

Lit (green): Power ON

Flashing (red or green): Malfunction (Flashes differently depending on the type of malfunction.)

### ② Remote control signal receiver

Receives signals from the remote control.

### ③ power switch

If this button is pressed with the power indication lamp off, it lights up.

The power can be turned on and the standby mode is selected by using the remote control or the control panel of the display.

If this button is pressed with the power indicator lamp on, it turns off.

\*Power is still supplied to parts even if the indicator lamp is off.

### ④ Video3, S-video input terminal \*

Connect this terminal to the S-video output terminal of your video camera, etc.

### ⑤ Video3, video input terminal \*

Connect this terminal to the video output terminal of your video camera, etc.

### ⑥ Audio input terminals (L/R)

These are the audio input terminals for the Video3 and RGB3 terminals.

Input the audio for the video to be seen here.

### ⑦ RGB3 input terminal

Connect this terminal to your PC's mD-sub output terminal.


\* On selecting the video input format

(See "SETTING THE INPUT TERMINALS" on P. E-49.)

### Warning

If the power indicator lamp flashes red or green, this signifies that the display has developed a problem. When this happens, be sure to remove the power plug from the receptacle and contact your dealer. Leaving the display power ON can result in fire or electric shock.

## AV SELECTOR SECTION – REAR

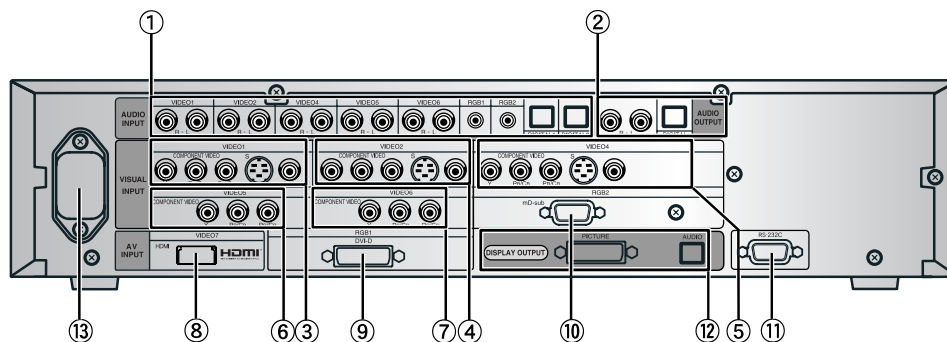

### ① Audio input terminals

Input audio through the terminals corresponding to the used video input terminals.

\* The digital input terminals can be matched as desired with the remote control. (See P. E-35.)

### ② Audio output terminals

For use when the audio from an audio system (amplifier) is used.

### ③ Video1 input terminal

### ④ Video2 input terminal

### ⑤ Video4 input terminal

Connect this terminal to the component video output terminal, S-video output terminal, or video output terminal of your VCR or DVD, etc.

\* See "SETTING THE INPUT TERMINALS" on P. E-49.

### ⑥ Video5 input terminal

### ⑦ Video6 input terminal

Connect this terminal to the component video output terminal of your DVD, etc.

### ⑧ Video 7 input terminal

Connect this terminal to HDMI output terminal of your DVD.

### ⑨ RGB1 input terminal

Connect this terminal to the monitor (DVI-D) output terminal of your PC.

### ⑩ RGB2 input terminal

Connect this terminal to the monitor (mD-sub) output terminal of your PC.

### ⑪ RS-232C input terminal

Connect this terminal to the RS-232C output terminal.

### ⑫ Display Output Terminal (PICTURE/AUDIO)

Connect this terminal to the picture input terminal on the projector. (The audio output terminal is not in use.)

### ⑬ Power input terminal

 
Connect this terminal to the power cable supplied with the display.

When connecting a cable, attach a ferrite core to the cable. (See P. E-20.)

# PART NAMES AND FUNCTIONS (Continued)


## DESCRIPTION OF INPUT TERMINALS

DVI-D terminal (RGB1 INPUT/DVI-D)  
(HDCP incompatible)

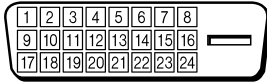

| Pin No. | Signal                | Pin No. | Signal                | Pin No. | Signal                |
|---------|-----------------------|---------|-----------------------|---------|-----------------------|
| 1       | T.M.D.S. Data2-       | 9       | T.M.D.S. Data1-       | 17      | T.M.D.S. Data0-       |
| 2       | T.M.D.S. Data2+       | 10      | T.M.D.S. Data1+       | 18      | T.M.D.S. Data0+       |
| 3       | T.M.D.S. Data2 Shield | 11      | T.M.D.S. Data1 Shield | 19      | T.M.D.S. Data0 Shield |
| 4       | —                     | 12      | —                     | 20      | —                     |
| 5       | —                     | 13      | —                     | 21      | —                     |
| 6       | DDC Clock             | 14      | +5V Power             | 22      | T.M.D.S. Clock Shield |
| 7       | DDC Data              | 15      | Ground (for +5V)      | 23      | T.M.D.S. Clock+       |
| 8       | —                     | 16      | Hot Plug Detect       | 24      | T.M.D.S. Clock-       |

mD-sub input terminal (RGB2, 3 INPUT/mD-sub)

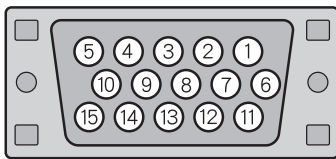

| Pin No. | Input signal | Pin No. | Input signal               |
|---------|--------------|---------|----------------------------|
| 1       | Red          | 9       | —                          |
| 2       | Green        | 10      | Ground                     |
| 3       | Blue         | 11      | —                          |
| 4       | —            | 12      | —                          |
| 5       | Ground       | 13      | Horizontal synchronization |
| 6       | Ground       | 14      | Vertical synchronization   |
| 7       | Ground       | 15      | —                          |
| 8       | Ground       | Frame   | Ground                     |

HDMI input terminal (VIDEO7)



| Pin No. | Input signal          | Pin No. | Input signal          |
|---------|-----------------------|---------|-----------------------|
| 1       | T.M.D.S. Data2+       | 11      | T.M.D.S. Clock Shield |
| 2       | T.M.D.S. Data2 Shield | 12      | T.M.D.S. Clock-       |
| 3       | T.M.D.S. Data2-       | 13      | CEC                   |
| 4       | T.M.D.S. Data1+       | 14      | Reserve               |
| 5       | T.M.D.S. Data1 Shield | 15      | DDC Clock             |
| 6       | T.M.D.S. Data1-       | 16      | DDC Data              |
| 7       | T.M.D.S. Data0+       | 17      | Ground (for +5V)      |
| 8       | T.M.D.S. Data0 Shield | 18      | +5V Power             |
| 9       | T.M.D.S. Data0-       | 19      | Hot Plug Detect       |
| 10      | T.M.D.S. Clock+       | Frame   | FG                    |

**HDMI**™  
HIGH DEFINITION MULTIMEDIA INTERFACE


## HDMI (High-Definition Multimedia Interface)

HDMI is a standard for home digital interfaces, which can transmit images as well as multichannel audio signals and control signals through one cable.



## REMOTE CONTROL


For details, see page →.

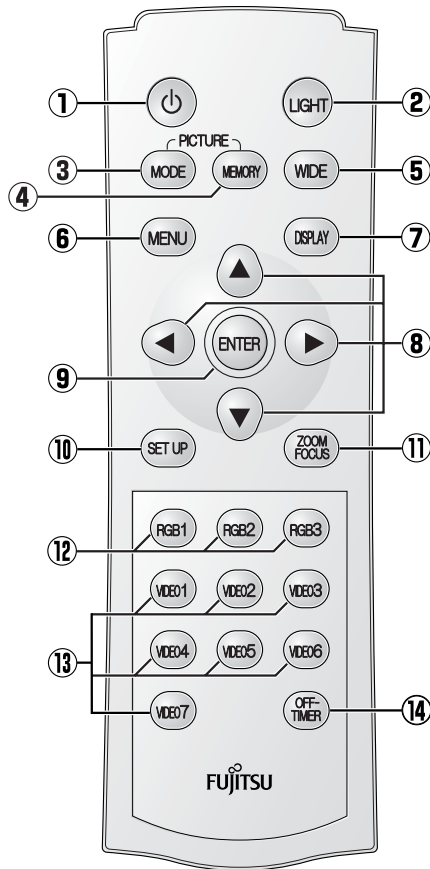


- ① **⏻ button → E-29**  
Switches between Power On and Standby.
- ② **LIGHT (LIGHT button) → E-35**  
Press this button to light up the buttons on the remote control. If the buttons are left untouched, the light turns off in 7 seconds.
- ③ **PICTURE MODE (PICTURE MODE button) → E-35**  
Use this button to switch the Picture Mode.
- ④ **PICTURE MEMORY (PICTURE MEMORY button) → E-35**  
Press this button to recall a Picture Memory.
- ⑤ **WIDE (WIDE button) → E-36**  
Switches the screen size.
- ⑥ **MENU (Menu button) → E-38–E-53**  
Press this button to display the menu screen for adjusting the picture and/or the audio.
- ⑦ **DISPLAY (DISPLAY button) → E-35**  
Press this button to display the Program No., input mode, and screen size status. The status is displayed for about five seconds.
- ⑧ **▲ ▼ ◀ ▶ (Adjustment buttons) → E-38–E-53**  
Use these buttons to select the item or adjust the value in the Menu screen.
- ⑨ **ENTER (Enter button) → E-38–E-53**  
Press this button to fix the entry in the ADJUSTMENT MENU.
- ⑩ **SET UP (SET UP button) → E-35**  
Press this button to make lens shift, screen reverse and keystone adjustments.
- ⑪ **ZOOM FOCUS (ZOOM/FOCUS button) → E-35**  
Press this button to adjust the size and focus of the picture.
- ⑫ **RGB1 – RGB3 (RGB input mode selector button) → E-34**  
Press this button to switch through RGB1 to RGB3.
- ⑬ **VIDEO1 – VIDEO7 (Video input mode selector button) → E-34**  
Press this button to switch through VIDEO1 to VIDEO7.
- ⑭ **OFF-TIMER (OFF-TIMER button) → E-35**  
Use this button to specify the length of time until the projector goes into standby.

# USING THE REMOTE CONTROL


## PUTTING BATTERIES IN THE REMOTE CONTROL

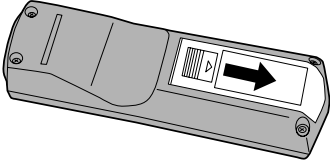

(1) To remove the cover, slide it outwards while pressing it down.

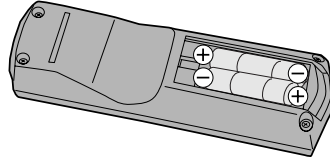

(2) Place two AAA batteries. Pay attention to set them in correct pole.

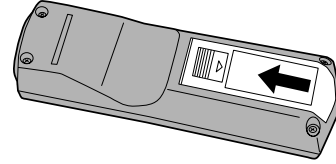

(3) Close the cover until it snaps into place.

## PRECAUTIONS

To prevent malfunction, be sure not to apply any form of severe shock to the remote control.

To prevent malfunction or deformation, be sure not to allow the remote control to become wet; also, keep it away from hot locations or heating equipment.

Be sure not to clean the remote control using a cloth dampened in any volatile solvent, such as benzene or thinner.

### CAUTION

Be sure to use replacement batteries of the same type as the original ones.

When disposing of used batteries, please comply with governmental regulations or environmental public institution's rules that apply in your country/area.

### Note


The remote control will not function properly if the batteries are dead. Be sure to replace them as needed.

Do not use rechargeable batteries (Ni-Cd, etc).

## EFFECTIVE RANGE FOR THE REMOTE CONTROL

Point the remote control at the display's signal receiver when using it.

Make sure that there are no obstacles between the remote control and the display's signal receiver.

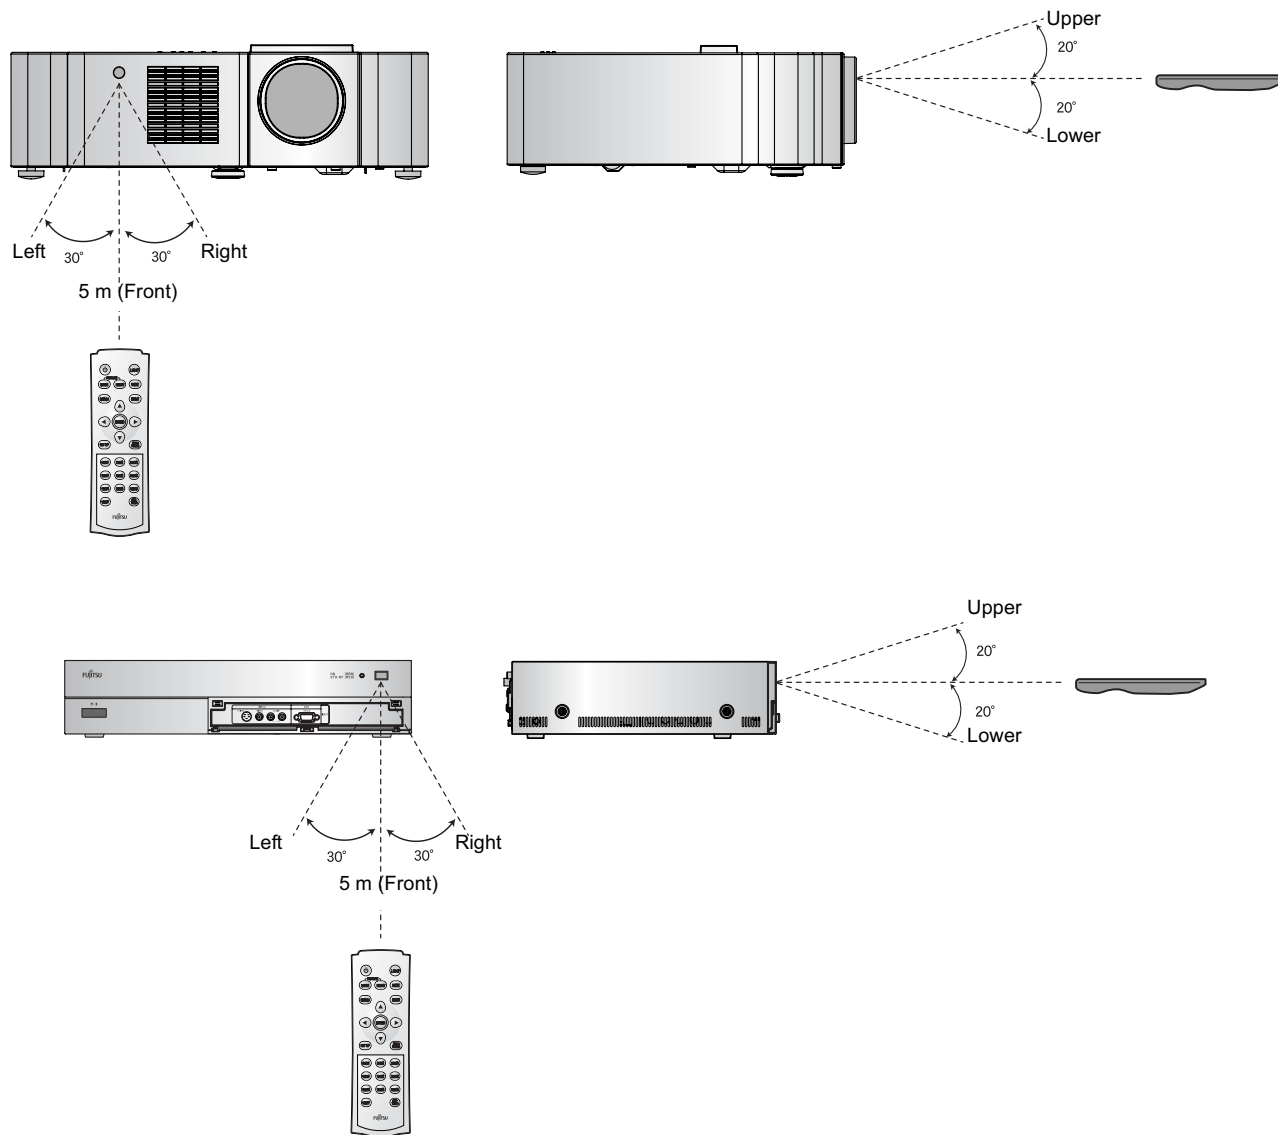

### Note

The remote control may not function properly if you use a high-frequency fluorescent lamp. If you experience problems, move the lamp or use the remote control from a different position.

# CONNECTING THE DISPLAY TO EXTERNAL EQUIPMENT

Be sure to turn OFF the power to the display and external equipment before making any connections.

No cables are supplied with the display for connection to external equipment. The type of cable to be used varies depending on the PC model. Contact your dealer for more information.

Carefully check the terminals for position and type before making any connections.


Loose connectors can result in picture or color problems. Make sure that all connectors are securely inserted into their terminals.

\* Never force to bend the power cords or cables. Otherwise they may cause damage.

These ferrite cores are used to attenuate undesired signals. Attach them correctly as shown in the following illustrations.


## One ferrite core (For AV SELECTOR)

When connecting a cable to the power input terminal, attach one of these ferrite cores to the cable near the terminal.

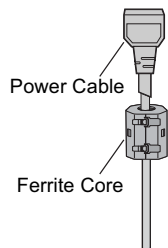


## Two ferrite cores (For System Cable)

When connecting the System Cable (PICTURE), attach these ferrite cores to near the both ends of the cable.

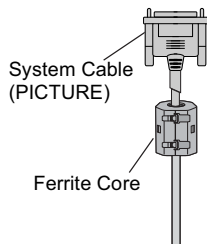

# CONNECTING THE PROJECTOR AND THE AV SELECTOR

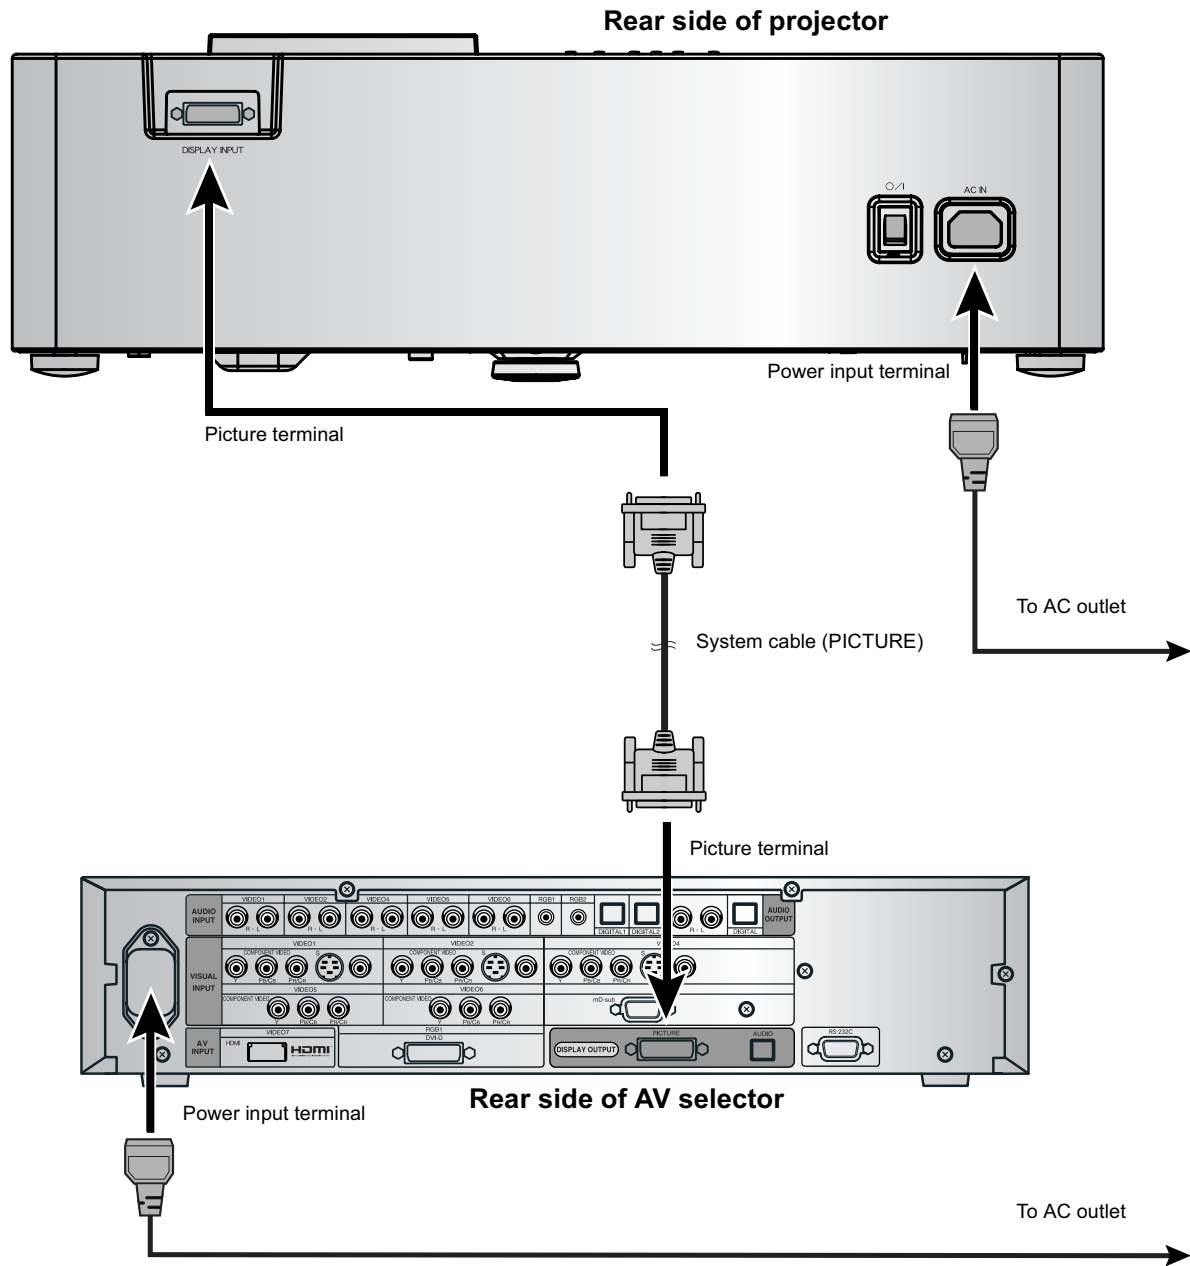


**Note**

- Never force to bend the power cords or cables. Otherwise they may cause damage.

# CONNECTING THE DISPLAY TO EXTERNAL EQUIPMENT (Continued)

## EXAMPLE OF CONNECTION TO EXTERNAL COMPONENTS

The projector unit has no speaker function. To produce sound, connect it to an external amplifier.

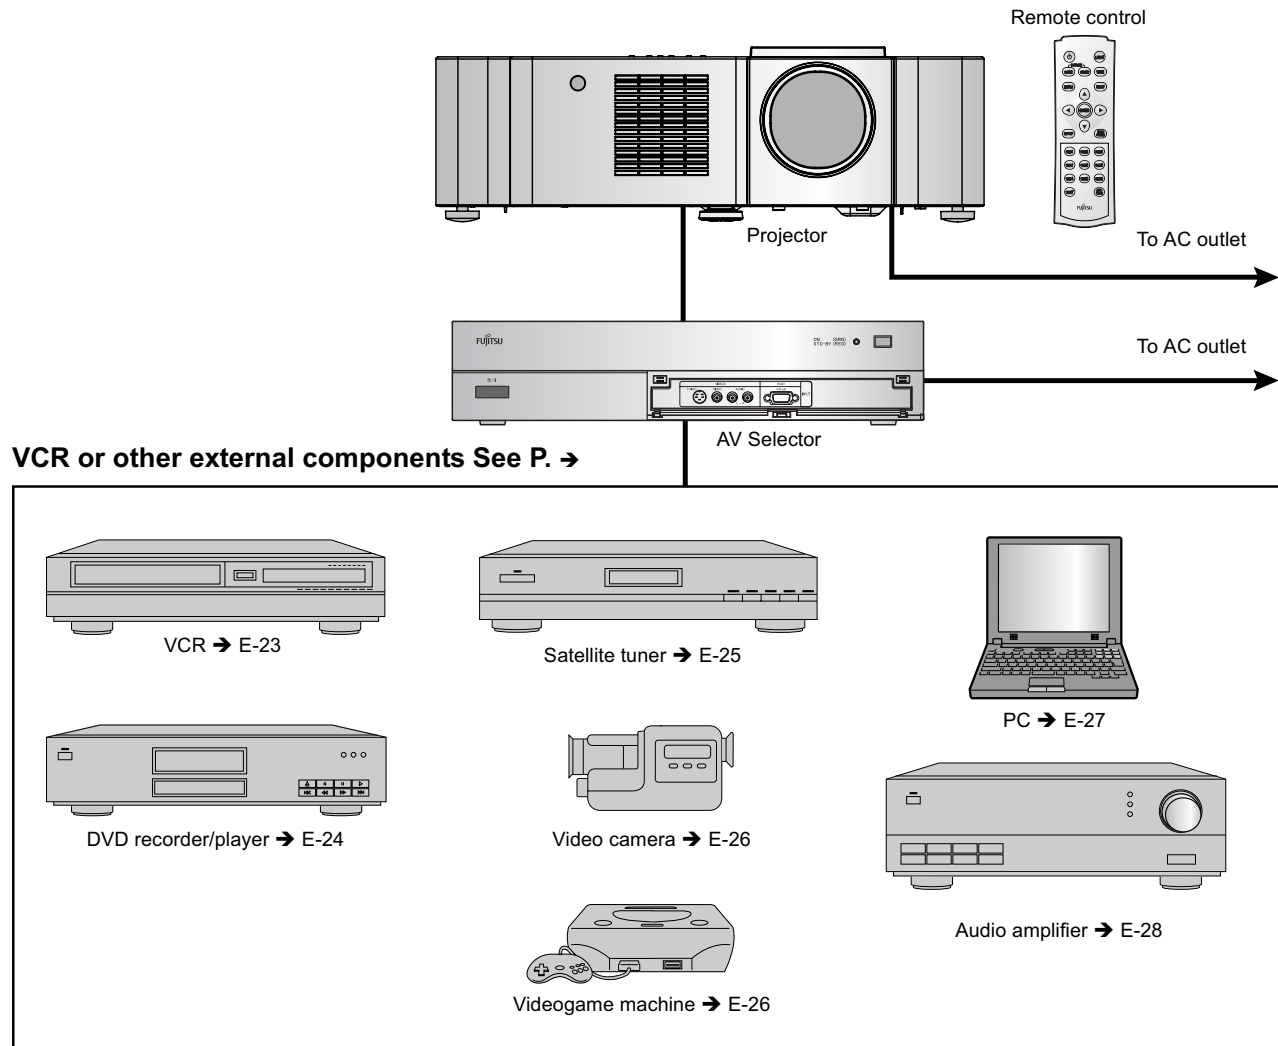


### Note

- Unplug the power cord from the AC outlet before you connect external components.
- Also refer to the instructions for the component to be connected.
- The projector unit has no speaker function. To produce sound, connect it to an external amplifier.

# VCR

- Connect the video signal cable to either the S-video input terminal or the video input terminal.
- If the unit to be connected is equipped with S-video output terminal, it is recommended to connect to the S-video terminal.

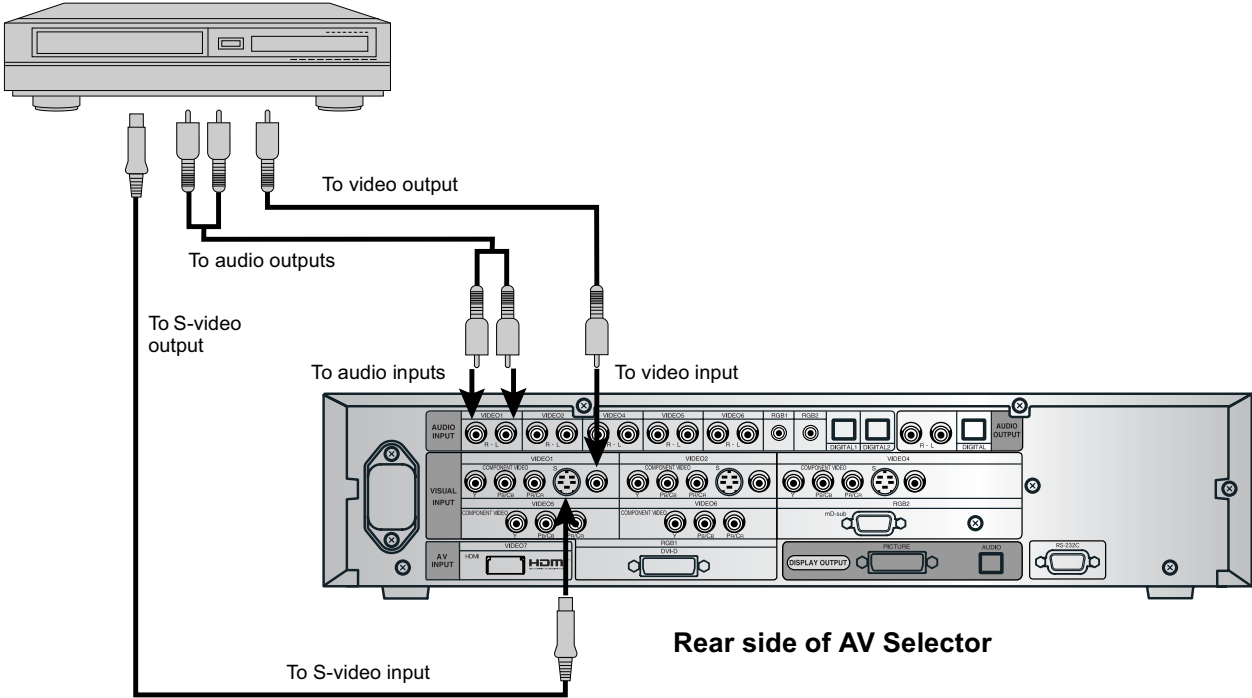


**Note**

- Unplug the power cord from the AC outlet before you connect external components.
- Also refer to the instructions for the component to be connected.
- When inputting audio, connect to the terminals corresponding to the used video input or RGB input.

# CONNECTING THE DISPLAY TO EXTERNAL EQUIPMENT (Continued)

## DVD RECORDER/PLAYER


- Connect the picture signal cable to any one of the HDMI input terminal, component picture input terminal, S picture input terminal, or picture input terminal.
- When the equipment to be connected is equipped with the HDMI output terminal or the component picture output terminal, connection to either of these terminals is recommended.

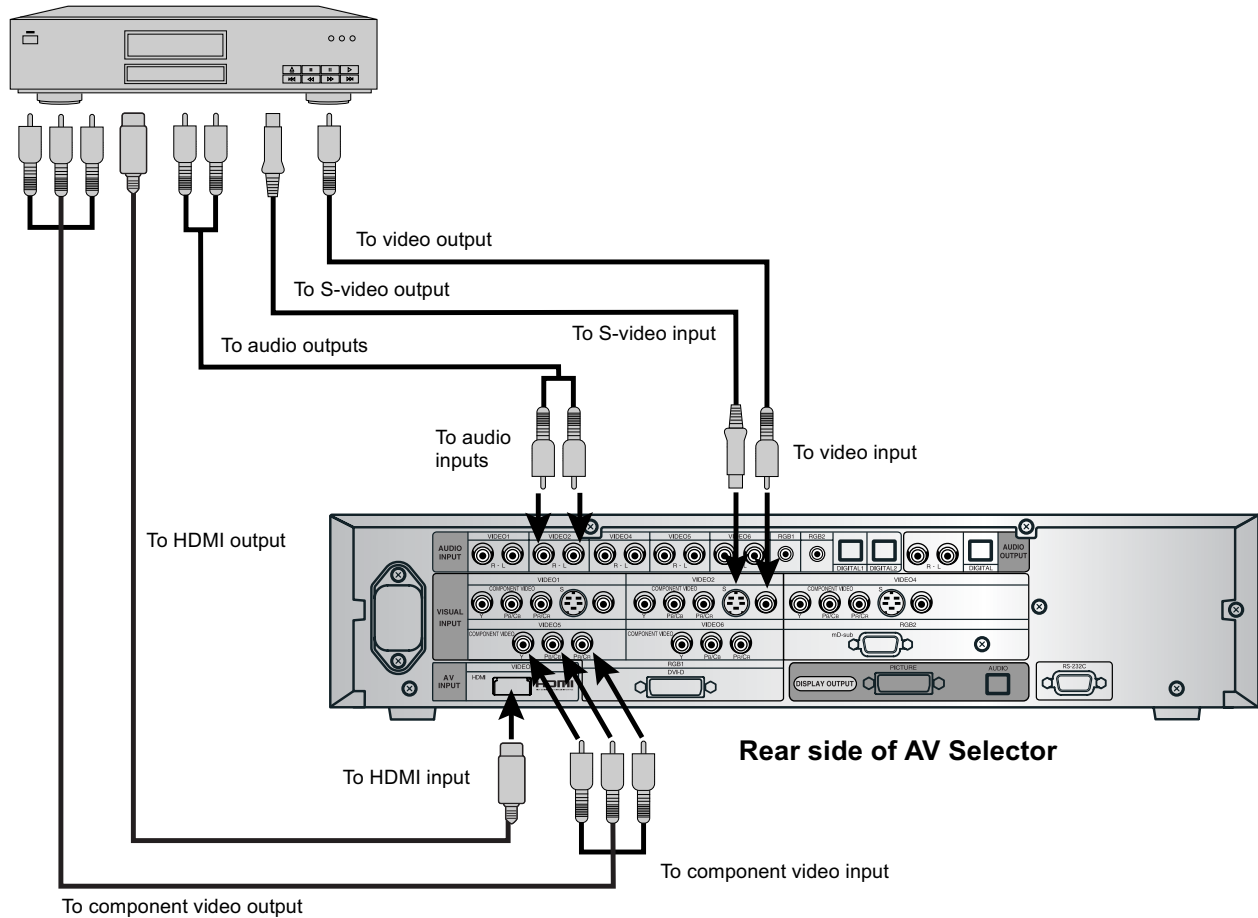



## SATELLITE TUNER

- Connect the picture signal cable to any one of the HDMI input terminal, component picture input terminal, S picture input terminal, or picture input terminal.
- When the equipment to be connected is equipped with the HDMI output terminal or the component picture output terminal, connection to either of these terminals is recommended.

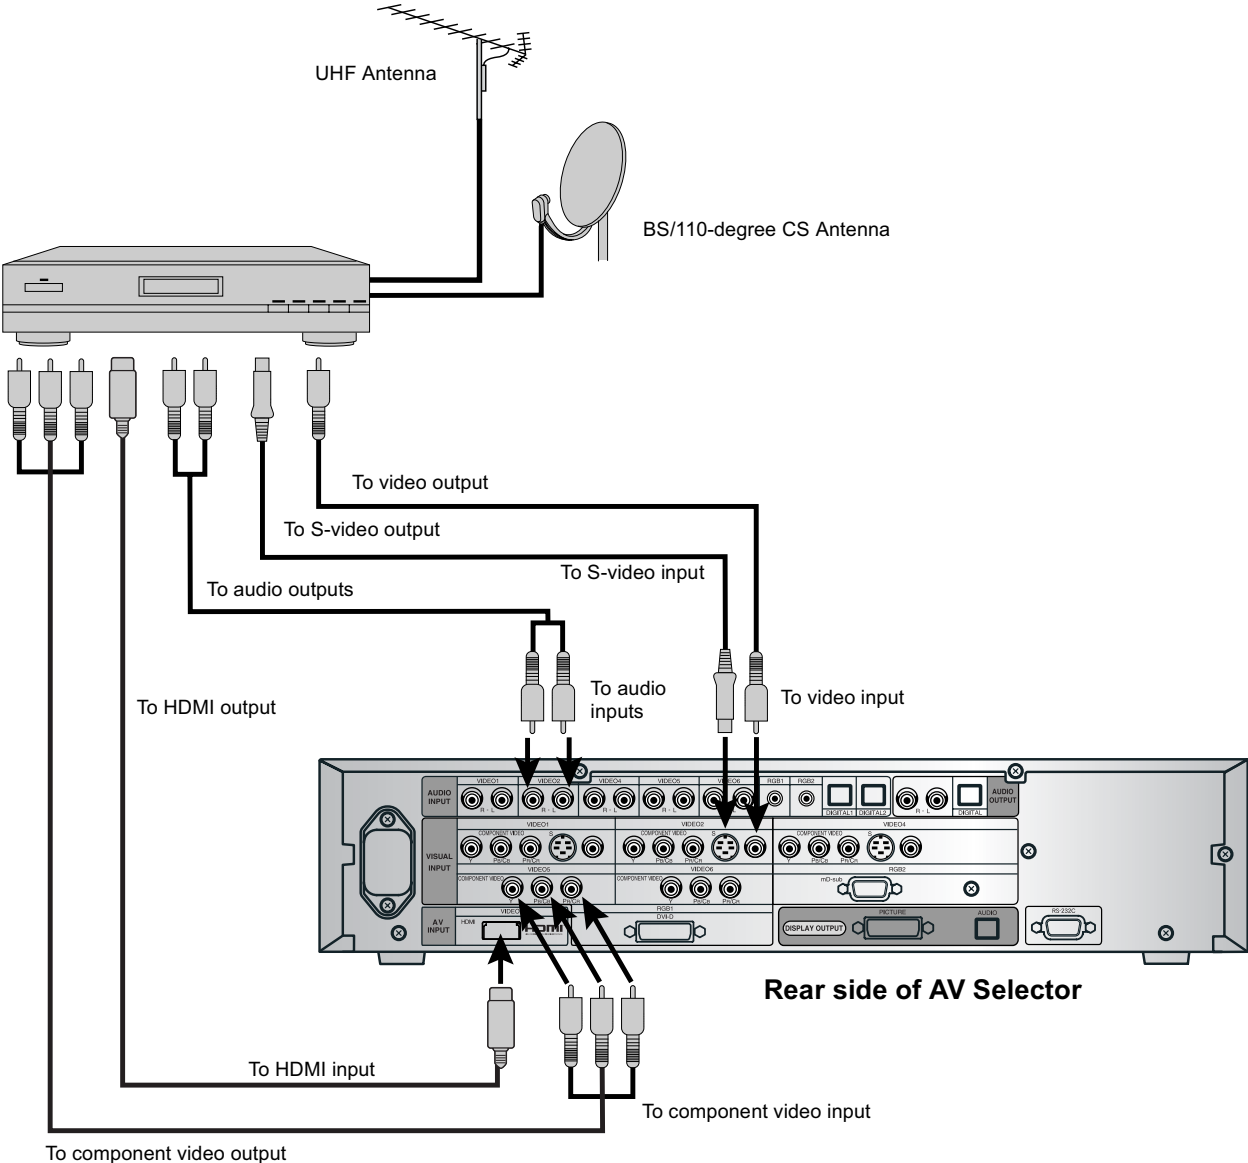


**Note**

- Unplug the power cord from the AC outlet before you connect external components.
- Also refer to the instructions for the component to be connected.
- The projector unit has no speaker function. To produce sound, connect it to an external amplifier.

# CONNECTING THE DISPLAY TO EXTERNAL EQUIPMENT (Continued)


## VIDEO CAMERA

- A video camera can conveniently be connected to the Video 3 input on the front side.
- Connect the video signal cable to either the S-video input terminal or the video input terminal.
- If the unit to be connected is equipped with S-video output terminal, it is recommended to connect to the S-video terminal.

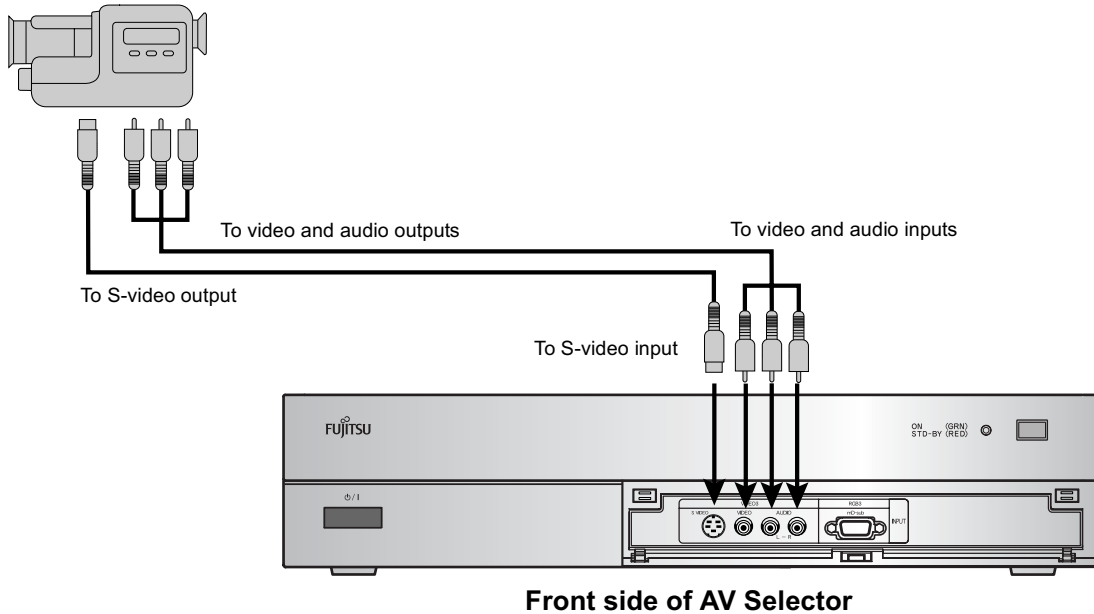


## VIDEOGAME MACHINE

- As the connecting cable differs with videogame machines, please consult the instructions for your videogame machine.
- Connect the video signal cable to either the S-video input terminal or the video input terminal.
- Ensure that the same image (pattern) is not displayed on the screen for an extended period. If the same image is displayed on the screen for an extended period, the brightness of that part of the screen may change and image burn-in may leave an after-image on the screen.
- If the videogame machine to be connected is equipped with S-video output terminal, it is recommended to connect to the S-video terminal.

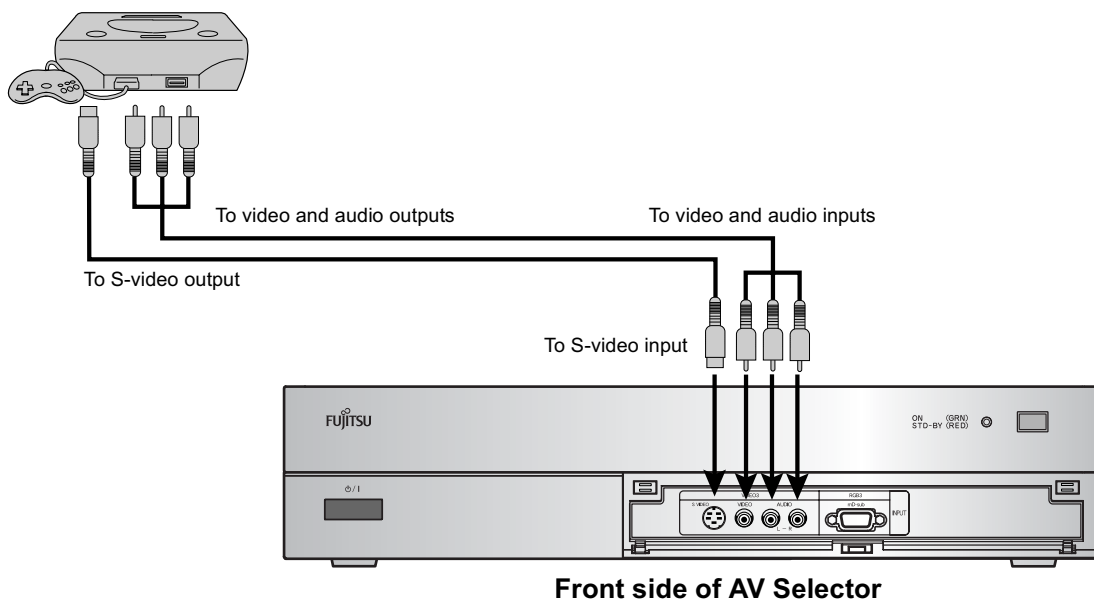

# PC

- As the cable for connecting a PC differs with the PC model, please consult your dealer for information on the right cable to purchase.
- The PC can be connected to either the front side or the rear side, whichever is most convenient.

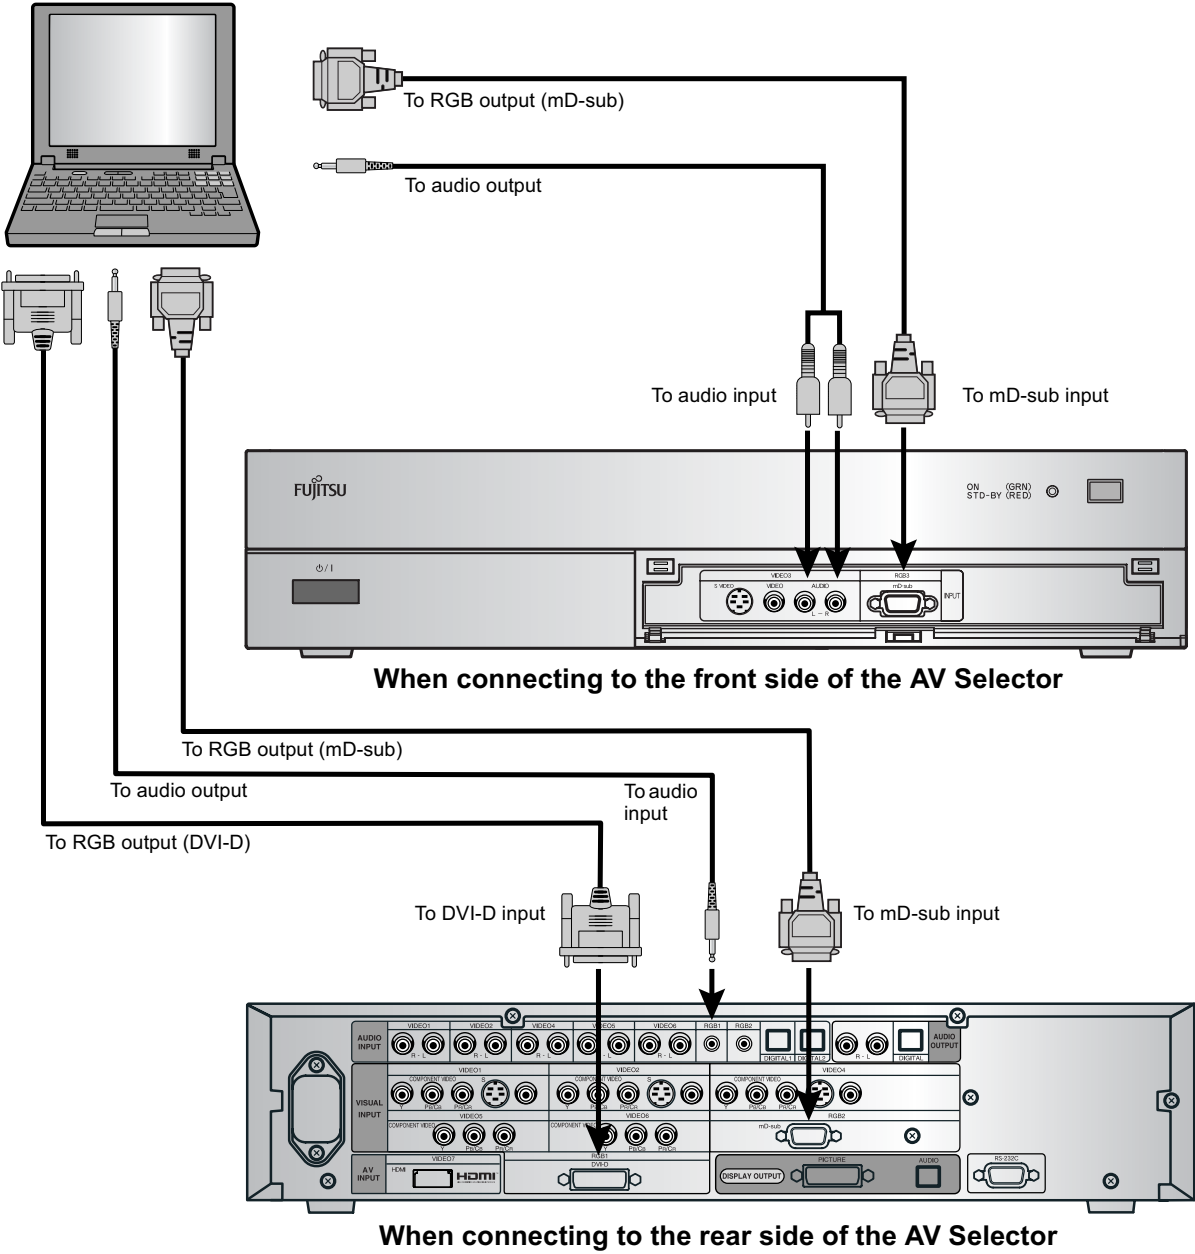


- Note**
- Unplug the power cord from the AC outlet before you connect external components.
  - Also refer to the instructions for the component to be connected.
  - The projector unit has no speaker function. To produce sound, connect it to an external amplifier.

# CONNECTING THE DISPLAY TO EXTERNAL EQUIPMENT (Continued)



## WHEN OUTPUTTING AUDIO SIGNALS TO AN AUDIO AMPLIFIER

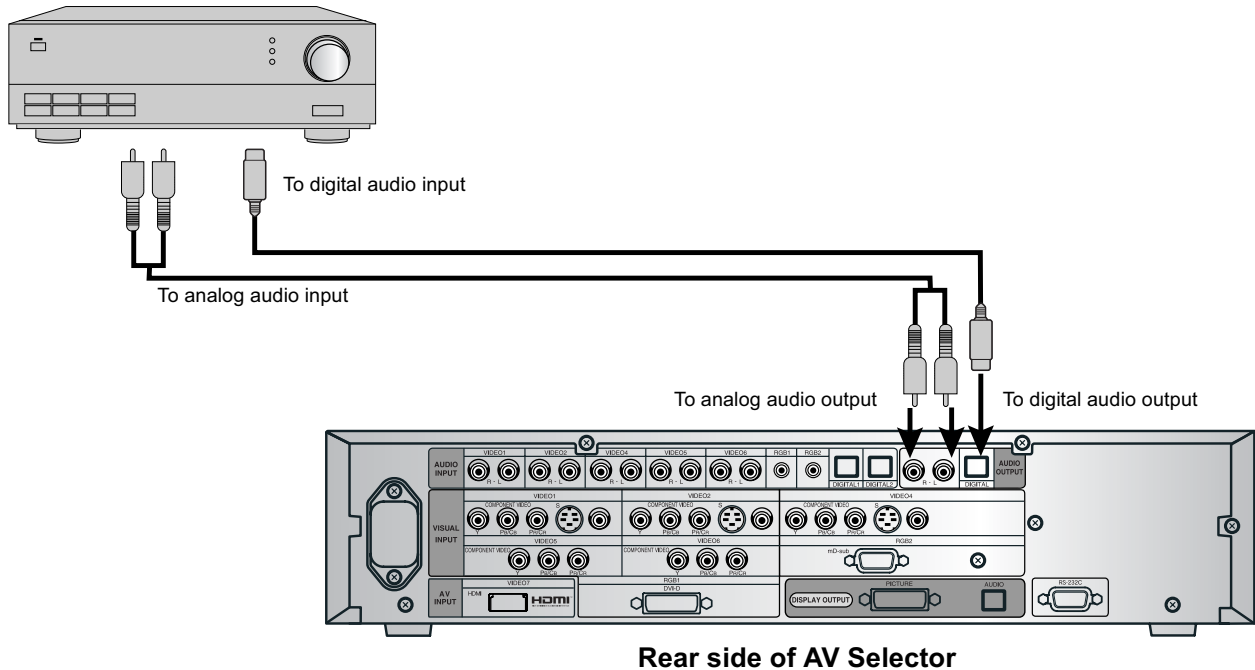- Connect the audio signal cables to the digital output and the analog audio output terminals.
  - \* Connect the audio signal to the digital audio output terminal and analog audio output terminal. For switching over the digital audio output terminal to the analog audio output terminal, see the audio input selection (page E-50).
  - \* The signal input as digital input is not output as analog audio.
  - \* The digital audio input terminal on the display complies with a sampling frequency of 48 kHz.
- In the case of outputs with another frequency, connect to an audio system (amplifier)\*.




## TURNING ON THE POWER



- 1** Press "I" side of the  / I button on the right hand side of the projector's rear, and then, press  / I button on the left hand side of AV selector's front.

The power indicator lamps of both the projector and AV selector light up.

- 2** Press .

The color of the power indicator lamp turns from "Red" to "Green".

(The indicator lamp blinking in orange on the projector indicates that the lamp is let to cool.)

### Note




- For one minute after the light source lamp lights up, another press of "POWER" button will not turn off the power.

# BASIC OPERATIONS (Continued)

## TURNING THE POWER TO STANDBY



\* You can also use the buttons on the projector's control panel to perform these steps.

- 1** Press .
- 2** Press  to select "OFF".
- 3** Press .

The projector operates as follows:

- (1) The color of the power indicator lamp turns from green to orange (flashing) to indicate that the cooling of the light source lamp is in progress.
- (2) The cooling fan rotates for 2 minutes. For one minute after the cooling of the light source lamp is started, the buttons on the projector and remote control are disabled, and the light source lamp cannot be lighted again. (After one minute, the lamp can be turned on again.)
- (3) When the cooling is completed, the fan stops operation, and then the power monitor indicator lamp turns on in red, resulting in the "standby" mode.

- \* Even after the power is turned to standby mode, the cooling fan continues rotating while high temperature remains inside the projector (for approximately 2 minutes). While the cooling is in process, do not unplug the power cord from the receptacle.
- \* Pressing "POWER" button twice successively will also turn the power to standby mode.

### POWER BUTTON WAS PUSHED


Push POWER button or  
Move the cursor to "Power off"  
and push ENTER button  
to turn projector off.

Power Off   ► Cancel

## ADJUSTING THE FOCUS AND SIZE OF THE PICTURE



- 1** Press **ZOOM FOCUS**.  
The zoom/focus adjustment menu display appears.  
\* If the menu screen is out of focus, press **◀ ▶** to adjust the focus.
- 2** Press **◀ ▶** to adjust the focus of the picture.
- 3** Press **▲ ▼** to adjust the size of the picture.

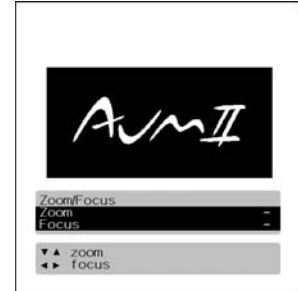


Zoom/focus adjustment menu


- \* Once this button is pressed, the adjustment operation halts. This means an operation to make fine-adjustment with ease. Use this function at the time of fine-adjustment.
- \* This function does not work beyond the range of adjustment.

\* You can also use the buttons on the projector's control panel to perform these steps.

## FINE-ADJUSTING THE SCREEN POSITION

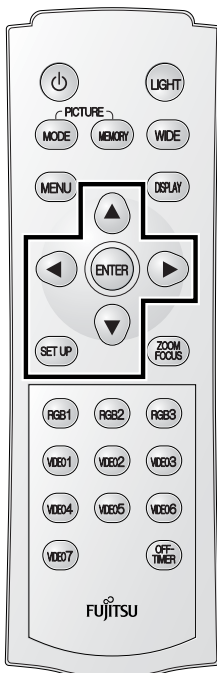

- 1** Press **SET UP**.  
The adjustment menu display appears.
- 2** Press **▲ ▼** to select "Lens Shift".
- 3** Press **ENTER**.  
The adjustment display appears.
- 4** Press **◀ ▶ ▲ ▼** to fine-adjust the screen position.

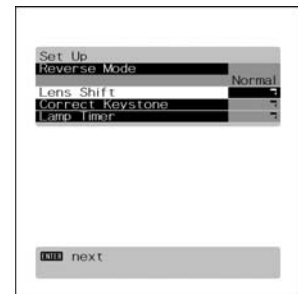


Installation menu screen

- \* Once this button is pressed, the adjustment operation halts. This means an operation to make fine-adjustment with ease. Use this function at the time of fine-adjustment.
- \* This function does not work beyond the range of adjustment.

\* You can also use the buttons on the projector's control panel to perform these steps.


# BASIC OPERATIONS (Continued)

## ADJUSTING THE RECTANGULAR DISTORTION OF THE PICTURE

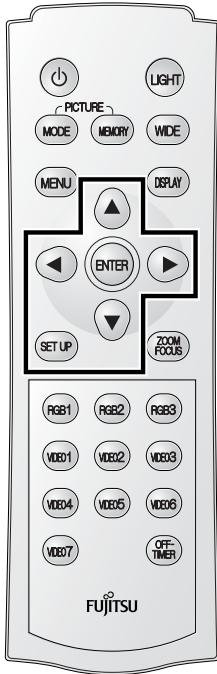


\* You can also use the buttons on the projector's control panel to perform these steps.

- 1** Press .  
The adjustment menu display appears.
- 2** Press to select "Correct Keystone".
- 3** Press .  
The adjustment display appears.
- 4** Press to adjust the rectangular distortion of the picture.

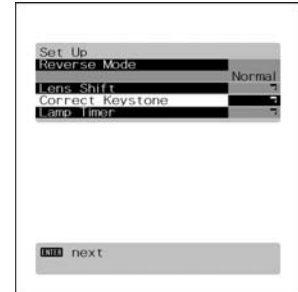


Installation menu screen

 
Pressing corrects the distortion of the upper portion of the picture.

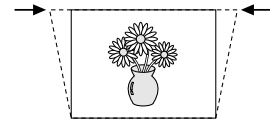


Pressing corrects the distortion of the lower portion of the picture.

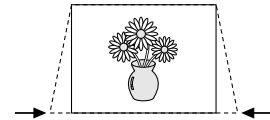

Pressing corrects the distortion of the left side portion of the picture.

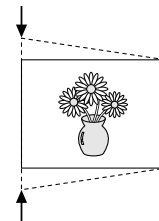

Pressing corrects the distortion of the right side portion of the picture.

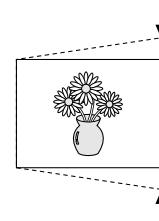


- 5** Press to register the adjustment result.

### Note

- Adjustment of either of the vertical or horizontal axis restricts the adjustment range of the other. (For example, if the horizontal axis is adjusted to the maximum level, adjustment of the vertical axis will be made impossible.)
- Adjustment with the Keystone button may cause change the aspect ratio. In this case, correct the aspect ratio by adjusting the size.



## REVERSING THE PICTURE

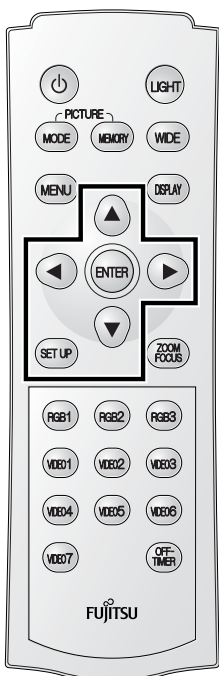

\* You can also use the buttons on the projector's control panel to perform these steps.

- 1** Press .  
The adjustment menu display appears.
- 2** Press to select "Reverse Mode".
- 3** Press .  
The adjustment display appears.
- 4** Press to reverse the picture as desired.
- 5** Press to register the adjustment result.



Installation menu screen

# SELECTING INPUT MODE

## VIDEO INPUT MODE



### 1 Press the **VIDEO1** - **VIDEO7** buttons to select the input mode.

You can select from VIDEO 1 mode to VIDEO 7 mode.

The video modes corresponding to each input terminal are as follows.

- VIDEO1: Video, S-video, Component video
- VIDEO2: Video, S-video, Component video
- VIDEO3: Video, S-video
- VIDEO4: Video, S-video, Component video
- VIDEO5: Component video
- VIDEO6: Component video
- VIDEO7: HDMI

\* For selection of the input terminal, see "SETTING THE INPUT TERMINALS" on P. E-49.



Video1 mode

## RGB INPUT MODE



### 1 Press the **RGB1** - **RGB3** buttons to select the input mode.

You can select between the modes from RGB1 to RGB3.

The input terminal of each RGB mode is as follows.

- RGB1: DVI-D
- RGB2: mD-sub
- RGB3: mD-sub



RGB1 mode

## CONVENIENT FUNCTIONS



### LIGHT button

Press **LIGHT**.

The buttons on the remote control light up.

If the buttons are left untouched, the light turns off in 7 seconds.

### On-screen information

Press **DISPLAY**.

The channel or mode is indicated on the screen for 5 seconds.

### Picture Mode

Press **PICTURE MODE**.

This button can be used to switch the picture mode.

In the picture mode, you can switch between the set status and the fine mode.

\* For the picture mode settings, see "Setting Picture Mode (P. E-40)".

### Picture Memory

Press **PICTURE MEMORY**.

This button can be used to recall the settings of the picture memories 1 – 8. Each time this button is pressed, the setting changes as follows.

→Memory1→Memory2→Memory3→Memory4→Memory5→Memory6→Memory7→Memory8

\* For the method of storing the picture adjustment settings in memory, see "Picture Memory" on page E-41.

### ZOOM/FOCUS button

Press **ZOOM FOCUS**.

The size and focus of the picture can be adjusted.

\* See the section "ADJUSTING THE FOCUS AND SIZE OF THE PICTURE" (page E-31) for setting zoom and focus.

### SET UP button

Press **SET UP**.

The lens shift, screen reverse and keystone adjustments can be made.

\* For projector installation position adjustment, see the sections "FINE-ADJUSTING THE SCREEN POSITION" (page E-31), "ADJUSTING THE RECTANGULAR DISTORTION OF THE PICTURE" (page E-32), and "REVERSING THE PICTURE" (page E-33).

### OFF-timer

Press **OFF-TIMER**.

This can be used to set the time before the power is turned off. Each time this button is pressed, the setting changes as follows.

→ Off → 30 min. → 60 min. → 90 min. → 120 min.

# WATCHING PICTURES ON THE WIDE SCREEN

## SWITCHING BETWEEN SCREEN SIZES



**1** Press **WIDE**.  
The currently selected mode will appear.

**2** Press **WIDE** to select a desired Screen Size.

Each time you press **WIDE**, a different Screen Size appears. The sequences used are as follows:


When you are in a Video input mode

→Normal→Wide1→Wide2  
Zoom2 ← Zoom1 ←

When you are in an RGB input mode

→Normal →Wide →Zoom

\* Depending on the type of signal, some aspects may not be selected.

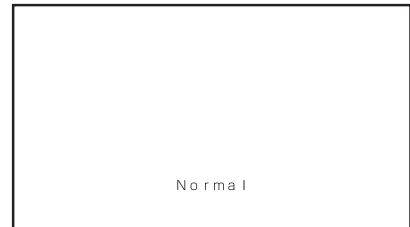

Normal mode



Wide1 mode

### Note

- Displaying a picture in a Normal mode for extended periods of time may cause phosphor burn-in.
- A variety of Screen Sizes are available with this display. Remember that if you select a mode with an aspect ratio (ratio of frame width to frame height) different from that of the TV program or video media, the pictures will appear differently than if you had selected a mode having the same aspect ratio.
- Showing a movie or similar premium event at a different aspect ratio from its original one at any event site, restaurant, or bar for profit-making purposes or for a public audience may constitute a copyright infringement.  
For films, try to select a mode having the same aspect ratio as the original picture; this enables the director's original intentions to be preserved.
- See P. E-46 for how to adjust the picture size and position.

## SCREEN SIZE

### Normal (Video/RGB)

Displays pictures of normal size (i.e., a 4:3 aspect ratio).

### Wide1 (Video)

Displays natural-looking pictures of standard size on the wide screen.

### Wide2 (Video)/Wide (RGB)

Ideal for displaying vertically extended pictures such as squeezed pictures.


### Zoom1 (Video)/Zoom (RGB)

Enlarges horizontally extended pictures equally in all directions to maintain the aspect ratio constant.

### Zoom2 (Video)

Reduces the height of horizontally extended pictures with captions, without eliminating the caption. Only the height of pictures is reduced, not the height of the caption.


(Captions may not be easy to read, however, depending on the picture.)

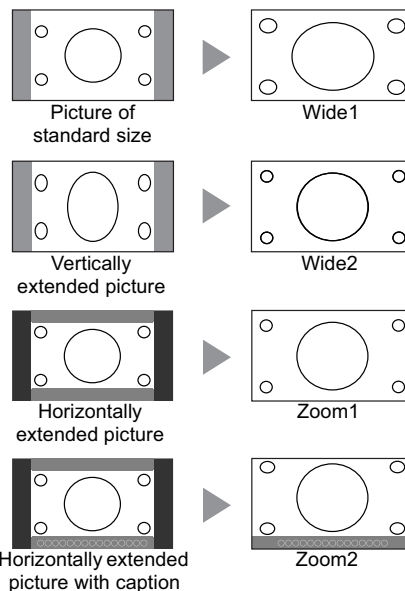


## ASPECT RATIO

The following aspect ratios are available.


4:3 aspect ratio  
(VHF/UHF broadcasting, BS broadcasting)

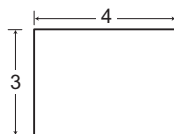


16:9 aspect ratio  
(HDTV broadcasting)

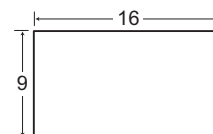

1.85:1 aspect ratio  
(Vista Vision size)

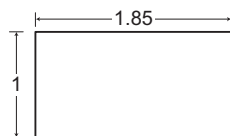

2.35:1 aspect ratio  
(Cinema Vision size)

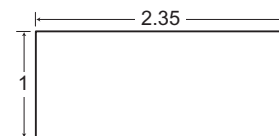


### Note

- You may find dark areas on top and at the bottom of the screen if you select one of the Zoom modes for media while using the Vista Vision or Cinema Vision size i.e., the sizes used frequently for picture software.
- The picture in 1080i format will be slightly reduced in size on the wide screen.

# ADJUSTMENT MENU

The numbers in parentheses ( ) indicate the reference page numbers.

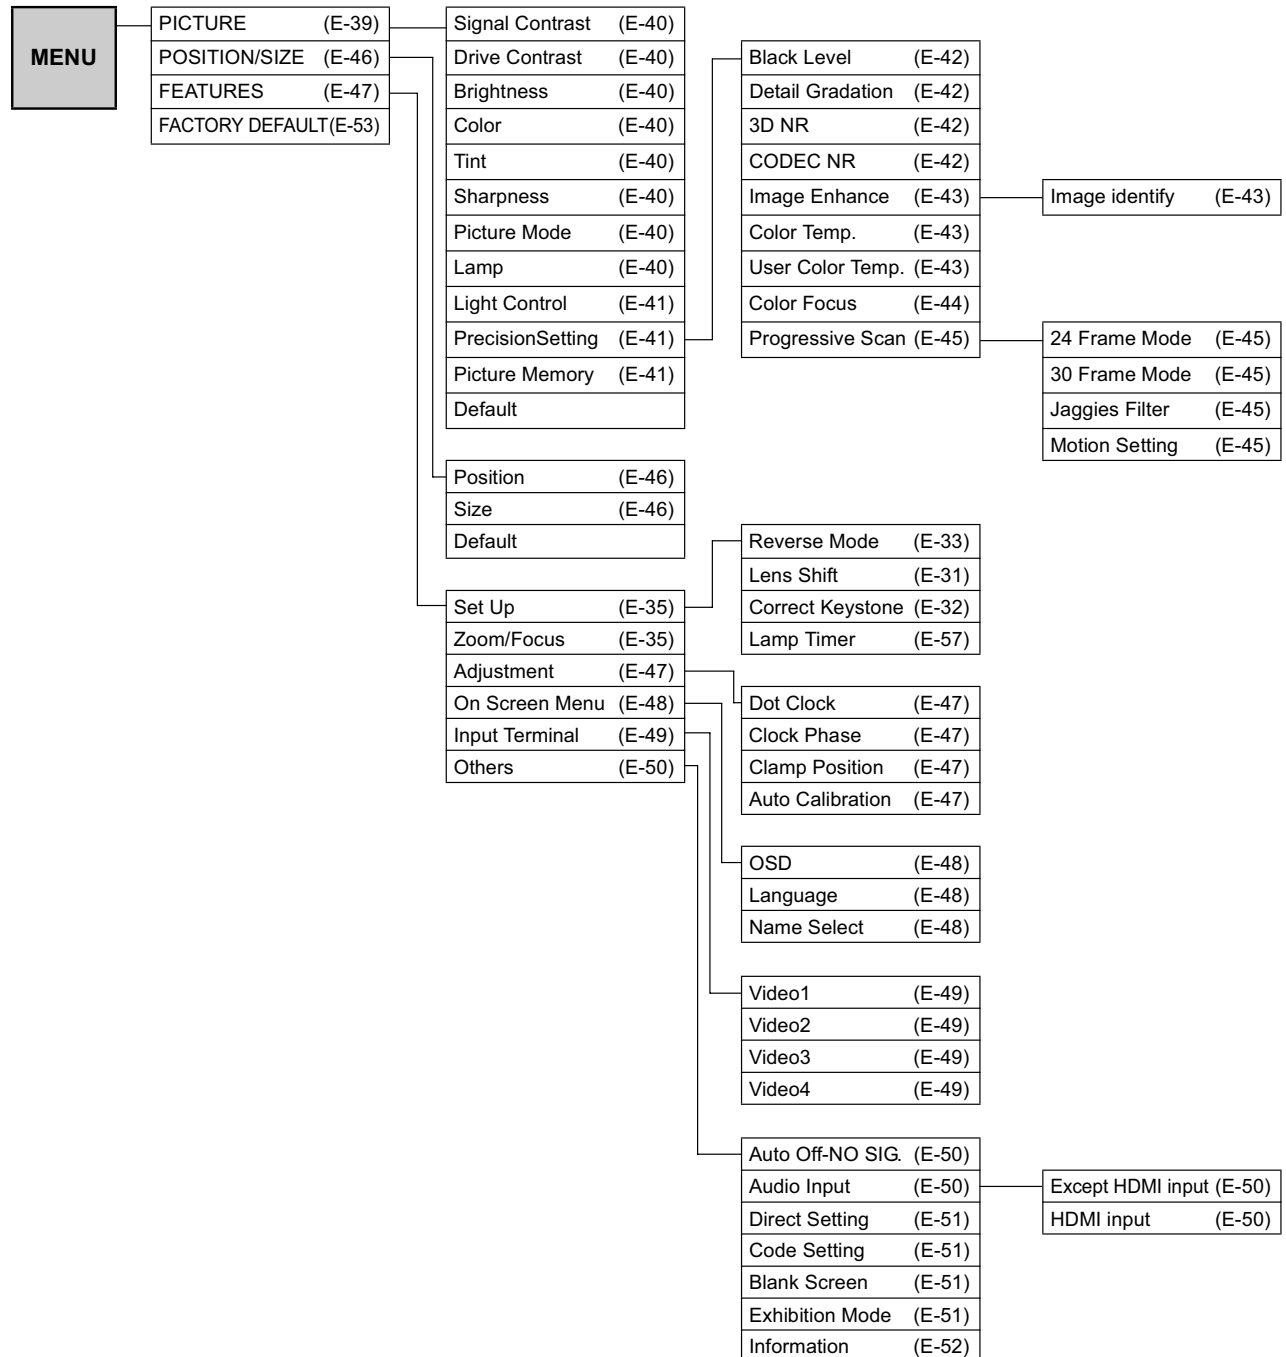

# BASIC PROCEDURE OF ADJUSTMENT MENU OPERATIONS

- Below is shown the basic procedure to make changes to the options in the ADJUSTMENT MENU. (Ex.: adjusting tint setting (Tint))
- Select an input mode to be set on the PICTURE screen. (Store adjustment contents to be set for each input mode.)



**1 Press .**  
The main menu screen will appear.

**2 Press or to select "PICTURE".**

Each time you press or , one of the available menus appears in the following sequence:

PICTURE ↔ POSITION/SIZE ↔ AUDIO ↔ FEATURES ↔ FACTORY DEFAULT

The PICTURE Menu screen will appear.

**3 Press or to select "Tint".**

**4 Press .**  
The "Tint" adjustment screen will appear.

**5 Press or to change tint values.**

: More greenish colors

: More purplish colors

**6 Press to store.**

**7 Press when you finish.**

\* Repeat steps 3, 4, 5 and 6 when you wish to make changes to other options.

\* When is pressed after you have selected "Default", the settings are returned to those that were valid when you purchased the set.


\* Press to halt the operation in progress.



"PICTURE" selected in the main menu screen



"Tint" selected in the PICTURE Menu screen

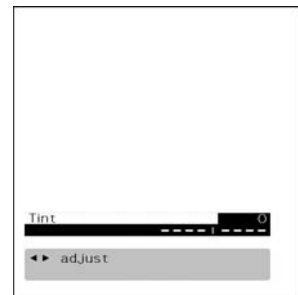

"Tint" adjustment screen


## Note


- On-screen information disappears if you do not take any action for about 60 seconds.
- Functions may not be available with some models and some device options.
- The adjustment range varies with the display signal. You can adjust the display quality to the value you want within the adjustable range.
- Depending on the type of signal, it may not be possible to make some of the settings or adjustments.

# ADJUSTING THE PICTURE

- Picture-related items can be set and adjusted in the Picture Adjustment Screen. See BASIC PROCEDURE OF ADJUSTMENT MENU OPERATIONS on page E-39 for the basic operation procedures.


## Adjusting the Signal Contrast


Press  to increase the input signal contrast.

Press  to reduce the input signal contrast.

Press  to store.


## Adjusting the Drive Contrast


Press  The illumination level rises and the contrast increases over all gradation.

Press  The illumination level lowers and the contrast reduces over all gradation.

Press  to store.


## Adjusting the Brightness


Press  to increase the brightness.

Press  to reduce the brightness.

Press  to store.

## Adjusting Color

Press  to darken the color.

Press  to lighten the color.

Press  to store.


## Adjusting the Tint

Press  to change the tint to a more greenish color.

Press  to change the tint to a more purplish color.

Press  to store.



## Adjusting the Sharpness





 

Press  to sharpen the Sharpness.

Press  to soften the Sharpness.

Press  to store.

## Setting the Picture Mode

Picture mode changes by pressing  or , and the optimum  $\gamma$ -curve for each picture mode shall be set up automatically.

 Natural  Fine  Effective  Conventional  Still 

**[Natural]:** Displays a screen with detailed contrast.

**[Fine]:** Suitable for watching a dark picture such as a movie.

**[Effective]:** Enables you to watch pictures with natural color tones and high picture clarity.



This mode is suitable for watching a normal motion picture.


**[Conventional]:** Similar picture to CRT screen.

**[Still]:** Suitable for viewing a still picture.

Press  to store.

## Setting the luminance of the light source lamp

 Each time you press  or , the luminance of the light source lamp changes over.

Normal  Low

**[Normal]:** The luminance of the lamp is set at the standard level.

**[Low]:** The luminance of the lamp is lowered. This setting can reduce the power consumption of the lamp to save energy.

Press  to store.



### Setting the intensity of the light source lamp

By adjusting the intensity of the light source lamp according to the brightness of the picture, the contrast of the moving picture can be optimally enhanced.

Each time you press ◀ or ▶, the intensity of the light source lamp changes over in the following sequence.

➔ Off ↔ Min. ↔ Mid. ↔ Max. ➔

Press **ENTER** to store.

### Precision Setting

Enables advanced Sharpness adjustments.

See page E-42 for details.

### Picture Memory

The adjustment status of eight groups of picture adjustment settings can be stored, enabling you to quickly switch to your desired group of settings for the picture you are planning to watch.

**[Save]:** Use ▲ or ▼ to select Memory 1 - 8. If **ENTER** is pressed, the current picture adjustment values are stored to the selected Memory.

**[Load]:** Use ▲ or ▼ to select Memory 1 - 8. When **ENTER** is pressed, the values becomes the picture adjustment values stored in the selected Memory.

\* When the projector unit is shipped out of the factory, the following recommended settings are stored in the picture memories 4-8.

Picture memory 4: Suitable for viewing the picture of PC.

Picture memory 5: Similar picture to CRT screen.

Picture memory 6: Suitable for viewing normal moving picture.


Picture memory 7: Suitable for viewing a dark picture such as movies.

Picture memory 8: Suitable for viewing digital broadcast and sports programs.


New settings can be stored in the picture memories 4-8. By performing "FACTORY DEFAULT" (see page E-53), however, the recommended settings can be restored in respective picture memories.

### Note


- The screen display disappears if there is no operation within approximately 60 seconds.
- Depending on the model or the optional devices, some of the functions may not be available.
- The adjustment range varies according to the display signals. Make adjustments to your preferred Sharpness within the adjustment range.
- Depending on the type of signal, it may not be possible to make some of the settings or adjustments.

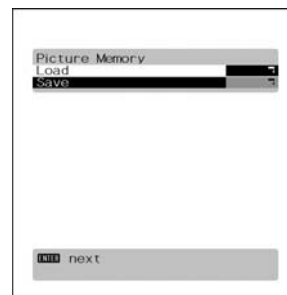

Picture Memory Selection Screen

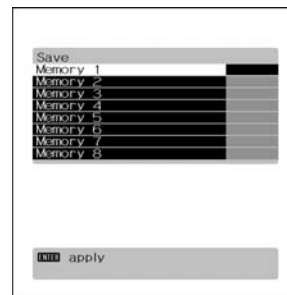

"Save" Selection Screen

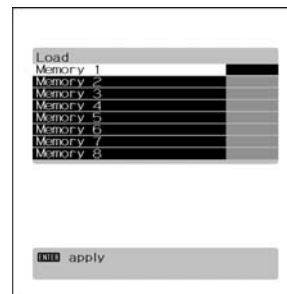

"Load" Selection Screen

# ADJUSTING THE PICTURE (Continued)

## PRECISION SETTING

- See BASIC PROCEDURE OF ADJUSTMENT MENU OPERATIONS on page E-39.

Even more advanced Sharpness adjustments can be made as required.

### Adjusting the Black Level

Press **▶** to strengthen the reproduction of black. (Provides a picture quality with deep blacks.)

Press **◀** to weaken the reproduction of black.

Press **ENTER** to store.

### Setting Detail Gradation

Corrects the gradation of the light and dark areas of the picture.

Each time **◀** or **▶** is pressed, the setting is switched.

On ↔ Off

Press **ENTER** to store.

### Setting 3D NR

This enables noise reduction processing with respect to the input signal noise level (reduces screen flicker for more comfortable viewing).

Each time you press **◀** or **▶**, the available choices appear in the following sequence.

▶ Off ↔ Min. ↔ Std. ↔ Max. ◀

Press **ENTER** to store.


### Setting CODEC NR

This enables noise reduction processing of mosquito noise or block noise generated when digital picture signals are recorded or replayed.

Each time you press **◀** or **▶**, the available choices appear in the following sequence.

▶ Off ↔ Min. ↔ Std. ↔ Max. ◀

Press **ENTER** to store.

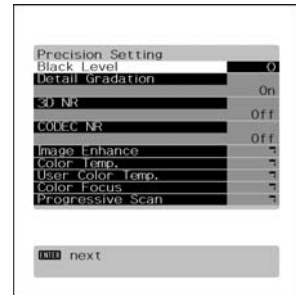

Precision Setting Selection Screen

## Setting Image Enhance (Valid in the DVI-D mode only)

This performs detailed image quality settings.

### • Image Identify

This function discerns between the natural image display section and the text display section, and performs correction to enable an optimized display for each.

Each time ◀ or ▶ is pressed, the setting is switched.

On ↔ Off

Press  to store.

## Adjusting the Color Temp.

Use ◀ or ▶ to specify a desired color temperature. Each time you press ◀ or ▶, one of the available choices appears in the following sequence:

▶ -3500 ◀ ▶ ... ◀ ▶ Standard ◀ ▶ ... ◀ ▶ +3500 ◀ ▶ User ◀

**[-3500]**: More reddish colors

**[+3500]**: More bluish colors

**[User]**: User Color Temp. setup

Press  to store.

## Setting User Color Temp.

Use ▲ or ▼ to select Red, Green, or Blue, and adjust the color temp. for each.

Press ▶: to strengthen the selected color.

Press ◀: to weaken the selected color.

Press  to store.

### Note

- The screen display disappears if there is no operation within approximately 60 seconds.
- Depending on the model or the optional devices, some of the functions may not be available.
- The adjustment range varies according to the display signals. Make adjustments to your preferred Sharpness within the adjustment range.
- Depending on the type of signal, it may not be possible to make some of the settings or adjustments.

# ADJUSTING THE PICTURE (Continued)

## Setting the Color Focus

This enables correction with respect to specific color hues within the image.

Independent correction of the hue of skin colors, blue skies, and so on, enables a more brilliant display.

- **[Reddish color]**

With red at the center, performs the following corrections with respect to the range from magenta to yellow.

**[Tint]:** Use ◀ and ▶ to adjust the hue.

**[Color]:** Use ◀ and ▶ to adjust the color depth.

**[Red]:** Use ◀ and ▶ to adjust the strength of the red color range.

**[Green]:** Use ◀ and ▶ to adjust the strength of the green color range.

**[Blue]:** Use ◀ and ▶ to adjust the strength of the blue color range.

Press **ENTER** to store.

Adjustments can be made in the same way for:

- **[Greenish color]:** (With green at the center, performs corrections with respect to the range from yellow to cyan.)
- **[Bluish color]:** (With blue at the center, performs corrections with respect to the range from cyan to magenta.)

- **[Targeting Red]**

This function corrects the hue and color depth with respect to Red.

**[Tint]:** Use ◀ and ▶ to adjust the hue.

**[Color]:** Use ◀ and ▶ to adjust the color depth.

Press **ENTER** to store.

Adjustments can be made in the same way for:

- **[Targeting Yellow]** (Performs correction with respect to Yellow.)
- **[Targeting Green]** (Performs correction with respect to Green.)
- **[Targeting Cyan]** (Performs correction with respect to Cyan.)
- **[Targeting Blue]** (Performs correction with respect to Blue.)
- **[Targeting Magenta]** (Performs correction with respect to Magenta.)

- **[Targeting White]**


Corrects red, green, and blue with respect to white.

**[Red]:** Use ◀ and ▶ to adjust Red.

**[Green]:** Use ◀ and ▶ to adjust Green.

**[Blue]:** Use ◀ and ▶ to adjust Blue.

Press **ENTER** to store.

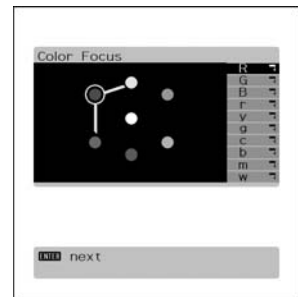

Color Focus (Reddish color) Settings Screen

## Making the Progressive Scan Settings

This sets the conversion processing of interlace signals to block receive signals.

### • 24 Frame Mode

This function enables the optimized display of movies, etc. with 24 frames/second signals.

Each time ◀ or ▶ is pressed, the setting is switched.

Auto ↔ Off

Press  to store.

### • 30 Frame Mode

This function enables the optimized display of movies, etc. with 30 frames/second signals.

Each time ◀ or ▶ is pressed, the setting is switched.

Auto ↔ Off

Press  to store.

### • Jaggies Filter

This function alleviates the phenomenon where jagged diagonal lines can be seen when interlace signals are input, thus enabling a smoother motion picture display.

Each time ◀ or ▶ is pressed, the setting is switched.

Auto ↔ Off

Press  to store.

### • Motion Setting


The detecting sensitivity for motion picture is set.

The response of the picture processing is valued in the motion picture priority setting.

Press ▶: to specify still picture priority.

Press ◀: to specify motion picture priority.

Press  to store.

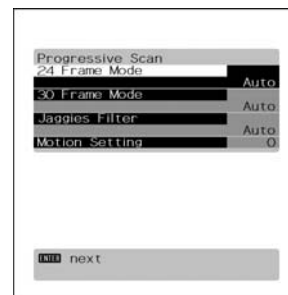

Progressive Scan Settings Screen

## Note

- The screen display disappears if there is no operation within approximately 60 seconds.
- Depending on the model or the optional devices, some of the functions may not be available.
- The adjustment range varies according to the display signals. Make adjustments to your preferred Sharpness within the adjustment range.
- Depending on the type of signal, it may not be possible to make some of the settings or adjustments.

# ADJUSTING SCREEN POSITION AND SIZE

- You can make changes to all screen adjustment options in the POSITION/SIZE Menu. See Page E-39 for the basic operation procedures.
- The changes you make will be stored for the selected input mode. Therefore, you need to select a desired input mode before making any changes.
- \* The adjustment range may differ depending on the input signal.



POSITION/SIZE Menu screen

 
## Adjusting Screen Position (Position)

Horizontal position (Horizontal)

▶: Moves screen to the right.



◀: Moves screen to the left.

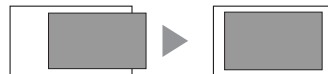

Vertical position (Vertical)


▲: Moves screen up.



▼: Moves screen down.



Press **ENTER** to store.

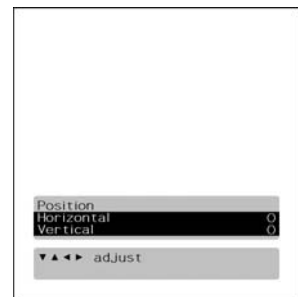

"Position" adjustment screen

## Adjusting Screen Size (Size)

Screen width (Width)

▶: Increases width.



◀: Reduces width.



Screen height (Height)

▲: Increases height.




▼: Reduces height.



Press **ENTER** to store.

\*You cannot adjust screen size in DVI-D mode.

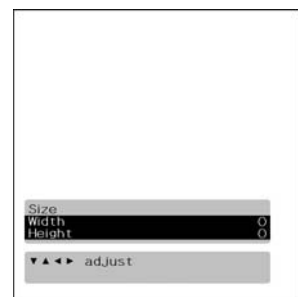

"Size" adjustment screen

• **FEATURES setup screen has the following 6 options.**

See Page E-39 for the basic operation procedures.

**[Set Up]:** Can make lens shift, screen reverse and keystone adjustments. (See P. E-35.)

**[Zoom/Focus]:** Can adjust the size and focus of the picture. (See P. E-35.)

**[Adjustment]:** Can make a fine adjustment of pictures such as Dot Clock, Clamp Position. (See P. E-47.)

**[On Screen Menu]:** Can make a display setting such as OSD, Language. (See P. E-48.)








 
**[Input Terminal]:** Can make an input terminal setting such as Video Input. (See P. E-49.)

**[Others]:** Used to make Screen Orbiter and other settings. (See P. E-50–E-52.)

## ADJUSTMENT

**Dot Clock, Clock Phase, Clamp Position, and Auto Calibration are adjusted as shown in the following chart.**

Select the item with  , and then adjust with  . Finally, press  to implement the adjustments.

| Adjustment Item                     | Contents of Adjustments   | Operation  |
|-------------------------------------|---|--|
| Dot Clock (mD-sub)                  | You may find the vertically-striped pattern in pictures, depending on the clock frequency of your PC's processor. If you experience blurring, you can obtain a clearer picture by adjusting the "Dot Clock".      | Use   to adjust to minimize vertically-striped pattern in pictures.                            |
| Clock Phase (mD-sub)                | Pictures and the outline of letters may blur or flicker as the clock phase of your PC may be different. In this case, adjust the clock phase manually. Normally, the automatic setting ensures the optimal value. | Use   to adjust to minimize pictures blur.   |
| Clamp Position (mD-sub Comp. video) | Adjusts the extremely dark or bright pictures. Normally, the automatic setting ensures the optimal value.   | Use   to adjust pictures optimally.  |
| Auto Calibration (mD-sub)           | Adjusts the dynamic range of images to the optimum. Performed while a white screen signal is received.  | Display the Auto Calibration screen and select Execute, and then use   to select the item. |

# OTHER ADJUSTMENTS (Continued)

## ON SCREEN MENU

### • Setting Display Information (OSD)

You can use this option to select whether to display information other than menus. (Error messages are displayed regardless of what choice you make for this option.)

Each time you press ◀ or ▶, one of the available choices appears in the following sequence:

▶ On(OSD:bright) ↔ On(OSD:dark) ↔ Off ◀

**[On (OSD:bright)]:** On-screen information shown in light color.

**[On (OSD:dark)]:** On-screen information shown in dark color.

**[Off]:** Except for menus and error messages, on-screen information is not displayed.

Press **ENTER** to store.

\* When the screen is white [On (OSD:dark)], some of the information may be difficult to read.

### • Selecting Language (Language)

You can use this option to select the language displayed on the screen.

(1) Select "Language" and press **ENTER**.

The "Language" selection screen will appear.

(2) Press ▲ or ▼ to select your desired language.

日本語 (Japanese)

English

Deutsch (German)

Español (Spanish)

Français (French)

Italiano (Italian)

Português (Portuguese)

Русский (Russian)

(3) Press **ENTER**.

The menu is displayed in the selected language.

### • Selection of indications (Name Select)

You can change the settings for indications for video inputs and RGB inputs.

#### Video input

You can change the settings for indications for the VIDEO inputs.

Select the desired indication in accordance with the connected equipment.

Each time ◀ ▶ is pressed, the setting is switched. (In the case of VIDEO1)

▶ Video1 ↔ DVD1 ↔ DVD2 ↔ VCR1 ↔ VCR2 ↔ GAME ↔ Camcorder ↔ STB ↔ Satellite ↔ Cable TV ◀

Press **ENTER** to store.

#### RGB input

You can change the settings for indications for the RGB inputs.

Select the desired indication in accordance with the connected equipment.


Each time ◀ ▶ is pressed, the setting is switched. (In the case of RGB 1)

▶ RGB1 ↔ PC1 ↔ PC2 ↔ DVD1 ↔ DVD2 ↔ STB ↔ Satellite ↔ Cable TV ◀

Press **ENTER** to store.



OSD selection screen

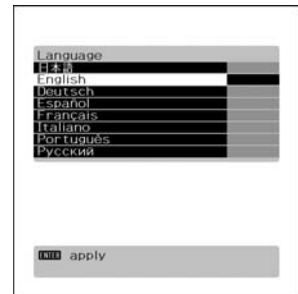

"Language" selection screen

#### Note

- The screen display disappears if there is no operation within approximately 60 seconds.
- Depending on the model or the optional devices, some of the functions may not be available.
- The adjustment range varies according to the display signals. Make adjustments to your preferred Sharpness within the adjustment range.
- Depending on the type of signal, it may not be possible to make some of the settings or adjustments.



## SETTING THE INPUT TERMINALS

### • Selecting the settings of Video Input terminal (VIDEO1-4)

Select the video input format.

Each time ◀ ▶ is pressed, the setting is switched.

▶ Auto ◀▶ Video ◀▶ S-video ◀▶ Comp. video ◀

**[Auto]:** The terminal to which the signal is input is automatically recognized.

**[Other than Auto]:** Select the desired input.

Press **ENTER** to store.

\* When Auto is selected, and multiple inputs are present, the inputs will have priority in the order of Component Video, S-video, and Video.

\* Component video input is not made to Video 3.

### Video Format

You can use this option to select the video format appropriate for the input signal.

Each time you press ◀ or ▶, one of the available modes appears in the following sequence:


▶ Auto1 ◀▶ Auto2 ◀▶ NTSC ◀▶ PAL ◀▶ SECAM ◀▶ PAL60 ◀▶ N-PAL ◀▶ M-PAL ◀▶ 4.43NTSC ◀

**[Auto1]:** Automatically selects NTSC, PAL and SECAM.

**[Auto2]:** Automatically selects NTSC and M-PAL.

**[Other than Auto]:** You need to select a system appropriate to the input signal.

Press **ENTER** to store.

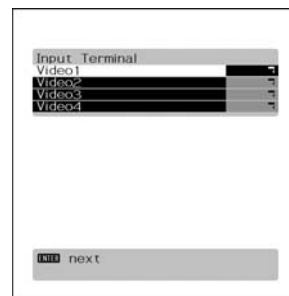

Input Terminal Settings Screen

# OTHER ADJUSTMENTS (Continued)

## OTHER SETTINGS


### Auto Off-NO SIG.

If there is no video signal for 10 minutes, the power supply is automatically placed in the standby mode.

Each time ◀ ▶ is pressed, the setting is switched.

Off ↔ On

Press  to store.

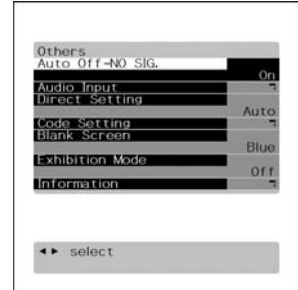

Auto Off-NO SIG. settings screen

### Audio input selection

The input audio signal can be switched over from analog to digital.

Each time ◀ or ▶ is pressed, the input signal changes in the following sequence.


When other than HDMI input is selected:

▶ Analog ↔ Digital 1 ↔ Digital 2 ◀

When HDMI input is selected:

▶ HDMI ↔ Digital 1 ↔ Digital 2 ◀

Press  to store.

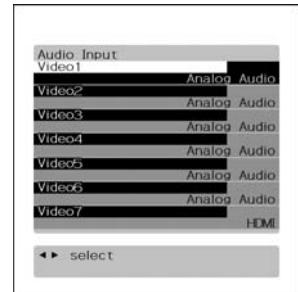

"Audio Input signal" selection screen

### • Setting RGB Input Signal Compulsorily (Direct Setting) for RGB

You can use this option to switch the setting for RGB input signal.

Each time you press ◀ or ▶, one of the available choices appears in the following sequence:

▶Auto◀↔VGA◀↔WVGA◀↔480P◀↔XGA◀↔WXGA◀↔SXGA◀↔SXGA+◀↔

**[Auto]:** The optimum display is obtained automatically for input signals.

**[Others]:** The optimum resolution setting is fixed for each signal.

Press **ENTER** to store.

\* In Auto mode, the resolution of VGA, WVGA, 480P, XGA, WXGA, SXGA and SXGA+ may not be automatically distinguished. Switch to the fixed display when the image is not displayed properly.

\* Signals that are not applicable depending on the model or input terminals may not be displayed.

### • Specifying RGB Input Signal (Code Setting) for mD-sub input

Normally, use this option in Auto mode.

#### • Changing background color to blue (Blank Screen)

When no picture signal is input, the background color can be changed to blue.

Each time ◀ or ▶ is pressed, the background color changes over.

Black ↔ Blue

Press **ENTER** to store.

#### • Setting Exhibition Mode (Exhibition Mode)

You can use this option to display the enhanced contrast, to demonstrate the projector's bright, high contrast picture.

Each time you press ◀ or ▶, one of the available choices appears in the following sequence:

On ↔ Off

Press **ENTER** to store.

\* In Exhibition mode, the display returns to the original setting in about 5 minutes even if the adjustment is changed.

\* The setup will be cancelled when removing the power plug from the receptacle.


#### Note

- The screen display disappears if there is no operation within approximately 60 seconds.
- Depending on the model or the optional devices, some of the functions may not be available.
- The adjustment range varies according to the display signals. Make adjustments to your preferred Sharpness within the adjustment range.
- Depending on the type of signal, it may not be possible to make some of the settings or adjustments.

## OTHER ADJUSTMENTS (Continued)

- **Displaying System Status (Information)**

Displays system operation status.

Select "Information" and press .

The "Information" screen will appear.

**[Mode]:** Input mode appears at the upper right corner of the screen


**[Freq. Scan Mode]:** Frequency scanning

**[Input Signal]:** Video mode


**[Input Sync.]:** Signal type

**[Freq.]:** Synchronized signal frequency, polarity

**[Preset No.]:** RGB code number

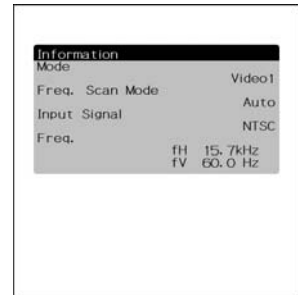

Information screen (Video Mode)

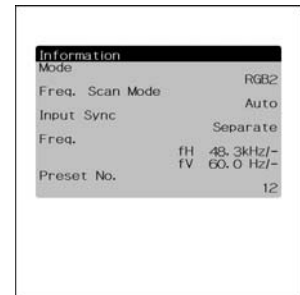

Information screen (RGB Mode)

# INITIALIZATION OF USER ADJUSTMENT VALUE

You can restore the values of the adjustment/setting made in the MENU to factory settings.



**1** Press **MENU**.  
The main menu screen will appear.

**2** Press **◀** or **▶** to select "FACTORY DEFAULT".

Each time you press **◀** or **▶**, one of the available menus appears in the following sequence:

PICTURE ↔ POSITION/SIZE ↔ AUDIO ↔ FEATURES ↔ FACTORY DEFAULT

The FACTORY DEFAULT Menu screen will appear.

**3** Press **ENTER**.

- Displays the message of whether to proceed with the initialization.

**4** Press **▲** or **▼** to select the Yes.

**5** Press **ENTER**.


- The message "Existing data are cleared." is displayed.

\* The screen is displayed in English language.

**6** Press **MENU** when you finish.



"FACTORY DEFAULT" selected in the main menu screen

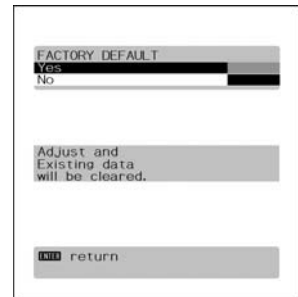

Displays the message of whether to proceed the initialization



Displays the message of having completed the initialization

## Note

- The screen display disappears if there is no operation within approximately 60 seconds.
- Depending on the model or the optional devices, some of the functions may not be available.
- The adjustment range varies according to the display signals. Make adjustments to your preferred Sharpness within the adjustment range.
- Depending on the type of signal, it may not be possible to make some of the settings or adjustments.

# CLEANING AND MAINTENANCE

## Warning


- Do not remove any screws other than those specified (" ↑ " mark).  
The high voltage and high temperature inside the projector may lead to electric shock or burns if touched.

## PRECAUTIONS ON AIR FILTERS AND LAMP PROTECTION FILTER


- If the ventilation holes become blocked, the temperature inside the projector rises and the lamp will fail to light. Clean the ventilation holes about once every 6 months. Cleaning will be required more frequently if used in a particularly dusty environment.
- When the air filter of the ventilation hole becomes hard to clean, it is ready to be changed. Purchase a new air filter (with the filter holder).
- Do not use the projector with the filter holder detached, as dust and debris may get into the projector, causing them to appear on the projected screen.

## CLEANING THE AIR FILTERS AND LAMP PROTECTION FILTER

- 1 Unplug the power cord from the receptacle.**
- 2 Turn the projector upside down.**  
Pay attention to avoid scratches over the cover by laying a thick towel and other soft cloth under the projector.
- 3 Remove the two screws marked with " ↑ ", and take out the lamp protection filter.**

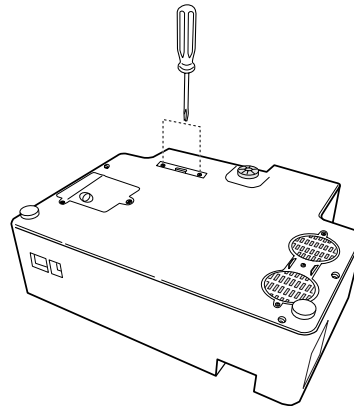

- 4 Clean the air filters and lamp protection filter.**  
Vacuum-clean the filters.  
To do so, be sure to attach a brush to the hose of the vacuum cleaner.
- 5 Reverse the disassembling procedure above to set the lamp protection filter in position.**


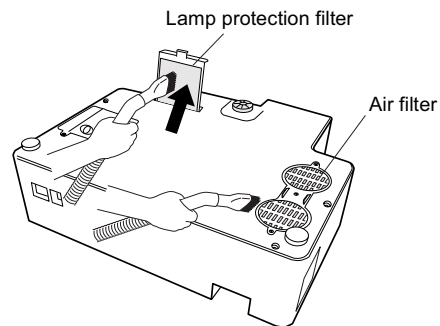


## Note

- Be sure to use the vacuum cleaner with a brush attached to its hose.
- Application of strong suction power may damage to the filter.

## REPLACING THE AIR FILTERS

- 1** Unplug the power cord from the receptacle.
- 2** Turn the projector upside down.  
Pay attention to avoid scratches over the cover by laying a thick towel and other soft cloth under the projector.
- 3** Unscrew three screws marked " ↑ " symbol to remove the filter holder.
- 4** Replace the air filters with new ones.  
Replace the two filters together at a time.
- 5** Reverse the disassembling procedure above to set the filter holder in position.

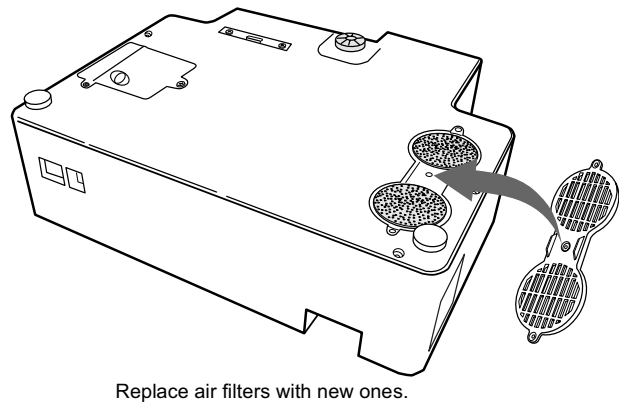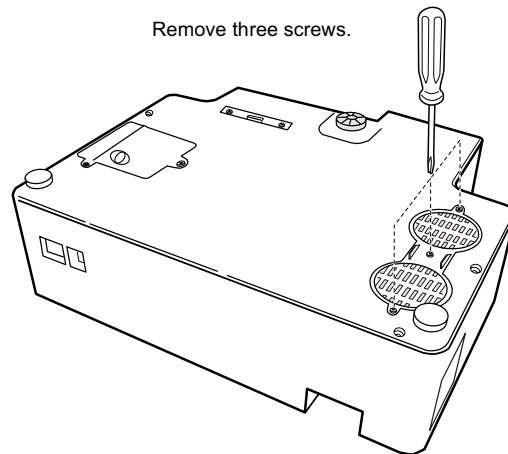

## CARE OF THE CABINET

To remove dust, wipe the cabinet lightly with a soft dry cloth. If it is heavily soiled, wipe off the soil with a cloth soaked in a solution of detergent and water and squeezed tightly. Then, use a soft dry cloth to finish cleaning.

## CARE OF THE LENS

To clean the lens, use a blower and lens cleaning tissue available on the market for cleaning camera lens. Do not use tissue paper, as it may scratch the lens. The surface of the lens easily gets scratched, and do not rub or tap it with a hard object.

# CLEANING AND MAINTENANCE (Continued)

## CHANGING THE LAMP

- Lamp life differs according to the lamp and the environment it is used in. The lamp may explode immediately after starting use.
- When the lamp reaches the end of its service life, the image becomes dark and the colors lose their vividness. When this happens, change the lamp unit.
- Replace with a new lamp unit when the replace lamp message appears. The old lamp may explode if it continues to be used.
- After removing the old lamp unit, handle with care to avoid breakage. Dispose of used lamp units as industrial waste and comply with governmental regulations or environmental public institution's rules that apply in your country/area.
- Be sure to initialize the lamp timer after changing the lamp unit.
- When replacing the lamp unit, insert it securely. Otherwise, it may damage.

### Warning


- Do not remove any screws other than those specified (" ↑ " mark).  
The high voltage and high temperature inside the projector may lead to electric shock or burns if touched.
- When replacing the lamp unit, use only a new replacement lamp unit (LPF-QLD1WW [optional]). Using undesignated, used or second-hand lamp units may result in the lamp exploding or cause malfunctions.
- Allow the lamp to cool for more than 1 hour after switching off the power before changing.
- This lamp employs a mercury lamp with high internal pressure. It may break with a large bang depending upon shock or service time because of its property, or the time until the lamp has been worn out differs according to individual difference or service condition.

**1 Unplug the power cord from the receptacle.**  
To turn off the power, see "TURNING THE POWER TO STANDBY" on page E-30.

**2 Turn the projector upside down.**  
Lay a thick towel and other soft cloth under the projector lest it should get scratched.



**3 Remove the two screws marked with " ↑ ", and then, hold the knob of the lamp unit cover to remove it from the projector.**

To ensure safety, the safety device prevents the power from being turned on accidentally during the lamp replacement work.

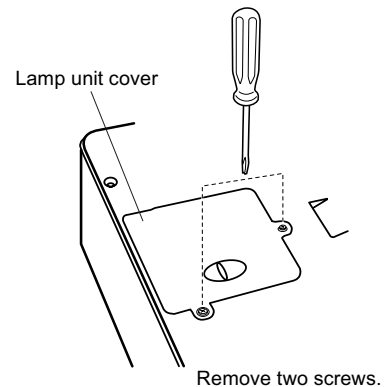



- 4 Loosen two screws on the lamp unit to pull out it.**  
The lamp unit is so constructed that the screws cannot be detached from it.

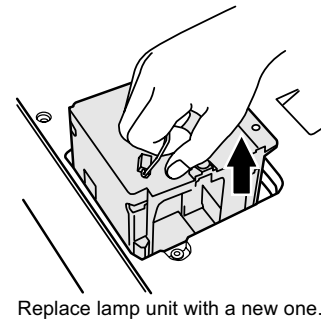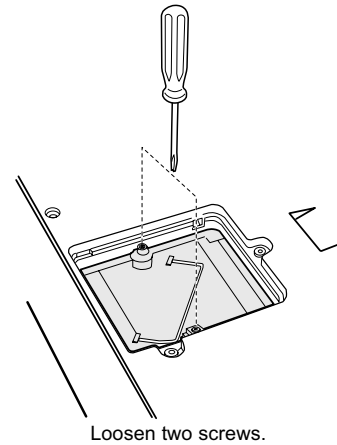

- 5 Reverse the disassembling procedure above to set the lamp unit and lamp unit cover in position.**

Check that the lamp unit is installed securely.


- 6 After inserting the power plug into the receptacle, press "ENTER" button, and then, press "POWER" button five times.**

At this time, all monitor indicator lamps blink for a few seconds.

The lamp timer is initialized to "0".

- \* When replacing the lamp unit, do not touch the glass inside the projector. Dust and fingerprints sticking to the glass may deteriorate the luminous intensity of the light source lamp and shorten its life.

#### Note

- For replacement, be sure to use a lamp unit specified by the manufacturer only. Otherwise, failure of the lamp to light up, and explosion or damage of the lamp will result.
- Turn on the light source lamp, and press  to select the lamp timer. Check that "0" is set for the lamp timer. Otherwise, initialize the timer again.

# CLEANING AND MAINTENANCE (Continued)

## Precautions

Be sure to remove the power plug from the receptacle before cleaning the display.

Be sure not to clean the display using a cloth dampened with volatile solvents, such as benzene or thinner. Such solvents can harm the display's cabinet, the filter at the screen front, and the remote control. They can also cause paint to come off these sections.

## Cleaning the Screen

Clean the screen gently with a soft cloth.

The screen surface is fragile. Never attempt to clean it with a hard material, press on it forcefully, or tap it.

## Cleaning the Cabinet and Remote Control

Use a soft cloth for cleaning.

If the cabinet or remote control is heavily stained, soak a soft cloth in a mixture of water and detergent and squeeze it dry before wiping off the stains. Use a soft, dry cloth for final cleaning.

## Cleaning the ventilation grille

Remove dust from the ventilation grille in the rear of the main unit periodically with a vacuum cleaner as the accumulated dust can increase the internal temperature of the main unit causing machine failure or fire hazard.

## BEFORE OBTAINING SERVICE

In the event of problems with the display, check the following explanations before contacting your dealer for servicing.

| Problem  | Action  |
|--|---|
| <ul style="list-style-type: none"><li>• Power does not turn ON.</li></ul>  | <ul style="list-style-type: none"><li>• Check whether the power plug is securely inserted into the receptacle.</li></ul>  |
| <ul style="list-style-type: none"><li>• No pictures are displayed.</li></ul>   | <ul style="list-style-type: none"><li>• Check cables for disconnection.</li><li>• Check whether the power for all input equipment is ON.</li><li>• Check for connection to wrong terminals or for wrong input mode.</li><li>• Check whether the input mode display is colored pink. Special setup may have been made. Return to original setup or initialize the User adjustment value.</li></ul> |
| <ul style="list-style-type: none"><li>• Remote control does not function properly.</li></ul>   | <ul style="list-style-type: none"><li>• Check for incorrect battery orientation.</li><li>• Check for dead batteries.</li><li>• Check for distance from the display.</li><li>• Check whether you are pointing the remote control transmitter properly at the display's receiver.</li><li>• Check for any obstacle between the remote control and the display.</li></ul>                            |
| <ul style="list-style-type: none"><li>• The display makes a snapping sound.</li></ul>  | <ul style="list-style-type: none"><li>• This sound is produced when the cabinet expands or contracts due to variations in temperature. This sound does not indicate that the display has a problem.</li></ul>   |
| <ul style="list-style-type: none"><li>• The display makes a buzzing sound.</li></ul>   | <ul style="list-style-type: none"><li>• The display has fans to maintain the temperature of internal components at a constant level. This sound is produced by the fan as it rotates.</li></ul>   |
| <ul style="list-style-type: none"><li>• There are spots on the screen.</li></ul>   | <ul style="list-style-type: none"><li>• Check whether your AV equipment is affected by interference from automobiles, trains, high-voltage transmission lines, neon signs or other potential sources of interference.</li></ul>   |
| <ul style="list-style-type: none"><li>• Degraded colors/tints</li></ul>  | <ul style="list-style-type: none"><li>• Check whether all picture adjustments have been properly made. (See "Adjusting Pictures" on P. E-40–E-41.)</li></ul>  |
| <ul style="list-style-type: none"><li>• Improper screen position/size</li></ul>  | <ul style="list-style-type: none"><li>• Check whether screen position and size have been properly adjusted. (See "Adjusting Screen Position and Size" on P. E-46.)</li></ul>  |
| <ul style="list-style-type: none"><li>• If "Out of range" appears, the display is receiving a signal whose picture or signal cannot be reproduced by the display.</li><li>• The screen turns to black and white.</li></ul> | <ul style="list-style-type: none"><li>• Signals that are not supported by this display have been input. Check which signals are supported. (See "MAIN SUPPORTED SIGNALS" on page E-60.)</li></ul>   |
| <ul style="list-style-type: none"><li>• If the power indicator lamp flashes red or green.</li></ul>  | <ul style="list-style-type: none"><li>• Remove the power plug from the receptacle, and inform your dealer about how the lamp flashed. The power indicator lamp flashes differently depending on the type of problem.</li></ul>  |
| <ul style="list-style-type: none"><li>• The message of lamp replacement is displayed even after lamp replacement.</li></ul>  | <ul style="list-style-type: none"><li>• After the ENTER button is pressed, press the POWER button five times to initialize the illumination time (see page E-57).</li></ul>   |

## Note

- For replacement, be sure to use a lamp unit specified by the manufacturer only. Otherwise, failure of the lamp to light up, and explosion or damage of the lamp will result.

---

|              |                          |  |
|--------------|--------------------------|--|
| Ceiling unit | 0° to 15° mounting angle | LPF-QCD1WW: White<br>LPF-QCD1WB: Black |
|--------------|--------------------------|--|

---

|                     |     |            |
|---------------------|-----|------------|
| Optical DVI-D cable | 10m | LPF-QOD1WB |
|---------------------|-----|------------|

---

|                       |  |            |
|-----------------------|--|------------|
| Replacement lamp unit |  | LPF-QLD1WW |
|-----------------------|--|------------|

---

**Warning**

To prevent injury, fire, and electric shock, arrange for options to be initially installed (or installed at a different location) by your dealer.

**Note**

- When installing an option, make sure that all installation requirements for that option (as given in the relevant instruction manual) are met.
- The colors of options do not match the display colors perfectly.
- To improve the function and performance of optional accessories, specifications and part names may change. Consult your local dealer before purchasing.

# MAIN SUPPORTED SIGNALS

This display can store the latest four types of signals for RGB adjustment value. The fifth input signal will replace the adjustment value of the first input signal.

To do this, select a desired signal and follow the instructions in "Adjusting Screen Position and Size" on P. E-46 to adjust the parameters. When you finish, the settings will be automatically stored. Thus, when the display receives that signal, pictures will be displayed in accordance with the settings you most recently selected.

## Main corresponding signals (RGB mode)

| Display (dots x lines) | Horizontal frequency (kHz) | Vertical frequency (Hz) | Signal     | DVI-D |
|------------------------|----------------------------|-------------------------|------------|-------|
| 640 x 480              | 31.47                      | 59.94                   | VGA        | ○     |
| 640 x 480              | 37.50                      | 75.00                   | VGA 75 Hz  |       |
| 640 x 480              | 43.27                      | 85.01                   | VGA 85 Hz  |       |
| 720 x 400              | 31.47                      | 70.09                   | 400 lines  | ○     |
| 800 x 600              | 37.88                      | 60.32                   | SVGA 60 Hz | ○     |
| 800 x 600              | 46.88                      | 75.00                   | SVGA 75 Hz |       |
| 800 x 600              | 53.67                      | 85.06                   | SVGA 85 Hz |       |
| 1024 x 768             | 48.36                      | 60.00                   | XGA 60 Hz  | ○     |
| 1024 x 768             | 60.02                      | 75.03                   | XGA 75 Hz  |       |
| 1024 x 768             | 68.68                      | 84.99                   | XGA 85 Hz  |       |
| 1280 x 1024            | 63.98                      | 60.02                   | SXGA 60 Hz | ○     |
| 1280 x 1024            | 79.98                      | 75.03                   | SXGA 75 Hz |       |
| 1600 x 1200            | 75.00                      | 60.00                   | UXGA 60Hz  | ○     |
| 848 x 480              | 31.02                      | 60.00                   |            | ○     |
| 852 x 480              | 31.72                      | 59.97                   |            |       |
| 1360 x 768             | 47.71                      | 60.01                   |            | ○     |
| 720 x 485              | 15.73                      | 59.94                   | 60 fields  |       |
| 720 x 575              | 15.63                      | 50.00                   | 50 fields  |       |

\* With some input signals, "Out of range" may appear even when the horizontal and vertical frequencies are within their permissible ranges. In this event, match the input signals to another frequency rather than those listed above.

\* In the DVI-D mode, the input signal can be restricted partly.

In the Comp.video and Video/S-video, the display has been factory-set as follows for different input signals:

## Main corresponding signals (Comp.video mode)

| Horizontal frequency (kHz) | Vertical frequency (Hz) | Signal     | HDMI |
|----------------------------|-------------------------|------------|------|
| 15.73                      | 59.94                   | SDTV 480i  | ○    |
| 15.63                      | 50.00                   | SDTV 576i  | ○    |
| 31.47                      | 59.94                   | SDTV 480p  | ○    |
| 31.25                      | 50.00                   | SDTV 576p  | ○    |
| 45.00                      | 60.00                   | HDTV 720p  | ○    |
| 37.50                      | 50.00                   | HDTV 720p  | ○    |
| 33.75                      | 60.00                   | HDTV 1080i | ○    |
| 28.13                      | 50.00                   | HDTV 1080i | ○    |

## Main corresponding signals (Video, S-video mode)

| Horizontal frequency (kHz) | Vertical frequency (Hz) | Signal   |
|----------------------------|-------------------------|----------|
| 15.73                      | 59.94                   | NTSC     |
| 15.63                      | 50.00                   | PAL      |
| 15.63                      | 50.00                   | SECAM    |
| 15.63                      | 59.52                   | PAL60    |
| 15.63                      | 50.00                   | N-PAL    |
| 15.73                      | 59.95                   | M-PAL    |
| 15.73                      | 59.94                   | 4.43NTSC |

## Note

- Depending on the input signal, the display may show pictures of reduced size due to size reduction and interpolation.
- "Out of range" appears if the display receives a signal whose characteristic does not fall within the display's permissible range.
- You can check input signals through "Information" on the FEATURES Menu screen. (See P. E-52.)
- In order to facilitate the explanations, pictures and diagrams in this manual may differ slightly from the actual items.
- All terms (i.e., company and product names) used in this document are trademarks or registered trademarks.

## Projector

| Model                         | LPF-D711W   |
|-------------------------------|---|
| System                        | 3 primary color liquid crystal shutter projection system  |
| Liquid crystal panel size     | 1.3 inches with ML  |
| Liquid crystal driving system | P-Si TFT active matrix  |
| Number of pixels              | 2,072,600 pixels x 3 (1,920 x 1,080 pixels x 3)   |
| Projection lens               | Motor-operated zoom lens: F=1.8~2.1, motor-operated, vertical and horizontal lens shift             |
| Light source lamp             | 250W  |
| Projection screen size        | 60 inches-200 inches (Projection screen size of 120 to 150 inches is recommended.)                  |
| Projection distance           | 1.0m~13.1m  |
| Aspect ratio                  | 16:9 (wide)   |
| Projection system             | Vertical and horizontal screen reverse available  |
| Terminal for AV selector      | Display (PICTURE) input terminal  |
| Weight                        | 12 kg / 26.4 lbs  |
| Outer Dimensions              | 49.8(W) x 16.0(H) x 42.6(D)cm / 19.6(W) x 6.3(H) x 16.8(D)inch (excluding protruded portions)       |
| Power supply                  | 110-240 VAC 50/60 Hz  |
| Current rating                | 3.9-1.5 A   |
| Operating conditions          | Temperature: 5 to 35 °C / 32 to 104 °F<br>Humidity: 20 to 80 %<br>Storage temperature: -20 to 60 °C |

## Regulation

- UL, CSA Safety: UL6500, C-UL  
EMC: FCC Part 15 Class B, ICES-003 Class B
- CE Safety: EN60065
 

|              |               |
|--------------|---------------|
| EMC: EN55022 | 1998, Class B |
| EN61000-3-2  | 1995          |
| EN61000-3-3  | 1995          |
| EN55024      | 1998          |
| EN61000-4-2  | 1995          |
| EN61000-4-3  | 1996          |
| EN61000-4-4  | 1995          |
| EN61000-4-5  | 1995          |
| EN61000-4-6  | 1996          |
| EN61000-4-8  | 1993          |
| EN61000-4-11 | 1994          |
- AS Safety: IEC60065  
EMC: AS/NZS 3548

# SPECIFICATION (Continued)

## AV SELECTOR (FOR USE WITH THE PROJECTOR)

| Model   | LPF-QSD1W  |
|---|--|
| External equipment terminals  |  |
| Video 1, 2, 4 input terminal<br>(Component video, S-video priority) | Video: Pin jack 1.0 Vp-p/75Ω<br>S-video: S-video terminal (Y-signal 1.0 Vp-p/75 Ω , C-signal 0.286 Vp-p/75 Ω )<br>Component video: 3 Pin jack terminals Y: 1 Vp-p/75 Ω<br>P <sub>B</sub> /C <sub>B</sub> : 0.7 Vp-p/75 Ω<br>P <sub>R</sub> /C <sub>R</sub> : 0.7 Vp-p/75 Ω<br><br>Audio: Pin jack 0.5 Vrms (Left, Right) |
| Video 3 input terminal<br>(S-video priority)                        | Video: Pin jack 1.0 Vp-p/75 Ω<br>S-video: S-video terminal (Y-signal 1.0 Vp-p/75 Ω , C-signal 0.286 Vp-p/75 Ω )<br>Audio (Same as RGB input 3):Pin jack 0.5 Vrms (Left, Right)   |
| Video 5, 6 input terminal   | Component video: 3 Pin jack terminals Y: 1 Vp-p/75 Ω<br>P <sub>B</sub> /C <sub>B</sub> : 0.7 Vp-p/75 Ω<br>P <sub>R</sub> /C <sub>R</sub> : 0.7 Vp-p/75 Ω<br><br>Audio: Pin jack 0.5 Vrms (Left, Right)   |
| Video 7 input terminal  | Video/audio: HDMI terminal (HDMI type A connector)   |
| RGB 1 input terminal  | Video: DVI-D terminal (EIA/CEA-861B Compliant)<br>Audio: Mini pin jack 0.5 Vrms (Left, Right)  |
| RGB 2 input terminal  | Video: mD-sub 3 parallel 15-pin 0.7 Vp-p/75 Ω<br>Audio: Mini pin jack 0.5 Vrms (Left, Right)   |
| RGB 3 input terminal  | Video: mD-sub 3 parallel 15-pin 0.7 Vp-p/75 Ω<br>Audio (Same as video input 3):Pin jack 0.5 Vrms (Left, Right)   |
| Digital 1, 2 audio input terminal                                   | Optical input  |
| Amplifier output terminal   | Analog audio: Pin jack 0.5 Vrms (Left, Right)<br>Digital audio: Optical cable audio terminal   |
| RS232C  | 9 pin D-sub terminal (for servicing)   |
| Terminal for display  | Display (PICTURE) output terminal  |
| Weight  | 5 kg / 11.0 lbs  |
| Outer dimensions  | 43.0 (W) x 9.5 (H) x 35.0 (D) cm / 16.9 (W) x 3.7 (H) x 13.8 (D) inch  |
| Power supply  | 110-240 VAC 50/60 Hz   |
| Current rating  | 0.45-0.24 A  |
| Operating conditions  | Temperature: 5 to 35 °C / 32 to 104 °F<br>Humidity: 20 to 80 %   |
| Accessories   | 1 remote control, 2AAA batteries, 1 user's manual, 2 power cable, 1 System cable (PICTURE), 3 ferrite cores, 4 air filters, 2 antivibration cushions   |

### Regulation

- UL, CSA Safety: UL6500, C-UL  
EMC: FCC Part 15, ICES-003
- CE Safety: EN60065  
EMC: EN55013 2001  
EN55020 1994
- AS Safety: IEC60065  
EMC: AS/NZS 1053

### Note

- Specifications and external appearance may be change for the sake of improvement.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>