

Harsh Environment Case User's Guide

FPCCC48

I N S T R U C T I O N S

These instructions provide details on using the FPCCC48 Harsh Environment Case (HEC). This HEC is designed for use with your Stylistic ST5000 Tablet PC. The HEC provides maximum protection against water, dust, and other hazards when transporting, using, or storing your Tablet PC.

We strongly recommend that you read these instructions prior to using the HEC with your computer.

Note the following when using the HEC:

- To avoid overheating, suspend the Tablet PC when charging the battery pack while the system is in the case and not in use.
- To prevent scratches, a screen protector should be installed on the display window of the HEC. Two screen protectors are provided with the HEC. Additional screen protectors can be obtained from your reseller, or from the Fujitsu Web site at: us.fujitsu.com/computers.
- If you use the Tablet PC both with and without the HEC, a screen protector can be left in place on the system. If the system will be used only in the HEC, remove the screen protector from the system for better viewing.

- If you use a pen tether, attach it to one of the D-rings on the back of the case.

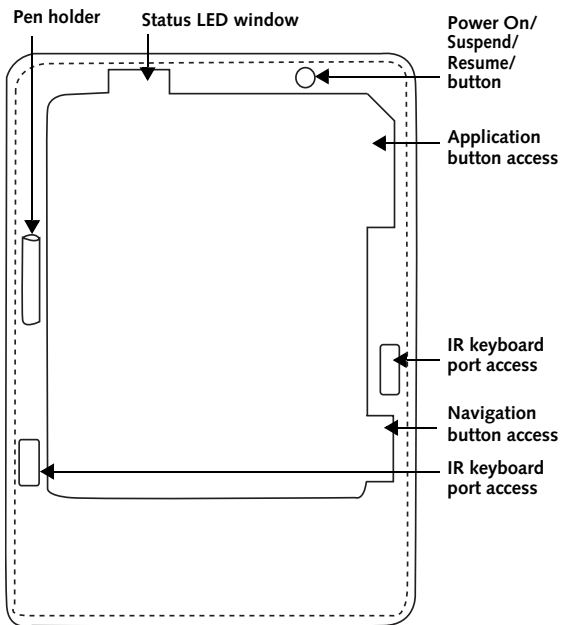 


Figure 1. Tablet PC HEC - Front

Installing the Tablet PC in the HEC

To install your Tablet PC into the HEC, position the case horizontally as shown in Figure 2. Unzip the long zipper that runs along two sides of the case and open the top flap.

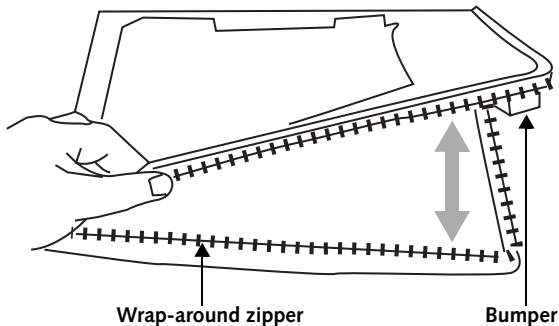 


Figure 2. Opening the Tablet PC HEC



The HEC is designed to accommodate a system with a standard main battery or an optional high-capacity battery installed. The high-capacity battery is wider than the main battery, so a foam bumper is provided to secure the system when a main battery is installed.

If you are using a system with a standard battery installed, leave in place the foam bumper that is attached with a Velcro strip on the inside of the case (see Figure 2 for location).

If you are using a system with a high-capacity battery installed, remove the foam bumper (see Figure 2 for location) prior to inserting the system. Retain the bumper for when you use the system with a main battery.

Slide the system into the case, with the screen facing the open window. Close the top flap and zip up the wraparound zipper.

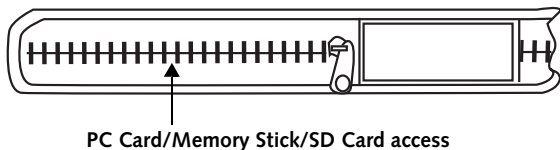 


Figure 3. Tablet PC HEC - Top

Installing a PC Card, Memory Stick™, or SD Card

To install a PC Card, Memory Stick, or SD card while the system is installed in the HEC, unzip the short zipper located on the top edge of the HEC to gain access to the slots (See Figure 3). After you have installed the card, re-zip the zipper to ensure maximum protection.

Installing a Screen Protector

1. To ensure good adhesion, clean the exterior surface of the HEC window with a soft cotton cloth dampened with isopropyl alcohol before installing the screen protector. If streaking occurs, gently buff the surface with a clean, soft cloth.
2. Install the screen protector in accordance with the instructions contained in the “Care and Maintenance” chapter of the system User’s Guide.

Additional HEC Information

On the back of the HEC are two overlapping elastic handstraps that can be used for comfortably and securely holding the Tablet PC. Position the system in the desired orientation, slip your hand under the straps, and grasp the edge of the HEC.

The ends of the elasticized handstraps have D-rings to which you can attach the shoulder strap. To secure the shoulder strap, attach the strap clips to two of the D-rings. The HEC can be carried vertically or horizontally, depending on how you orient the clips.

You can also use one of the D-rings to attach a pen tether.

Once the system is installed in the HEC, the pen can be stored in the pen holder on the left side of the HEC, as shown in Figure 1.

Caring for the HEC

The HEC is made of rugged materials, and is designed to withstand daily use. Treat the case as you would a briefcase or purse.

Occasionally, the HEC may become dirty. To clean it, use a clean cloth and warm soapy water to wash the soiled area.





1250 E. Arques Avenue (M/S 122),
Sunnyvale, California 94085

For more information, call
1-877-372-3473 or visit our Web site at:
us.fujitsu.com/computers

For technical support call:
1-800-8fujitsu (1-800-838-5487)
or e-mail us at: **8fujitsu@us.fujitsu.com**

Fujitsu and the Fujitsu logo are registered trademarks of Fujitsu, Ltd., and Stylistic is a registered trademark of Fujitsu Computer Systems Corporation. All other trademarks mentioned herein are the property of their respective owners.

Product description data represents Fujitsu design objectives and is provided for comparative purposes; actual results may vary based on a variety of factors. Specifications are subject to change without notice.

© 2003 Fujitsu PC Corporation. All rights reserved.

FPC58-1045-01

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>