

2-9730



**Cordless Telephone  
with 25 Channels  
User's Guide**



 
Download from [www.Somart.com](http://www.Somart.com)

***We bring good things to life.***

# TABLE OF CONTENTS

SECTION	PAGE	SECTION	PAGE
<b>INTRODUCTION</b> .....	3	<b>TELEPHONE MEMORY OPERATION</b> .....	15
A. Parts Checklist .....	3	A. Storing a Number into Memory .....	15
B. Cordless Telephone Characteristics .....	4	B. Changing a stored Number .....	15
C. Setting the Security Code .....	4	C. Pause Function .....	16
<b>CONTROLS &amp; FEATURES</b> .....	5	D. Chain Dial from Memory .....	16
A. Cordless Telephone Features .....	5	<b>PRODUCT CARE</b> .....	17
B. Base Cradle Controls .....	6-7	A. Battery Replacement .....	17
C. Cordless Handset Controls .....	6-7	B. Antenna Replacement .....	18
<b>INSTALLATION</b> .....	8	C. General Product Care .....	18
A. Telephone Outlet Requirements .....	8	<b>IN CASE OF DIFFICULTY</b> .....	19
B. Quick Set-Up .....	8	Troubleshooting Chart .....	19
C. Wall Mounting the Base Cradle (optional) .....	10	<b>SERVICE</b> .....	20
D. Charging the Battery Pack .....	11	<b>WARRANTY</b> .....	20
<b>TELEPHONE OPERATION</b> .....	12	<b>ACCESSORY ORDER FORM</b> .....	21-22
A. Making and Receiving Calls .....	12	<b>FCC REGISTRATION INFORMATION</b> .....	23
B. Automatic Stand by .....	12	<b>INTERFERENCE INFORMATION</b> .....	23
C. How to use Redial .....	13	<b>HEARING AID COMPATIBILITY</b> .....	23
D. Fast Redial .....	13		
E. Changing Channels .....	13		
F. Temporary Tone Feature .....	13		
G. The Flash Button .....	14		
H. Distinctive Ring Feature .....	14		
I. Tone Signals and their meaning .....	14		

**WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

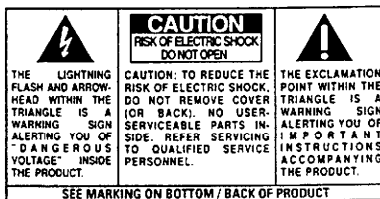

## INTRODUCTION

 
Thank you for purchasing a telephone from GE Communications Products. Your new telephone is a carefully engineered, high-quality, durable product with natural sound quality, modern features and elegant styling. It is designed to give you the quality and convenience you expect in a telephone.

To familiarize yourself with all the features of your telephone, please read the following instructions carefully. Retain this Guide for future reference.


FCC NUMBER IS LOCATED ON THE BOTTOM OF THE BASE  
LOAD NUMBER IS LOCATED ON THE BOTTOM OF BASE  
OTHER IMPORTANT INFORMATION ON BACK COVER OF THIS GUIDE

Carefully remove unit from the package. Check this list to be certain all components are included. Remember to save your sales receipt in case you ever need warranty service.


### A. Parts Check List



CORDLESS HANDSET

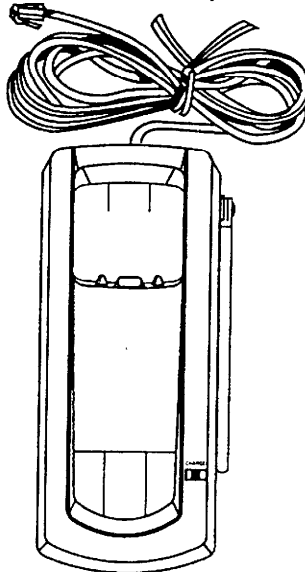 

BASE WITH  
TELEPHONE  
LINE CORD

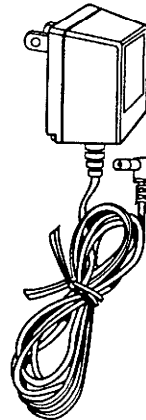 

AC POWER SUPPLY WITH  
POWER SUPPLY CORD



CORDLESS  
HANDSET  
ANTENNA

## INTRODUCTION

---

- A cordless telephone offers convenience, ease and mobility during telephone communications. Its use, however, is dependent upon the availability of AC power. Any interruption of electrical power at your location would prevent your placing or receiving calls. Therefore, a cordless telephone **should not** be installed as the only phone in your home.
- "Full Power" means that your telephone is designed to operate at the maximum power allowed by the Federal Communications Commission (FCC).
- The range at which you can use the cordless Handset away from the Base is dependent upon many factors. The telephone Base is like a radio transmitter in that it transmits telephone line signals via radio waves to the Handset. Therefore, the location of the Base is important in order to obtain maximum Handset range for the power allowed.

In some areas, installing the Base on the second floor will provide greater range than a ground floor installation. Reception can be adversely affected by such things as aluminum siding, appliances (refrigerators, stove, etc.), insulation foil backing, heating ducts and other metal construction which acts to shield radio signals.

Atmospheric conditions also play an important role in the performance of your cordless telephone.

- **Always keep the Base antenna raised.**
- Above all, **keep within the range of the Base.**

---

Whenever you place the handset on the base unit, the unit automatically selects a security code. This code helps to avoid unauthorized use of your telephone line by another cordless telephone in your area.

**Note:** Whenever a power outage occurs, or batteries are replaced, the *HANDSET* must be returned to the *BASE* to reset Security code.

## B. Cordless Telephone Characteristics

## C. Setting the Security Code

 
## CONTROLS and FEATURES

---

- **Twenty Five Automatic Channel Selection**
- **Dual Wave™ Noise Filter** – A two stage filtering system that removes unwanted signals.
- **Compandor Noise Reduction** extends the effective range, and helps to eliminate static and interference.
- **Automatic Digital Security System** prevents false ringing from other cordless telephones
- **Wall or Desk Mountable Base**
- **Tone/Pulse Switchable**
- **Charge Indicator Light**
- **Easy Installation**
- **FCC Registered**
- **UL Listed**
- **10 Number Memory** for frequently called numbers
- **One-Touch Redial** of last number dialed
- **Fast Redial** — just push redial while on-line to redial a number.
- **Ringer On/Off Switch**
- **Phone In-Use Light**
- **Battery Low Tone Feedback**
- **Consumer replaceable rechargeable nickel cadmium battery**
- **Out of Range** warning
- **Temporary Tone** allows Pulse/Rotary users to easily access tone services
- **Tone Feedback** confirms each digit was dialed
- **Flash** to activate custom calling services.
- **Hearing Aid Compatible**
- **Distinctive Ring**
- **Chain Dialing** capability
- **Memory Index**
- **Extended Battery Capacity**
- **Color** – Ivory
- **One Year Limited Warranty**

### A. Cordless Telephone Features

## CONTROLS and FEATURES

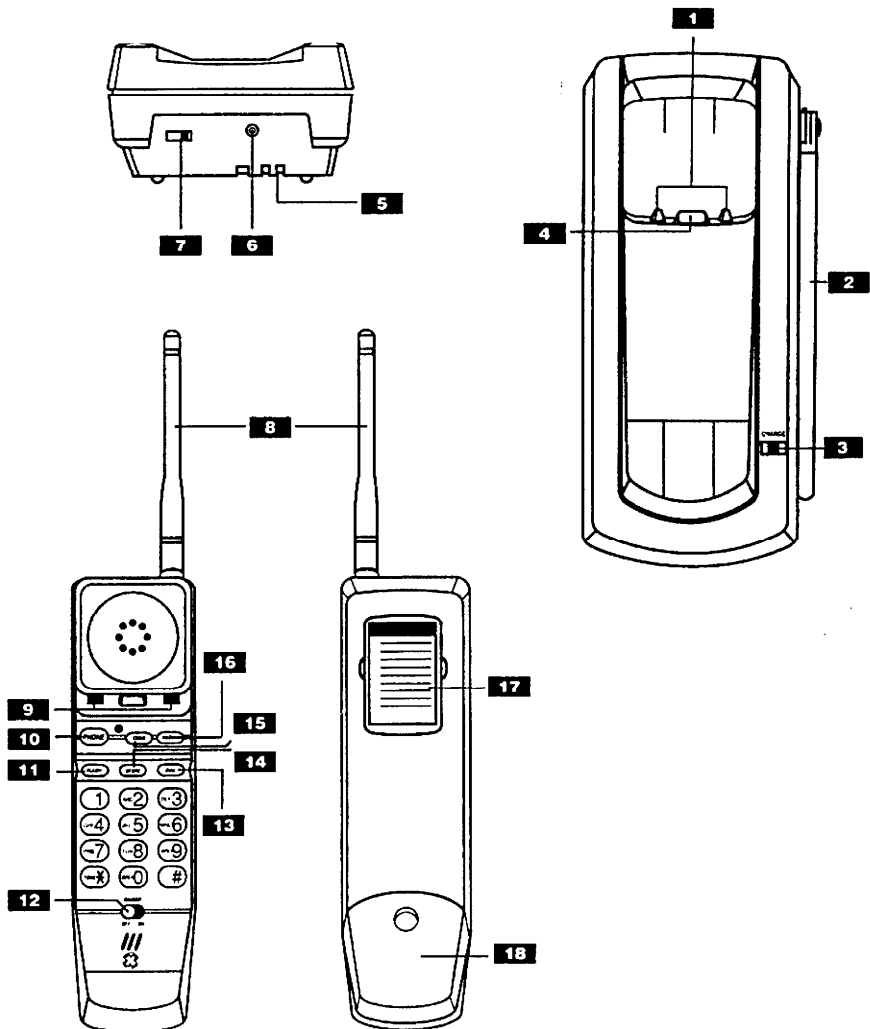

## CONTROLS and FEATURES

---

1. **RECHARGE CONTACTS**
  2. **FIXED BASE ANTENNA**
  3. **CHARGE INDICATOR LIGHT**
  4. **HANDSET HOOK** — Hook holds handset to base unit when wall mounted.
  5. **STRAIN RELIEF** — Keeps pressure off of the AC Power Supply Cord so cord will remain plugged in properly to the base.
  6. **AC POWER ADAPTER CONNECTION**
  7. **PULSE/TONE SWITCH** — Sets the dialing mode for either Tone or Pulse (Rotary) service.
- 

### C. Base Cradle Controls

8. **RUBBER HANDSET ANTENNA**
9. **RECHARGE CONTACTS**
10. **PHONE BUTTON and IN USE LIGHT**
11. **FLASH BUTTON**
12. **RINGER ON/OFF SWITCH**
13. **DIAL BUTTON** — Used when dialing a number stored in a *MEMORY LOCATION*.
14. **STORE BUTTON** — Used to store numbers into memory
15. **CHANNEL BUTTON** — To choose the next clearest channel for best reception
16. **REDIAL BUTTON** — Redials the last number called. Use for normal or fast redial.
17. **MEMORY DIRECTORY**  
Index for numbers stored in the corresponding *MEMORY LOCATION*.
18. **BATTERY COMPARTMENT**  
Contains consumer replaceable Nickel Cadmium Battery Pack.

### D. Cordless Handset Controls

## INSTALLATION

A modular (Universal Service Order Code) USOC: RJ11C outlet jack (illustrated) is required.

Installation of this telephone in locations with 4-prong jacks or with hard-wired outlets will require additional Converters (not included). The dealer from whom you purchased your phone or a telephone supply store can advise you regarding the proper Converter.

 
**Installation Note:** Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs; to minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

1. Insert antenna and screw into place.
2. This telephone is equipped with a Cord Wrap for the straight *LINE TELEPHONE CORD*. This Cord Wrap is located on the bottom of the *BASE*.  
Wrap *TELEPHONE LINE CORD* around cord wrap leaving enough of cord free to reach outlet jack.
3. Plug *TELEPHONE STRAIGHT CORD* into Modular wall jack.
4. Plug the smaller, "L" shaped end of the *AC ADAPTER* into back of unit.





*AC POWER SUPPLY CORD* must be fed through the *STRAIN RELIEF* on bottom of base to prevent cord slippage. (see inset).

**Note:** Use only GE *AC ADAPTER* and *POWER SUPPLY CORD* Model #5-2346 with this product.

### A. Telephone Outlet Requirements

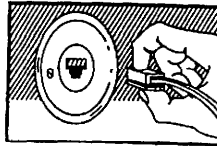

### B. Quick Set-up

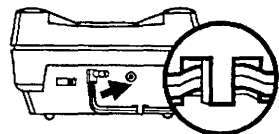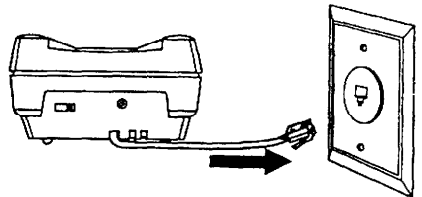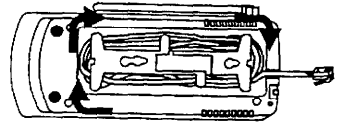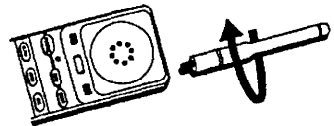    





## INSTALLATION

5. Plug other end of the *AC POWER SUPPLY CORD* into an electrical outlet which cannot be switched off. **Do not** use and outlet that can be turned on and off by a wall switch.

 
**Note:** Whenever a power outage occurs, or batteries are replaced, the *HANDSET* must be returned to the *BASE* to reset the security code.

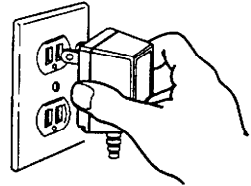

 6. Raise *ANTENNA* on *BASE*.

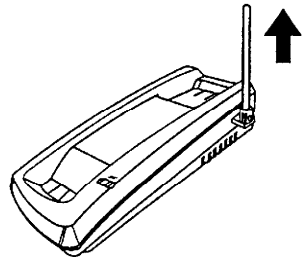

 
7. Set *TONE/PULSE SWITCH* on the *BASE* to the position compatible with your telephone service. (If you're not sure, check with your local telephone company.)

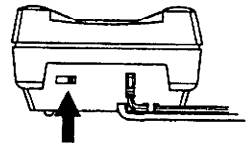

8. Place *HANDSET* in *BASE* to charge battery.

**Notes:** Before initial use of *CORDLESS HANDSET*, battery should be charged for 12 or more hours, See, "Charging the Battery Pack".

 
The Ringer switch must be "ON" for the *HANDSET* to ring.

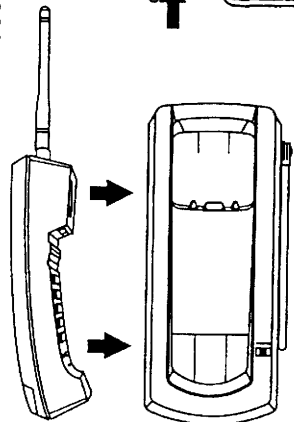


## INSTALLATION

1. Insert antenna and screw into place.
 
### C. Wall Mounting the Base Cradle (optional)

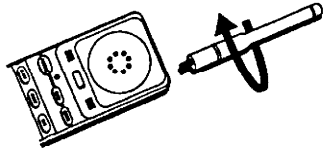


 2. Wrap *TELEPHONE LINE CORD* around cord wrap leaving 1-2 inches of cord free in the center.

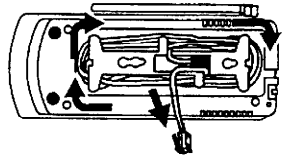


3. Plug the smaller "L" shaped end of the *AC ADAPTER* into back of unit.

 Guide *AC POWER SUPPLY CORD* through Channel on top so cord threads through *CORD WRAP* and hangs out the bottom of the *BASE*.

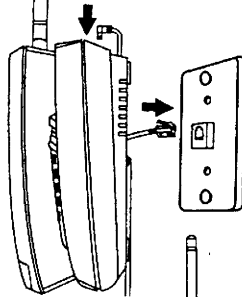


 4. Connect straight *TELEPHONE LINE CORD* modular plug to wall phone outlet.

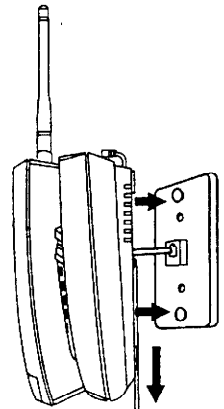

5. Slip mounting holes of *BASE* (on back of unit) over wall plate posts and slide *BASE* down until unit is firmly in place.

 6. Plug *POWER SUPPLY CORD* into AC outlet.

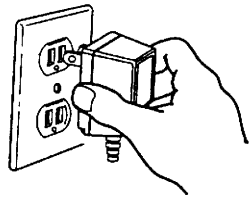

Your GE Cordless Phone comes with a nickel cadmium rechargeable battery pack (located in Handset). It is automatically charged when the *HANDSET* is placed in the *BASE CRADLE*. When fully charged, the battery pack provides sufficient power to enable the *HANDSET* to be left out of the *CRADLE* for prolonged periods and still function properly. However, to maintain adequate power, you will need to charge the *BATTERY PACK* every few days by returning the *HANDSET* to the *BASE CRADLE*. The *HANDSET* will beep when the battery is low and needs recharging.

### To Recharge the Battery

 
 
1. Be sure the *AC POWER CORD* from the *BASE CRADLE* is plugged into a standard electrical outlet.
2. Place *HANDSET* in the *BASE CRADLE*.
3. Before initial use, let charge for 12 hours or more.

The *CHARGE LIGHT* will be "ON" when the battery is charging.

**IMPORTANT:** Although you can leave the *HANDSET* out of the *CRADLE* for extended periods, you will need to return it to the *CRADLE* periodically to keep the battery pack charged.

Periodically clean the charging contacts on the *HANDSET* and *BASE CRADLE* with a soft cloth.

### D. Charging the Battery Pack

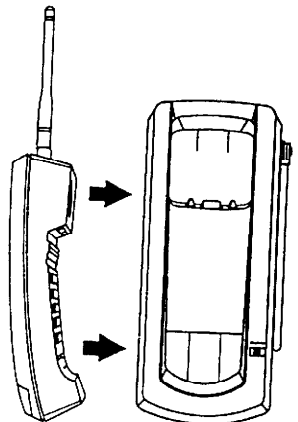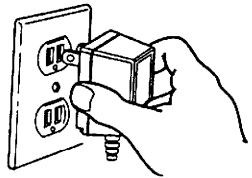

## TELEPHONE OPERATION

---

### To Receive a Call

1. Pick-up the *HANDSET*
2. Press *PHONE* button (phone light will be "ON").
3. When finished, press *PHONE* button to hang up.

### To Make a Call

1. Pick up the *HANDSET*.
2. Press *PHONE* button. (phone light will be "ON")
3. Wait for dial tone.
4. Dial telephone number.
5. When finished, press *PHONE* button to hang up.

---

You can leave the *Phone* "ON", and place the *HANDSET* in the *BASE CRADLE*. It will automatically hang up.

### A. Making and Receiving Calls



### B. Automatic Stand-by

## TELEPHONE OPERATION

---

This button is used to activate customer calling services available through your local phone company, such as Call Transfer and Call Waiting, etc. These services generally require an extra monthly fee. If you subscribe to any of these services, please refer to the phone company's instructions on how to use *Flash*.

**Notes:** Do not use the *PHONE* button to try to access calling services because you will hang-up the phone.

Do not use the *FLASH* button to hang-up phone.

---

The *CORDLESS HANDSET* is capable of receiving the distinctive ringing patterns generated through your local telephone company as a special service. This custom calling service is available only through your local telephone company.

---

 
### **CORDLESS HANDSET**

A short beep in *PHONE* (ON): — The batteries need charging.

A long warbling tone with *RINGER "ON"*: — Signals an incoming call.

Three beep tones in *PHONE* (ON): — Out of range warning.  
(emitted from the Handset earpiece):

### **G. Flash**



### **H. Distinctive Ring**

### **I. Tone Signals**

## TELEPHONE MEMORY OPERATION

Your Cordless Phone can store up to ten (10) telephone numbers of up to 16 digits long that can be dialed automatically.

Memory Storage must be programmed with the phone "OFF" and the ringer "ON".

### STORING

1. Pick up the *HANDSET*.
2. Press *STORE*.
3. Enter the number to be stored.
4. Press *STORE*.
5. Press a numbered key (0-9 Memory Location).
6. Listen for a burst of confirmation beeps.
7. Make note of stored number in corresponding location on Memory Directory Card (on back of handset).

### CAUTION

 
 
#### WHEN MAKING TEST CALLS TO EMERGENCY NUMBERS:

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities in the off-peak hours, such as early morning hours or late evening.


### DIALING

1. Press *PHONE* "ON".
2. Press *DIAL* button.
3. Press (0-9 Memory Location).

### A. Storing a Number in Memory

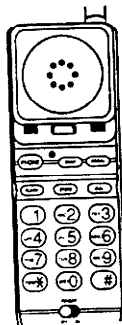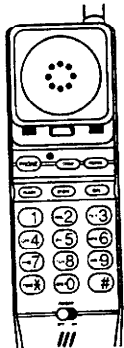

### B. Changing a Stored Number

 

1. Pick up *HANDSET*.
2. Press *STORE*.
3. Enter the number to be stored.
4. Press *STORE*.
5. Press the numbered key (0-9 Memory Location).
6. Listen for a burst of confirmation beeps.


## TELEPHONE MEMORY OPERATION

 Used for storing a momentary delay in the dialing sequence of a stored telephone number. This is generally used when a "PAUSE" is needed to wait for a dial tone (e.g. after dialing 9 for an outside line) or a computer tone (e.g. for some long distance services).

At point where pause is required... press *DIAL*.

**Note:** You may have to store two or three pauses at the end of a stored number.

### C. Pause Function



This feature allows you to dial in succession a chain of numbers in different memory locations. This is useful when you must dial more than one number in memory to complete a call, such as with frequent calls via an independent service (e.g. MCI or Sprint).


**Example:**

 	<i>Memory Location</i>
Local Access Number of Long distance company, and 2 or 3 pauses at end, press .....	7
Authorization Code (ID), press .....	8
Long distance phone number, press .....	9

#### *To initiate Chain Dialing*

1. Press *DIAL*.
2. Press 7.
3. Press *DIAL*.
4. Press 8.
5. Press *DIAL*.
6. Press 9.

### D. Chain Dial from Memory



A Rechargeable Nickel Cadmium battery pack is installed in the Cordless *HANDSET* to provide power for operation. If the unit beeps after charging overnight with *RINGER* switch in "OFF" position, then the battery needs to be replaced.

### To Replace Battery:

1. Make sure the *PHONE LIGHT* on the *HANDSET* is "OFF".
2. Open *BATTERY COMPARTMENT* on back of *HANDSET* by gently sliding down door.
3. Lift *RETAINING STRAP*.
4. Slide *BATTERY PLUG* out of plug clip. (Do not pull on the wires.)
5. Lift *BATTERY PACK* out.

This product includes a nickel-cadmium battery. When discarding batteries, be sure to dispose of them in the proper manner, according to your state and local regulations.

7. Plug in replacement *BATTERY PACK* (GE Cat. #BT-12).
8. Replace *RETAINING STRAP* to secure.
9. Replace *BATTERY COMPARTMENT* Cover.
10. Charge the *HANDSET* in the *BASE CRADLE* for 12 or more hours before use. (This also resets your security code)

 
**IMPORTANT:** When you replace the battery, numbers stored in memory will be erased. You must re-program the numbers into memory after battery is replaced.

### Battery Safety Precautions

For your safety, please follow these simple precautions:

- Do not recharge, disassemble, mutilate, puncture, wet or dispose of Battery in fire. Like other batteries of this type, if it is burned or punctured, it could release toxic material which could cause injury.
- Keep Battery out of reach of children.
- Replace only with GE Cat. #BT-12 or AT&T replacement battery #4051. Accessory Order Form included in this guide.

### A. Battery Replacement

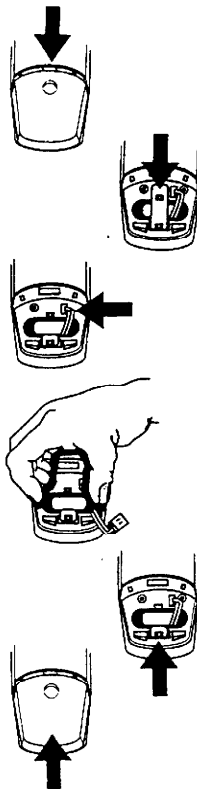



## PRODUCT CARE

The antenna of your GE Cordless Phone is designed for easy replacement in the event it is damaged.

 
1. Turn the base of the *ANTENNA* counterclockwise.

Antenna will come loose.

2. Lift out.

3. Insert *REPLACEMENT ANTENNA* (GE Cat. #5-2365) and screw into place.

### B. Replace Antenna

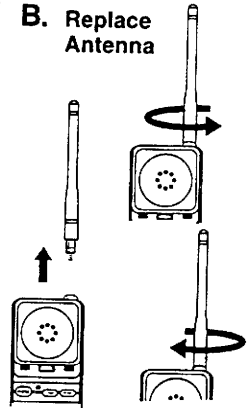

To keep your telephone working and looking good, follow these few simple rules

- Avoid putting cordless phone near heating appliances and devices that generate electrical noise (i.e., motors, fluorescent lamps).
- Cordless phone should not be exposed to direct sunlight or moisture.
- Avoid dropping the Handset as well as other rough treatment to the phone.
- Clean phone with a soft cloth dampened with water. (Remember to first unplug phone from wall outlet.)
- Never use a strong cleaning agent or abrasive powder, as this will damage the finish.
- Retain the original packaging, should you need to ship the phone at a later date.
- Periodically clean the charge contacts on Handset and Cradle with a soft cloth.

### C. General Product Care



## IN CASE OF DIFFICULTY

In case of difficulty, check the following before seeking service.

PROBLEM	SOLUTION
No Dial Tone	<ol style="list-style-type: none"> <li>1. Check Installation:               <ul style="list-style-type: none"> <li>— Is <i>BASE POWER CORD</i> connected to a working outlet?</li> <li>— Is <i>CHARGING LIGHT</i> lit on <i>HANDSET</i>?</li> <li>— Do not use an outlet that can be turned ON and OFF by a wall switch.</li> <li>— Is <i>TELEPHONE LINE CORD</i> connected firmly to the base unit and phone outlet?</li> <li>— Is <i>BASE ANTENNA</i> raised?</li> </ul> </li> <li>2. Is <i>CORDLESS HANDSET</i> out of range of the base?</li> <li>3. Make sure <i>BATTERIES</i> are properly charged (12 Hours).</li> <li>4. Is the <i>BATTERY PACK</i> installed correctly (see page 11)?</li> <li>5. Did the <i>CORDLESS HANDSET</i> beep when you pressed the phone button? Did the phone light come on? If not, your cordless may need to be charged.</li> <li>6. Disconnect <i>CORDLESS PHONE</i> and connect another phone to the same jack. If no dial tone, then the problem may be in your wiring or local service.</li> <li>7. Whenever a power outage occurs, or batteries are replaced, the <i>HANDSET</i> must be returned to the <i>BASE</i> to reset Security Code</li> </ol>
Dial Tone but can't dial out	<ol style="list-style-type: none"> <li>8. If you have pulse service on your line, your <i>TONE/PULSE</i> Switch on the Base must be set on Pulse.</li> </ol>
Handset does not ring	<ol style="list-style-type: none"> <li>9. Make sure <i>RINGER</i> Switch on Handset is "ON".</li> <li>10. Do you have too many extension phones on your telephone line? Try unplugging some other phones.</li> <li>11. Perform checks 1,2,3,4,5,6 and 7 above.</li> </ol>
You experience static, noise, or fading in and out	<ol style="list-style-type: none"> <li>12. Is <i>BASE ANTENNA</i> raised?</li> <li>13. Is <i>HANDSET</i> out of range from the <i>BASE</i>? Move closer to <i>BASE</i>.</li> <li>14. Does the <i>BASE</i> need to be relocated?</li> <li>15. Is <i>CORDLESS BASE</i> plugged into an outlet with household appliances? If so move the appliance or telephone.</li> <li>16. Check installation per 1 above. (See 7 above)</li> </ol>
Unit beeps.	<ol style="list-style-type: none"> <li>17. Charge <i>BATTERY</i> for 12 hours.</li> <li>18. Clean charging contacts on <i>HANDSET</i> and <i>CRADLE</i> with a soft cloth.</li> <li>19. Check installation per 1 above.</li> <li>20. Replace <i>BATTERY</i>.</li> </ol>
Memory Dialing Problems	<ol style="list-style-type: none"> <li>21. Did you program the memory correctly (see page 15)?</li> <li>22. Did you follow proper dialing sequence (see page 12)?</li> <li>23. See 8 above.</li> <li>24. Did you reprogram numbers into memory after power outage or replacing Battery? (See Page 17)</li> </ol>

## SERVICE

---

FCC requires this product be serviced only by the manufacturer or its authorized service agents. In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Consumer Electronic could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this Guide or call Consumer Information 1-800-448-0329.

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date \_\_\_\_\_ Name of store \_\_\_\_\_

## ONE YEAR LIMITED WARRANTY

---

### What does your warranty cover?

- Any defect in material or workmanship.

### For how long after the original purchase?

- One year.
- The warranty for rental units begins with the first rental.

### What will we do?

- Provide you with a new, or at our option, a refurbished unit.
- The exchange unit is warranted for the remainder of your product's original one-year warranty period.

### How do you make a warranty claim?

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package a copy of the sales receipt or other evidence of date of original purchase. If the unit was a gift, provide a statement specifying the date received. Also print your name and address and a description of the defect.
- Ship the unit standard UPS or equivalent to:  
Thomson Consumer Electronics, Inc.  
Product Exchange Center  
32 Spur Drive  
El Paso, Texas 79906
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you prepaid freight.

### What does your warranty not cover?

- Customer instruction. Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Product purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

### How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### What if you purchased your product outside the United States?

- This warranty does not apply. See your dealer for details.

---

Thomson Consumer Electronics, Inc.



## ACCESSORY ORDER FORM

---

*To fulfill your communicating needs and enhance your lifestyle, a wide range of GE extension phones, main phones, cordless phones and answering systems is available.*

*Just stop by your nearest retailer and ask to see the wide range of GE telephone products.*

*All are carefully engineered to offer you high quality and dependability, modern easy-to-use features, and elegant styling at an affordable price.*

*Should you wish to purchase, insist on the GE brand for all your communicating needs.*



## FCC REGISTRATION INFORMATION

---

Your GE telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68, FCC Rules and Regulations.

### 1. **Notification to the Local Telephone Company**

On the bottom of this equipment is a label indicating among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful to determine the number of devices you may connect to your telephone line and still have all these devices ring when your telephone number is called. In most (but not all) areas, the sum of the REN's of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

**NOTES:** This equipment may not be used on coin service provided by the telephone company.

Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.

Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

### 2. **Rights of the Telephone Company.**

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance, (2) afford you the opportunity to correct the situation and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations of procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

## INTERFERENCE INFORMATION

---

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

## HEARING AID COMPATIBILITY

---

This telephone is judged to be hearing aid compatible per FCC standards.

**Model 2-9730**  
**347A8019-0001 (Rev. 0)**  
**95-25**

**Printed in Phillipines**

 **THOMSON CONSUMER ELECTRONICS**  
© 1995 Thomson Consumer Electronics, Inc.  
P.O. BOX 1976, Indianapolis, IN 46206  
Trademark(s) © Registered

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>