 




IRON FER À REPASSER PLANCHA

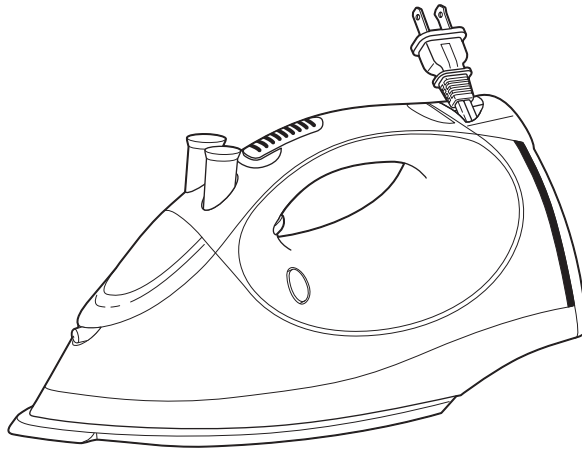

**READ BEFORE USE
LIRE AVANT L'UTILISATION
LEA ANTES DE USAR**

840173100

**For Customer Assistance, call Customer Service at
1-877-207-0923 (US) or 1-877-556-0973 (Canada)**

Pour l'assistance à la clientèle au Canada : 1-877-556-0973

**Para comunicarse con Asistencia al Cliente en México: 01-800-343-7378
Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.**

IMPORTANT SAFETY INSTRUCTIONS

When using your flatiron, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

1. Use iron only for its intended use.
2. Verify that the voltage in your home corresponds to that of your appliance.
3. To protect against risk of electric shock, do not immerse the iron in water or other liquids.
4. The iron should always be turned to OFF before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
6. Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
7. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Call our toll-free customer service number for information on examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS!

OTHER CONSUMER SAFETY INFORMATION

This product is intended for household use only.

 
WARNING! Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or using an adaptor. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

Use the iron on an ironing board. Ironing on any other surface may damage that surface.

Do not iron or vertical steam clothes that are being worn.

Do not use vertical steam in the direction of people or pets.

PARTS AND FEATURES

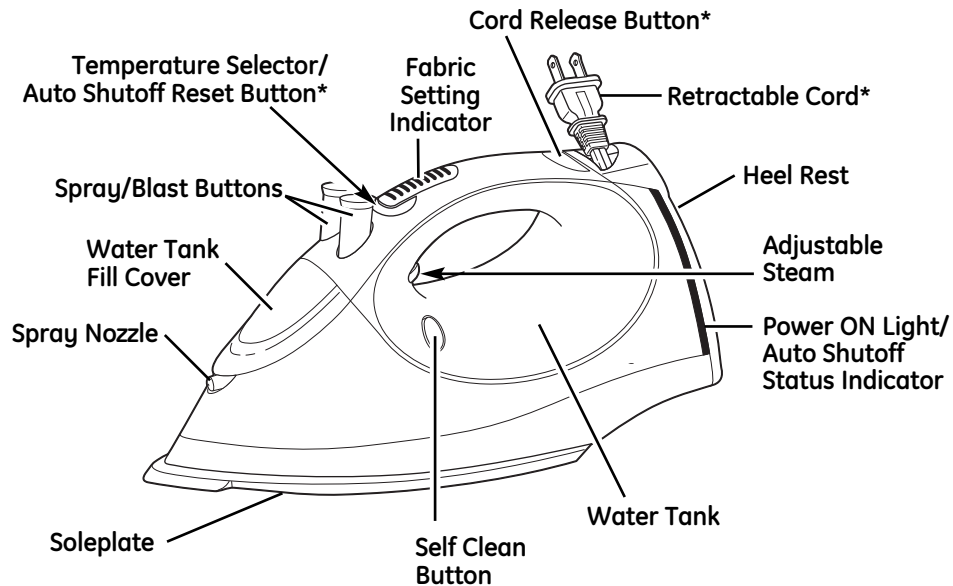

**on selected models*

BEFORE FIRST USE

- During first use of iron, it may appear to smoke. This will stop and does not indicate a defect or hazard.
- Steam vents should be cleaned before first use. Prepare iron for steam ironing, then iron over an old cloth for a few minutes while letting the iron steam. Press the Blast button several times. This will clean the vents. Then follow the Self-Clean instructions (see page 5) beginning with Step 3.
- Many irons spit or sputter during the first few uses with tap water. This happens as the steam chamber becomes conditioned. This will stop after a few uses.

TO DRY IRON

1. Plug iron into outlet.
2. Turn Adjustable Steam to Dry Iron.
3. Set Fabric Setting Indicator to desired temperature. Allow three minutes for iron to reach desired temperature.
4. To turn iron off, set Fabric Setting Indicator to **OFF (O)** and unplug iron.



TO STEAM IRON

1. Unplug iron. Open water tank fill cover. Using a cup, slowly pour 10 ounces (310 ml) of tap water into the water tank opening. Close water tank fill cover.
2. Plug in iron.
3. Press Temperature Selector. With iron in an upright position, set Fabric Setting Indicator to desired setting in steam range. Allow 3 minutes for iron to reach desired temperature. Do not preheat the iron with the soleplate facing down.
4. Set Adjustable Steam to desired steam output.
5. To turn iron off, turn Adjustable Steam to Dry Iron. Press Temperature Selector. Set Fabric Setting Indicator to **OFF (O)** and unplug iron.
6. Empty water from the iron following directions in "Caring for Your Iron and Soleplate."

Water

Please use ordinary tap water. If you have extremely hard water, alternate between tap water and distilled water for use in the iron.

FABRIC SETTING CHART

Steam Setting	Temperature Setting		Ironing Instructions
	Off	0	
	Nylon	1	Dry iron on reverse side of fabric.
	Acrylic	2	Dry iron on reverse side of fabric.
	Silk	2	Dry iron on reverse side of fabric.
	Polyester	3	Iron while fabric is still damp.
	Rayon	4	Iron on reverse side of fabric.
	Wool	4	Steam iron on reverse side of fabric.
	Cotton	5	Iron while still damp using steam and/or spray.
	Linen	6	Iron on reverse side of fabric while still damp.

CARING FOR YOUR IRON

Iron

1. The Water Tank of your iron should be emptied after each use. Set Fabric Setting Indicator to **OFF (O)**. Unplug the iron and hold over a sink. Turn iron upside down until Water Tank Opening is parallel with sink. Water will run out of water tank opening.
2. After iron has completely cooled, fully retract cord into iron and store in an upright position. **Do not store iron laying flat on soleplate.**

Soleplate

1. Never iron over zippers, pins, metal rivets, or snaps, as these may scratch the soleplate.
2. To clean occasional build-up on the soleplate, wipe with a sudsy cloth. Do not use abrasive cleansers or metal scouring pads.
3. Always store iron upright in the heel rest position.

Self-Clean

 
To keep the steam vents clear of any build-up, follow these instructions each time you iron using steam.

1. Set Fabric Setting Indicator to OFF (O). Fill iron with water to $\frac{1}{2}$ of its maximum capacity.
2. Set Adjustable Steam to Dry Iron position. Set Fabric Setting Indicator to Linen setting and let iron heat for 2 minutes.
3. Set Fabric Setting Indicator to OFF (O). Unplug iron and hold over a sink with soleplate facing down.
4. Press and hold the Self Clean Button. Boiling water and steam will flow out of steam vents. Allow all water to drain from iron.
5. Gently move iron front to back to allow water to clean entire soleplate area.
6. If water still remains inside of soleplate, reheat iron as indicated in Step 2. Boiling water and steam could still flow out of steam vents.

FEATURES (on selected models)

Blast of Steam and Spray Buttons


Push Steam Button for an extra blast of steam. Push Spray Button to release a fine spray of water for difficult wrinkles in cotton or linen.

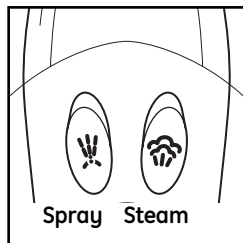

FEATURES (cont.)


Automatic Shutoff Status Indicator

 If the iron is an Automatic Shutoff model, the light comes on when iron is first plugged in. After 1 hour the iron will shutoff and the light will go out. Press the Temperature Selector to turn the iron back on for another hour of ironing.

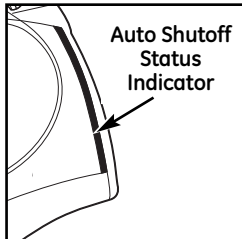


Quick Off

 Press and hold the Temperature Selector for three seconds to turn the iron off quickly.

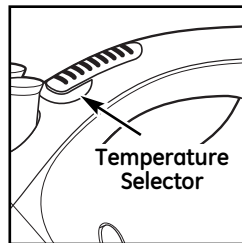


Retractable Cord

 1. Pull cord to desired length. Do not unwind cord beyond colored tape indicator on cord.

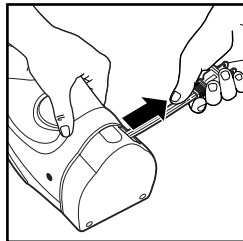

 
2. To store cord, press and hold Cord Release Button while guiding cord into storage area. **CAUTION:** Hold plug while retracting cord.

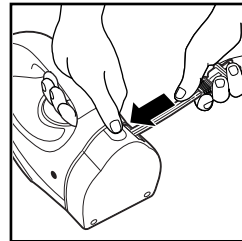

Do not let cord retract freely. Cord may jam on reel or loose cord may whip back and forth and could cause injury.

Vertical Steam

 1. Follow Steps 1 through 3 in "To Steam Iron."

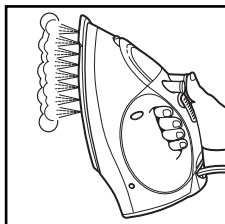

2. Hang garment in a location that is not susceptible to damage from heat or moisture. Do not hang in front of wallpaper, window, or mirror.

3. Hold iron about 6 inches away from garment. Press and release Blast Button to steam out wrinkles. Do not press Blast Button more than once every 2 seconds.

4. To turn iron off, turn Adjustable Steam to Dry Iron. Set Fabric Setting Indicator to OFF (O). Unplug iron.

5. Empty water from iron following directions in "Caring for Your Iron."

NOTE: Do not allow hot soleplate to touch delicate garments.

TROUBLESHOOTING

PROBLEM

THINGS TO CHECK

Iron won't heat.

- Is the iron plugged in and the outlet working? Check the outlet by plugging in a lamp.
- Is the Temperature Control turned to a fabric setting?
- If auto shutoff model, is light on? If not, push Reset Button.

Water is leaking out of the iron.

- Do not overfill the water tank.
- If steam ironing, is Adjustable Steam in a steam position, Fabric Setting Indicator in the steam range and did the iron have enough time to preheat?
- If dry ironing, make sure the Adjustable Steam is in the DRY IRON position.

Iron won't steam.

- Check the water level.
- Is the Adjustable Steam Switch in the STEAM position?
- Has the iron had enough time to preheat?

Iron leaves spots on clothing.

- ALWAYS empty the water tank of the iron after using. Water left in the tank may discolor clothing and soleplate.

Retractable cord will not unwind (on select models).

- Rewind a small amount of cord then fully depress the Cord Release Button and pull the cord to desired length.

CUSTOMER SERVICE

If you have a claim under this warranty, please call our Customer Assistance Number. For faster service please have model, series, and type numbers ready for operator to assist you. These numbers can be found on the bottom of your appliance.

MODEL: _____ **TYPE:** _____ **SERIES:** _____

Customer Assistance Number 1-877-207-0923 (US) or 1-877-556-0973 (Canada)

Keep these numbers for future reference!

For more information, please visit us at www.walmart.com

Two-Year Limited Warranty

What does your warranty cover?

- Any defect in material or workmanship.

For how long after the original purchase?

- Two years.

What will we do?

- Provide you with a new one.
- For those items still under warranty but no longer available, WAL-MART reserves the right to replace with a similar GE branded product of equal or greater value.

How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest WAL-MART store or call Customer Assistance at 1-877-207-0923 (US) or 1-877-556-0973 (Canada).

What does your warranty not cover?

- Parts subject to wear, including, without limitation, glass parts, glass containers, cutter/strainer, blades, seals, gaskets, clutches, motor brushes, and/or agitators, etc.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect, including failure to clean product regularly in accordance with manufacturer's instructions.

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

- THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY OR CONDITION, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING, WITHOUT LIMITATION, ANY STATUTORY WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

- WAL-MART, GE, AND THE PRODUCT MANUFACTURER EXPRESSLY DISCLAIM ALL RESPONSIBILITY FOR SPECIAL, INCIDENTAL, AND CONSEQUENTIAL DAMAGES OR LOSSES CAUSED BY USE OF THIS APPLIANCE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID WHETHER A CLAIM, HOWEVER INSTITUTED, IS BASED ON CONTRACT, INDEMNITY, WARRANTY, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, OR OTHERWISE. SOME STATES OR PROVINCES DO NOT ALLOW THIS EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL LOSSES SO THE FOREGOING DISCLAIMER MAY NOT APPLY TO YOU.

What if you encounter a problem with this product while using it outside the country of purchase?

- The warranty is valid only in the country of purchase and you follow the warranty claim procedure as noted.



is a trademark of General Electric Company and is used under license by WAL-MART Stores, Inc., Bentonville, AR 72716

Marketed in Canada by:
Wal-Mart Canada Corp.
1940 Argenta Road, Mississauga, Ontario L5N 1P9

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>