



Gateway[®]

3-IN-1 DIGITAL MUSIC PLAYER

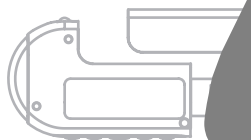

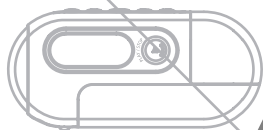

Contents

Preparing to Use


Features	6
Package content	6
Product overview	7
LCD Panel	7
Button function table	8

Using

Installing the battery	12
Listening to music quick start steps	12
Turning the power On/Off	13
Digital music player modes	13
Playing digital music tracks or voice files	13
Adjusting the volume	14
Navigating music tracks or voice files	14
Setting the repeat play function	14
Recording voice	15

Menu Settings

Menu table	18
Using the Menu mode	20
Setting the Repeat mode	20
Setting the equalizer (EQ) function	22
Managing files	23
Setting the logo options	24
Setting the display options	25
Displaying file information	26
Selecting the display language	26

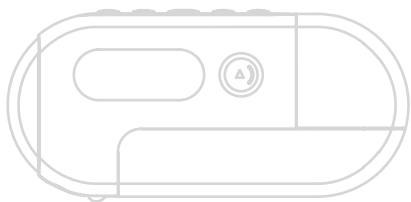



Button function table

Button	Current status	Push time	Result
▶■	Power off	Press and hold	Power on
	Music / Voice playback	Briefly	Stop
	Music / Voice playback / Voice recording / Stop	Press and hold	Power off
	Stop (Music / Voice mode)	Briefly	Playback / recording
	Stop (Record mode)	Briefly	Recording
	Voice recording	Briefly	Stop
	Menu mode	Briefly	Exit Menu mode
▶▶	Playback	Briefly	Playback the next file
	Playback	Press and hold	Fast forward search in playback file
	Stop	Briefly	To move to the next file
◀◀	Playback	Briefly	Less than 5 sec. after beginning playback : Former file playback

Button	Current status	Push time	Result
◀◀	Playback	Press and hold	Fast backward search in playback
	Stop	Briefly	Move to the former file
⊕	Playback / Stop	Briefly	Volume up
	Menu mode	Briefly	Move up the menu options
⊖	Playback / Stop	Briefly	Volume down
	Menu mode	Briefly	Move down the menu options
Mode Ⓜ	Playback	Briefly	Set a repeat section start point
	While setting a repeat section	Briefly	Set a repeat section end point
	While playing a repeat section	Briefly	Cancel a repeat section
	Stop	Briefly	Change the mode between music, voice, and voice recording
	Playback / Stop	Press and hold	Enter the Menu mode
	Menu mode	Briefly	Select a Menu item




Using


- Installing the battery 12
- Listening to music quick start steps 12
- Turning the power On/Off 13
- Digital music player modes 13
- Playing digital music tracks or voice files 13
- Adjusting the volume 14
- Navigating music tracks or voice files 14
- Setting the repeat play function 14
- Recording voice 15

Installing the battery

- Insert one AAA battery into the player. Match the + and - symbols on the batteries with the + and - symbols inside the battery compartment.

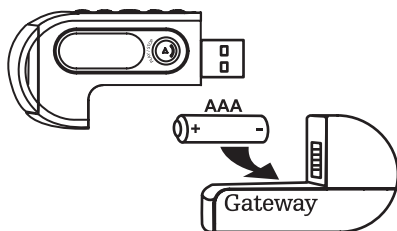


Turning the power On and Off

 

Digital music player modes

 
- Stop playback and press the Mode button one or more times to select one of the following player modes:



Music mode



 Voice mode





Voice recording mode

Playing digital music tracks or voice files

- **To play music tracks or voice files**
 - Press the Play / Stop button. The music track or voice file plays.
- **To stop music tracks or voice files**
 - Press the Play / Stop button. The music track or voice file stops playing.




 
- **To adjust the volume**

- The volume range adjusts from 0 to 30.
- Press the  button to turn the volume level up.
- Press the  button to turn the volume level down.





Navigating music tracks or voice files

    - **To change to another music track or voice file**

- In the playback or stop mode, press the rewind button  to move to the previous music track or voice file. Press the rewind button  within five seconds after a song has started playing to repeat the previous music track or voice file.
- In the playback or stop mode, press the fast-forward button  to move to the next music track or voice file. Press the fast-forward button  within five seconds after a song has started playing to repeat the current music track or voice file.

 
- **To move within a music track or voice file during playback**


- Press the rewind  or fast-forward  button for more than one second and release the button.

Note: Variable Bit Rate (VBR) files are MP3 files with multi-compression rates. These files do not repeat previous or current music tracks or voice files. VBR file playtime may not match the playback time displayed.

Setting the repeat play function

 - **To set a repeat section start point**

  
- While a file is playing, briefly press the Mode button to mark the start point of a music track or voice file repeat section. The start point icon  appears.




 
Recording voice

- **To record voice**

1. Select the voice recording mode. For more information, see "Digital music player modes" on page 13.




2. Press the Play / Stop  button. The voice recording starts. Speak into the microphone.



- **To stop the voice recording**

- Press the Play / Stop  button. The recording stops and the voice file is created.

Note: When the player memory is full, the voice recorder stops and a voice file is created. The available recording time appears below the "Standby" menu text.

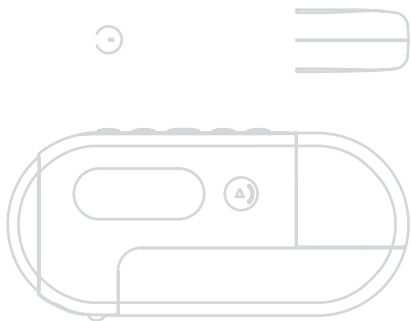

Menu Settings

• Menu table	18
• Using the Menu mode	20
• Setting the Repeat mode	20
• Setting the equalizer (EQ) function	22
• Managing files	23
• Setting the logo options	24
• Setting the display options	25
• Displaying file information	26
• Selecting the display language	26

MENU

Repeat

 
1. Normal
 2. Repeat one
 3. Repeat all
 4. Repeat list
 5. Shuffle
 6. Stop
- Return

Rev-

Using the Menu mode

To use the Menu mode

1. Press and hold the Mode button for more than one second. The Menu appears.



2. Press the \odot or \ominus button to scroll through the menu options and highlight an option:

- **Repeat** - to adjust playback repeat options.
- **EQ** - to adjust equalizer settings.
- **File** - to delete and format music and voice files.
- **Logo** - to select personalized logo options.
- **Display** - to change display settings.
- **File Info** - to view file information details.
- **Language** - to change language options.
- **Exit menu** - to exit the Menu mode.

3. Press the Mode button to select the highlighted menu option.

 
4. Press the Play / Stop \blacktriangleright button to close the Menu mode.

Note: If you do not make menu selections in the Menu mode within ten seconds, the player exits the Menu mode.

Setting the Repeat mode

To use the Repeat mode

1. Use the Menu mode to select the Repeat menu. For more information, see "Using the Menu mode" on page 20. The Repeat menu appears.




2. Press the \odot or \ominus button to scroll through the Repeat menu options and highlight an option:

- **Normal** - to play each music track or voice file one time in sequence.
- **Repeat one** - to listen to one music track or voice file repeatedly.
- **Repeat all** - to listen to all music tracks or voice files repeatedly.
- **Repeat list** - to listen to selected music tracks or voice files repeatedly.
- **Shuffle** - to listen to randomly selected music tracks or voice files.
- **Intro** - to listen to the first ten seconds of each music track or voice file.

3. Press the Mode button to select the highlighted Repeat menu option.

- The Repeat list option includes additional menu options. If you select the Repeat list menu option, use the \odot or \ominus button to scroll through the files in the Repeat list. Press the Mode button to select or deselect files in the Repeat List. An asterisk (*) appears next to selected files.

 
Repeat menu:



Setting the equalizer (EQ) function



• To use the EQ menu

 1. Use the Menu mode to select the EQ menu. For more information, see "Using the Menu mode" on page 20. The EQ menu appears.



2. Press the \odot or \ominus button to scroll through the EQ menu options and highlight an option:
 - **Normal** - to set the equalizer settings to 0 dB.
 - **User** - to customize the equalizer settings to user preferences.
3. Press the Mode button to select the highlighted EQ menu option.
 - The User option includes equalizer settings. If you select the User menu option, use the \odot or \ominus button to adjust the equalizer tone settings up or down and use the rewind button \ll and fast-forward button \gg to navigate across the equalizer frequency band settings and highlight the band you want. Press the Mode button to complete the equalizer settings.

  
EQ menu:



Managing files

• To use the File menu

 1. Use the Menu mode to select the File menu. For more information, see "Using the Menu mode" on page 20. The File menu appears.



2. Press the \odot or \ominus button to scroll through the File menu options and highlight an option:
 - **Delete** - to delete music tracks or voice files.
 - **Format** - to format the memory space. All files are deleted in this process.
 3. Press the Mode button to select the highlighted File menu option.
 - The Delete option includes music and voice file options. Press the Mode button to select the music or voice option. Use the \odot or \ominus button to scroll through the files and highlight the file you want to delete. Press the Mode button to delete the file.
 - The Format option deletes all files on the player. Use the \odot or \ominus button to highlight OK or Cancel to format. Press the Mode button to select the format option.
- Caution!** The Format option deletes all files on the player. Make sure that you have saved all important files before using the Format option.

File menu:



Setting the logo options

 
 
 
To use the Logo menu

1. Use the Menu mode to select the Logo menu. For more information, see "Using the Menu mode" on page 20. The Logo menu appears.



2. Press the \odot or \ominus button to scroll through the Logo menu options and highlight an option:
 - **Default** - to set the logo to the default logo.
 - **User** - to set the logo to the user designed logo created in the logo editor program.
 - **Logo Disp** - to turn the logo display on or off.
3. Press the Mode button to select the highlighted Logo menu option.
 - The User menu includes custom logo options. Use the \odot or \ominus button to scroll through the custom logo files (.LGO) and highlight the file you want to display. Press the Mode button to select the file.

Logo menu:



Setting the display options

 
 
To use the Display menu

1. Use the Menu mode to select the Display menu. For more information, see "Using the Menu mode" on page 20. The Display menu appears.



2. Press the \odot or \ominus button to scroll through the Display menu options and highlight an option:
 - **Backlight** - to turn the display backlight on, off, and adjust lighting time.
 - **Contrast** - to adjust display lighting contrast.
 - **Scroll speed** - to adjust the display text scrolling speed.
3. Press the Mode button to select the highlighted Display menu option.
 - Press the Mode button to select menu options. Use the \odot or \ominus button to adjust display settings.

Display menu:



Displaying file information

 

- **To view File Information**


- Use the Menu mode to select the File info menu. For more information, see "Using the Menu mode" on page 20. The File info menu appears.



Selecting the display language

- **To use the Language menu**

1. Use the Menu mode to select the Language menu. For more information, see "Using the Menu mode" on page 20. The File menu appears.
2. Press the  or  button to scroll through the Language menu options and highlight an option:
 - Korean
 - Western (English)
 - W.Europe
 - Japanese
 - S.Chinese
 - T.Chinese
3. Press the Mode button to select a Language option.

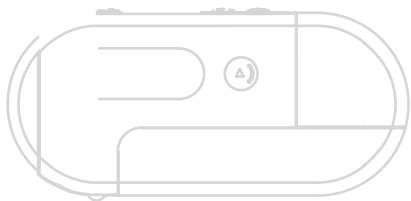

Connecting

- Installing software 30
- Connecting to your computer 34
- Managing files 35

Installing software

When you connect your player to your computer's USB port, the player appears as a removable drive on your computer. If your computer uses Windows XP, Windows Me, or Windows 2000, you do not have to install the driver software to use the player with your computer. If your computer uses Windows 98 SE, install the USB device driver for Windows 98 SE.

- **To install the Windows 98 SE USB device driver**

1. Plug the player into a USB port on your computer.

- OR -

Connect the USB extension cable to the computer's USB port and connect the player to the extension cable.

The **Add New Hardware Wizard** screen opens.



2. Insert the player's programs / driver CD into the computer's CD drive.

3. Click **Next**. The **What do you want Windows to do?** screen opens.



4. Click **Search for the best driver for your device**, then click **Next**. The drivers search screen opens.



5. Click to select the **CD-ROM drive** check box, then click **Next**. The Windows driver file search results screen opens.



6. Click **Next**, then click **Finished**.

Connecting to your computer

- To connect the digital music player to a computer with Windows XP

1. Turn on your computer.
2. Plug the player into a USB port on your computer.

- OR -

Plug the USB extension cable into the computer's USB port, then connect the player to the extension cable.

The **Removable disk** dialog box opens and the Standby message flashes on the player's LCD.



3. Click **Open folder to view files**, then click **OK**. The Music, Voice, and Logo folders appear in Windows Explorer.

Managing files

Caution! Do not remove the player while files are transferring to and from the digital audio player. Removing the drive while files are transferring will cause the file transfer to fail. The player displays an animated arrow when files are transferring and it displays flashing "Standby" text when the file transfer is complete.



- To load music files on the digital music player

1. Connect the player to your computer. For more information, see "Connecting to your computer" on page 34.
2. Copy the music files (.MP3) from your computer to the Music folder on the player.
Note: Music files (.MP3) must be copied to the Music folder for the music files to play back on the player. If music files are placed in other folders or in sub-folders inside the Music folder, the music files will not play.

- To use voice files recorded on the digital music player

1. Connect the player to your computer. For more information, see "Connecting to your computer" on page 34.
2. Copy the voice files from the Voice folder on the player to a folder on your computer.
3. Use the VoiceConverter program to convert voice (.VOC) files to a .WAV format that your computer can play. For more information, see "Using the VoiceConverter program." on page 40.
Note: Converted voice (.WAV) files must be copied to the player's Voice folder for the voice files to play on the player. If voice files are placed in other folders or in sub-folders inside the Voice folder, the voice files will not play.



- **To load custom logo files on the digital music player**

1. Use the Logo Editor program to create a custom logo. For more information, see "Using the Logo Editor program" on page 42.
2. Connect the player to your computer. For more information, see "Connecting to your computer" on page 34.
3. Copy your logo files from your computer to the Logo folder on the player.

Note: Logo files must be copied to the Logo folder for the logo files to display on the player. If logo files are placed in other folders or in sub-folders inside the Logo folder, the logo files will not display.

- **To use the digital music player as a data drive**

1. Connect the player to your computer. For more information, see "Connecting to your computer" on page 34.
2. Create a data folder on the player.
3. Copy files from your computer to the data folder on the digital music player.
4. Transfer files from the player to a folder on another computer.





Using Programs



 
Using the VoiceConverter program

- **To install the VoiceConverter program**


1. Insert the player's programs / driver CD into the computer's CD drive. The player software install program opens.
2. Click **Voice File Converter**, then follow the program installation instructions.

- **To use the VoiceConverter program**

1. Copy voice files from the digital audio player's Voice folder to a folder on your computer.
2. Click **Start, All Programs, Digital Audio Player**, then click **Voice File Converter**. The Voice File Converter program opens.



3. Click **File**, then click **Open**. The **Open dialog box** opens.

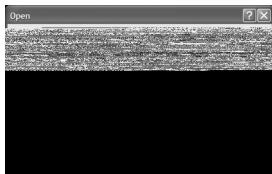

4. Click a **.VOC** file, then click **Open**. The **VoiceConverter** dialog box opens and the **.VOC** file appears.



5. Click **Convert**. The file converts to a **.WAV** file that will play on computer media player programs such as Windows Media Player and MusicMatch.
6. Click **OK**.

Using the Logo Editor program

- **To install the Logo Editor**
 1. Insert the player's programs / driver CD into the computer's CD drive. The player software install program opens.
 2. Click **Logo Editor Install**, then follow the program installation instructions.

6. Adjust the image size with the horizontal and vertical zoom settings and adjust the brightness and contrast. Position the image inside the rectangular box to define how you want to crop the image for display on the player.
7. Click **Transfer**. The new file appears in the **Logo Editor** dialog box.




8. Click **File**, then click **Save**. The **Save Logo File** dialog box opens.
9. Browse to the folder you want to save the logo file in and type the file name in the **File name** box. Click the arrow button to open the **Save as type** list, click **Logo files (*.LGO)**, then click **Save**.

For information about transferring the logo file to the player, see "To load custom logo files on the digital music player" on page 36.

- **To use the Logo Editor frame function**


You can use the Logo Editor program to create an animated logo with the frame function.

1. Click **Start, All Programs, Digital Audio Player**, then click **Logo Editor**. The Logo Editor program opens.
2. Use the drawing tools to draw the first frame of the animated logo picture in the **Zoomed Image** area.

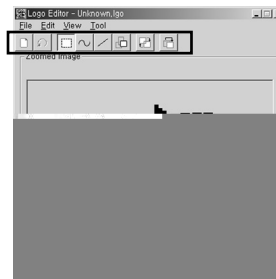


3. In the **Image Frame** area, click **Add**. A new blank frame opens.

4. Draw the second frame of the logo picture.

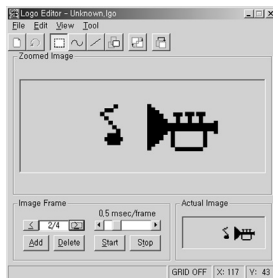


5. In the **Image Frame** area, click **Add**. A new blank frame opens.

6. Draw the third frame of the logo picture, then click **Add**.

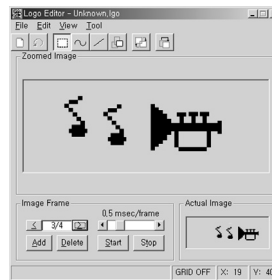

7. Continue adding new frames.
8. Click **File**, then click **Save**. The **Save Logo File** dialog box opens.
9. Browse to the folder you want to save the logo file in and type the file name in the **File name** box. Click the arrow to open the **Save as type** list, click **Logo files (*.LGO)**, then click **Save**.

For information about transferring the logo file to the player, see "To load custom logo files on the digital music player" on page 36.

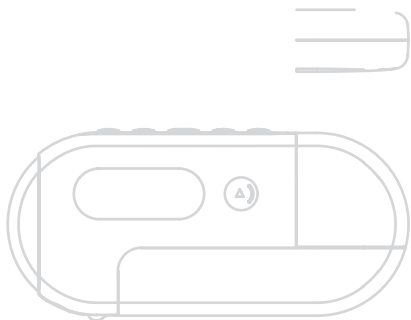

Support and Product Information

- Contacting Gateway 50
- Product specifications 52
- Safety, regulatory, and legal information 53

Contacting Gateway

You can access the following services through your telephone to get answers to your questions:

Resource	Service description	How to reach
Gateway support Web site	Get the latest FAQs, information, and other help for your Gateway product.	www.support.gateway.com
Fax on demand support	Order a catalog of documents on common problems, then order documents by document numbers. The documents will be faxed to you.	800-846-4526 (US) 877-709-2951 (Canada)
Gateway's fee-based software tutorial service	Get tutorial assistance for software issues billed by the minute.	800-229-1103 (charged to your credit card) 900-555-4695 (charged to your telephone bill)

Resource	Service description	How to reach
Gateway Technical Support	Talk to a Gateway Technical Support representative about a non-tutorial technical support question: Weekdays 7:00 a.m. - 9:00 p.m. CST TDD Technical Support (for hearing impaired) is available: Weekdays 6:00 a.m. - 8:00 p.m. CST Weekends 6:00 a.m. - 5:00 p.m. CST	800-846-2301 (US) 800-846-3609 (Canada and Puerto Rico) 605-232-2191 (all other countries) 800-846-1778 (TDD)
Sales, accounting, and warranty	Get information about available systems, pricing, orders, billing statements, warranty service, or other non-technical issues.	800-846-2000 (US) 888-888-2037 (Canada)

Product specifications

- Memory capacity: 128 / 256 MB
- Communication method: USB 1.1 (Plug & Play)
- Earphone output power: 5.0mW / 16
- S/N, THD : 80dB / 0.1% (with 'A' filter)
- Output frequency range: 20 Hz - 20 KHz
- Operating temperature: 32 - 104° F / 0 - 40° C
- Battery: 1 x AAA size
- OS support : Windows 98 SE, Windows Me, Windows 2000, Windows XP, MacOS 8.6 or higher, and Linux kernel 2.4.0 or higher.
- Case: plastic
- Dimension: 1.53 x 3.39 x .52 inches / 39 x 86 x 13.2 mm
- Weight: 1.13 oz / 32 g (without battery)

Safety, regulatory, and legal information

Regulatory compliance statements

United States of America

Federal Communications Commission (FCC) Unintentional emitter per FCC Part 15

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a different circuit from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Compliance Accessories: The accessories associated with this equipment are: shielded video cable when an external monitor is connected. These accessories are required to be used in order to ensure compliance with FCC rules.

Caution! Changes or modifications not expressly approved by Gateway could void the FCC compliance and negate your authority to operate the product.



Notes

Canada

Industry Canada (IC)

Unintentional emitter per ICES-003

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada. Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

California Proposition 65 Warning

Warning! This product contains chemicals, including lead, known to the State of California to cause cancer and/or birth defects or reproductive harm.

FCC declaration of conformity

Responsible party:

Gateway Companies, Inc.
610 Gateway Drive, North Sioux City, SD 57049
(605) 232-2000 Fax: (605) 232-2023

Product:

Gateway 3-IN-1 Digital Music Player

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution! Changes or modifications not expressly approved by Gateway could void the FCC compliance and negate your authority to operate the product.



MAN DION 3IN1 MP3PLAYER GDE R0 07/03



8509324

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>