



☎ **INFO HOT-LINE:** If, after reading this owner's guide you have any questions or comments, please call 1-877-207-0923 and a Consumer Service Representative will be happy to assist you.

# *Waterfall Foot Spa With Comfort Gel*

106754



**Owner's Guide**

**PLEASE READ AND SAVE THESE  
IMPORTANT INSTRUCTIONS**

 
Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

# PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

## GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**DANGER:** Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is grounded. Do not modify the plug provided with the product if it will not fit the outlet, have a proper outlet installed by a qualified electrician. This product is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in sketch A. A temporary adapter that looks like the adapter illustrated in sketches B and C may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A) can be

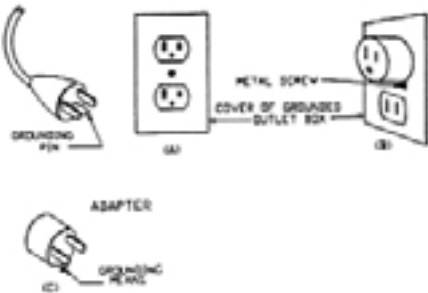

installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

## CAUTIONS

- Do not wrap power cord around unit, or carry by power cord.
- Never insert anything into any opening on this product.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons. **THIS PRODUCT IS NOT A TOY.**
- Only use this product for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.

- Do not attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. This unit contains no user serviceable parts.

## CONSUMER SAFETY INFORMATION

**This massager should not be used in the following cases:**

- If you have any concerns regarding your health consult your doctor before using this product.
- Individuals with pacemakers should consult a doctor before using this product.
- Never leave Foot Spa unattended.
- DO NOT fall asleep while using this product.
- Foot Spa should be comfortable and pleasant. Should pain or discomfort result, discontinue use and consult your doctor.
- DO NOT use for more than 20 minutes at a time. Extensive use could cause the product to overheat. Should this occur, discontinue use and allow the unit to cool before operating.
- Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However if you have to use an extension cord, the extension cord should be suitable for the electrical rating on the product.
- Do not use Foot Spa on the following body areas in these instances:
  - Any area of the body that is swollen, burned or inflamed or where skin eruptions or ulcerated sores are present.
  - Any area of the body that is anaesthetized unless approved by your doctor.
  - Legs with varicose veins.
  - Calves and legs with unexpected pain.

# PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

# PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. **DANGER** – To reduce the risk of electric shock:
  - a. Always unplug this appliance from the electrical outlet before cleaning.
  - b. DO NOT reach for an appliance that has fallen into water. Unplug immediately.
  - c. DO NOT use while bathing or in a shower.
  - d. DO NOT place or store appliance where it can fall or be pulled into a tub or sink. DO NOT place in or drop into water or other liquid.
3. **WARNING** – To reduce the risk of burns, fire, electric shock, or injury to persons:
  - a. This appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
  - b. DO NOT operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
  - c. Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons. **THIS IS NOT A TOY.**
  - d. Use this appliance only for its intended use as described in this manual. DO NOT use attachments not recommended by GE.
  - e. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
  - f. DO NOT carry this appliance by supply cord or use cord as a handle.
  - g. Keep the cord away from heated surfaces.
  - h. Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair and the like.
  - i. Never drop or insert any object into any opening.
  - j. DO NOT use outdoors.
  - k. DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
  - l. To disconnect, turn all controls to the off position, then remove plug from outlet.
  - m. DO NOT stand on or in appliance. Use only while seated.
  - n. Connect this appliance to a properly grounded outlet only. See grounding instructions.

4. Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by GE may cause hazards.
5. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.

# FEATURES - OPERATION


## COMFORT GEL INSERT

The Comfort Gel Insert has been included for your luxury and comfort. The soft gel sole contours to your feet providing soothing warmth and relaxation for your tired feet. You may also choose to use your Comfort Gel Insert without warming. A chilled Comfort Gel Insert is a refreshing way to invigorate your feet. Whether warmed, at room temp, or chilled, the Comfort Gel Insert helps to soothe aches and rejuvenate your weary feet.

### TO USE:

 
1. TO WARM the Comfort Gel Insert, fill a tall pitcher with HOT TAP WATER. Then place the Comfort Gel Insert into the hot water and let sit for approximately 5 minutes or to your preference.
2. Use caution not to scald hands when removing Comfort Gel Insert from hot water. First, pour out the hot water and then remove the Comfort Gel and place in Foot Spa. You may also opt to use your gel pack at room-temp and therefore no heating is necessary.

### CAUTION:

- Only use tap water when warming Comfort Gel Insert
  - Do not place Comfort Gel Insert into boiling water
  - Do not microwave Comfort Gel Insert
3. TO CHILL the Comfort Gel Insert, PLACE IN FREEZER (for up to 2 hours) or in REFRIDGERATOR (for 2-8 hours.) Once gel has cooled to your preference, remove from cooling source.
  4. Place Comfort Gel Insert onto the floor of the Foot Spa.
  5. Ensure that the unit is unplugged before filling with water.
  6. **CAUTION:** Do not fill **past** Fill line.  Do not use on surfaces that could be damaged by water.
  7. Once the tap water has reached the temperature of your preference, fill the Foot Spa with clean tap water to the designated water level. Overfilling the tub may cause splashing. If you do not want warm water, fill with cool water.  
THE HEAT FUNCTION ON THIS FOOT SPA WILL MAINTAIN WARM WATER TEMPERATURE. IT WILL NOT HEAT COLD WATER. FOR BEST RESULTS FILL WITH WARM WATER.
  8. **CAUTION:** Use caution when carrying unit. Unit can be heavy with water inside.
  9. Place Foot Spa on a dry, level surface that will not be damaged by water should any splashing occur Always be sure that hands are dry before touching power cord or control dial.
  10. Plug the power cord into a household 120-volt outlet.
  11. Set the control dial to the setting of your choice.

The four settings are:

- A. OFF (No massage)
  - B. VIBRATION, HEAT
  - C. WATERFALL & HEAT
  - D. WATERFALL VIBRATION, & HEAT
- The Comfort Gel Insert may be used with each of the above settings, if desired.

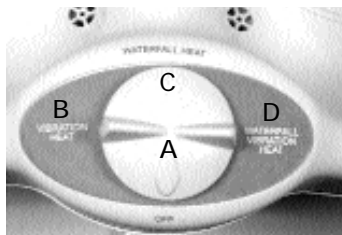

### VIBRATION:

Sends wave after wave of rejuvenating massage to feet.

### HEAT:

Helps to maintain warm water temperature.

### WATERFALL:

Cascade of water.

### COMFORT GEL INSERT:

Cushions and helps relax tired feet in luxurious comfort.

**DO NOT stand on or in appliance.**

 
**Use only while seated.**

# FEATURES - OPERATION


## PEDICURE CENTER

The Pedicure feature of your Foot Spa has 3 attachments: pumice stone, brush & rolling nodes. It can be used any time, by simply placing your foot over the stone/brush/roller and moving it back and forth or as so desired.

1. To use the Pedicure feature:
  - a. Select the attachment which you wish to use.
    - Brush: To gently clean the bottoms of feet.
    - Pumice Stone: To exfoliate dead skin and smooth and soften feet.
    - Massager: For rolling, kneading massage of the feet.
  - b. Place the pedicure attachment on the center fixture by aligning arrow on pedicure attachment to arrow on unit.

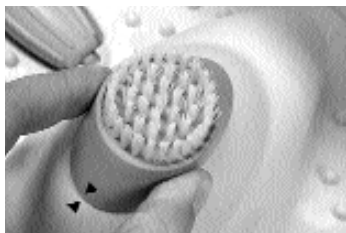


 - c. Gently place your foot over the pedicure attachment and move the foot back and forth, applying pressure as needed. Always begin with gentle pressure, adding more pressure as needed.
2. The Foot Spa has also been designed with Massage Rollers and Acupressure nodes. To enjoy these features, simply move the foot back and forth in the tub, allowing the rollers to knead and massage the feet.

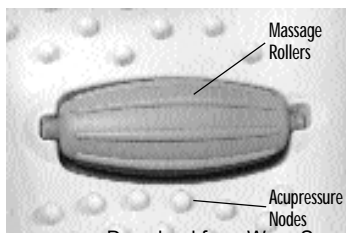

## STORAGE AND CLEANING

 1. To empty, first turn dial to "Off" setting. Ensure hands are dry and unplug from the electrical outlet. Carry spa to sink or tub and tip unit, allowing the water to pour out through the drain spouts in the back end of the spa. Avoid pouring water directly over the control dial.

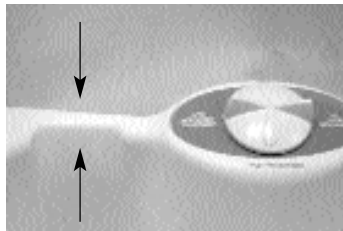

2. To clean body of unit and the gel pack, use a soft, slightly damp and soapy cloth. DO NOT submerge unit in water.
3. Rinse clean.
4. Then wipe with a clean, dry cloth.
5. DO NOT use abrasive cleaners, soaps, brushes, gasoline, kerosene, glass/furniture polish, paint thinner or similar substances to clean the massager and/or gel pack.
6. Store upside down.
7. Store unit in a cool, dry location, out of the reach of children when not in use.
8. Store the power cord without twists and knots.

# WARRANTY INFORMATION

## SERVICE INSTRUCTIONS

1. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
2. If you have any questions regarding this unit's operation or believe any repair is necessary, please call 1-877-207-0923 to speak with a Consumer Service Representative or visit [www.gehousewares.com](http://www.gehousewares.com).
3. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
4. If you have any other questions or comments, feel free to write us:

Consumer Service Department  
P.O. Box 769  
Milford, MA 01757-0769

For your own records, staple or attach your sales receipt to this manual. Also, please take a moment to write the store name/location and date purchased below.

STORE NAME \_\_\_\_\_

LOCATION: \_\_\_\_\_

DATE PURCHASED: \_\_\_\_\_

(STAPLE RECEIPT HERE)

## Two Year Limited Warranty

What does your warranty cover?

- Any defect in material or workmanship.

For how long after the original purchase?

- Two years.

What will we do?

- Provide you with a new one!

How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest WAL/MART store or call Customer Assistance at 1-877-556-0973.

What does your warranty not cover?

- Commercial use.
- Damage from misuse, abuse, or neglect.
- Products which have been modified or incorporated into other products.

What if you purchased this product in Canada and encounter a problem while using it outside the country of purchase?

- The warranty is valid only in the country of purchase and if you follow the warranty claim procedure as noted.



is a trademark of  
General Electric Company  
and is used under the license by  
WAL/Mart Stores

For more information please visit us at [www.walmart.com](http://www.walmart.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>