 

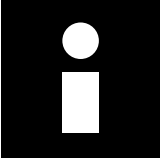 


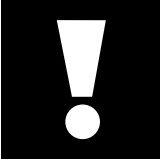


Model: LISR310

Washer

Owner's Manual

	Important Safety Information	2
	Operating Instructions <i>The Controls on Your Washer</i> <i>Other Washer Features</i> <i>Preparing to Wash</i> <i>Care of Product</i>	4
	Helpful Information <i>Specialised Fabric Guide</i>	10
	If Something Goes Wrong <i>Authorised Customer Service Centres</i> <i>Warranty</i>	11

GE Appliances

General Electric Company, Appliance Park, Louisville, KY 40225 USA

175D1807P285

49-90018-1

10-99 JR

Printed in the United States



Important Safety Information

Read all safety information before using



Water Heater Safety

Under certain conditions hydrogen gas may be produced in a water heater that has not been used for two weeks or more. HYDROGEN GAS CAN BE EXPLOSIVE UNDER THESE CIRCUMSTANCES.

If the hot water has not been used for two weeks or more, prevent the possibility of damage or injury by turning on all hot water taps and allow them to run for several minutes before using any electrical appliance which is connected to the hot water system. This will allow any hydrogen gas to escape. Since the gas is flammable, do not smoke or use an open flame or appliance during this process.

SAVE THESE INSTRUCTIONS

 


Warning


To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following sections.

Safety Precautions

- Use this appliance only for its intended purpose as described in this Owner's Manual.
 - Properly ground to conform with all governing codes and ordinances. Follow details in Installation Instructions.
 - Install or store where it will not be exposed to temperatures below freezing or exposed to the weather.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this Owner's Manual or in published user-repair instructions that you understand and have the skills to carry out.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not tamper with the controls.
- Never reach into the washer while it is moving.
- Close supervision is necessary if this appliance is used by or near children or infirm persons. Do not allow children to play inside, on or with this appliance or any discarded appliance. Dispose of discarded appliances and shipping/packing materials properly. Before discarding a washer, or removing from service, remove the washer lid.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) which may ignite or explode. Do not add these substances to the wash water. Do not use these substances around your washer and/or dryer during operation.
- To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the washer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning.
- **NOTE:** Turning the Cycle Selector knob to an off position does NOT disconnect the appliance from the power supply.

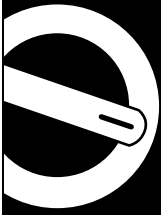

The controls on your washer

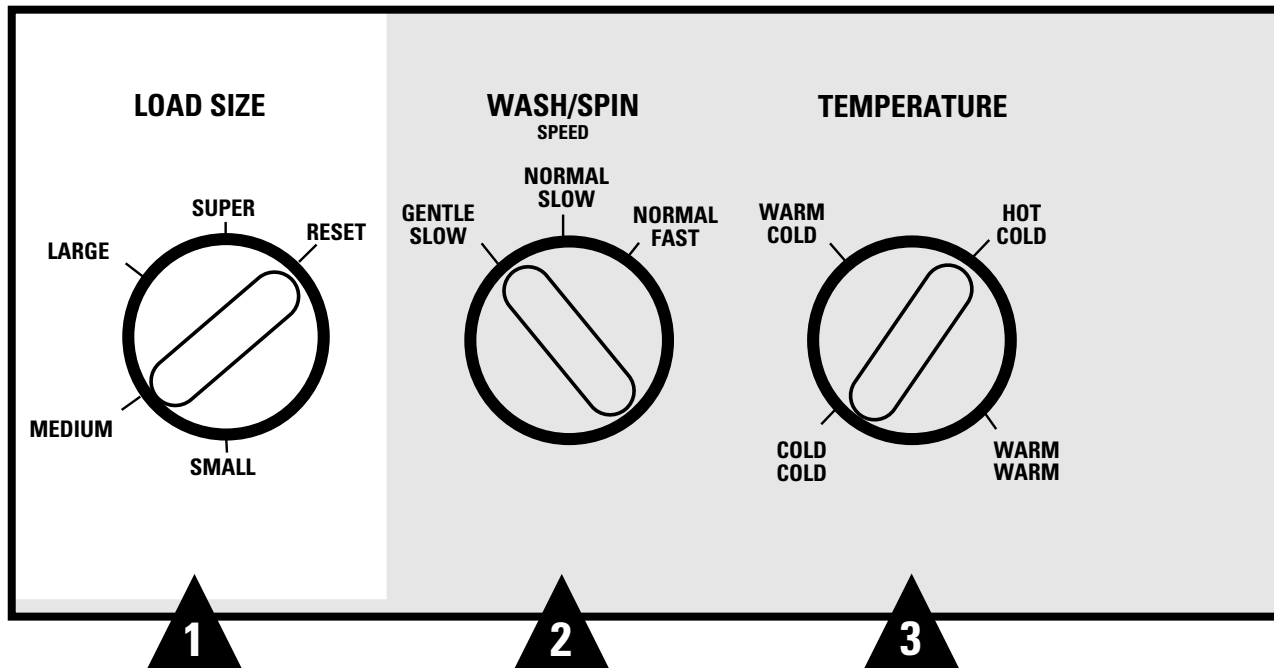 

1 Load Size

By selecting load size, you are setting the water level. For the best results, select a size appropriate for the load you are washing.

Country	Maximum Load Capacity
Australia	7.5 kg

2 Wash/Spin Speed

This refers to the speed of the agitator during the wash and the basket during spin.

With the Normal wash speed the agitator moves faster. Use for cottons, denims and play clothes. With the Gentle wash speed the agitator moves slower. Use for delicate and knit items.

The Fast spin speed is for durable items. The Slow spin speed is for delicate items like sweaters and lingerie. Clothes will be less dry than when using a fast spin speed.

Cycle Descriptions



COTTONS

For normal to lightly soiled cottons, linens, work and play clothes.

EASY CARE

For synthetics and blends with normal soil.

KNITS

Specially designed for normally soiled knits.

DELICATES

 
For lingerie and specialcare fabrics with light to normal soil.

QUICK WASH

For one or two lightly soiled items that are needed quickly.

AUTO SOAK

For heavily soiled clothes with the *HOT-COLD* wash setting. Begins with a brief agitation, soaks for a specified period of time, agitates again, then moves through the rest of the cycle automatically.

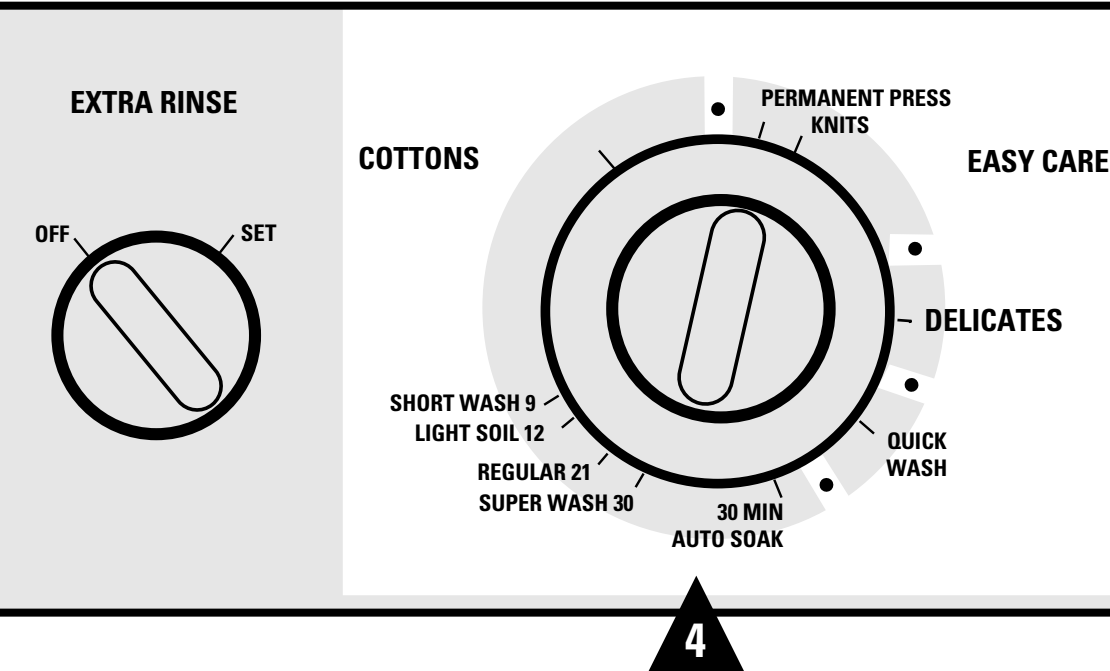

3 Wash/Rinse Temp

Always follow Fabric Manufacturer's Care Label or instructions when laundering. Use this chart as a general guide.

<i>Wash/Rinse Temperature Guide</i>		
	wash temperature	rinse temperature
COTTONS WHITE	hot	cold
COTTONS COLORS	warm	cold
PERMANENT PRESS	warm	cold
DELICATES	cold	cold
WASHABLE WOOLENS	warm	warm

For information on fabric care for specialty items see the Specialty Care Guide.

4 Selecting Cycle/Starting Washer

- Push in the Cycle knob to select the desired cycle. See the above Cycle Descriptions.
- Add detergent.
- Add clothes and close lid.
- Pull out the Cycle knob to start washer.

 
See next page for other washer features



Operating Instructions

Other washer features your model may have

Extra Rinse

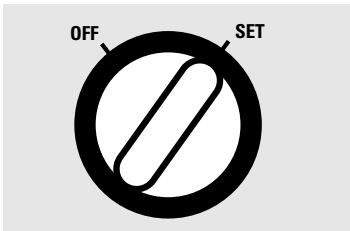


When you use extra detergent or bleach to clean heavily soiled clothes, you may want to use the Extra Rinse option. This option provides a second deep cold rinse in the Cottons Regular cycle. Turn the Extra Rinse knob to SET.

The washer will pause for a few minutes before the Extra Rinse option begins.

Lint Filter

The lint filter is located under the agitator. It is self-cleaning and requires no maintenance.

 Liquid Bleach Dispenser

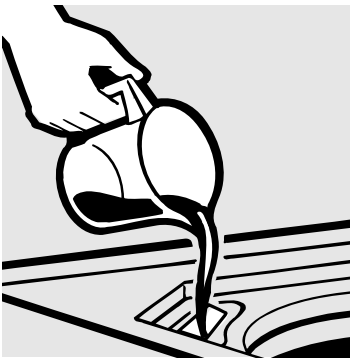

Pour liquid bleach into bleach dispenser

 
This dispenser dilutes liquid chlorine bleach before it reaches into your wash load. To use, follow these steps:

- 1 Check clothing care labels for special instructions.
- 2 Measure liquid bleach carefully, following instructions on bottle.
- 3 Before starting the washer, pour measured amount of bleach directly into bleach dispenser. Avoid splashing or over-filling dispenser.

NOTE:

- **Never pour undiluted liquid chlorine bleach directly onto clothes or into the wash basket.**
- **Do not pour powdered bleach into bleach dispenser. If you prefer to use powdered bleach, pour it into the wash basket with your detergent.**

Agitator Cap

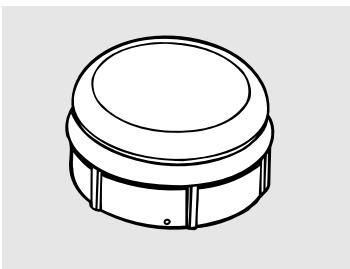

This cap fits into the top of the agitator. If it accidentally comes off, simply put it back on.



Do not pour anything into the agitator if the top is removed



Fabric Softener Dispenser



Pour liquid fabric softener and water into fabric softener dispenser

This dispenser automatically releases liquid fabric softener at the proper time during the cycle. To use, follow these steps:

- 1 Make sure dispenser is securely attached to agitator.
- 2 Pour liquid fabric softener into dispenser, using amount recommended on package.
- 3 Add water to dispenser until it reaches the maximum fill line.

 
NOTE:

- **Do not stop the washer during the first spin. This will cause the dispenser to empty too soon.**
- **Do not use the Fabric Softener Dispenser with the Auto Soak.**
- **Never pour fabric softener directly on clothes. It will leave spots on clothes.**
- **Only use dispenser for liquid fabric softeners. If dispenser gets clogged, see Cleaning section below.**



Do not pour anything into the agitator if the top is removed

Cleaning Fabric Softener Dispenser

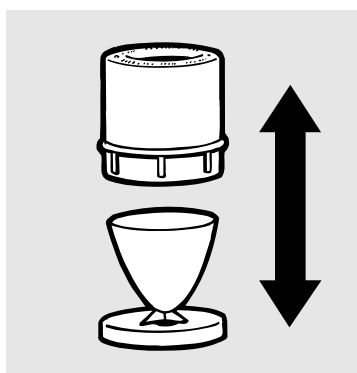

Separate for cleaning

- 1 Remove the dispenser from the top of the agitator.
- 2 Separate the dispenser cup from the cover by grasping the top and pushing down on the inside of the cup with your fingers. Dispenser cup will pop free from the cover.
- 3 To clean dispenser, soak both the dispenser cup and the dispenser cover in a solution of warm water and liquid detergent.
- 4 If necessary, loosen build-up with a clean, soft cloth after soaking. Do not use a stiff brush; you may roughen the surface of the dispenser.
- 5 Rinse and reassemble dispenser. Place dispenser back on the agitator.



Operating Instructions

Preparing to Wash

Sort

Always follow Fabric Manufacturer's Care Label when laundering.

Sort by color

(Separate colorfast from non-colorfast fabrics*)

- Whites
- Lights
- Darks

Separate by fabric type

- Cottons and linens
- Permanent press cottons and blends
- Synthetic and poly knits
- Delicates

Separate lint producers from lint collectors

- Lint producers: terry cloth and chenille
- Lint collectors: velveteen and corduroy

Sort by soil

- Light
- Medium
- Heavy

**Non-colorfast fabrics may bleed or fade. Sort by individual color.*

Detergent

Always add detergent before adding clothes so that the detergent can work effectively.

Using the correct amount of detergent is one of the most important things you can do to make sure your wash comes out clean. Always follow the detergent package directions.

Using too little detergent is a common cause of laundry problems. Use more detergent if you have hard water, large loads, greasy or oily soils or lower water temperature.



Load

Load dry items loosely, spacing evenly around agitator, and close the lid.

A typical wash load: two twin sheets, two tablecloths, four collared shirts, three pillow cases, three small bath towels, three t-shirts, and three pairs of shorts.

Place large items in bottom, small items in the middle and medium items on top.

When loading wet items make sure you set the load/water level high enough to allow the items to move freely.

Wash bulky items like blankets separately.

To add items after washer has started, push in Cycle knob and submerge additional items next to the agitator. Close the lid and pull Cycle knob out to restart.

 
To reduce wrinkling, give permanent press items, synthetics and poly knits room to move freely in the washer.

NOTE:

- **Do not wrap large items like sheets around the agitator.**
- **Do not wash fabrics containing flammable materials (waxes, cleaning fluids, etc.) in your washer.**

Care & Cleaning

The Washer

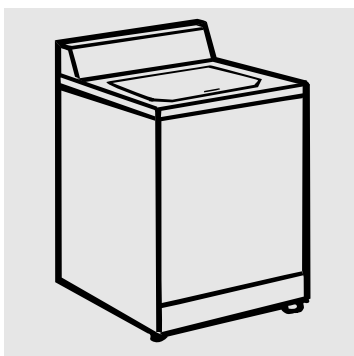

Leave the lid open after washing to allow moisture to evaporate. The wash basket is practically care free.

If you want to clean the washer use a clean soft cloth dampened with liquid detergent, then rinse. (Do not use harsh or gritty cleaners.)

Fill Hoses—Hoses connecting washer to faucet should be replaced every five years. *Maximum pressure and temperature:* 10 bar at 25°C., 1.5 bar at 60°C.

Drain Hose—*Maximum pressure and temperature:* 1.5 bar at 60°C.

Moving and Storage—Ask the service technician to remove water from drain pump and hoses. Contact your local distributor for information on how to keep the tub stationary when moving the washer.

Long Vacations—Be sure water supply is shut off at taps. Drain all water from hoses if weather will be below freezing.



Helpful Information

Specialty Care Guide

Always follow Fabric Manufacturer's Care Label or instructions when laundering. Otherwise use the information below as a general guide.

Item	Suggested Care
Down-Filled Garments	Always wash down-filled garments separately from other types of garments. Wet down gives off an odor that will disappear when the down is dried. Wash down items frequently to fluff up the down and to retain down's warmth. When washing make sure the load is balanced. Add towels if necessary. Always tumble-dry down garments.
Pillows	Pillows are made from a variety of materials. Wash only if recommended on the Pillow Manufacturer's Care Label. Before washing check pillows for weak seams or holes, and mend. Let the washer fill with water and add detergent. Let the washer agitate for several minutes and then add pillows in pairs. This will keep the load balanced. Use the largest load/water level available.
Blankets	Let the washer fill with water, add detergent, allow detergent to dissolve, then add blanket. Wash only one blanket at a time.
Permanent Press Clothes that are Line Dried	Select a larger load/water level than normal. This will provide more water to help reduce wrinkling and to allow clothes enough room to move around. Remove clothes as soon as the wash cycle is complete and hang them up immediately.
Heavy Loads	<p>The SUPER WASH cycle is specifically designed for heavily soiled loads that require extra long washer periods.</p> <p>For optimum performance from the machine, we recommend the following:</p> <ul style="list-style-type: none">• For heavily soiled clothes, use the REGULAR wash cycle.• For lightly soiled clothes, use the LIGHT SOIL wash cycle.• For a small amount of lightly soiled clothes, the QUICK WASH cycle is recommended. This allows you to wash up to 3 kg of lightly soiled clothing in a shorter period of time. <p>For best overall results, the mechanical attributes of this washing machine will be enhanced by the correct usage of detergents and other laundry aids, and you should always follow the manufacturer's instructions.</p> <p>Further detailed information on the correct usage of detergents is available from Major Electrical Appliances at 02-8825-9444.</p>

If Something Goes Wrong



Problem	Possible Causes	What to Do
Washer Won't Operate	Washer is unplugged	<ul style="list-style-type: none">• Make sure cord is plugged securely into a working outlet.
	Water supply is turned off	<ul style="list-style-type: none">• Turn both hot and cold taps fully on.
	Controls are not set properly	<ul style="list-style-type: none">• Check controls and make sure Cycle knob is pulled out to an on position.
	Lid is open	<ul style="list-style-type: none">• Close lid and pull Cycle knob out to an on position.
	Circuit breaker/fuse is tripped/blown	<ul style="list-style-type: none">• Check house circuit breakers/fuses. Replace fuses or reset breaker. Washer should have separate outlet.
Water Temperature is Incorrect	Control is not set properly	<ul style="list-style-type: none">• Check water temperature control and adjust.
	Water supply is turned off or improperly connected	<ul style="list-style-type: none">• Turn both hot and cold taps fully on and make sure hoses are connected to correct taps.
	Water valve screens are stopped up	<ul style="list-style-type: none">• Turn off the water source and remove the water connection hoses from the upper back of the washer. Use a brush or toothpick to clean the screens in the machine. Reconnect the hoses and turn the water source back on.
	House water heater is not set properly	<ul style="list-style-type: none">• Make sure house water heater is delivering water at 48°C.–65°C. (120°F.–150°F.).
Water Won't Drain	Drain hose is kinked or improperly connected	<ul style="list-style-type: none">• Straighten drain hose and make sure washer is not sitting on it.• Top of drain outlet should be less than 1m (3 ft.) above floor.



If Something Goes Wrong

Problem	Possible Causes	What to Do
Water Leaks	Fill hoses or drain hose is improperly connected	<ul style="list-style-type: none">• Make sure hose connections are tight at taps and make sure end of drain hose is correctly inserted in and secured to drain facility.
	Household drain may be clogged	<ul style="list-style-type: none">• Check household plumbing. You may need to call a plumber.
	Constant water pressure to the fill hoses at the water source	<ul style="list-style-type: none">• Tighten hoses at the taps and turn the water off after each use.• Check condition of the fill hoses; they may need replacement after 5 years.
Washer is Noisy	Washer is uneven	<ul style="list-style-type: none">• Make sure washer is level and firm to the floor.
	Washer load is unbalanced	<ul style="list-style-type: none">• Push the Cycle knob in to stop the washer, open the lid and redistribute the load evenly. Close the lid and restart.
	Shipping rod has not been removed	<ul style="list-style-type: none">• Remove the shipping rod on the bottom right side of the washer just before sliding the washer in place. Do not use the washer with the shipping rod in place.
	Water is draining	<ul style="list-style-type: none">• There will be a gurgling, “sucking” sound prior to the spin cycle. This is normal and will stop as soon as the machine goes into the spin cycle.
Washer Pauses in Cycle	The washer normally pauses between washing steps	
Clothes too Wet	Incorrect cycle selected	<ul style="list-style-type: none">• Make sure the cycle selected matches the load you are washing.
	This is normal for some fabrics	



Problem

Possible Causes

What to Do

Lint or Residue on Clothes

Incorrect sorting	<ul style="list-style-type: none">• Separate lint producers from lint collectors.
Washing too long	<ul style="list-style-type: none">• Wash small loads for a shorter time than larger loads.
Detergent not dissolving	<ul style="list-style-type: none">• For best performance always add detergent before adding clothes. If you use powdered detergent, pre-dissolve detergent in hot water before adding to washer.• Try a liquid detergent.• Use warmer water temperature.
Overloading	<ul style="list-style-type: none">• Make sure load/water level setting matches load size.
Too much bleach	<ul style="list-style-type: none">• Check bleach package for correct amount.
Not enough detergent	<ul style="list-style-type: none">• Try using more detergent.
Incorrect use of fabric softener	<ul style="list-style-type: none">• Check fabric softener package for instructions (see Fabric Softener Dispenser section).

Wrinkling

Improper loads	<ul style="list-style-type: none">• Avoid mixing heavy items (like work clothes) with light items (like blouses).• Separate permanent press from other laundry.• Try a fabric softener.
Overloading or incorrect water level	<ul style="list-style-type: none">• Load your washer so clothes have enough room to move freely.
Incorrect wash and dry cycles	<ul style="list-style-type: none">• Match Cycle selection to the type of fabric you are washing (especially for permanent press loads).
Repeated washing in water that is too hot	<ul style="list-style-type: none">• Wash in warm or cold water with plenty of detergent.



If Something Goes Wrong

Problem	Possible Causes	What to Do
Snags, Holes, Tears, Rips, or Excessive Wear	Pins, snaps, hooks, sharp buttons, belt buckles, zippers, and sharp objects left in pockets	<ul style="list-style-type: none">• Fasten snaps, hooks, buttons, and zippers.• Remove loose items like pins, objects in pockets and sharp buttons.• Turn knits (which snag easily) inside out.
	Undiluted chlorine bleach	<ul style="list-style-type: none">• Check bleach package instructions for proper amount.• Never add undiluted bleach to wash or allow clothes to come in contact with undiluted bleach.
	Small tears or holes present before wash	<ul style="list-style-type: none">• Repair tears and holes before washing.
	Chemicals like hair bleach, hair dye, permanent wave solution and toilet bowl cleaners	<ul style="list-style-type: none">• Rinse items that may have chemicals on them before washing.
	Permanent press items naturally fray (especially collars and cuffs)	<ul style="list-style-type: none">• While this is not caused by the washer, you can slow the fraying process by washing small permanent press loads with a higher load/water level setting.• Avoid washing heavy items (like towels) with permanent press items.
Shrinkage	Some fabrics will naturally shrink in the wash	<ul style="list-style-type: none">• Hot water is more likely to cause shrinkage than cold water.• Follow directions on fabric care label.

<i>Problem</i>	<i>Possible Causes</i>	<i>What to Do</i>
Grayed Clothes	Not enough detergent (larger loads, heavy soil, and hard water might require more detergent)	<ul style="list-style-type: none"> • Try using more detergent (especially with larger loads). • If you live in a hard water area try using a water conditioner or install a water softener.
	Water is not hot enough	<ul style="list-style-type: none"> • Make sure water heater is delivering water at 48°C.-65°C. (120°F.-150°F.). • Do not use the washer when hot water is used for other needs (dishes, baths, etc.).
	Washer is overloaded	<ul style="list-style-type: none"> • Make sure load/water level setting matches load size.
	Soak time is too short	<ul style="list-style-type: none"> • Soak at least 30 minutes.
	Soaking with too little detergent	<ul style="list-style-type: none"> • Use more detergent (especially with heavy soil).
	Detergent is not dissolving	<ul style="list-style-type: none"> • Add detergent as wash basket fills with water before you load clothes.
	To restore grayed clothes, try one of the following	<ul style="list-style-type: none"> • Put clothes through a wash cycle using hot water. (Check the garment’s manufacturing care label to see if hot water can be used.) Add a non-precipitating water softener. Use 2 1/2 times more than is recommended for normal water softening. Do not use detergent or soap. Allow clothes to go through a complete cycle. Repeat if necessary. • Soak your clothes using a water softener instead of a soaking agent. Allow clothes to soak for about 20 minutes.



If Something Goes Wrong

Problem	Possible Causes	What to Do
Yellowed Clothes	Not enough detergent on a consistent basis	<ul style="list-style-type: none">• Always use the recommended amount of detergent.
	Chlorine bleach may yellow some fabrics	<ul style="list-style-type: none">• Use non-chlorine bleach.
	Iron or manganese in water may cause yellowing or yellow spots	<ul style="list-style-type: none">• Use extra detergent plus a non-precipitating water softener dissolved in water and non-chlorine bleach.• Run hot water for 2 minutes to help the pipes clean out iron buildup.• Drain your house water heater occasionally.• To remove spots spread stain area over a pan of boiling water and squeeze lemon juice through the stain.
Blue or Gray Spots	Incorrect use of fabric softener	<ul style="list-style-type: none">• Check fabric softener package for instructions (see Fabric Softener Dispenser section).• To remove spots dampen the spots and rub with undiluted liquid detergent. Rewash, using chlorine bleach if it is safe for the fabric.
Too Many Suds	Type of detergent	<ul style="list-style-type: none">• Switch to a lower sudsing detergent brand and follow instructions on package.
	Very soft water	<ul style="list-style-type: none">• Try less detergent.
Pilling	Result of normal wear on poly-cotton blends	<ul style="list-style-type: none">• While this is not caused by the washer, you can slow the pilling process by washing poly-cotton blends inside out.



Authorised Service Centres



MAJOR ELECTRICAL APPLIANCES PTY. LTD.

AUTHORISED GENERAL ELECTRIC AND MAJOR ELECTRICAL APPLIANCES REPAIR CENTRES

For Service to your GE Appliance, contact an Authorised Customer Service Centre listed in this directory.

The directory shows, by State, the Authorised Centres under the alphabetical order of localities within which they operate.



New South Wales

ALBURY

Aldonga Electrical Service
5/94 Hovell Street
02 6021 6811
MW, SA, WM, DW, CE, RH, VC, HT, CD

ALBURY WODONGA

D & Y Domestic Appliance Repairs
846 Knight Road Lavington
02 6025 3385
RF, WM, DW, RH, WD, VC, CD

ARMIDALE

Armidale Glen Obrien Washing & Refrigeration
13 Hawthorne
02 6772 7048
RF, RC, WM, CE, RH, CD

ARMIDALE

Grant Pearson
72A Markham Street
02 6772 2277
MW, RF, SA, RC, WM, DW, CE, RH, VC, HT, CD

ARMIDALE

Spark & Co.
152 Rusden Street
02 6772 3715
MW, RF, RC, WM, DW, CE, CG, RH, WD, VC,
HT, CD

BALLINA

Ballina Appliances
15 Kerr Street
02 6686 5453
RF, RC, WM, DW, CE, RH, WD, VC, HT, CD

BALLINA

Stammers Appliance Service
1 Hogan Street
02 6686 7297
RF, RC, WM, DW, CE, RH, WD, CD

BATEMANS BAY

Weston Electrofix
1/5 Sharon Road
02 4472 6134
MW, RF, SA, WH, DW, CE, RH, VC, CH

BATEMANS BAY

Bryans Appliance Service
Lot 42 Kylie Crescent
02 4472 4981
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

BATHURST

Serv U Appliances
107 George Street
02 6331 1356
MW, RF, SA, WM, DW, RH, VC, CD

BERRIDALE

Berridale Appliances
C/O Ampol Garage
02 6456 5003
MW, SA, WM, CE, CG, RH, WD, VC, HT, CD

BROKEN HILL

Anthony Trappel Refrigeration
407 Chaple Lane
08 8088 1671
RF, RC, WM, CD

BYRON BAY

Byron Appliances Repairs
3/22 Acacia Street
02 6685 7447
MW, RF, RC, WM, DW, CE, CG, RH, WD, VC,
HT, CD

CANOWINDRA

Trudgen Repairs
30 Batchford Street
02 6344 1214
RF, SA, RC, WM, DW, VC, HT, CD

CASINO

T & B Moston Home Appliance Repairs
152 West Street
02 6662 2537
RF, RC, WM, DW, CE, RH, CD

CESSNOCK

Cessnock Electrical
38 North Street
02 4990 1058
MW, RF, RC, WM, DW, CE, CG, RH, WD, VC,
HT, CD

CESSNOCK

Coalfields Home Appliance Repairs
150 Vincent Street
02 4990 6757
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

CHINDERAH

A.C. Refrigeration Service
16 Chinderah Bay Drive
02 6674 1550
RC, WM, CD

CLOTHIERS CREEK

Tweed Coast Appliance Repairs
1059 Clothiers
02 6677 7489
MW, WM, DW, CE, RH, WD, VC, HT, CD

COFFS HARBOUR

Coffs Harbour Appliance Service
4/1 Cook Drive
02 6652 5087
MW, RF, SA, RC, WM, DW, CE, CG, RH, VC,
HT, CD

TOORMINA

Reg Wooderson Appliance Repairs
3/36 Hulberts Road
02 6653 3581
MW, RF, RC, WM, DW, CE, RH, WD, VC, CD

COOMA

Cooma Appliance Repairs
1 Egan Lane
02 6452 4940
MW, WM, DW, CE, RH, VC, HT, CD

COONAMBLE

Des Bye Radio & TV
34 Castlereagh
02 6822 1502
MW, RF, WM, DW

COWRA

Lachlan Valley Refrigeration
57 Kendall Street
02 6342 2821
MW, RF, SA, RC, WM, DW, CE, RH, VC, HT, CD

COWRA

Neil Stevenson Washer & Dishwasher
5 Dungowan Street
02 6342 1860
MW, SA, WM, DW, CE, RH, WD, VC, HT, CD

DAPTO

Henk's Appliance Service
149 Laver Road
02 4261 3227
RF, RC, WM, DW, CE, RH, WD, VC, HT, CD

DUBBO

Macquarie Appliance Service
12 Young Street
02 6884 4183
MW, RF, SA, RC, WM, DW, CE, CG, RH, HT, CD

DUBBO

Mid State Washers Service
5 Hopkins Parade
02 6882 4821
MW, RF, SA, WM, DW, RH, VC, HT, CD

DUNGOG

Domestic & Rural Service
56 Dowling Street
02 4992 3110
MW, SA, WM, CE, RH, CD

FORBES

Rob Willis Appliance Centre
64 Templar Street
02 6852 3009
RF, RC, WM, DW, CE, RH, WD, HT, CD

FORSTER

Germon Electrics
7/5 Kularoo Drive
02 6554 8538
MW, RF, WM, DW, CE, CG, RH, VC, CD

GLOUCESTER

Bucketts Way Electrical
68 Church Street
02 6558 1503
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

18 Legend = MW = Microwave RF = Refrigeration SA = Small Appliances WM = Washing Machines DW = Dishwashers RH = Range Hoods
VC = Vacuum Cleaners CD = Clothes Dryers CE = Cooking Electric CG = Cooking Gas RC = Air Conditioning HT = Room Heater

CENTRAL COAST

GOSFORD

Central Appliances
2-12 Grieve Cl.
02 4324 2900
MW, RF, RC, WM, DW, CE, CG, RH, WD, VC,
CD, SCH

GOULBURN

Electrix Plus
74 Verna Street
02 4822 1359
MW, RF, WM, DW, CE, RH, CD

GOULBURN

C.J.B. Electrics
59 Citizen Street
02 4821 7755
MW, RF, RC, WM, DW, RH, CD

GOULBURN

White Washer Repair
50 Mary Street
02 4821 2816
WM, DW, CD

GRAFTON

Big River Appliance Repairs
53 Armidale Street
02 6643 2722
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

GRAFTON

Repairs & Spares
140 Fitzroy Street
02 6642 1911
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

GRIFFITH

Wade Service Centre
132 Yambil Street
02 6962 3932
MW, RF, WM, DW, CE, CG, RH, WD, CD

GRIFFITH

Griffith Home Appliance Service
94/98 Yambil Street
02 6962 1826
RF, RC, WM, DW, CE, CG, RH, WD, VC, HT, CD

GUNNEDAH

T.F.E. Technacom
82-84 Conadilly
02 6742 0022
MF, RF, RC, WM, CD

GUNNEDAH

Gunnedah Refrigeration
122 Barber Street
02 6742 3314
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

INVERELL

Inverlec Repairs
1/14 Sweaney Street
02 6722 4522
MW, RF, WM, DW, CE, CG, RH, WD, VC, HT, CD

JINDABYNE

Jindabyne Refrigeration
2 Camira Ave
02 6456 2231
RF, RC

KEMPSEY

Chris Conn Electrics & Appliances
31 Forth Street
02 6563 1998
RF, RC, WM, DW, CE, RH, CD

KIAMA

Lou's Appliances
2/66 Manning Street
02 4232 3525
MW, RF, SA, WM, DW, CE, RH, WD, VC, HT, CD

KURRAJONG

Denmeade Appliance Service
315 Comleroy Road
02 4573 1912
MW, RF, WM, DW, CE, CG, RH, WD, HT, CD

KURRAJONG

Domestics Automatics
Lot 7 Cedar Ridge Road
02 4576 1287
RF, RC, WM, DW, CE, RH, WD, HT, CD

LEETON

Leeton Appliance Service Centre
99 Grevillia Street
02 6953 4151
MW, SA, WM, DW, CE, CG, RH, VC, HT, CD

LISMORE

GOONELLABAH
Wilson's Washing Machine & Refrigeration
1/10 Centenary
02 6624 5220
RF, RC, WM, DW, CE, RH, VC, CD

LITHGOW

P & L Lawrence
235 Main Street
02 6351 2526
MW, RF, SA, RC, WM, WD, CE, CG, RH, WD, HT

MAITLAND

W Flaks & Son's
3/6 Johnson Street
02 4932 0055
MW, RF, SA, RC, WM, WD, CE, CG, RH, WD,
HT, CD

MERIMBULA

Merimbula Appliances
24 Antawangal
02 6495 1539
MW, SA, WM, DW, CE, RH, CD

MERIMBULA

Stephen's Appliances & Refrigeration
8 View Pde
02 6495 2424
RF, RC, WM, DW, CE, RH, WD, CD

MOLLYMOOK

Bendalong Ulladulla Appliance Service
33 Buchan Street
02 4455 2683
RF, WM, DW, CE, RH, CD

MOREE

Yates Refrigeration
438 Frome Street
02 6752 1867
RF, RC

MOREE

Barry Mowle Electrical Repair
44 Tycannah
02 6752 1672
MW, SA, WM, DW, CE, VC, HT, CD

MOSS VALE

Delvac Appliance Service
264 Argyle Street
02 4868 1228
WM, DW, CD

MOSS VALE

AYS APPLIANCE REPAIRS
8 Simon Place
02 4869 1451
RF, RC, WM, DW, CE, VC, HT, CD

MUDGEES

Mudgee Appliance Centre
67 Perry Street
02 6372 2492
RF, SA, WM, DW, CE, RH, WD, VC, HT, CD

MULLUMBIMBY

Brunswick Valley Refrigeration
52 Argyle Street
02 6684 2998
RF, RC, WM, DW, CD

MURWILLUMBAH

Neates Appliances
11 Commercial Road
02 6672 2477
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

New South Wales (cont'd)

MUSWELLBROOK

Warren L Ward Refrigeration
20 Queen St
02 6543 2404
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

NARELLAN

All Domestic Appliance Repairs
4/10 Graham Hill Road
02 4648 2309
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

NAROOMA

Werner Gross Appliances
121 Old South Coast Road
02 4476 4447
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

NEWCASTLE

ANNA BAY

Berry Refrigeration & Electrical
14 Port Stephens Drive
02 4981 9330
MW, RF, WM, DW, CE, CG, RH, WD, CD

BELMONT

Newcastle Whitegoods
5/468 Pacific Highway
02 4947 7413
MW, WM, DW, CE, CG, RH, RF, CD

MEDOWIE

Medowie Refrigeration
25 Hakea Pde
02 4982 9552
MW, RF, RC, WM, DW, CE, CG, RH, VC, HT, CD

ORANGE

All Electrical Services
Rear 197 Byng Street
02 6361 3533
RF, WM

ORANGE

Central West Appliance Service
22 Lords Place
02 6361 7035
RF, WM, DW, CE, RH, VC, HT

ORANGE

Orange Refrigerators & Washing Machine
159 Piesley Street
02 6362 9364
MW, RF, RC, WM, DW, CE, CG, RH, WD, VC,
HT, CD

NOWRA

ORANGE

Academy Appliances
76 Molong Road
02 6363 1800
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

EROWAL BAY

T & S Appliance Repairs
19 Second Ave
02 4443 7102
RF, WM, DW, CE, CG, CD

PARKES

Wilson's Service Centre
98 Clarinda Street
02 6862 6261
MW, SA, WM, DW, CE, RH, WD, VC, HT, CD

PORT MACQUARIE

Mid Coast Appliance Service
Shop 12 Shores City
02 6584 2433
MW, RF, WM, DW, CE, RH, WD, CD

PORT MACQUARIE

New Port Appliance Service
8/19 Central Road
02 6581 1088
MW, RF, RC, WM, CE, RH, VC, HT, CD

POTTSVILLE BEACH

Elfran Refrigeration Service
7 Elfran Ave
02 6676 1010
RF

SCONE

F & LB Ward & Son
4 Scott Street
02 6545 2136
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC, HT

SINGLETON

Electrical Repairs & Spairs
1 Pitt Street
02 6571 1633
MW, RF, RC, WM, DW, CE, CG, RH, WD, VC,
HT, CD

SYDNEY

WETHERILL PARK

All General White Goods
4/11 Hallstrom
02 9756 1511
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, SCH

TAMWORTH

Lysaghts Refrigeration & Air Conditioning
18 Belmore
02 6765 9921
MW, RF, RC, WM, DW, CE, CG, RH, WD, VC,
HT, CD

TAMWORTH

Tamworth Electrical
214 Bridge Street
02 6765 8509
RF, RC

TAREE

G & C Ross Appliances
4/8 Grey Gumroad
02 6552 6388
RF, RC, WM, DW, CE, CG, RH, WD, VC, HT,
CD

TEMORA

Gilchrist
288 Hoskins Street
02 6977 1666
RF, WM

TENTERFIELD

Berryman Electrical Center
257-259 Rouse Street
02 6736 1259
MW, RF, WM, DW

TWEED HEADS

Nelson Appliance Spares
59 Boyd Street
07 5536 3711
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC, HT

WOLLONGONG

ALBION PARK

Prime Appliance Service
61 Cawdell
02 4256 1088
MW, RF, WM, DW, CE, RH, CD

CORRIMAL

Baumann Appliances
3/261 Princes HWY
02 4284 9078
MW, RF, WM, DW, CE, CG, RH, VC, CD, SCH

DAPTO

Henk's Appliance Service
149 Laver Road
02 4261 3227
RF, RC, WM, DW, CE, RH, WD, VC, HT, CD

WOONONA

Wollongong Gas Service
2 Linda Place
02 4284 5393
CG

WAGGA

B & W Appliance Service
2/7 Copland Street
02 6921 1025
MW, RF, WM, DW, CE, CG, RH, WD, VC, HT, CD

YAMBA

Yamba Electrical
10 Treelands Drive
02 6646 2699
MW, RF, SA, RC, WM, DW, CE, RH, WD, HT, CD

20 Legend = MW = Microwave RF = Refrigeration SA = Small Appliances WM = Washing Machines DW = Dishwashers RH = Range Hoods
VC = Vacuum Cleaners CD = Clothes Dryers CE = Cooking Electric CG = Cooking Gas RC = Air Conditioning HT = Room Heater

YOUNG

J & R Hobson
16 Lovell
02 6382 1167
MW, RF, SA, WM, DW, CE, CG, RH, VC, HT, CD

Queensland

ATHERTON

Atherton Appliance Service
44 Loder Street
07 4095 3483
RF, WM, DW, CE, RH, CD

ATHERTON

McMahons Electrical
23 Mabel Street
07 4091 1788
MW, RF, RC, WM, DW, CE, RH, VC, HT, CD

AYR

Coral Coast Electrical
133A Edward Street
07 4783 4711
SA, WM, DW, CE, RH, WD, VC, CD

AYR

Delta Electrix
East End Centre
07 4783 1566
MW, RF, RC, WM, DW, CE, CG, RH, WD, CD

AYR

John Pitcher
30 Graham
07 4783 3410
RF, RC

BEAUDESERT

Wilcox Electrical
41 Duckett
07 5541 1440
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD, SCH

BILOELA

Wayne Kirwan Appliance Repairs
5 Washpool Street
07 4992 2566
MW, RF, RC, WM, DW, CE, RH, VC, HT, CD

BOONAH

C.G. & L.E. Parker Refrigeration
Lot 6 Hoya Road
07 5463 1639
RF, SA, RC, WM, CE, RH, WD, VC, HT, CD

BOWEN

Snells Electrical
14 Gregory
07 4786 1686
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

BRISBANE

FORTITUDE VALLEY

Endeavour Refrigeration & Appliance Service
167 Robertson
07 3872 7444
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, SCH

BUDDINA

North Coast Appliance Specialist
96 Nicklin Way
07 5493 8933
MW, RF, SA, WM, DW, CE, RH, WD, VC, HT, CD

BUNDABERG

Bundaberg Appliance Service
1 Tomlinson Street
07 4153 1700
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

BUNDABERG

Digger Thiele Electrical
37 Perry Street
07 4152 1522
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

BUNDABERG

Wide Bay Refrigeration
66 Targo Street
07 4153 1272
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

CAIRNS

Your Appliance Service
212 McCormack
07 4053 1031
MW, RF, RC, WM, DW, CE, RH, WD, VC, HT,
CD, SCH

CALOUNDRA

Barkers Refrigeration & Airconditioning
4 Allen Street
07 5491 2277
RF, RC

CALOUNDRA

Kerrs Electrical
47 Caloundra Road
07 5491 2188
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

CANNONVALE

Dial-a-leckie Electrical Services
28 William Murry Drive
07 4946 6777
RF, RC, WM, DW, CE, RH, WD, HT, CD

CAPELLA

Capella Electrical
68 Ruby Vale Road
07 4984 9288
RF, RC, WM, DW, CE, VC, HT, CD

CARINDALE

Advance Appliance Repairs
17 Glenlinton Street
07 3843 3441
MW, RF, SA, RC, WM, DW, CE, RH, VC, HT, CD

CHINCHILLA

Weirs Refrigeration
84 Hypatia Street
07 4662 7566
RF, RC, WM, DW, RH, CD

DALBY

R. G. Gow Refrigeration
Cnr North & Pratten
07 4662 1547
RF, RC, WM, DW, CE, RH, CD

EMERALD

Harmers Electrical
24 Edgerton
07 4982 1344
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

GATTON

Aussie Air Care
37 Weston Drive
07 5462 4500
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD, SCH

GATTON

Gatton Appliance Repairs
56 Princess Street
07 5462 2245
WM, DW, CE, RH, WD, VC, HT, CD

GLADSTONE

Turnbulls Electrical
172 Auckland Street
07 4972 5369
MW, RF, SA, WM, DW, CE, RH, VC, HT, CD

GOLD COAST

SOUTHPORT

Appliance World
86 Minnie Street
07 5532 7480
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD, SCH

SOUTHPORT

David McKay
5 Maid Street
07 5591 2208
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD, SCH

GOONDAWINDI

Stratfords Appliance Service Pty Ltd
142 Marshall Street
07 4671 4330
RF, RC

Legend = MW = Microwave RF = Refrigeration SA = Small Appliances WM = Washing Machines DW = Dishwashers RH = Range Hoods
VC = Vacuum Cleaners CD = Clothes Dryers CE = Cooking Electric CG = Cooking Gas RC = Air Conditioning HT = Room Heater

Queensland

GYMPIE

Deens Electrical
11 Stewart Tce
07 5482 2366
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

GYMPIE

Ron McClintock Electrical
6 Mt. Pleasant
07 5482 7522
MW, RF, WM, DW, CD

INGHAM

Bissons Electrical
101 Cartwright
07 4776 1365
RF, SA, RC, WM, DW, CE, RH, VC, HT, CD

INGHAM

Donadels Electrical & Refrigeration
21 Garbutta
07 4776 3241
RF, SA, RC, WM, DW, CE, CG, RH, WD, VC,
HT, CD

INNISFAIL

Innisfail Refrigeration Airconditioning
36 Badilla
07 4061 3647
RF, RC

INNISFAIL

Innisfail Appliance Spares
51 Ernest Street
07 4061 4281
SA, WM, DW, CE, RH, WD, VC, HT, CD

IPSWICH

R.T. Edwards & Sons
Marsden Parade
07 3281 4133
MW, RF, SA, RC, WM, CE, RH, WD, VC, HT,
CD, SCH

KINGAROY

Kingaroy Refrigeration & Air Conditioning
178 Kingaroy Street
07 4162 4707
RF, RC

KINGAROY

Wagners Electrical Repairs
81 Haly Street
07 4162 3181
MW, RF, SA, RC, WM, DW, CE, RH, VC, HT, CD

MACKAY

Mike Irving Refrigeration
2 Endeavour Street
07 4951 3600
MW, RF, SA, WM, CE, RH, VC, CD

MACKAY

Swan Electrical Service
Lot 2 Glenella Road
07 4942 1106
RF, RC, WM, DW, CE, RH, CD

MACKAY

Tennyson Electrical Service
8 Tennyson
07 4951 1766
MW, RF, RC, WM, DW, CE, RH, CD

MAGNETIC ISLAND

Magnetic Island Electrical
18 The Grove Nelly Bay
07 4778 5311
MW, RF, RC, WM, DW, CE, CG, RH, WD, HT, CD

MALANDA

Des Brennan Electrical
11 Catherine Street
07 4096 5668
MW, RF, SA, RC, WM, CE, RH, WD, VC, HT, CD

MAROOCHYDORE

D & K Electrical Appliance Service
1/15 Endeavour
07 5445 5577
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD, SCH

MARYBOROUGH

Doug Weir Electrical Service
3 Premier Street
07 4121 5383
WM, DW, CE, CG, RH, WD, VC, HT, CD

MARYBOROUGH

Berry Electrical
98 Ellena Street
07 4123 1400
MW, RF, RC, WM, DW, CE, RH, CD

MOSSMAN

Ashlec Pty Ltd t/a Becks Service & Gas
14 Sawmill Road
07 4098 1239
RF, RC, WM, DW, CE, RH, VC, HT, CD

MT ISA

P. & R. Electrical
31 Airline Street
07 4743 3354
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

MT TAMBORINE

Tamborine Mountain Electrical
29 Christie Street
07 5545 1207
MW, RF, SA, RC, WM, DW, CE, CG RH, WD,
VC, HT, CD, SCH

NAMBOUR

Nambour Electrical Service
60 Price Street
07 5441 1677
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

NAMBOUR

Stevens Electrical Repairs
143 Howard Street
07 5441 3264
RF, WM, DW, RH, WD, HT, CD

NOOSA

Noosa Universal Electrix
4 Venture Drive
07 5449 7133
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

PIALBA

G. W. Electrical Service
94/96 Islander Road
07 4128 2822
MW, RF, SA, RC, WM, DW, CE, CG, RH, CD

PORT DOUGLAS

East Coast Appliance Centre
2/11 Warner Street
07 4099 4604
RF, RC, CE, RH, HT, CD

PORT DOUGLAS

Port Douglas Electrics
Lot 1 Captain Cook Hwy.
07 4098 5933
WM, DW, CE, RH, VC, HT, CD

PROSERPINE

Lindsay Mcneill Electrical
98 Main Street
07 4945 3655
MW, RF, RC, WM, DW, CE, CG, RH, WD, VC, HT

ROCKHAMPTON

McLeod & Co. Electrical
39 Alam Street
07 4927 6966
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

ROCKHAMPTON

Leenders Electrical
13 Murray Street
07 4927 2922
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

ROSEWOOD

Boughens Electrical
32 John Street
07 5464 1128
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

TOWNSVILLE

S. S. Electrical & Refrigeration
16 Clay Street
07 4774 6227
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD, SCH

GARBUTT

Townsville Appliance Service
46 Charles Street
07 4779 9213
RF, RC, WM, DW, CE, RH, WD, HT, CD

TOOWOOMBA

Downs Appliance Repairs
122A Jellicoe Street
07 4632 0366
WM, DW, CE, CG, RH, WD, VC, HT, CD

TOOWOOMBA

H. F. + H. R. Miller
675 Boundary Street
07 4634 4253
RF

TOOWOOMBA

Mercer & Luck
49 Stephen Street
07 4632 8155
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD, SCH

TOOWOOMBA

Element Shop Weeks Electrical
18 Mann Street
07 4632 7420
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

TULLY

P. & C. Appliance Service
Lot 19 East Faluga Road
07 4068 2015
RF, RC, WM, DW, CE, RH, CD

VICTORIA POINT

Bayside Appliance Service
24 Pinoak Crescent
07 3207 7659
WM, DW, CD

WARWICK

Styan Lindenberg
46 King Street
07 4661 1755
MW, SA, RC, WM, DW, CE, RH, WD, VC, HT, CD

WARWICK

Cutmores Appliance Repairs
34 Grafton Street
07 4661 2020
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

YANDINA

Whelan Electrical
1 Harvest Street
07 5446 7133
RF, WM, CD

YEPPPOON

D & S Electrical Services
12 James Street
07 4938 3044
RF, RC, WM, DW, CE, RH, WD, CD

YEPPPOON

Len Keilys Appliance Service
47 Norman Drive
07 4939 5644
RF, RC, WM, DW, CE, CG, RH, WD, CD

Victoria

BAIRNSDALE

East Vic Appliance Service
82 Dalmahoy Street
03 5152 4212
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

BAIRNSDALE

Riviera Airconditioning and Refrigeration
2/587 Princes Hwy
03 5152 6124
RF, RC

BALLARAT

Ballarat Associated Appliance Service
115 Armstrong Street
03 5332 9919
RF, WM, DW, CE, RH, CD

BALLARAT

Barclays Appliance Centre
1111 Latrobe Street (Rear)
03 5335 6707
MW, RF, SA, RC, WM, DW, RH, WD, VC, CD

BENDIGO

Jack Charlton
60-62 Mundy Street
03 5443 4622
RF, RC, WM, DW, CE, RH, WD, VC, HT, CD

BENDIGO

Bendigo Washing Machine Service
18 Deborah Street
03 5443 3968
WM, DW, CD

CASTLEMAINE

Castlemaine Service Centre
18 Elizabeth Street
03 5472 1806
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

COHUNA

Doyles Radio & TV
73 King Street
03 5456 2000
MW, WM, DW, CE, VC, HT, CD

COLAC

The Repair Centre
28 Wilson Street
03 5231 4418
RF, WM, CD

DROMANA

Peninsula Appliance Service
31 Boundary Road
03 5987 2005
MW, RF, RC, WM, DW, CE, CG, RH, CD

ECHUCA

Echuca Electrical Service
201 Darling Street
03 5482 2760
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

FOSTER

Petersens Washing Machine & Appliance
Service
Rmb 1 917 Gardners
03 5682 2818
WM, DW, CE, RH, VC, HT, CD

GEELONG

Graeme Kent Electrical Appliance Repairs
27 Elizabeth Street
03 5221 6588
MW, WM, DW, CE, RH, WD, VC, HT, CD

GEELONG

Waldens Appliance Service
14 Separation Street
03 5278 1130
MW, RF, WM, DW, CE, RH, WD, CD

GEELONG

Foran Refrigeration Service
19 Cooney Street
03 5248 2553
RF

HADDON

R.L. & S.G. Bauer
RMB H484 Sago Hill Road
03 5342 4617
RF, WM

HAMILTON

John Waters Refrigeration
10 Peck Street
03 5571 1303
RF, RC, WM, DW, CE, CD

HORSHAM

J. L. & N. J. English
56 McPherson Street
03 5382 2568
MW, RF, RC, WM, DW, CE, RH, WD, VC, HT, CD

Legend = MW = Microwave RF = Refrigeration SA = Small Appliances WM = Washing Machines DW = Dishwashers RH = Range Hoods
VC = Vacuum Cleaners CD = Clothes Dryers CE = Cooking Electric CG = Cooking Gas RC = Air Conditioning HT = Room Heater

Victoria (cont'd)

HORSHAM

G. J. & E. Macumber
45 Dimboola Road
03 5382 1802
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

KERANG

K. J. & E. M. Berry
3 Boundry Street
03 5452 2040
RF, RC, WM, DW, CE, RH, WD, HT, CD

KYNETON

A.W. Gloster Electrical
25 High Street
03 5422 1144
MW, WM, DW, CE, RH, VC, CD

LEONGATHA

Leongatha Refrigeration Service
32 Yarragon Road
03 5662 2244
RF, RC, WM, DW, CD

LEONGATHA

Slee & Andrews
42 Yarragon Road
03 5662 3070
RF, RC, WM, DW, CE, RH, WD, VC, HT, CD

MARYBOROUGH

J. D. & M. T. Wright
62 Parkroad
03 5461 2324
MW, RF, SA, WM, DW, CE, RH, WD, VC, HT, CD

MELBOURNE

DANDENONG

D.D.S.
113 Neasham Drive
03 9795 0450
RF, RC, WM, DW, CE, RH, WD, CD

MILDURA

J. L. & L. A. Maas
3 Wittman
03 5023 5662
RF, WM, CD

MILDURA

Jack Abell
2/4 Ten Street
03 5023 3613
RF, RC, WM, DW, RH, CD

MILDURA

Brad Smythe Refrigeration
78 Magnolia Avenue
03 5022 1671
RF, RC, WM, DW, CE, CG, RH, HT, CD

MOE

Boyd Appliances
266 Old Sale Road New
03 5126 1600
MW, RF, SA, WM, DW, VC, CD

MOE

Moe Appliance Repairs
68 Waterloo Road
03 5127 1282
MW, RF, SA, WM, DW, CE, RH, WD, VC, CD

OCEAN GROVE

Bellarine Appliance Service
56 Grubb Road
03 5255 2755
RF, WM, CE, CD

OUYEN

Greggs Electrical
58/62 Oke Street
03 5092 1382
SA, WM, DW, CE, RH, VC, HT, CD

PORTLAND

B & R Croft
34 Gawler Street
03 5523 2896
RF, WM

RED CLIFFS

Begg & Valance
39 Jacaranda Street
03 5024 1591
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

RYE

Rye Washing Machine & Dryer Service
Lot 37 Davenport Road
03 5988 6320
WM, DW, CD

SALE

Humphrey & Mackay
216 Raymond Street
03 5144 7855
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

SALE

Harringtons Washing Machine Service
46 Union Street
03 5144 1025
SA, WM, DW, CE, RH, WD, VC

SHEPPARTON

Shepparton Washer Service
17C Rowe Street
03 5821 0610
MW, WM, DW, CE, RH, WD, VC, HT, CD

SHEPPARTON

Dicksons Refrigeration
57 Longstaff Street
03 5821 2906
MW, RF, RC, WM, DW, CE, CG, RH, WD, VC,
HT, CD

ST ARNAUD

St. Arnaud Electrical
102 Napier Street
03 5495 1802
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

SUNBURY

Sunbury Appliance Service
38 Horne Street
03 9744 5900
MW, RF, RC, WM, DW, CE, RH, WD, VC, HT, CD

SUNSHINE

Woolley Appliance Service Pty Ltd
31 Wright Street
03 9311 1051
RF, WM, DW, CE, RC, RH, CD

SWAN HILL

Mott Appliance Repairs
15 Campbell Street
03 5032 4518
RF, RC, WM, DW, CE, RH, CD

TRARALGON

Traralgon Refrigeration Services
5/7 Short Street
03 5176 2646
RF, RC, WM, DW, CE, RH, VC, HT, CD

TAWONGA

Mount Beauty Appliance Repairs
21 St. Bernard Drive
03 5754 4643
WM, DW, CE, RH, CD

TOROUAY

P.K.E. Appliance Repairs
2/1 Lochard Drive
03 5261 3628
MW, SA, WM, DW, CE, RH, WD, VC, HT, CD

WANGARATTA

J.E.M. Appliance Repairs
Rmb 2880 Wangaratta
03 5727 3253
RF, RC, WM, DW, CE, CD

WANGARATTA

Wohlers & York
48 Norton Street
03 5721 2465
RF, RC, WM, DW, CE, RH, HT, CD

WARRAGUL

Appserv Electrical Appliance Service
16B Phoenix Street
03 5623 2772
MW, RF, WM, DW, CE, RH, VC, HT, CD

WARRNAMBOOL

Leahys Electrical
227 Koroit Street
03 5562 4588
MW, RF, SA, RC, WM, CE, RH, VC, HT, CD

WARRNAMBOOL

Ian Brown
23A Fairy Street
03 5562 7178
RF, WM, DW, CE, CD

South Australia

ADELAIDE

Home Electrics
61 Anderson Walk
08 8254 7775
RF, WM, CD, MW

ADELAIDE

Metropolitan Appliance Repairs
4/9 Weans Road, Pooraka
08 8260 6747
RF, WM, DW, CD, CE, RC, HT

MT GAMBIER

G.J. & J.F. Marshall
20 White Ave
08 8725 3005
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD

PORT AUGUSTA

Port Augusta Refrigeration
54 Stirling Road
08 8642 3954
MW, RF, RC, WM, DW, VC, CD

PORT LINCOLN

L. M. Refrigeration Service
2 Wavell Road
08 8682 2952
RF, RC, WM, DW, CE, RH, VC, CD

PORT PIRIE

Northern Refrigeration
25 Wandearah Road
08 8632 2292
RF, RC

RENMARK

Riverland Electronic Services
113 Renmark Ave
08 8586 5600
MW, RF, SA, RC, WM, DW, CE, RH, VC, HT, CD

ST AGNES

Abram Appliance
148 Smart Road
08 8263 2226
WM, CE, VC, HT, CD

STURT

Parker Appliance & Electrical Service
5 Greenoak Drive
08 8358 1545
MW, RF, RC, WM, DW, CE, RH, WD, HT, CD

VICTOR HARBOUR

A. E. Dutton
23 Ocean Street
08 8552 1215
MW, RF, RC, WM, DW, CE, RH, WD, CD

WHYALLA

Hancocks Refrigeration & Air Conditioning
10 Cook Street
08 8645 4915
RF, SA, RC, WM, DW, CE, RH, WD, VC, HT, CD

Tasmania

DEVONPORT

Bevan Atkinson Appliance Service
31 North Street
03 6424 5152
RF, RC, WM, DW, CE, RH, WD, CD

HOBART

ROSNY
Rejuvenated Appliances
2/76 Mornington
03 6244 7659
MW, RF, SA, RC, WM, DW, CE, RH, WD, VC,
HT, CD, SCH

LAUNCESTON

Northern Electrical
126 Charles Street
03 6331 3971
RF, SA, WM, DW, CE, RH, VC, HT, CD

ACT

CHISHOLM

Detlevs Appliance & Electrical Care
18 Goodsir Place
02 6292 1554
WM, DW, CE, CG, RH, WD, HT, CD, SCH

FYSHWICK

Premier Appliance Service
38 Kembla Street
02 6280 5087
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD, SCH

FYSHWICK

Appliance Parts and Service
5/19 Tennant Street
02 6280 4776
MW, RF, RC, WM, DW, CE, CG, RH, VC, HT, CD

Northern Territory

ALICE SPRINGS

A.J. Services
2 Smith Street
08 8952 7951
RF, RC, WM, DW, RH, VC, HT, CD

DARWIN

New Life Electrical Refrigeration
9/1808 Hardy Road
08 8932 5858
MW, RF, RC, WM, DW, CE, CG, RH, WD, VC, HT, CD

Western Australia

ALBANY

Albany Refrigeration
32 Albert Street
08 9842 2277
RF, RC

ALBANY

Best Electrical Services
2/12 Minna Street
08 9842 8899
MW, RF, SA, WM, DW, CE, RH, WD, VC, HT, CD

BINDOON

Bindoon Refrigeration
5 Kay Road
08 9576 1090
RF, WM, CD, DW

BUNBURY

Bunbury Appliance
123 Forrest Ave
08 9791 3444
MW, RF, SA, RC, WM, DW, CE, CG, RH, VC,
HT, CD

GERALDTON

Batavia Coast Refrigeration
1/3 Cassin Place
08 9964 1080
RF

GERALDTON

Clarks Washing Machine
20 Anzac Terrace
08 9921 3683
WM, DW, CE, RH, VC, HT, CD

Western Australia (cont'd)

HARVEY

Harvey Refrigeration
Harper Street
08 9729 1940
MW, RF, SA, RC, WM, DW, RH, VC, CD

KALGOORLIE

C. H. Jones Electrical Service
14 Burt Street
08 9093 2660
MW, RF, SA, RC, WM, DW, CE, CG, RH, WD,
VC, HT, CD

KATANNING

Katanning Refrigeration & Airconditioning
145 Clive Street
08 9821 1340
RF, SA, RC, WM, CE, CG, RH, WD, VC, HT, CD

MERREDIN

Merredin Washing Machine Service
111 Barrack Street
08 9041 1414
WM, DW, CD

MERREDIN

Centre West Refrigeration
52 Nungarin Road
08 9041 2142
RF, SA, DW, CE, RH, WD, VC, CD

NORTHAM

Inland Refrigeration
Lot 8 53 Old York Road
08 9622 1206
RF, WM, DW, CE, RH, CD

PERTH

MYAREE

Metropolitan Appliance Repairs
15 Shields Crescent
08 9330 1724
RF, RC, WM, DW, CE, CG, RH, VC, CD

SOUTH HEDLAND

Combined Services
37 Harwell Way
08 9140 1109
RF, SA, RC, WM, DW, CE, RH, WD, VC, HT, CD

**M.E.A. SUPPLEMENTARY WARRANTY
STATEMENT OF STANDARD WARRANTY CONDITIONS**

1. The Warranty only applies provided that the appliance has been used in accordance with the manufacturer's instructions and provided that the appliance has not been damaged by an accident, misuse, neglect, or abuse of any person other than the manufacturer or Major Electrical Appliances Pty. Limited ("MEA") or from faulty installation, misadjustment, or tampering by unauthorised persons.
2. When service inspection reveals the alleged fault or faults is caused by incorrect operation, contrary to the instruction manual, and otherwise the appliance is in good order and working condition, the Purchaser shall be liable for a service fee charged by MEA or its Agents.
3. If the appliance is used in Commercial Applications or for Rental, a separate Warranty of THREE (3) MONTHS LABOUR AND TWELVE (12) MONTHS PARTS will apply.
4. Subject to the provisions of any applicable statute, this Warranty applies to the original retail Purchaser only and is not transferable.
5. Subject to the provisions of any applicable statute, at no time does MEA have liability for any freight, transport or travel costs outside of normal service areas.
6. None of the above Warranties purport to exclude, restrict or modify either the application or the exercise of a right conferred by any applicable statute.
7. Subject to any Warranties implied by statute, at no time will MEA or its Agents be liable for any economic loss consequent upon the failure of the appliance.
8. This Warranty is valid only for GE major appliances imported and distributed by MEA, purchased and in use in Australia.

**G.E. INTELLIGENT BY DESIGN™
TOP LOAD WASHER LISR310
SUPPLEMENTARY WARRANTY**

1. Subject to the "Statement of Standard Warranty Conditions" this product is covered by the following Warranty.
-

TWO (2) YEAR WARRANTY

From date of purchase covering parts and labour.

PLUS further **Twenty-Five (25) years** warranty against cracking or corrosion of inner bowl.

2. The appliance is warranted under single family domestic installation and use, as set out in the instruction manual, against manufacturing defect.
3. Should service be required under this Warranty, the Purchaser should contact an approved MEA service agent.
4. At no time does MEA have liability for any freight or transportation costs or for any damage during transit or for any consequence of failure of this appliance, unless such limitation of liability is prohibited by statute.
5. This Warranty excludes replacement of parts required due to normal wear and tear.
6. This Warranty only applies provided that the appliance has been used in accordance with the manufacturer's instructions and provided that the appliance has not been damaged by accident, misuse, neglect, or abuse.
7. None of the above Warranties purport to exclude, restrict, or modify either the application or the exercise of a right conferred by any applicable statute.
8. Please complete the details below which should be retained for your future reference.

Date of Purchase: _____ **Model No:** _____

Serial No: _____

IMPORTANT: Please complete the attached Warranty Registration Card and forward immediately following installation.

Major Electrical Appliances Pty. Ltd
P.O. Box 888
SEVEN HILLS NSW 1730

Showroom and Information Centres

For helpful advice visit your nearest GE showroom today

Head Office – New South Wales

2 Costello Place, Seven Hills NSW 2147
Tel (02) 8825 9444 Fax (02) 9674 8697
Showroom open Mon–Fri 9am–5pm

Victoria

1287-1289 Malvern Rd, Malvern VIC 3144
Tel (03) 9822 0977 Fax (03) 9822 8492
Showroom open Mon–Fri 9am–5pm
Sat 9am–4pm, Sun 10am–4pm

South Australia

Acton Marketing Partners
90 Jervois St, Torrensville SA 5031
Tel (08) 8234 9099 Fax (08) 8234 9200
Showroom open Mon–Fri 8am–5pm

Queensland – Brisbane

Bowen Gate Business Park, Building 1 Ground Floor
153 Campbell St, Brown Hills QLD 4006
Tel (07) 3216 1644 Fax (07) 3216 1688
Showroom open Mon–Fri 9am–4:30pm


Western Australia

Bill Bell Agencies
624 Murray St
West Perth WA 6005
Tel (08) 9481 5881 Fax (08) 9481 5571

**IMPORTANT: Please complete the attached Warranty
Registration Card and forward immediately
following installation.**

 Cut here

**AFFIX
POSTAGE
STAMP**

 Cut here

MAJOR ELECTRICAL APPLIANCES PTY. LTD.
P.O. Box 888
SEVEN HILLS NSW 1730

SUPPLEMENTARY WARRANTY REGISTRATION CARD

Purchase Date: _____ Model: _____

Serial Number: _____

Dealer Name: _____ Suburb: _____

Purchaser's Name Mr/Mrs/Miss: _____
Initial Surname

Address: _____

POSTCODE: _____ TEL. NO: _____

We would greatly appreciate your assistance in completing this questionnaire. (Tick appropriate boxes).

1. Male Female 2. Under 30 31-40
41-50 Over 50

3. I chose G.E. because:

Reputation Warranty Features Dealer's Advice

Price Design & Styling Friend Recommendation

Advertising

Other Reasons: _____

4. Who delivered your product: MEA Dealer

5. How satisfied were you with:

a) Delivery —

Very Satisfied Satisfied Dissatisfied

b) Installation

Very Satisfied Satisfied Dissatisfied

6. How much did you pay for your product? \$ _____

7. If you would like more information on any of the following products please tick the appropriate boxes:

Refrigerators Dryers Air Conditioning

Dishwashers Microwaves Washing Machines

Thank you for completing this Registration Card.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>