

# Geemarc Ampli1100

AMPLIFIED DESK TELEPHONE WITH VOLUME AND TONE CONTROL

 


**Caution:** This telephone product is specifically designed for people with hearing difficulties and is provided with a handset earpiece volume control for individual requirements. Due care must be taken by all users that the handset earpiece volume control is set to the lowest level acceptable by each respective user. Care should therefore be exercised to ensure that any new users are familiar with this requirement.


# CONTENTS

<b>DESCRIPTION</b>	3
Introduction	5
Important safety information	5
Connecting the telephone	5
<b>SETTING UP</b>	
Ringer settings	6
Tone / Pulse switch	7
Time break recall switch	7
<b>VOLUME AND TONE ADJUSTMENT</b>	
Receiving volume and tone	8
Sending volume level adjustment	9
<b>USING THE PHONE</b>	
Answering incoming call	10
Making a call	10
Last number redial	10
Recall, * & # buttons	10
Mute button	10
Storing telephone numbers	11
Dialling stored number	11
<b>REGULATORY COMPLIANCE</b>	12
<b>GUARANTEE</b>	14

# DESCRIPTION

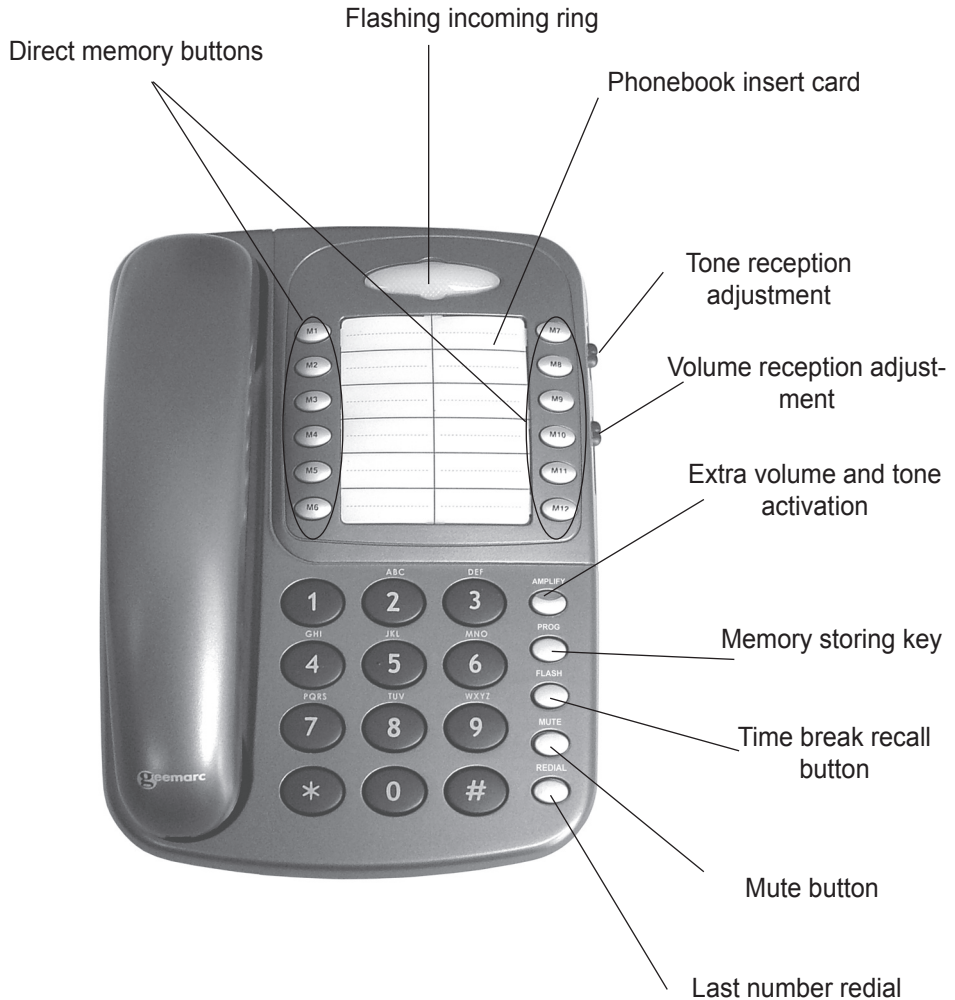

# DESCRIPTION

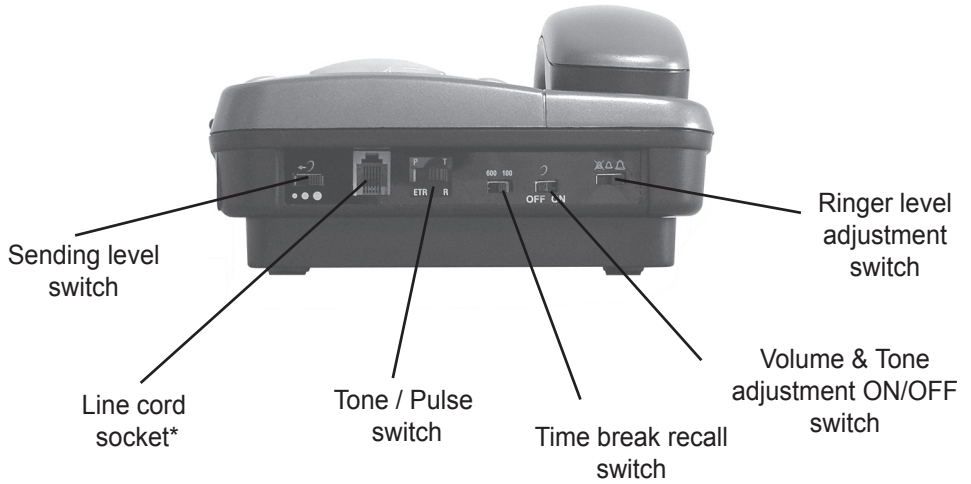 

(\*) Classified TNV-3 according to EN60950 standard.



# INTRODUCTION

## IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

## **SAVE THESE INSTRUCTIONS!**

### 1 - CONNECTING THE TELEPHONE

- 1 - Connect the handset cord.
- 2 - Open the battery compartment by pulling back the latch.
- 3 - Insert correctly 4 x AAA 1.5V alkaline batteries (not supplied) in the battery compartment (\*). Batteries are required if you wish to increase the ringer level up to 10 dB.
- 4 - Snap the battery door back in place.
- 5 - Connect the line cord to the socket (\*).

(\* ) Classified TNV-3 according to EN60950 standard.

# SETTINGS

## 1 - RINGER SETTINGS

A switch located on the upper side allows the ringer to be switched

 : Off,  : Low,  : Hi

Your phone comes with the ringer switched to «High» and the melody set to «6»:

	Low	Middle	High
<b>Melody 1</b>	1	2	3
<b>Melody 2</b>	4	5	6 (by default)
<b>Melody 3</b>	7	8	9

If you don't like the ringer melody, you can choose a new one by changing the settings as per instructions below:

- Lift the handset.
- Press **PROG** button.
- Press **#** button.
- Press any of the 1 - 9 dial keys.

The new ringer settings will be activated with the next incoming call..

**Note:** The ringer level will be increased up to 10 dB if you insert batteries into the battery compartment.

# SETTING UP

## 2 - TONE/PULSE SWITCH (T/P)

The Tone/Pulse switch is factory pre-set to Tone position (T). In the US, all telephone exchanges now use Tone dialling. If your phone does not dial out, it is probably being used from an older private switch-board (PBX). In this case, the Tone/Pulse switch must be moved to Pulse.

## 3 - TIME BREAK RECALL SWITCH (600/100)


Check the Time Break Recall setting of your Ampli1100. For the US, the Time Break Recall should be set to 600 mS. It can be switched to 100 mS for other locations or PBX's.

# VOLUME AND TONE ADJUSTMENT


## 1- RECEIVING VOLUME AND TONE ADJUSTMENT

You can adjust the receiving volume and tone according to your own hearing requirements.

The button **AMPLIFY** allows extra volume and tone functions to be activated or deactivated during the conversation.

Tone and volume adjustment (15dB to 30dB) is only activated when the switch  located at the rear side of your phone is set to **ON**. When this button is set to **OFF** only the volume can be adjusted from 0dB to 15dB.

When the function is activated, the red light of extra receiving and tone function button **AMPLIFY** is lit.

 
**Note:** When the tone (treble), earpiece volume and sending levels are set to the maximum, whistling may occur. If whistling occurs the sending level settings should be decreased with the switch 

***If you are using your Ampli1100 with a hearing aid, set your hearing aid to "T" position.***




# VOLUME AND TONE ADJUSTMENT

Adjust the TONE and VOLUME buttons to fit the levels to your own hearing requirements.

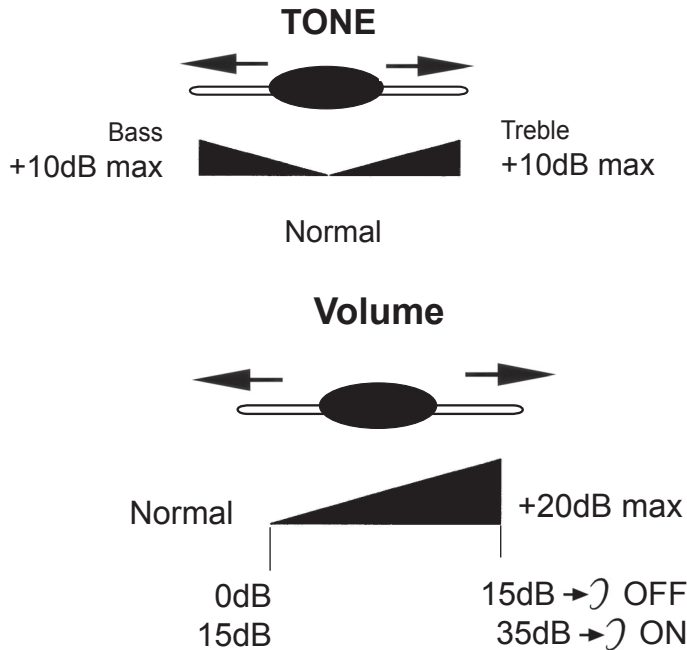

## 2 - SENDING VOLUME LEVEL ADJUSTMENT

 If your voice is quiet or called parties have difficulty hearing you, you can increase the sending level volume with the switch located on the upper side. You can also decrease the sending volume if required.

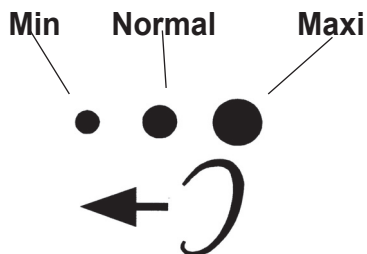

# USING THE TELEPHONE

## 1 - ANSWERING INCOMING CALLS

- When an incoming call is received the phone will ring and the incoming call indicator will flash. To answer the call lift the handset and speak.
- On completion of the call, carefully replace the handset in the cradle to release the line.

## 2 - MAKING A CALL

- Lift the handset.
- Await the dial tone and dial required number.
- On completion of the call, carefully replace the handset in the cradle.

## 3 - LAST NUMBER REDIAL

- Lift the handset.
- Await the dial tone and press **REDIAL** button.
- A previously dialled number will be automatically redialled (not in use for memory numbers).

## 4 - RECALL, \* & # BUTTONS

These are used with the new services provided on digital exchanges. For details please contact your network operator.

## 5 - MUTE BUTTON

If you wish to speak privately to someone else in the room without your caller overhearing, press and hold the **MUTE** button. You will still be able to hear the callers but they cannot hear you during the mute operation. To resume normal conversation, release the **MUTE** button.

# USING THE TELEPHONE

## 6 - STORING TELEPHONE NUMBERS

Your telephone Ampli1100 can store 12 direct memories. To store a number please follow instructions below:

- Lift the handset.
- Press **PROG** button.
- Press **M1, M2, ... M12** to locate the number.
- Dial the number.
- Press **PROG** again Button.

Numbers will be lost after few hours if you disconnect your phone. Entering a new number in the same location will automatically erase the previous number.

## 7 - DIALING STORED NUMBERS

- Lift the handset and await the dial tone
- Press the appropriate location button **M1, M2... M12** and the number stored in this location will be dialed automatically.

To register your stored phone numbers, use the index located on the front of your phone.

# REGULATORY COMPLIANCE

- This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.
- All applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e. RJ11C) in the package with each piece of approved terminal equipment.
- A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirement adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
- The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.
- If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your rights to file a complaint with the FCC if you believe it is necessary.
- The telephone company may make changes in its facilities, equipment, operation or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
- This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. This equipment is hearing aid compatible.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# REGULATORY COMPLIANCE

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Some cordless telephones operate at frequencies that may cause interference to nearby TV's and VCR's; to minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR; and, if interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio TV technician for help.
- If trouble is experienced with this equipment, for repair or warranty information, please contact our customer service staff at: 248-577-5400
- If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
- Please follow instructions for repairing if any; otherwise do not alter or repair any part of device except as specified.

**Opening the equipment or any attempt to perform repairs will void the warranty. For service or repairs, call 248-577-5400**

- Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation for information.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this telephone equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
- This equipment is hearing aid compatible.

# GUARANTEE

Sonic Alert warrants the phone against any defect in materials or workmanship for the period of one year from the date of purchase.

Should you experience a problem, contact our customer service department. Be sure to save your sales receipt as proof of purchase date should you need warranty service. Within a period of one year from purchase date, Sonic Alert will repair or replace (our discretion) your phone at no cost, if a defect in materials or workmanship is found. If we elect to replace your phone, we may replace it with a new or reconditioned product of the same or similar design. Repair or replacement will be warranted for a period of 90 days or the original time on the original warranty, whichever is longer.

The warranty does not cover accidents, negligence or breakage to any parts. This includes shipping damage, failure to follow instructions, misuse, fire, floods, use of incompatible accessories, Acts of God or failure in your phone service carrier's line service. The product must not be tampered with or taken apart by anyone who is not an authorized Sonic Alert representative. Tampering with the phone will void ant written or implied warranties

Sonic Alert shall not be responsible for loss of time, inconvenience, property damage caused by your phone or any other accidental or consequential damages. Warranty service is available only with proof of purchase

Simply send the Ampli1100 (postpaid) and a copy of your sales slip as proof of purchase to:

**Sonic Alert Inc., 1050 E. Maple Road, Troy MI 48083**

**IMPORTANT : YOUR RECEIPT IS PART OF YOUR WARRANTY AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.**

## **SonicAlert**

1050 East Maple Rd.

Troy, MI 48083

Ph: 248577 5400

Fax: 248-577-5433

[www.sonicalert.com](http://www.sonicalert.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>