

GRACO®

 
Highchair

OWNER'S MANUAL

Model No. _____
Serial No. _____

Dear Customer,

Please fill in the model and serial numbers above from the label on the back of the footrest of your new highchair.

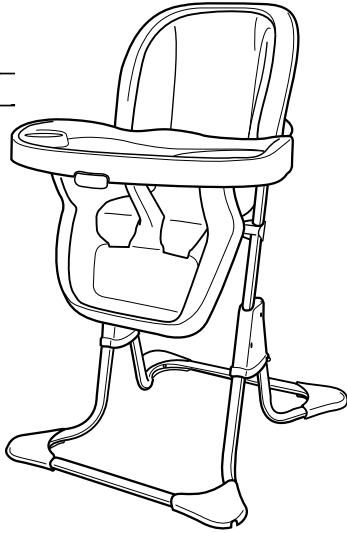

Model 3625

Congratulations on your purchase of a Graco® highchair!

Graco is the recognized leader in the design and manufacture of quality baby products. We believe your new Graco® highchair is a wise choice, promising many hours of enjoyment for your baby.

Before using your highchair, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you to use your highchair properly.

 
Please save your Owner's Manual for future use.

Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109** or visit our Internet website, www.gracobaby.com. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use, or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

⚠ WARNING

Failure to follow these warnings could result in serious injury or death.

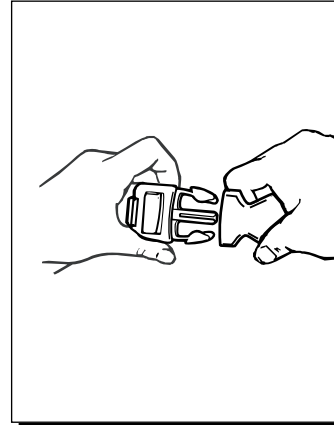

Prevent serious injury or death from falls or sliding out. Always keep your child in the restraint.



NEVER LEAVE YOUR CHILD UNATTENDED. Always keep your child in view.

FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY.

If you experience any difficulties, please contact the Customer Service Department.

THIS HIGHCHAIR IS DESIGNED TO BE USED by a child between 6 months and 3 years of age. Maximum weight 37 pounds (16.8 kg).

DO NOT FORCE TRAY against child. Use only the five adjustment positions. Be sure both adjustment fingers are engaged in armrest slots.

DO NOT ADJUST the highchair with your child in it.

 
WARNING

Read the instructions and the assembly instructions carefully to avoid serious injury or death.



Secure your child at all times with the restraint system provided. The tray is not designed to hold your child in the highchair. It is recommended that the highchair be used only by children capable of sitting upright unassisted.

For death from falls, always secure

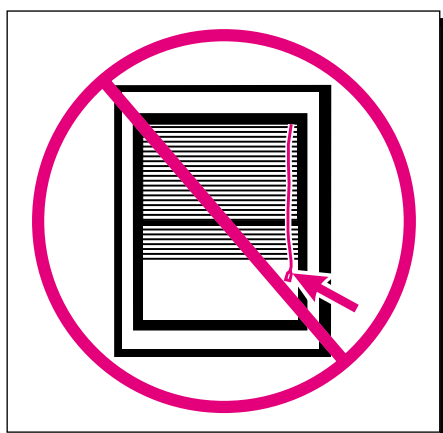

STRANGULATION HAZARD:
DO NOT place highchair in any location where there are cords, such as window blind cords, drapes, phone cords, etc.

DISCONTINUE USING YOUR HIGHCHAIR should it become damaged or broken.

CARE AND MAINTENANCE

FROM TIME TO TIME CHECK YOUR HIGHCHAIR for loose screws, worn parts or torn material. Replace or repair the parts as needed. Use only Graco® replacement parts.

 
TO CLEAN HIGHCHAIR FRAME, use only household soap or detergent and warm water. **NO BLEACH.**

PARTS LIST


CHECK that you have all the parts listed below BEFORE assembling your highchair.

If any parts are missing, call Customer Service at 1-800-345-4109.

Tool required: Screwdriver

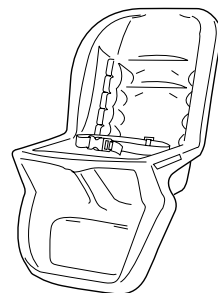


Seat with seat belt

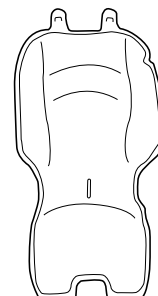 


Seat pad



 Support tube

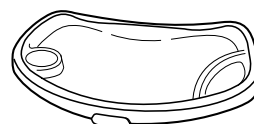


Tray

 

Bolt (2)



 
T-nut (2)



Slider (2)



 
Foot (4)

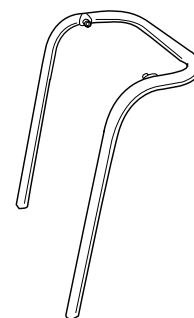


Upper tube



 Screw (4)

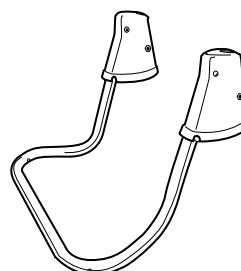

Rear tube

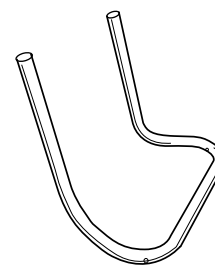 


Front tube

Assembling the Highchair


Step 1.

 Hold front tube with ends up. Place a foot (smooth side up) at one curved corner of tube. Insert a screw through tube and into foot, then tighten. Repeat with other corner and both feet of rear tube.

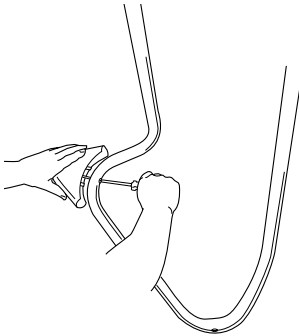


Step 2.

 Lay seat face down on the floor as shown. Insert support tube through both collars on bottom of seat.

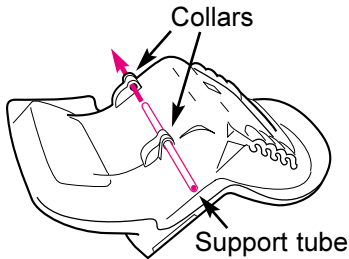


Step 3.

 Mount a slider onto each end of the support tube. Slider loops should be facing UP, as shown. Push end of slider all the way into collar.

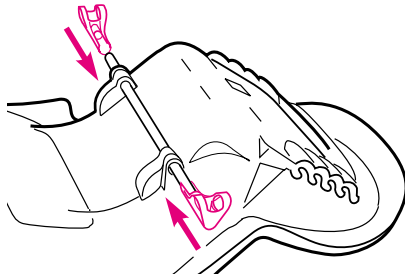


Step 4.

 Insert both ends of upper tube into slider loops and pull all the way through as shown.

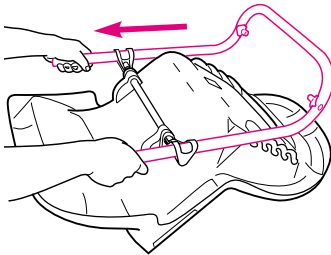


 Still holding ends of tube, locate pegs. Push pegs through the channel until they pass the snap. Slide pegs into first notch of height-adjustment track.

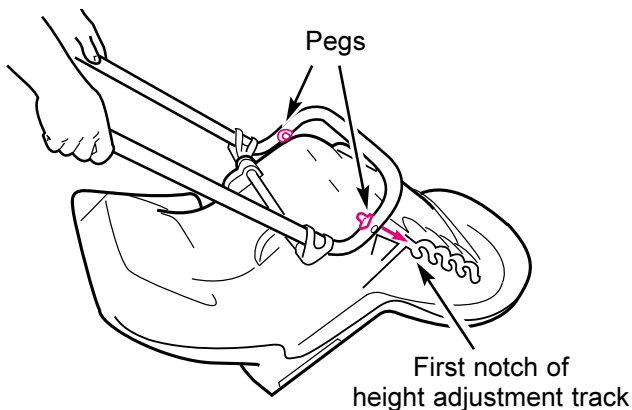


Step 5.

 Hold rear tube as shown. Slide plastic brackets onto upper tube.

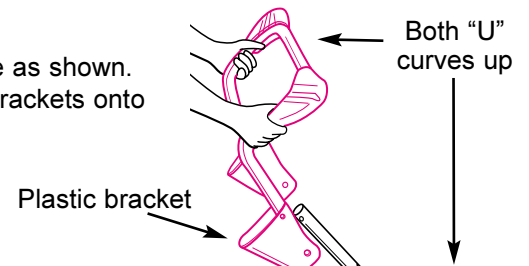


Step 6.

 Slide front tube onto upper tube as far as it will go, until the holes in the tubes line up.

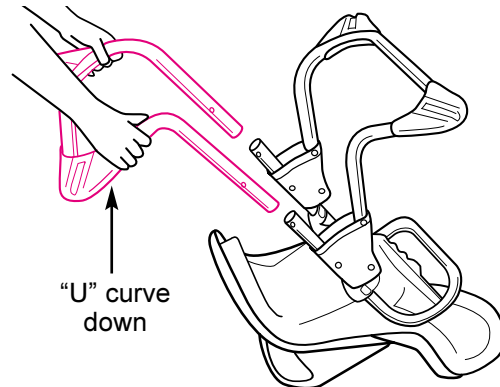

Step 7.

 Pull rear tube up until holes in plastic bracket line up with holes in the tubes.

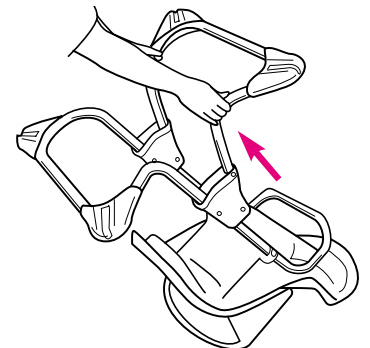


CHECK that holes in upper tube, front tube **AND** plastic brackets all line up with each other.


Insert a T-nut into one plastic bracket hole. It must pass through both tubes, as shown enlarged below. Insert a screw into other side of plastic bracket and screw it into T-nut.

CHECK that tubes are securely connected by trying to pull them apart.

 Repeat for other plastic bracket.

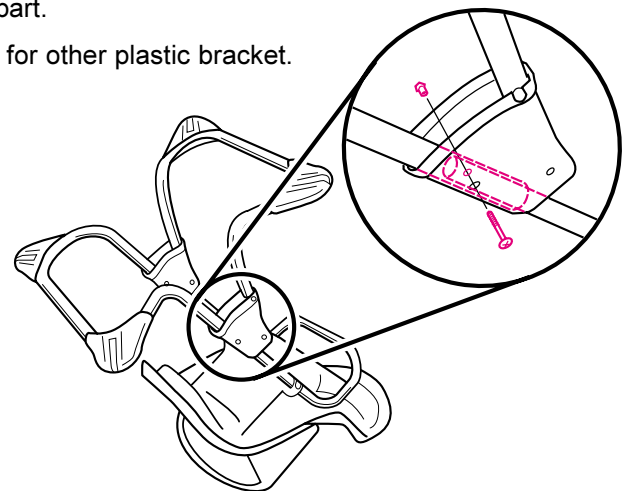


 Set highchair upright.
It should look like this.

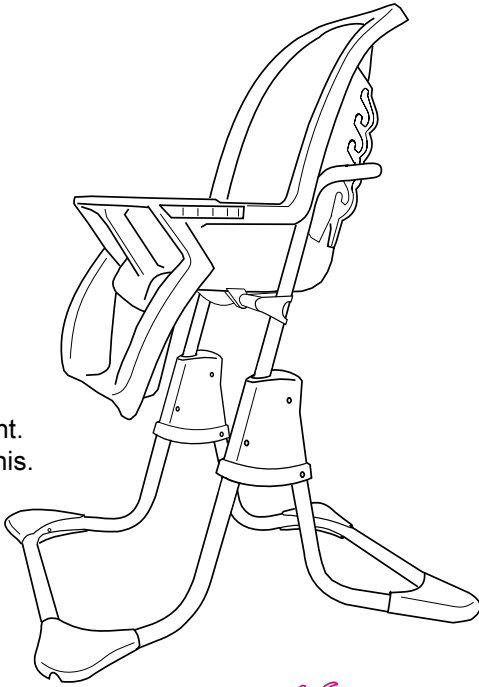

Step 8.

 Place seat pad in seat as shown. Insert tabs of seat pad into the corresponding slots in the seat. From rear of seat, hook all four tabs over plastic anchors.

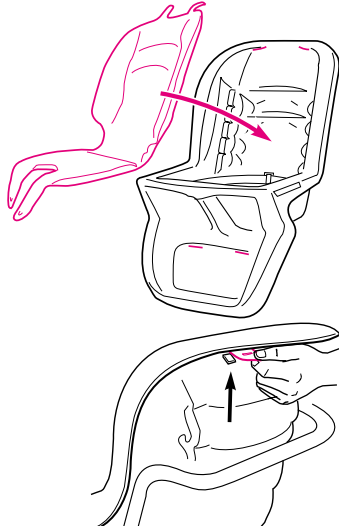

To Use Seat Belt

 
Step 1.

Snap buckle together as shown. Adjust belt as needed to get a snug fit around your child.



Step 2.

Press on prongs at top and bottom of buckle to release.

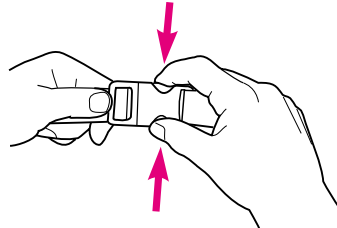


▲ WARNING Prevent serious injury or death from falls or sliding out. Always secure your child in the restraint. Do not depend on the tray alone to hold your child.

If it becomes necessary to remove the seat belt, follow these instructions:


Step 1.

 First buckle the belt. Then unthread end of seat belt through the buckle as shown.

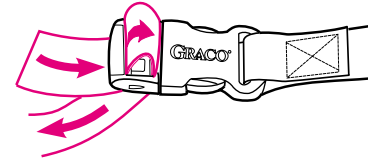

Step 2.

 Pull other end of the seat belt through the belt retainer as shown.

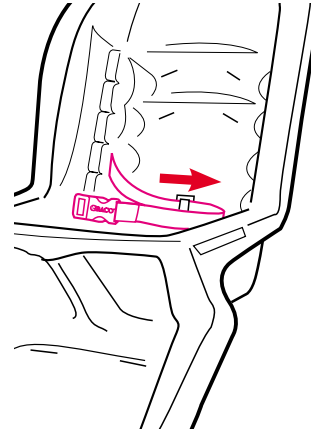


Step 3.

To rethread buckle, thread the free end of the waist belt back through the belt retainer. The "GRACO" logo must be on the front of the buckle.

Step 4.

 Thread belt through the buckle as shown. The left end of the buckle must be smooth side up to thread the belt in the buckle properly. The other side of the buckle has teeth.

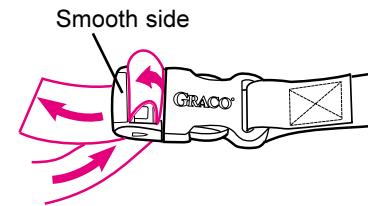

If you have difficulty getting the belt into the buckle, **check** to make sure that the smooth side of the buckle is up.

CHECK that the belt is threaded correctly by pulling on the seat belt. **The belt should not slip through the buckle.**

To Use Tray

 
 
Place tray on armrests of seat. Pull out side handles under the tray. Put tray in one of the five adjustment positions, and release side handles.

CHECK that tray is securely attached by pulling forward on the tray.

Use either the side handles or the front button to adjust the position of the tray.



⚠ WARNING DO NOT force the tray against your child. Keep your child's hands and fingers away from the tray when adjusting the tray.

Tray may be removed from highchair by using the side handles.

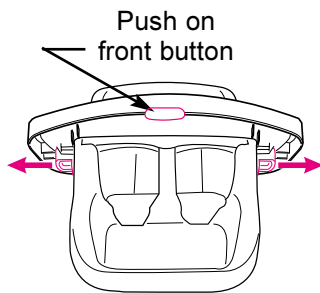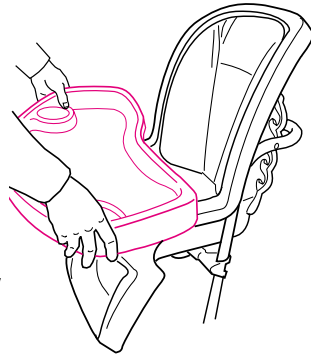

To Fold Highchair

  Lay highchair on the floor as shown. Press in metal buttons at base of both plastic brackets. Push rear base down to fold highchair.

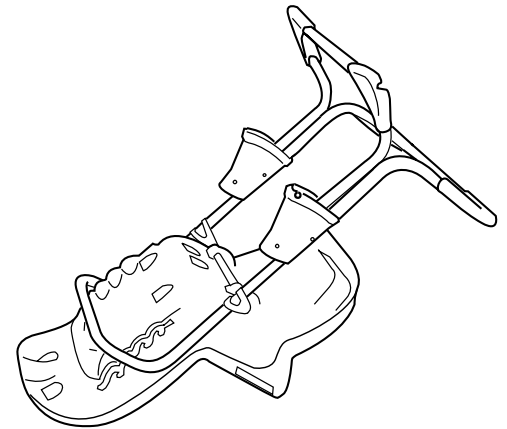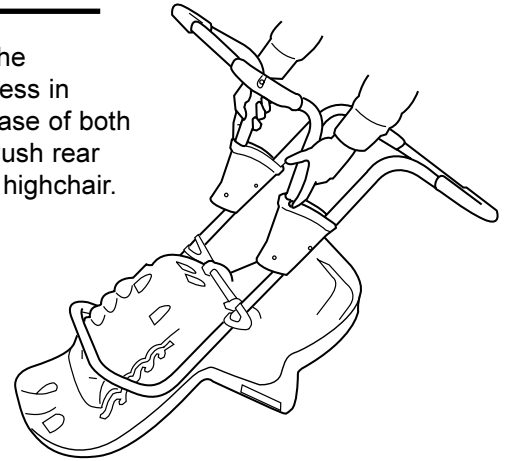

To Adjust Height

 
⚠ WARNING DO NOT adjust the highchair with your child in it.

Hold chair frame down and lift seat firmly to free pegs from height-adjustment notch. Slide seat up or down in the track, then snap it into desired height setting.

When adjusting height, be careful to keep fingers away from height-adjustment track.

There are five possible height settings. The highchair can be used as a toddler chair by adjusting to the lower height settings.

CHECK that both sides of chair are snapped into the desired height-adjustment notch.

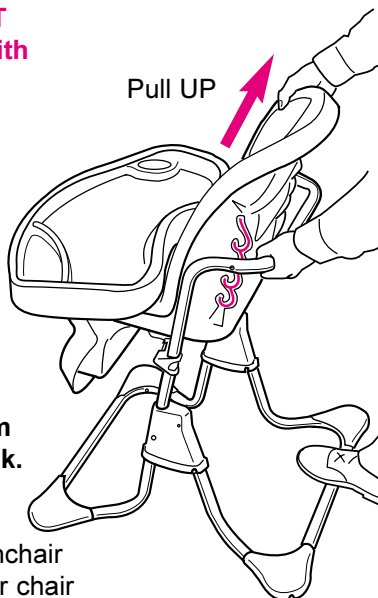

Replacement Parts

Instructions for ordering highchair parts:

Complete form below. Your highchair model number **MUST** be included on the form to ensure proper replacement parts. **Your model number can be found on a sticker on the back of the footrest. Payment must accompany your order.**

Parts List:	Price:*
Seat.....	\$22.00
Seat pad.....	\$16.00
Tray.....	\$18.00
Upper tube.....	\$ 9.50
Support tube.....	\$ 7.00
Rear tube.....	\$10.00
Front tube.....	\$ 9.50
Slider.....	\$ 5.00
Foot.....	\$ 5.00
Hardware.....	\$ 5.00

* Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions or if you need any parts not listed, please call toll-free:

1-800-345-4109

or visit our Internet website, www.gracobaby.com

Return the form below with payment to:
GRACO CHILDREN'S PRODUCTS INC.
CUSTOMER SERVICE DEPARTMENT
P.O. BOX 100, MAIN STREET
ELVERSON, PA 19520

Model Number	SHIP TO:
(Must be filled in)	Name _____
<input type="checkbox"/> Seat	Address _____
<input type="checkbox"/> Seat pad	City, State, Zip _____
<input type="checkbox"/> Tray	() _____
<input type="checkbox"/> Upper tube	Telephone _____
<input type="checkbox"/> Support tube	
<input type="checkbox"/> Rear tube	
<input type="checkbox"/> Front tube	
<input type="checkbox"/> Slider	
<input type="checkbox"/> Foot	
<input type="checkbox"/> Hardware	<input type="checkbox"/> Check enclosed (payable to Graco Children's Products Inc.)
	<input type="checkbox"/> Charge to credit card:
	<input type="checkbox"/> Visa
	<input type="checkbox"/> MasterCard
	<input type="checkbox"/> Discover
Total: _____	Account #: _____
Shipping & handling: <u>\$5.00</u>	Expiration date: _____
6% sales tax (PA only): _____	Signature: _____
Total amount due: _____	

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>