

# GRACO®


## Stroller

### OWNER'S MANUAL

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

Dear Customer,

Please fill in the model and serial numbers above from the label on the rear leg of your new stroller.

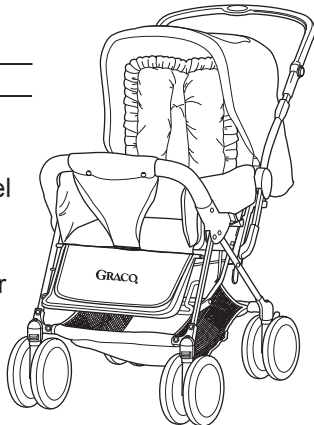

**7575, 7600 and 7700 Models**

### Congratulations on your purchase of a Graco® stroller!

Graco is a world leader in strollers and has helped thousands of parents transport their children in comfort. We believe your new Graco® stroller is a wise choice, promising many hours of enjoyment for your baby.

Before using your stroller, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you assemble and use your stroller properly.

**Please save your Owner's Manual for future use.**


### Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109**. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.


## ⚠ WARNING




Never leave child unattended. Always keep your child in view.

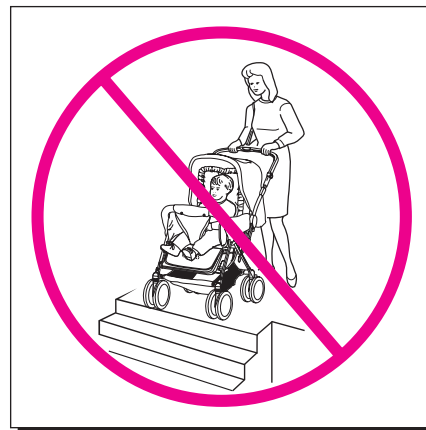

Never use stroller on stairs or escalators. You may suddenly lose control of the stroller or your child may fall out. Also, use extra care when going up or down a step or curb.

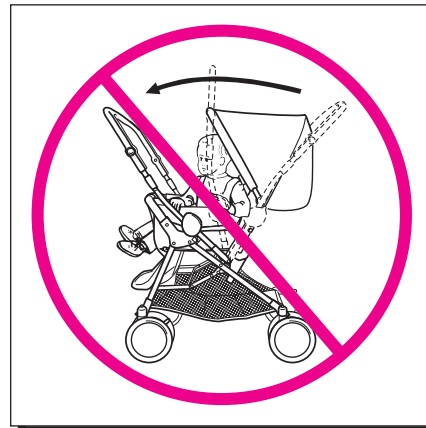

Use care when reversing handle to avoid catching child's arms or hands in the mechanism. When making adjustments to your stroller, always be sure that all parts of your child's body are clear of any moving parts.

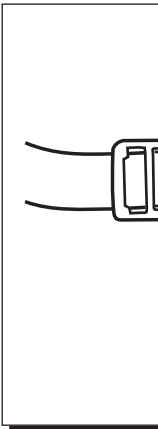

Avoid serious sliding out.



DO NOT place bags, parcels on handle or on the child of the stroller.

TO PREVENT (4.5 kg) in

NEVER A


STROLLER while jogging

AVOID ST neck, susp


DISCONT

THIS PRO

**Failure to follow these warnings and the assembly instructions could result in serious injury or death.**

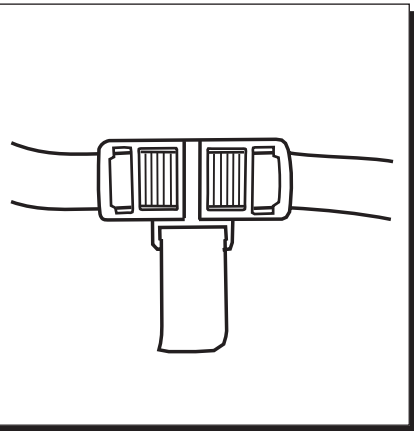

Avoid serious injury from falling or sliding out. Always use seat belt.

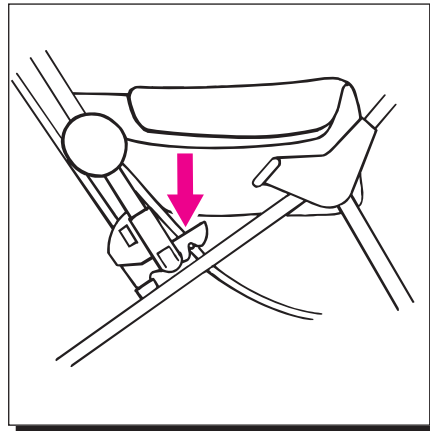

Be certain the stroller is fully erected and latched before allowing your child near the stroller.




Never place child in the stroller with head toward front of the stroller.



DO NOT place purses, shopping bags, parcels and accessory items on handle or canopy. They may fall on the child or change the balance of the stroller and make it unstable.



Use of the stroller with a child weighing more than 40 lbs. (18.1 kg) will cause excessive wear and stress on the stroller. Use the stroller with only one child at a time.

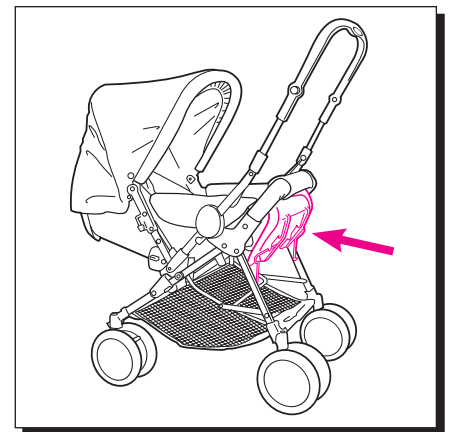

Child may slip into leg openings and strangle. Never use in reclined carriage position unless footrest is placed under padded front bar and wire snapped into lower notch.

**TO PREVENT A HAZARDOUS CONDITION**, do not place more than 10 lbs. (4.5 kg) in the storage basket or more than 2 lbs. (0.9 kg) in the canopy bag.

**NEVER ALLOW YOUR STROLLER** to be used as a toy.

**STROLLER TO BE USED** only at walking speed. Product not intended for use while jogging, skating, etc.

**AVOID STRANGULATION.** DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

**DISCONTINUE USING YOUR STROLLER** should it become damaged or broken.

**THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.**


**FOR ADDITIONAL IMPORTANT INFORMATION**, please see the Helpful Hints and Care and Maintenance sections in these instructions.

## PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your stroller. If any parts are missing, call Customer Service at 1-800-345-4109.

**THIS PRODUCT REQUIRES ADULT ASSEMBLY.**


No tools required for assembly.

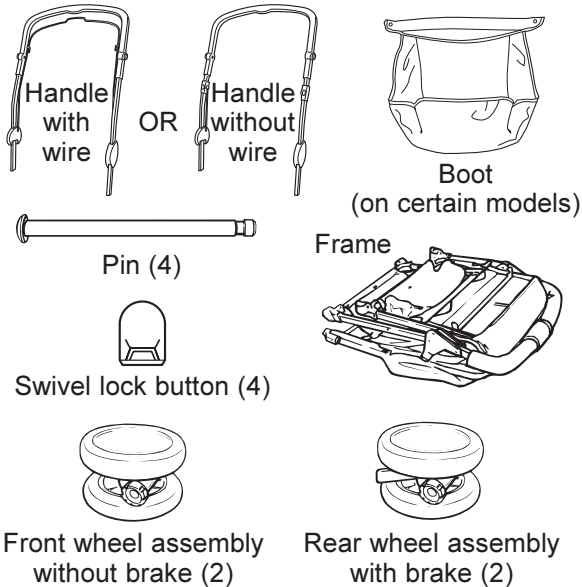

## To Unpack Stroller


### Step 1.

Flatten stroller carton to protect floor.

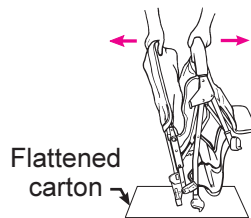

### Step 2.

Open stroller on carton as shown until latched.

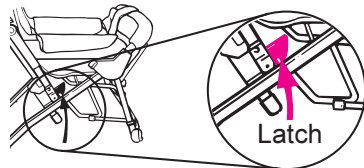


## To Install Handle

### Step 1.

Turn handle brackets straight up.

### Step 2.

Position handle as shown.

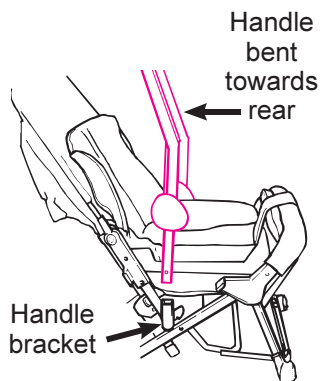

### Step 3.


Place both sides of handle into brackets and push down until latched.

NOTE: Be sure buttons are securely latched in bracket holes. Check by pulling firmly up on handle.

## To Assemble Front Wheels

### Step 1.


Snap swivel lock button onto wheel mount as shown. This must be done BEFORE pin is inserted (next step).

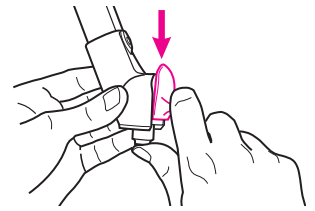

### Step 2.

Insert pin through hole in wheel mount. Then push **round** end of a front wheel assembly (without brake) up onto pin as shown until it snaps into place.

NOTE: Check wheel attachment by pulling down on the front wheel assembly.

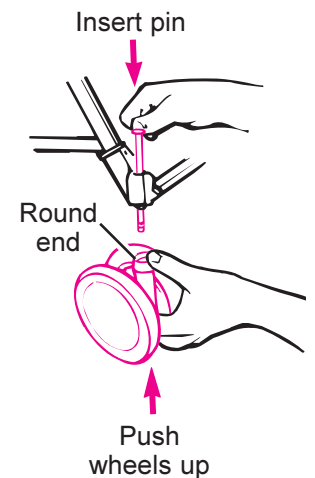


### Step 3.

Repeat above steps for the other side.

## To Assemble Rear Wheels

### Step 1.


Snap swivel lock button onto wheel mount as shown. This must be done BEFORE pin is inserted (next step).

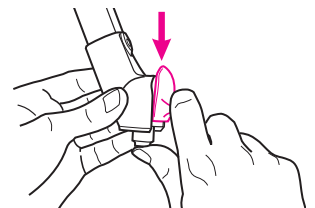

### Step 2.

Insert pin through hole in wheel mount. Then push **round** end of a rear wheel assembly (with brake) up onto pin as shown until it snaps into place.

NOTE: Check wheel attachment by pulling down on rear wheel assembly.

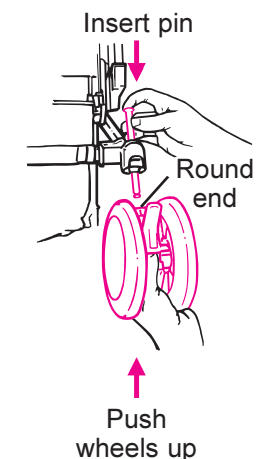

### Step 3.

Repeat above steps for other side.

## To Unfold Stroller


### Step 1.

Unfold footrest from under armrest.




### Step 2.

Release storage latch.

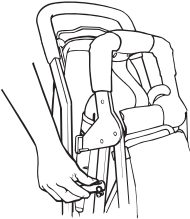

### Step 3.

Unfold as shown.

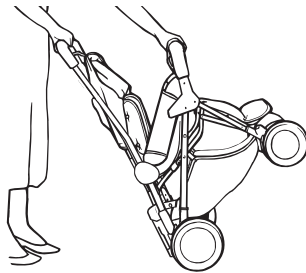


**⚠ WARNING** Be sure frame is latched before allowing your child near the stroller.


## To Use Brakes

**⚠ WARNING** Always apply both brakes to park stroller.

Push **DOWN** to park.

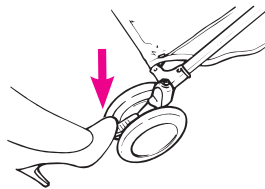

Lift **UP** to stroll.

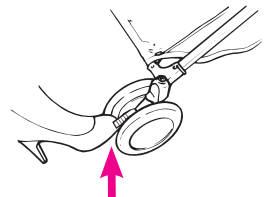


## To Secure Your Child

**⚠ WARNING** Avoid serious injury from falling or sliding out. Always use seat belt.


### Step 1.

Place crotch strap between child's legs and snap both side buckles to the center buckle. Adjust belt as needed to get a snug fit around your child.

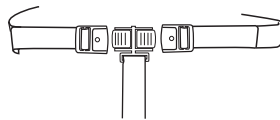

### Step 2.

Push in on front of buckle to release.

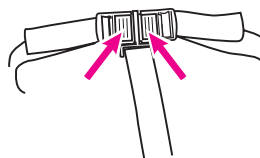

## To Change to Swivel or Non-swivel Wheels


For smooth travel, always lock both rear swivels (closest to handle). On uneven surfaces such as grass, stones or gravel, lock all four swivels.

**Before locking swivels, push stroller forward a few feet to ensure that the wheels are correctly positioned.**



Push buttons up or down, depending on model, to lock or release swivels. Turn swivel to check that it is locked or released.


When reversing position of the handle, check that rear swivels are locked and front swivels are released.

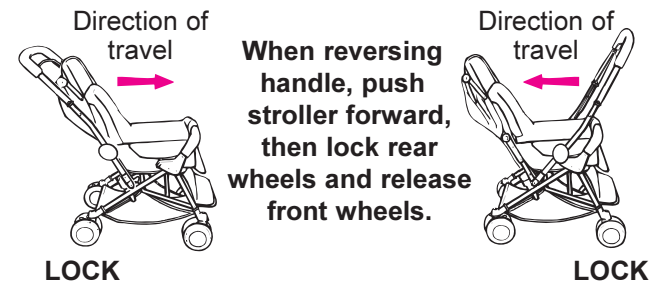

## To Adjust Back


### Step 1.

Push back of seat slightly forward while squeezing wire to unlock, as shown.

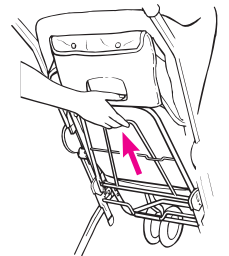

### Step 2.



Adjust to desired position.

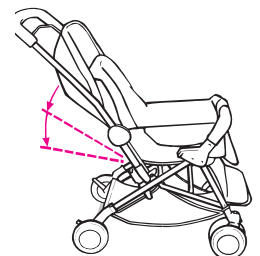

## To Raise Footrest

Lift footrest and hook wire into footrest bracket.

**▲WARNING** Child may slip into leg openings and strangle. Never use in reclined carriage position unless footrest is placed under padded front bar and wire is snapped into lower notch.

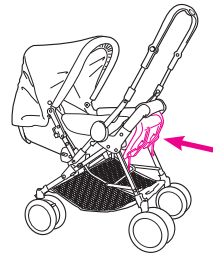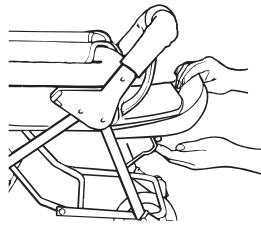


## To Adjust Canopy

Push canopy forward.

Canopy bag (only on some models) carries a maximum of 2 pounds (0.9 kg).

On certain models, you can unzip the rear panel and fold it out of the way to see your baby.

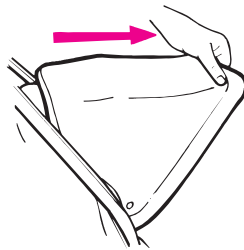



## To Move Handle to Carriage Position

### Step 1.

For handle with wire, squeeze in center to unlock.

OR


For handle without wire, pull up on both plastic slides on the handle to unlock, as shown.

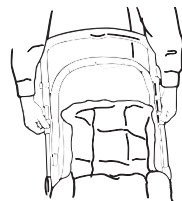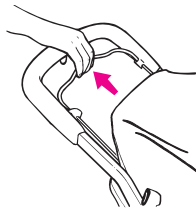

### Step 2.

Move handle to new position.


**▲WARNING** Use care when reversing handle to avoid catching child's arms or hands in the mechanism.

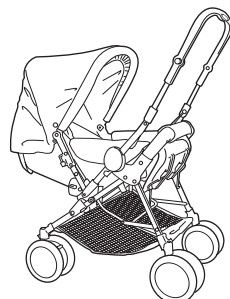

## To Adjust Handle Height (on certain models)

Push in both buttons at sides of handle and slide handle to new position.


Be sure handle is engaged in one of the latching positions.

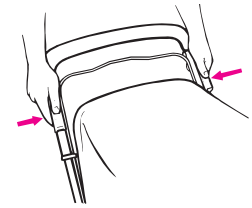

## To Attach Boot (on certain models)


### Step 1.

Raise footrest and place boot under footrest. Slide boot over the front of stroller.

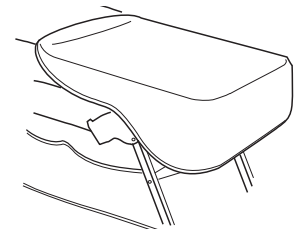

### Step 2.


Snap straps at top of boot around stroller frame on both sides as shown.

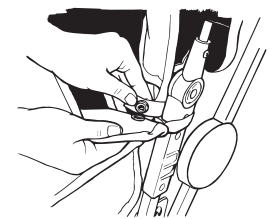

## To Use Head Supports (on certain models)

To use stroller with a smaller child, pull the plastic pieces from pockets located in the back of the cloth seat pad, and reinsert them with curved side toward the front.

To use stroller with a larger child who does not need head support, insert the plastic pieces with the curved side toward the back.

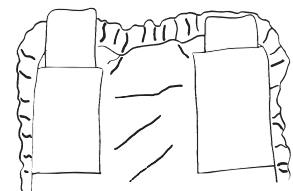


Back of cloth seat pad

## To Fold Stroller

NOTE: Before folding, (1) remove boot if present; (2) adjust back to upright position; (3) adjust handle to rear position; (4) fold canopy.

### Step 1.

Push on latch to fold as shown.

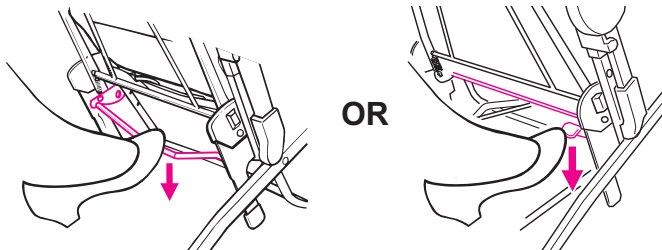


### Step 2.

Push handle forward.




### Step 3.

Push on secondary lock on right side of stroller (red button).

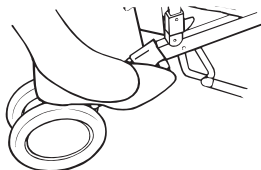


### Step 4.

Lock storage latch as shown.

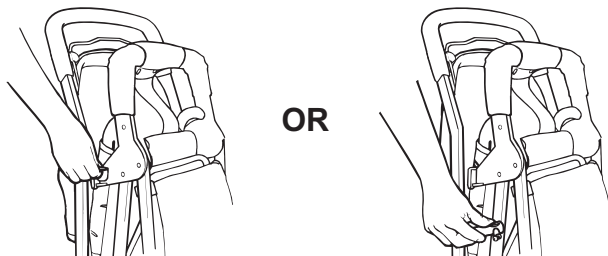

## HELPFUL HINTS

 **IF WHEEL SQUEAKS**, use a light oil (e.g., WD-40, 3-in-1, or sewing machine oil). It is important to get the oil into the axle and wheel assembly as shown.



**WHEN USING YOUR STROLLER OVER UNEVEN SURFACES** (such as grass, stones or gravel), lock all swivel wheels.

**BEFORE LOCKING SWIVEL WHEELS**, it is important to first push the stroller forward a few feet to ensure that the wheels are correctly positioned.

**WHEN USING YOUR STROLLER AT THE BEACH**, completely clean your stroller afterward to remove sand and salt from mechanisms and wheel assemblies.

**IF FOOTREST BECOMES CAUGHT** under arm bar when unfolding your stroller, first refold the stroller, pull footrest down into correct position, then proceed to unfold your stroller.

**IF STROLLER WON'T STAND IN UPRIGHT FOLDED POSITION**, check position of wheels to ensure they are in the correct position as shown.



## CARE AND MAINTENANCE

**DO NOT MACHINE WASH SEAT** (with permanent inner boards). It should only be wiped with a mild detergent, taking care not to soak the material. Seat with removable inner boards (on certain models) may be machine washed in lukewarm water on delicate cycle and drip-dried. **NO BLEACH.**

**REMOVABLE PAD** may be machine washed in lukewarm water on delicate cycle and drip-dried. **NO BLEACH.**

**FROM TIME TO TIME CHECK YOUR STROLLER** for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco® replacement parts.

**TO CLEAN STROLLER FRAME**, use only household soap or detergent and warm water. **NO BLEACH.**

**EXCESSIVE EXPOSURE TO SUN OR HEAT** could cause fading or warping of parts.

# Replacement Parts

## Instructions for ordering stroller parts:

To order by phone using Visa, MasterCard or Discover, call 1-800-345-4109. Have your stroller model number ready when you call. Your model number can be found on a sticker on the rear leg of your stroller. To order by mail, complete the form below. Your model number **MUST** be included on the form to ensure proper replacement parts.

**Payment must accompany your order.**

<b>Parts List:</b>	<b>Price:*</b>
Removable seat pad .....	\$ 22.00
Front wheel assembly .....	\$ 15.00 (each)
(without brake)	
Rear wheel assembly .....	\$ 15.00 (each)
(with brake)	
Slung basket .....	\$ 15.00
Footrest cover .....	\$ 12.00
Canopy .....	\$ 17.00
Handle with wire .....	\$ 25.00
Handle without wire .....	\$ 25.00
Seat .....	\$ 30.00
Boot .....	\$ 15.00
Wheel hardware .....	No charge
Canopy hardware .....	No charge
Swivel lock .....	No charge
Seat belt buckle .....	No charge

\* Prices subject to change without notice.

## IF YOU NEED HELP

If you have any questions, please call toll-free:

**1-800-345-4109**

Return the form below with payment to:  
**GRACO CHILDREN'S PRODUCTS INC.**  
**CUSTOMER SERVICE DEPARTMENT**  
**MAIN STREET**  
**ELVERSON, PA 19520**

<b>Model Number</b>	<b>SHIP TO:</b>
(Must be filled in)	Name
<input type="checkbox"/> Removable seat pad	Address
<input type="checkbox"/> Front wheel assembly	City, State, Zip
<input type="checkbox"/> Rear wheel assembly	( )
<input type="checkbox"/> Slung basket	Telephone
<input type="checkbox"/> Footrest cover	
<input type="checkbox"/> Canopy	
<input type="checkbox"/> Handle with wire	<input type="checkbox"/> Check enclosed
<input type="checkbox"/> Handle without wire	(payable to Graco Children's
<input type="checkbox"/> Seat	Products Inc.)
<input type="checkbox"/> Boot	<input type="checkbox"/> Charge to credit card:
<input type="checkbox"/> Wheel hardware	<input type="checkbox"/> Visa
<input type="checkbox"/> Canopy hardware	<input type="checkbox"/> MasterCard
<input type="checkbox"/> Swivel lock	<input type="checkbox"/> Discover
<input type="checkbox"/> Seat belt buckle	
Total: _____	Account #: _____
6% sales tax	Expiration date: _____
(PA only): _____	Signature: _____
Total amount	
due: _____	

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>