


# COOKTOP PARTS

For Model: IER320WWO  
(White)

30" ELECTRIC FREESTANDING  
STANDARD CLEAN RANGE

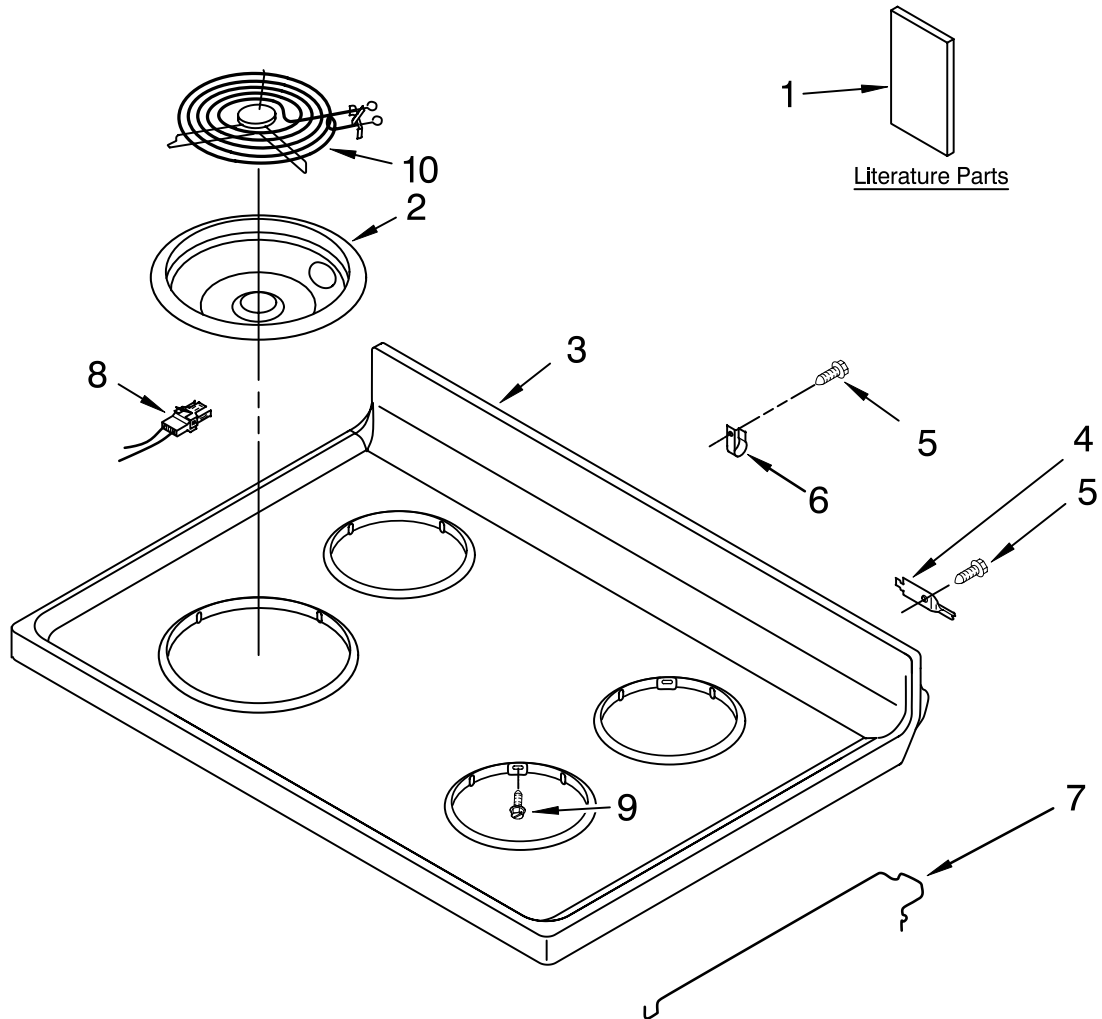

Illus. No.	Part No.	DESCRIPTION
1	W10196158	Literature Parts Instructions, Installation Anti-Tip Template
	9757142	English/Spanish
	9757143	English/French
	W10204318	Owners Manual
	W10114281	Sheet, Tech
	9762761	Safer Cooking Tips

Illus. No.	Part No.	DESCRIPTION
2	W10196406	Bowl, Drip 6" Chrome (3)
	W10196405	8" Chrome (1)
3	3186235	White Cooktop
4	3195060	Hinge, Cooktop (2)
5	3196178	Screw


Illus. No.	Part No.	DESCRIPTION
6	308605	Strain Relief
7	3195812	Rod, Support (2)
8	814399	Receptacle, Elmnt
9	3196154	Screw
10		Element, Surface (Includes #8)
	8053265	6" (3)
	8053267	8" (1)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Model: IER320WW0

(White)

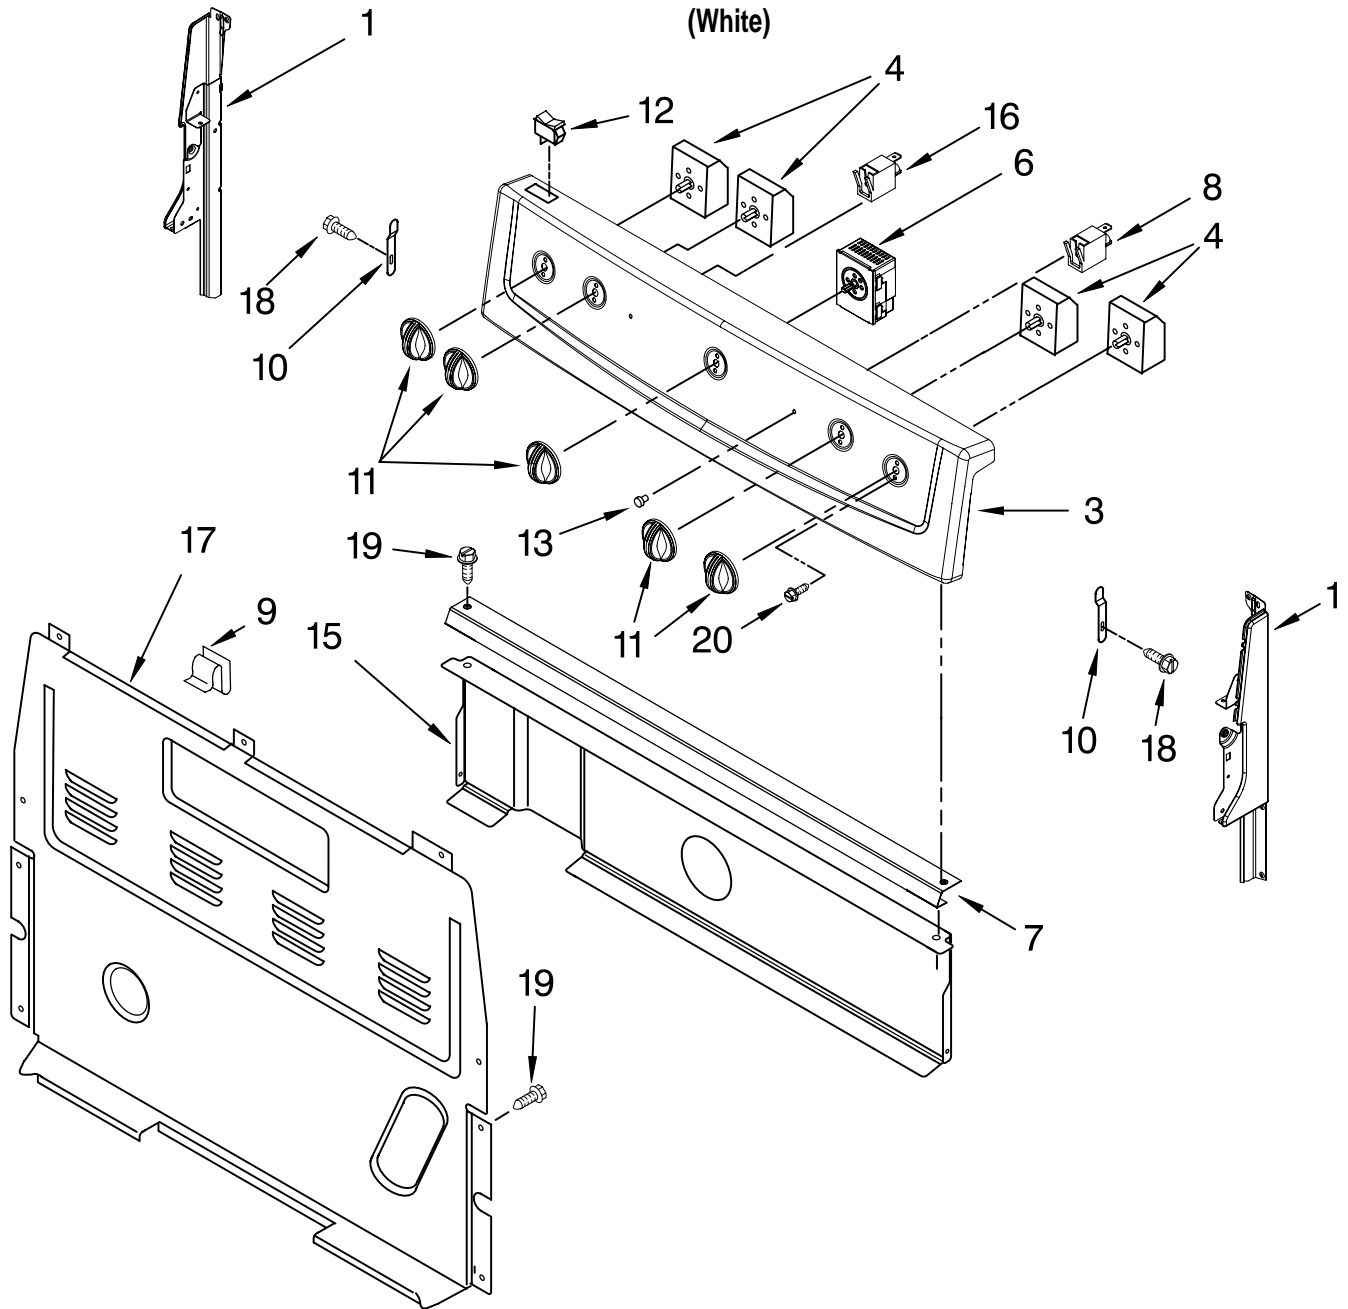

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10184433	Left Hand-White
	W10184434	Right Hand-White
3		Panel, Backguard
	W10252573	White
4		Switch, Infinite
	3148953	Use W/ 8" Element
	3148951	Use W/ 6" Element

Illus. No.	Part No.	DESCRIPTION
6	9762215	Switch, Selector
7	W10182322	Brkt-Mntg Console
8	8523266	Indicator, 250V
9	8273564	Clip
10	3196200	Clip, Spring (2)
11		Knob (5)
	W10259208	White


Illus. No.	Part No.	DESCRIPTION
12	3149360	Switch, Rocker
13	3196068	Lens, Indicator
15	8053912	Shield, Heat
16	8523265	Indicator, 125V
17	8272473	Cover, Upper Rear
18	3196166	Screw
19	3196178	Screw
20	3400882	Bolt

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Model: IER320WW0

(White)

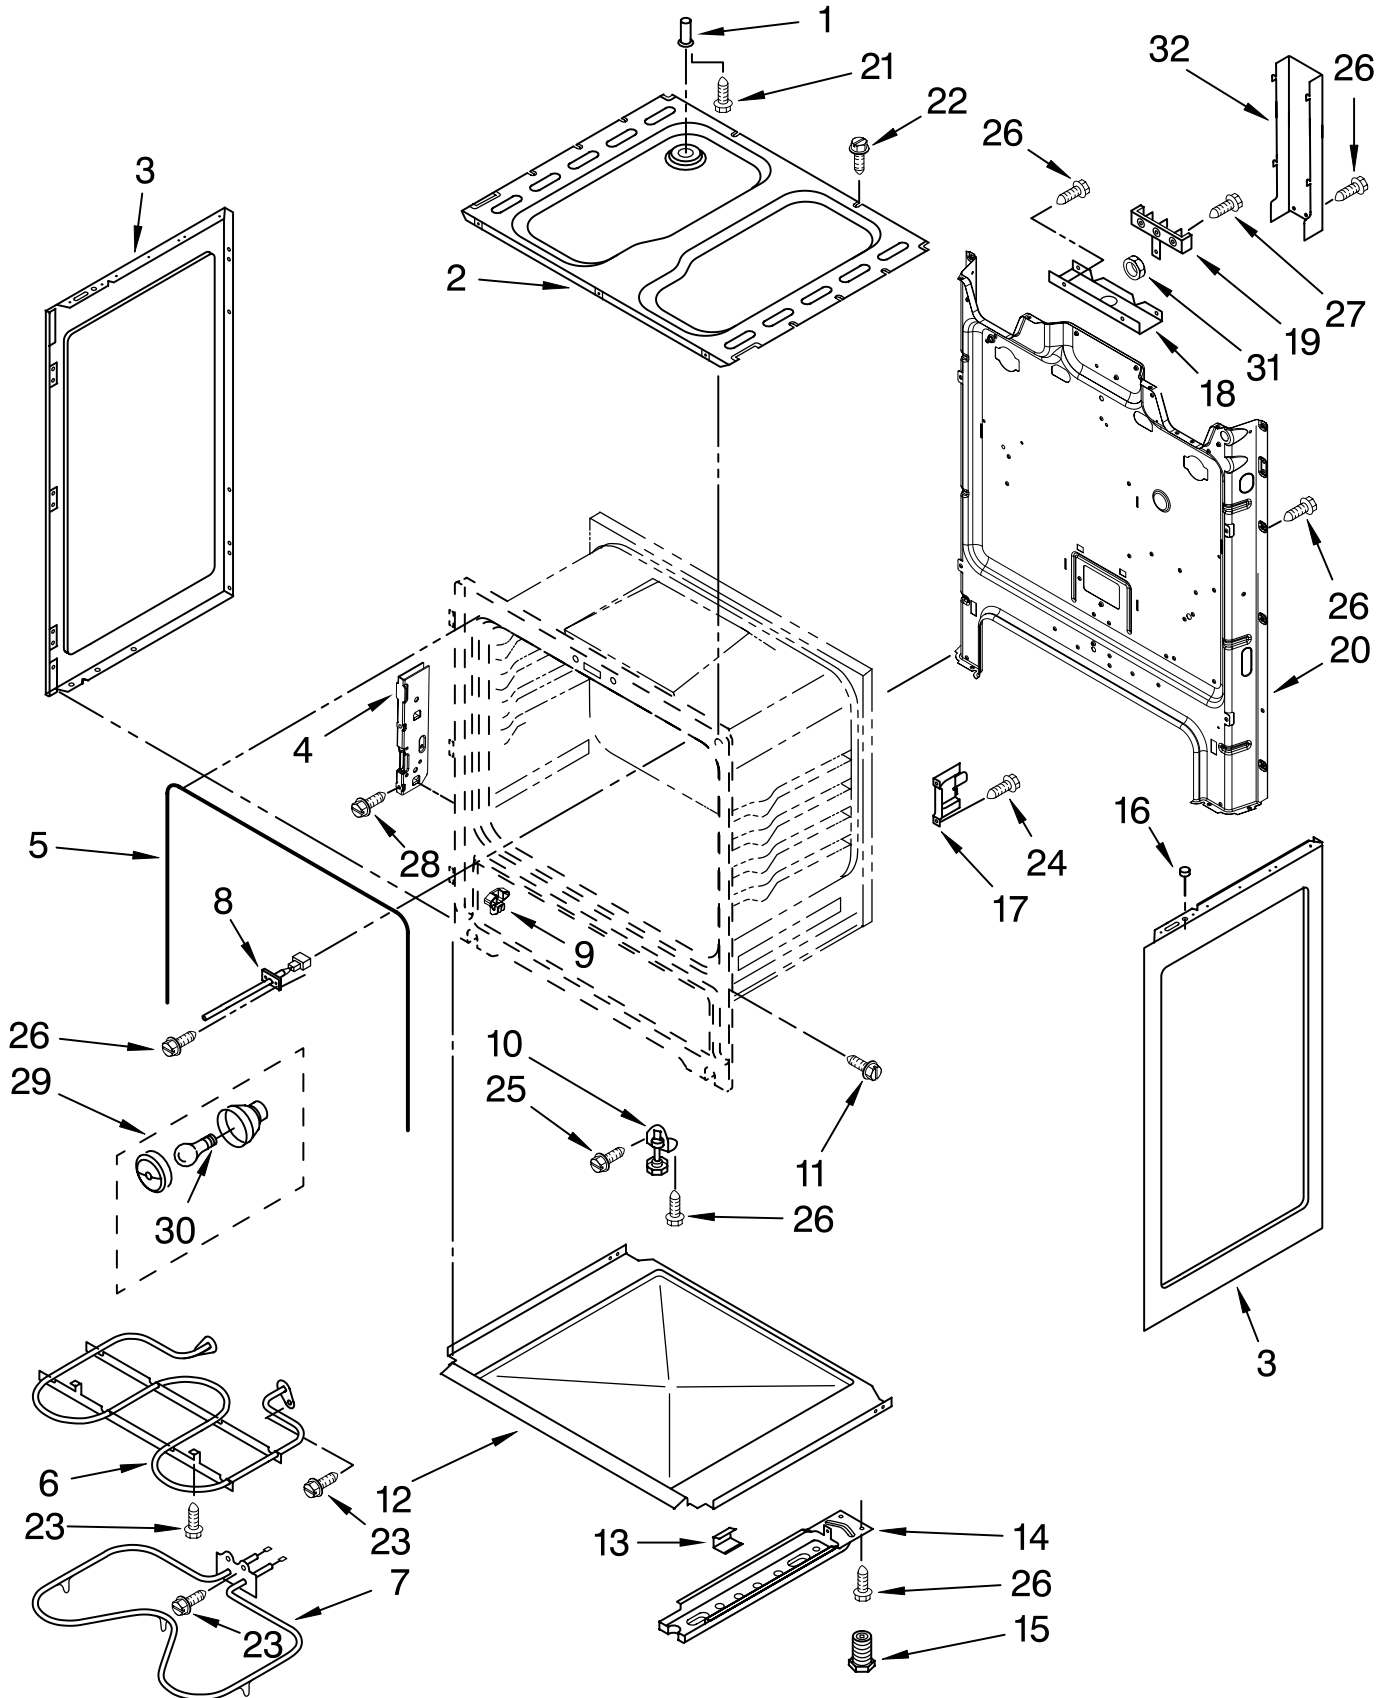

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Model: IER320WW0

(White)

<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
1	3169143	Vent Tube
2	W10209613	Box, Burner
3		Panel, Side (2)
4	8053830	White-Textured
4	9760407	Brkt-Mounting
5	W10129032	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	W10181986	Sensor
9	W10114344	Glide, Drawer Frnt
10	3196037	Foot, Front (2)
11	W10067840	Screw
12	8054068	Tray, Insulation
13	W10137382	Clip, Panel (4)
14	9760314	Rail, Base (2)
15	W10058460	Foot, Rear (2)
16	3195809	Bumper, Side (2)
17	3186116	Support, Oven (2)
18	3186034	Bracket, Service
19	9761958	Block, Terminal
20	8274034	Back, Main
21	3196567	Screw
22	3196168	Screw
23	3196174	Screw
24	3196169	Screw
25	3196179	Screw
26	3196178	Screw
27	3400016	Screw
28	W10031780	Screw
29	3196701	Light Socket Assy
30	311255	Bulb, Oven Light
31	7103P027-60	Nut
32	9758283	Cover, Box

## INSULATION


8273263	Insulation, Wrap
8272611	Insulation, Back

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DRAWER & BROILER PARTS

For Model: IER320WW0

(White)

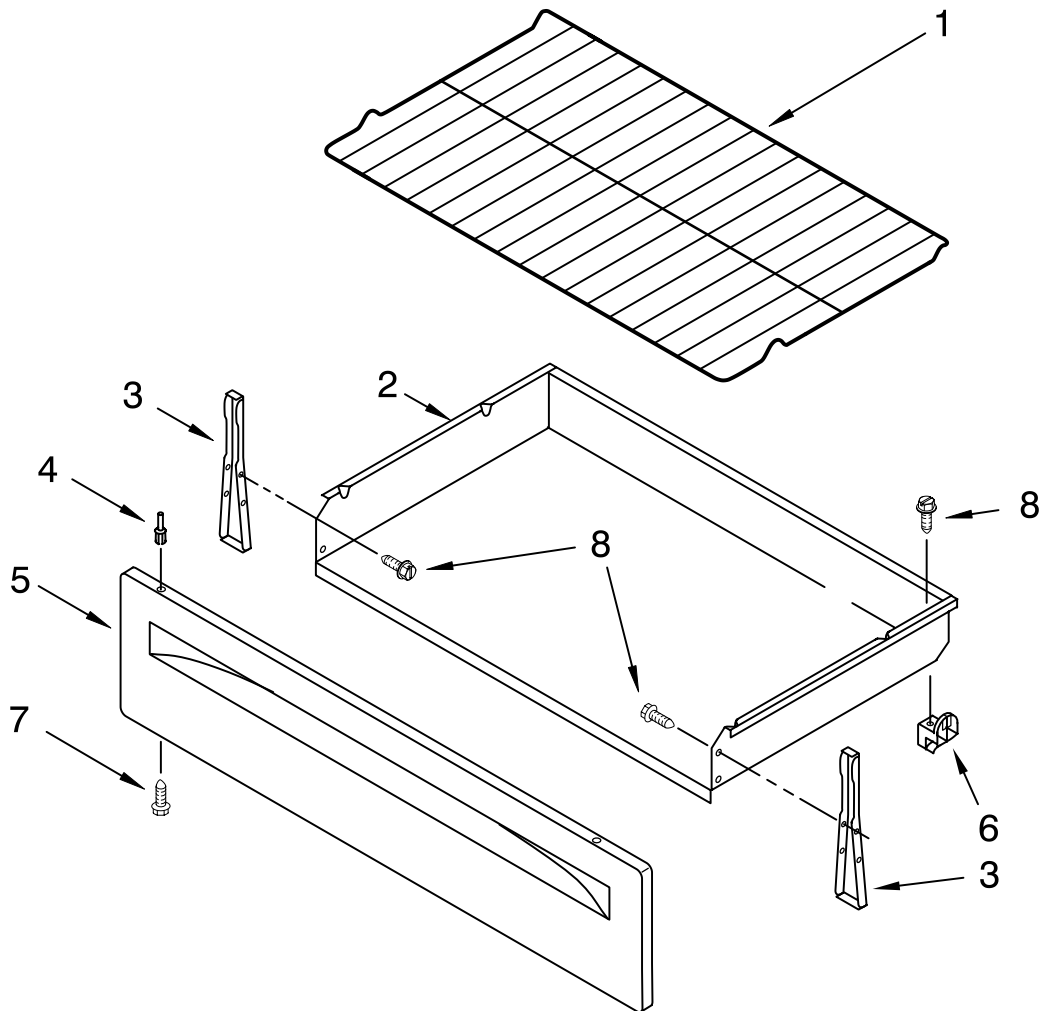


Illus. No.	Part No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761031	Drawer, Storage
3	W10174396	Bracket, Drawer(2)
4		Rivet, Push (2)
5	3196814	White Panel, Drawer Frnt
6	8053339	White Glide, Drawer (2)
7	8053334	Glide, Drawer (2)
7	3196168	Screw
8	3196165	Screw (6)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

For Model: IER320WW0

(White)

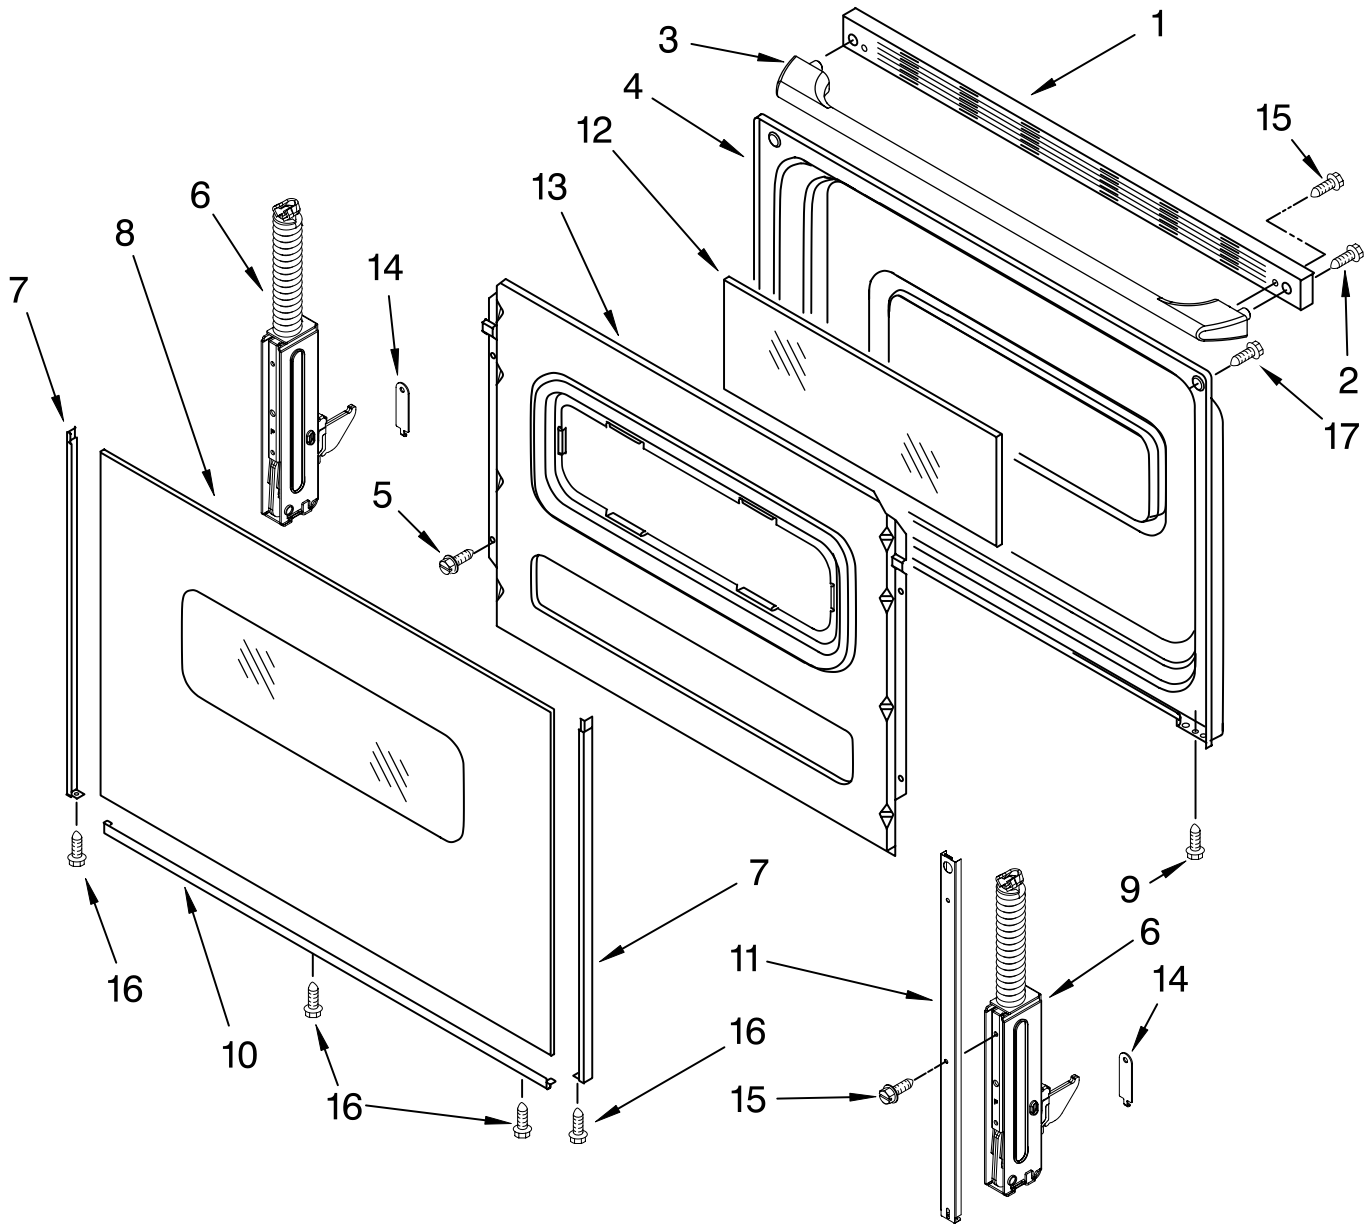

Illus. No.	Part No.	DESCRIPTION
1	W10016370	Trim, Top White
2	3196164	Screw
3	W10202219	Handle, Door White
4	9761340	Liner, Door
5	W10031790	Screw
6	9761494	Hinge, Door (2)

Illus. No.	Part No.	DESCRIPTION
7	8523172	Trim, Door (2) Left Hand-White
	8523166	Right Hand-White
8	9762476	Glass, Door White
9	3196160	Screw
10	8523175	Trim, Lower White

Illus. No.	Part No.	DESCRIPTION
11	W10113759	Strap, Door
12	9758163	Window, Inner
13	9761500	Retainer, Insul.
14	9761517	Clip, Dr Mntg (2)
15	W10031780	Screw
16	3196165	Screw (4)
17	W10200660	Screw (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS (NOT INCLUDED)

For Model: IER320WW0

(White)

<u>Illus. No.</u>	<u>Part No.</u>	<u>DESCRIPTION</u>
-------------------	-----------------	--------------------

Following Parts Not Illustrated

242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

### INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

### PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>DESCRIPTION</u>
-------------------	-----------------	--------------------

### PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

### PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)

### ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass

<u>Illus. No.</u>	<u>Part No.</u>	<u>DESCRIPTION</u>
-------------------	-----------------	--------------------

### ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

### WIRING HARNESS PARTS

W10196280	Harness, Cooktop
W10233353	Harness, Oven
313660	Clip, Ground Wire
311227	Wire, Ground
3196154	Screw, Grnd-Cktop
3196174	Screw, Grnd-Back
3196173	Screw, Ground

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>