 


iHome®

Model iH13
The Portable System
For Your iPod®

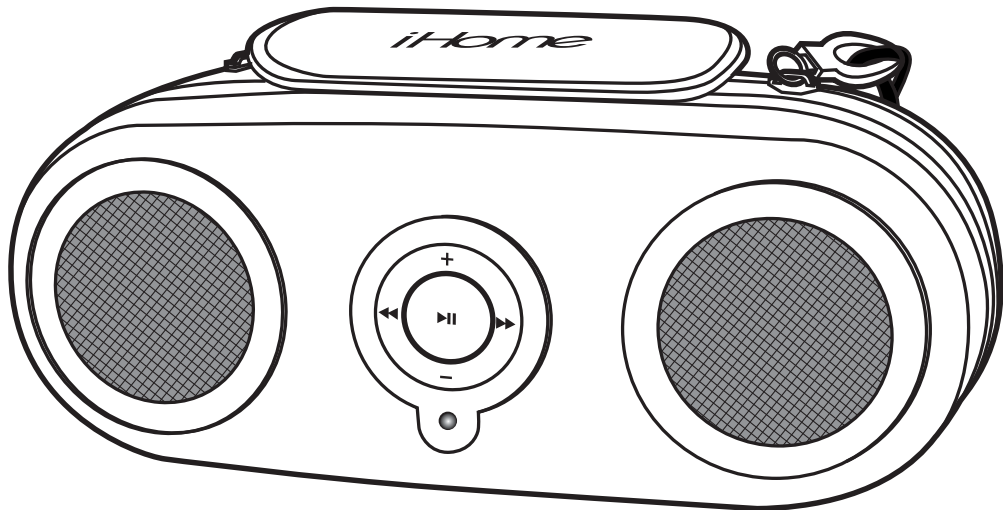

THIS UNIT WILL NOT CONTROL OR CHARGE 3G iPod

Questions? Visit www.ihomeaudio.com

Table of Contents

iH13 Quick Start	1
Controls and Indicators	2
Using the iH13	3-4
A Consumer Guide to Product Safety	5
Trouble Shooting	6
Solución De Problemas	7
Warranty Information	8

A Consumer Guide to Product Safety

 
IMPORTANT SAFETY INFORMATION: IT IS THE USER'S RESPONSIBILITY TO USE THIS PRODUCT PRUDENTLY, RESPONSIBLY AND IN A SAFE, NON-DISTRACTED MANNER AT ALL TIMES. FAILURE BY THE USER TO PAY FULL ATTENTION TO THE PROPER OPERATION OF ANY EQUIPMENT BEING USED ALONG WITH THIS PRODUCT COULD RESULT IN AN ACCIDENT AND/OR PERSONAL INJURY.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can damage the surface of the unit.


iH13 Quick Start

1:batteries

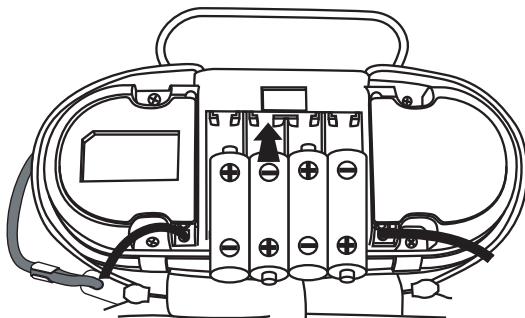


Open the battery compartment and insert 4 "AA" batteries as indicated on diagram in compartment. Unit can now play iPod. Batteries will not charge iPod.

 2:iPod

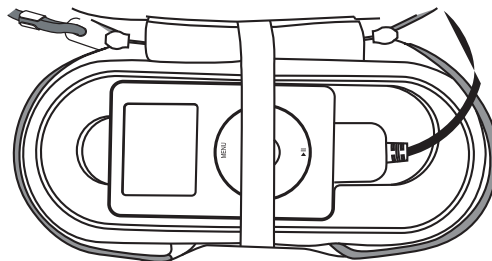

Gently insert connector plug into iPod and place iPod in iH13 docking pocket. To release iPod, press both sides of connector plug.

 
3:adaptor (optional)

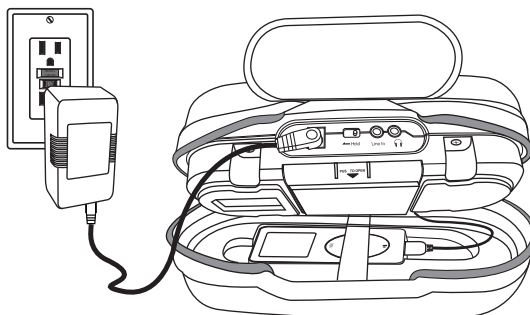


Attach optional AC adaptor (sold separately) to the DC jack on top of the iH13 and plug the other end into a working wall socket to charge and play iPod. Does not charge batteries.

Optional AC adaptor
sold separately
please visit
www.ihomeaudio.com
for details

 Top Panel

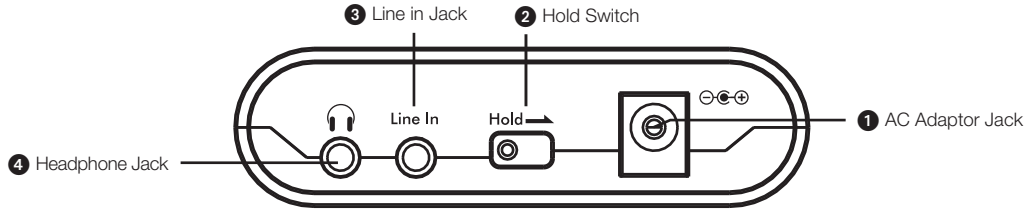

Front Panel

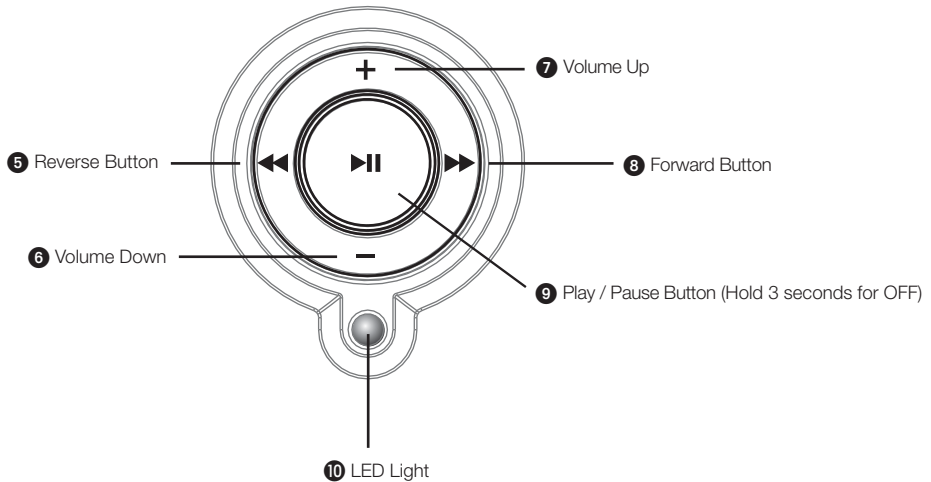 

Installing/Replacing Batteries

 
The iH13 uses 4 "AA" batteries for portable playing. The iH13 will not charge your iPod while operating on batteries. If sound becomes weak or distorted, it is time to replace the batteries.

- Open the battery compartment cover located below the jacks on the unit.
- Insert 4 "AA" batteries as indicated.
- We recommend the use of alkaline batteries for longer life.

NOTE: To save battery life, when running off batteries, unit will automatically power OFF after 2 hours of NON-use (no button activation). Press any button to re-activate the unit.

Batteries information:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon -zinc) or rechargeable (nickel-cadmium) batteries.

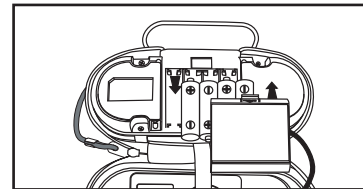


Charging: Connecting iH13 to AC Power Source

- a) Plug the optional AC adaptor (sold separately) into the ❶ AC Adaptor Jack and the other end into a standard 120 VAC wall socket. If an iPod is properly connected, it will begin charging, indicated by a flashing ❷ LED. The AC adaptor charges the iPod with or without batteries installed. It does not charge batteries.

CAUTION: DO NOT USE ANOTHER AC ADAPTOR. USE iHome iH13

AC ADAPTOR ONLY (sold separately; please see www.ihomeaudio.com).

 FAILURE TO TO DO SO MAY RESULT IN DAMAGE TO YOUR iH13, YOUR IPOD OR BOTH

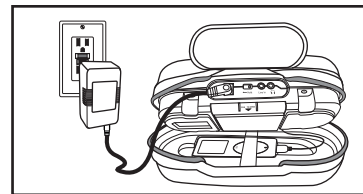

iPod

Playing your iPod

- a) Gently place iPod in iPod docking pocket behind retaining band.
- b) Gently insert connector plug into bottom of your iPod. Make sure there is a power source, either batteries or AC power. Close zipper on case. The LED on the front panel will blink if unit is off and iPod is charging. iH13 won't overcharge your iPod. **NOTE: If you dock an iPod with a drained battery, it may take up to 6 minutes of charging before the iPod will respond.**
- c) Press the ❹ iPod Play/Pause Button to play iPod, and again to pause.
- d) Press ❸ ❺ + or - button to increase or decrease volume.
- e) Press ❷ Forward or ❸ Reverse buttons to go to the next or previous track. Hold ❷ Forward or ❸ Reverse while track is playing to scan to a given music passage. ❷ Forward and ❸ Reverse do not affect components connected to the ❶ line-in jack.
- f) Press and HOLD the ❹ iPod Play/Pause button for 3 seconds to turn off the iPod and the unit.

 
Using iH13

Hold Switch

The iH13 has a ② Hold Switch to disable button functions while on the go to prevent accidental playing of the iPod and loss of battery power. Move ② Hold Switch to ON position to lock up button functions. Move the ② Hold Switch to OFF for normal button function.

Using the Line-in and Headphone Jacks

- a) Use an audio patch cord (**available at www.ihomeaudio.com**) to play nondocking iPod models or other audio devices through the iH13 ③ Line-in Jack (one end in the device's line out or headphones jack, the other in the iH13 line in jack). Make sure there is no iPod connected to the iH13 when using the ③ line-in jack. Press the ⑨ PLAY button to mute or unmute line-in source.
- b) Use the ④ Headphone Jack on the iH13 to disable the speakers and listen to your iPod privately.



IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
 - A. the power supply cable or plug has been damaged.
 - B. objects have fallen into or liquid has been spilled into the enclosure.
 - C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
13. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit www.ihomeaudio.com

Trouble Shooting

Symptom	Possible Problem	Solution
iH13 does not turn on	no batteries are installed	Install fresh batteries
iH13 does not turn off	improper shut down/ button not held long enough	HOLD the Play/Pause button for 3 seconds to turn unit off
iH13 doesn't respond	Hold switch is in on position, locking controls	Slide hold switch to off position
No sound from iH13	Volume is set too low on iH13	Make sure volume is turned up
	headphones in headphone jack	Make sure nothing is connected to the headphone jack
	iPod is not installed properly	Make sure iPod is properly and securely connected (see below)
iPod didn't charge up	No AC adaptor/AC adaptor is not plugged into unit and wall socket	The iH13 only charges your iPod while plugged into an AC outlet with the optional AC adaptor (visit www.ihomeaudio.com). Make sure the AC adaptor is plugged into the power jack on the iH13 and into a working wall socket to charge your iPod. You cannot overcharge your iPod.
	iPod is not installed properly	Remove your iPod from the connector and check for obstruction on the connector and on your iPod. Then reconnect iPod.
	iPod battery has problem	Please make sure your iPod is working properly before docking into the unit. Please refer to your iPod manual for details.
	iPod is locked up/ frozen	
Sound is distorted	Volume level is set too high	Decrease the volume
	Sound source is distorted	If the iPod original sound source (MP3) is old or of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD.
		If you are using an external sound source like older generation of iPod or iPod Shuffle, try reducing the output volume on the device itself. Also try setting iPod EQ to flat.
	Batteries are weak	Install fresh batteries
Unit/adaptor gets warm after extended play at high volume	This is normal	Turn unit off for awhile or lower volume

NOTE: When optional AC adaptor is plugged in, your iPod will charge (with or without batteries installed).

NOTE: Unit does not control or charge 3G iPod

Solución De Problemas

Síntoma	Posible Problema	Solución
El iH13 no enciende	No tiene pilas instaladas	Instale pilas nuevas.
El iH13 no se apaga	Apagado incorrecto / El botón de apagado no se oprimió el tiempo suficiente	Oprima el botón Reproducir/Pausa durante 3 segundos para apagar la unidad
El iH13 no responde	El switch HOLD está en la posición de encendido y bloquea los controles	Cambie el switch HOLD a la posición de apagado
El iH13 no produce ningún sonido	El volumen está demasiado bajo	Asegúrese de que el volumen no esté bajo
	Los audífonos están conectados	Asegúrese de que no haya nada conectado en la entrada para audífonos
	El iPod no se instaló de forma adecuada	Asegúrese de que el iPod esté conectado de manera adecuada y segura (vea más abajo)
El iPod no se carga	El iPod no se instaló de forma adecuada	Retire su iPod del conector y verifique que no haya obstrucciones entre el conector y su iPod; después vuelva a conectar el iPod.
	La pila del iPod tiene algún problema	Por favor asegúrese de que su iPod esté funcionando adecuadamente antes de acoplarlo en la unidad. Para más detalles, consulte el manual de su iPod
	El iPod está bloqueado / congelado	
	El adaptador de corriente alterna no está conectado a la unidad o enchufado al tomacorriente	El iH13 sólo carga su iPod al conectarlo a un tomacorriente de AC. Asegúrese de que el adaptador esté conectado a la entrada para energía en el iH19 y a un tomacorriente para así poder cargar el iPod. No debe sobrecargar su iPod
El sonido suena distorsionado	El volumen está demasiado alto	Baje el volumen
	La fuente de sonido está distorsionada	Si la fuente original de sonido para el iPod (MP3) es antigua o de baja calidad, la distorsión y el ruido se notan con facilidad con bocinas de alto poder. Pruebe con otra fuente de sonido, como por ejemplo, con un disco compacto de música. Si utiliza una fuente externa de sonido como la generación anterior de iPod o iPod Shuffle, intente reducir el volumen de salida en el dispositivo. Intente también poner el ecualizador del iPod en bemol.
	Las pilas están bajas	Coloque pilas nuevas
La unidad o el adaptador se calientan después de reproducir durante largo rato a volumen alto	Es normal	Apague la unidad un rato o baje el volumen

NOTA: Cuando el adaptador AC está conectado, su iPod se cargará (con o sin las pilas instaladas).

NOTA: La unidad no controla o carga iPod de 3a Generación

Limited 90-Day Warranty Information

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$10.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service without proof of purchase is \$30.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$10.00 (\$30.00 without proof of purchase).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department

*SDI Technologies Inc.
1330 Goodyear Drive
El Paso, TX 79936-6420*

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI Technologies or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI Technologies product.

© 2008 SDI Technologies, Inc. All rights reserved

**Questions? Visit www.ihomeaudio.com
or call 1-800-288-2792 Toll Free**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>