



USER'S GUIDE

V: 1227-0324-09

ISP389B

2.1 Channel Home Music System with Dock for iPhone/iPod

CONTENTS

WARNINGS AND PRECAUTIONS	2
GENERAL PRODUCT INFORMATION	4
FEATURES	4
IN THE BOX	4
POWER OPTIONS	5
AC/DC ADAPTER	5
BATTERY BACKUP	5
REMOTE BATTERY	5
OPERATIONS	6
SETTING THE CLOCK	6
USING THE AUXILIARY INPUT	6
USING THE VIDEO OUTPUT	6
OPERATIONS	7
DOCKING AN IPOD/IPHONE	7
PLAYING AN IPOD/IPHONE	7
CONTROLS	8
CONTROL GLOSSARY	9
CONTROLS	10
CONTROL GLOSSARY	11
COMPANY INFORMATION	12
GREEN INITIATIVE	12
INTERNATIONAL SUPPORT	12
SERVICE INFORMATION	12

For the most up-to-date version of this User's Guide, go to www.ilive.net

WARNINGS AND PRECAUTIONS

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To prevent fire or shock hazards, do not expose this unit to rain or moisture.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste
- **WARNING:** Lithium ion batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries. Tum que omante, vid pecesim aximei igingultum pubitere comant. Casta,



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

FCC Warnings

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



GENERAL PRODUCT INFORMATION

FEATURES

Dock plays and charges iPhone and iPod

2.1 channel speaker system

Auxiliary input for iPod shuffle and other audio devices

Remote

High power amplifier

Integrated subwoofer

Video output

Digital clock

AC power

IN THE BOX

ISP389B

AC/DC Adapter

Remote Control

Docking Brackets for iPod/iPhone

 
Documentation



POWER OPTIONS

AC/DC ADAPTER


Plug the included AC/DC Adapter into the DC Power Input on the unit and a standard AC power source to power the unit.

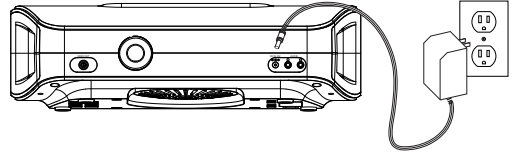

BATTERY BACKUP



The Battery Backup requires 2 AAA batteries, not included.

 The Backup Batteries will retain the set time in the case of an unexpected power outage. The unit's primary functions cannot run off of the Backup Batteries alone.

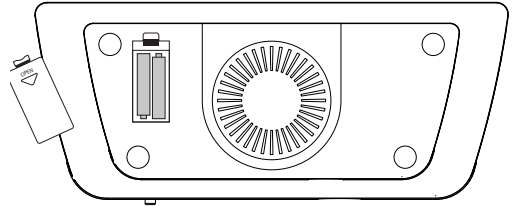

REMOTE BATTERY

  The remote requires 1 CR2025 battery (pre-installed).

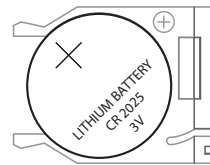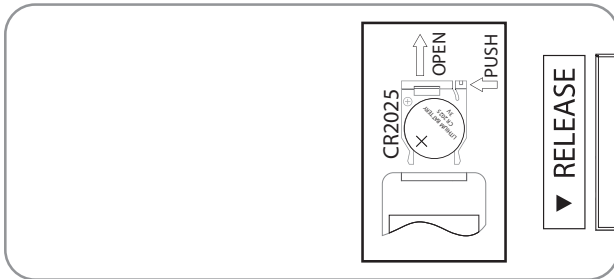

OPEN



PUSH

OPERATIONS

SETTING THE CLOCK

1. Press and hold the **Power Button** to turn the unit off.

When the unit is powered off, a small red light will appear as an indicator, directly to the right of the display.

2. Press and hold the **Clock Adjust Button** for 3 seconds.

The hour will begin to blink on the display.

3. Press the **Volume/Hour Button** to set the hour

4. Press the **Clock Adjust Button**.

The minute will begin to blink on the display.

5. Press the **Volume/Minute Button** to set the minute.

6. Press the **Clock Adjust Button** to set the adjusted time.

USING THE AUXILIARY INPUT

1. Use a *3.5mm Mini Phono Cable*, not included, to connect an MP3 player or other audio source to the **Auxiliary 1** or **Auxiliary 2 Input**.

2. Press the **Power Button** to turn the unit on.

3. Press the **Source Button** to switch to *Auxiliary 1* or *Auxiliary 2 Mode*, as indicated by the display.

Use the connected MP3 player or audio source's native controls to control audio playback.

USING THE VIDEO OUTPUT

1. Use an *RCA Composite Video Cable*, not included, to connect a television or display to the **Video Output**.

This will allow you to play video from an iPod or iPhone docked on the unit, on a connected television.

2. Dock an iPod/iPhone onto the unit.

3. Press the **Power Button** to turn the unit on.

4. Press the **Source Button** to switch to *iPod Mode*.

The iPod or iPhone "Video Settings" need to be set to "Video Out" or "TV Out".

5. Select a video on the docked iPod or iPhone, and press the **Play/Pause Button** to begin playing it through the connected television.



OPERATIONS

DOCKING AN IPOD/IPHONE

1. Locate the numbered bracket that fits the iPod or iPhone that will be docked.

Each included Bracket has a number on it, indicating which iPod or iPhone model that bracket is compatible with.

- *See the separate bracket chart page to identify which bracket is needed.*
2. Snap the bracket into place over the **iPod Connector** in the dock.
 3. Connect the iPod or iPhone to the **iPod Connector** inside the dock.

When the unit is plugged in, using AC power, the docked iPod or iPhone will charge.

 
 
 
 
PLAYING AN IPOD/IPHONE

Follow the directions for docking an iPod or iPhone.

1. Press the **Power Button** to turn the unit on.
2. Press the **Source Button** to switch to iPod Mode.
3. Press the **Play/Pause Button** to begin playing audio from a docked iPod or iPhone.



CONTROLS

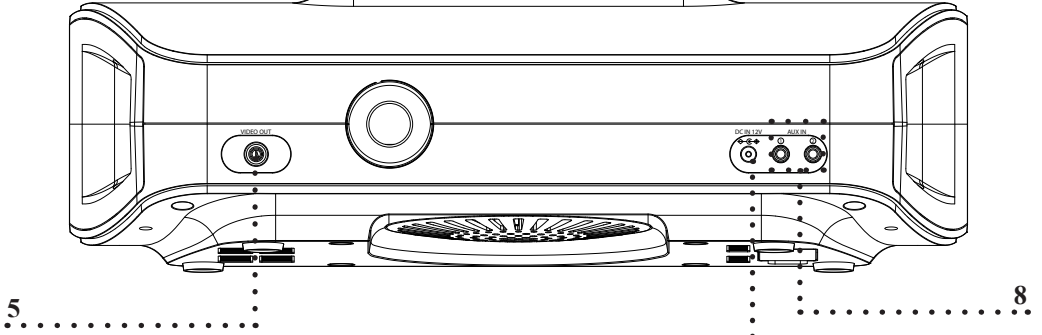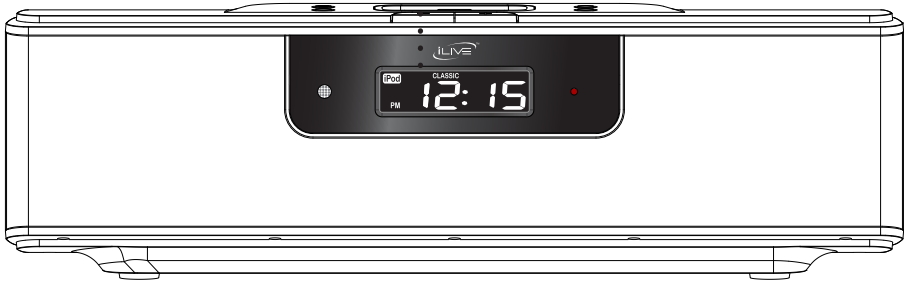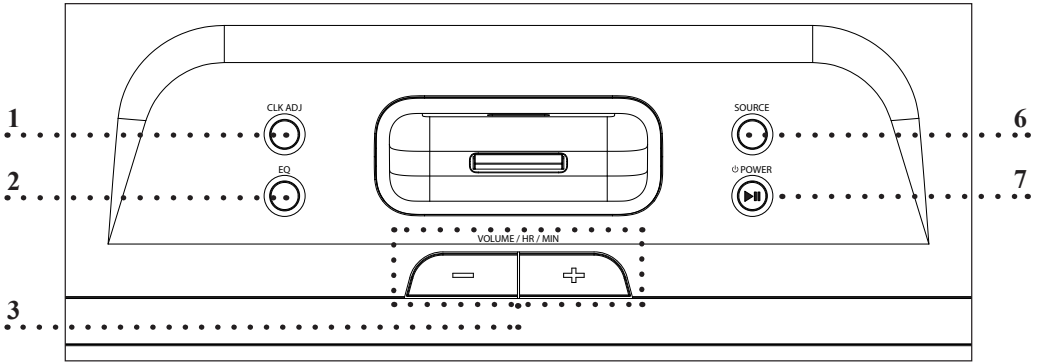



01. Clock Adjust Button

Press the Clock Adjust Button to set the time.

02. EQ Button

Press the EQ Button to switch between the different EQ Modes.

Jazz, Rock, Classic, and Pop.

03. Volume/Hour/Minute Buttons

Press the Volume Buttons to adjust the volume of the unit.

Press the Hour/Minute Buttons to adjust the hour and minute when setting the time.

04. Display

05. Video Output

Use the Video Output to connect the unit to a television.

Video from a docked iPod/iPhone can be output from the unit to a connected television.

06. Source Button

Press the Source Button to switch between the unit's different modes.

iPod, Auxiliary 1, and Auxiliary 2.

07. Power/Play/Pause Button

Press the Power Button to turn the unit on.

Press and hold the Power Button to turn the unit off.

In *iPod Mode*, press the Play/Pause Button to play or pause a docked iPod/iPhone.

08. Auxiliary Inputs 1 & 2

 
Use the Auxiliary Inputs to connect an MP3 Player or other audio source to the unit.

09. DC Power Input

Use the DC Power Input to connect the unit to a power source.



CONTROLS

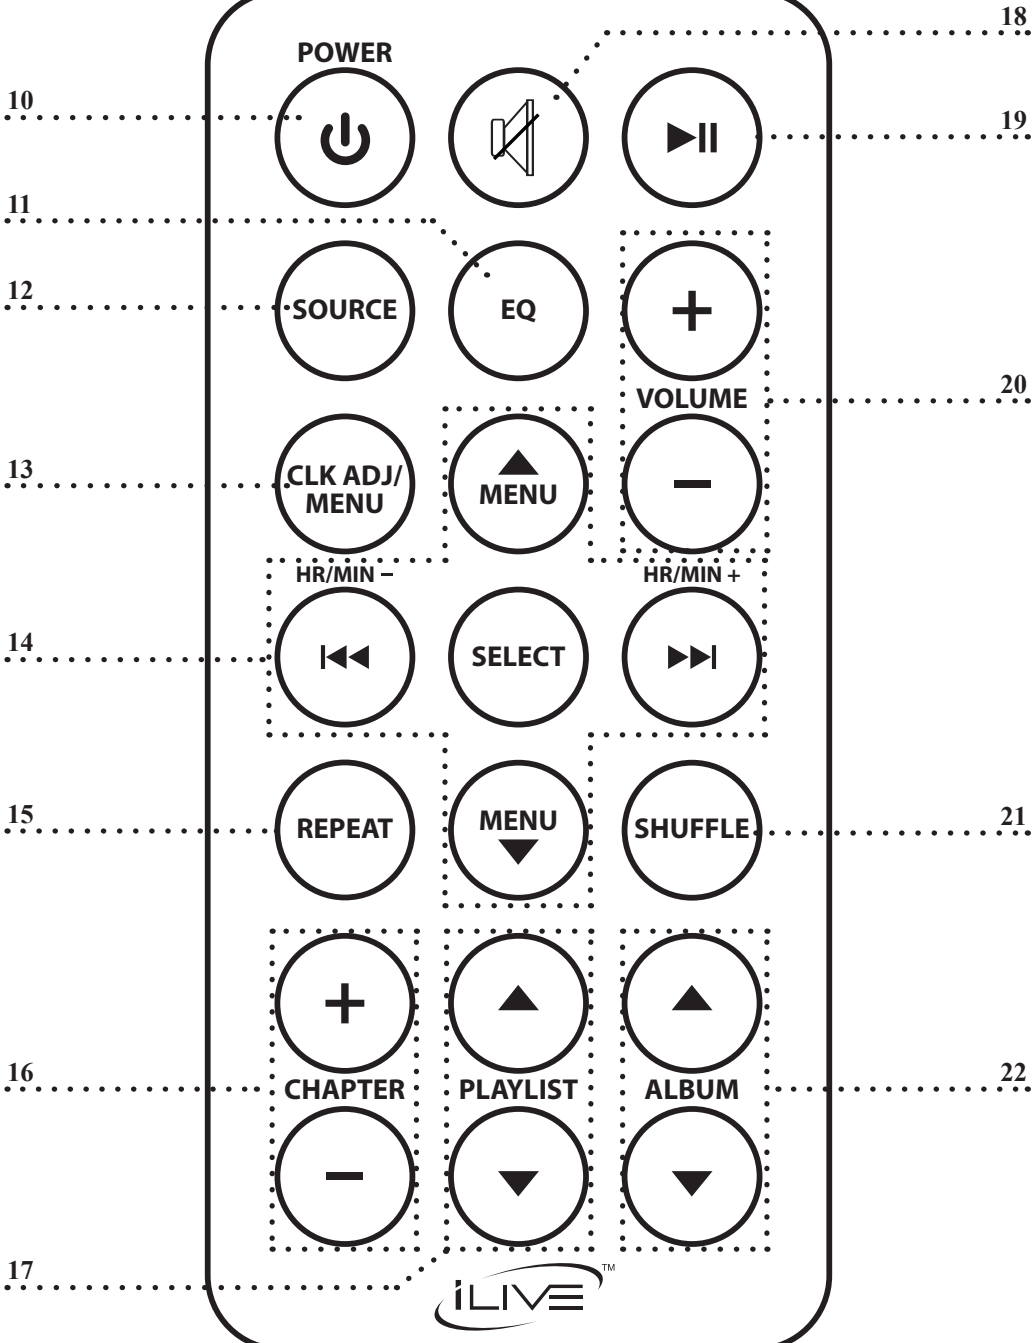

10. Power Button

Press the Power Button to turn the unit on and off.

11. EQ Button

Press the EQ Button to switch between the different EQ Modes.

Rock, Classic, Jazz, and Pop.

12. Source Button

Press the Source Button to switch between the unit's different modes.

iPod, Auxiliary 1, and Auxiliary 2.

13. Clock Adjust/Menu Button

Press the Clock Adjust Button to set the time.

Press the Menu Button to move to the previous menu on a docked iPod/iPhone.

14. Menu Up/Down Buttons

Press the Menu Up/Down Buttons to navigate through the menus on a docked iPod/iPhone.

Hour/Minute Buttons

Press the Hour/Minute Buttons to adjust the hour and minute when setting the time.

Skip/Search Buttons

Press the Skip Buttons to skip between tracks on a docked iPod/iPhone.

Press and hold Search Buttons to search through an individual track on a docked iPod/iPhone.

Select Button

Press the Select Button to make a selection on a docked iPod/iPhone.

15. Repeat Button

Press the Repeat Button to repeat the current track, album, or playlist.

Press the Repeat Button once to repeat the current track

Press the Repeat Button twice to repeat the current album or playlist.

Press the Repeat Button a third time to cancel the repeat function.

16. Chapter Buttons

Press the Chapter Buttons to cycle through chapters on a docked iPod/iPhone.

17. Playlist Buttons

Press the Playlist Buttons to cycle through playlists on a docked iPod/iPhone.

18. Mute Button

Press the Mute Button to mute the volume of the unit.

19. Play/Pause Button

Press the Play/Pause Button to play or pause a docked iPod/iPhone.

20. Volume Buttons**21. Shuffle Button**

Press the Shuffle Button to activate or deactivate *Shuffle Mode*. In *Shuffle Mode*, the docked iPod/iPhone will play songs in a random order.

22. Album Buttons

Press the Album Buttons to cycle through albums on a docked iPod/iPhone.



COMPANY INFORMATION

GREEN INITIATIVE

Environmental Commitment to ‘Protect for Today and Sustain for Tomorrow’

2009 marks the official launch of DPI, Inc.’s corporate campaign for a greener and cleaner world. DPI and its four brands, iLive, WeatherX, Capri, and GPX, are building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring ‘green office’ procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

INTERNATIONAL SUPPORT

To download this User’s Guide in English, Spanish, or French, visit the support section at www.ilive.net.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.ilive.net.

SERVICE INFORMATION

Address: 2116 Carr Street, St. Louis MO, 63106

Phone: 1-314-621-2881

Fax: 1-314-588-1805

Email: customerservice@ilive.net

Parts Email: partsinfo@dpi-global.com

Website: www.ilive.net

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>