



USER'S GUIDE

V:1308-0119-10

ICP689B

Home Dock for iPhone/iPod with Intelli Set™

CONTENTS

WARNINGS AND PRECATIONS	2
PRODUCT INFORMATION	4
FEATURES.....	4
WHAT'S IN THE BOX.....	4
POWERING THE UNIT & REMOTE	5
AC/DC ADAPTER.....	5
BATTERY BACKUP.....	5
REMOTE BATTERIES.....	5
CLOCK OPERATIONS	6
SETTING THE CLOCK USING INTELL SET™.....	6
MANUALLY SETTING THE CLOCK.....	6
ALARM & SLEEP OPERATIONS	7
SETTING THE ALARMS.....	7
SETTING THE SLEEP TIMER.....	7
IPOD OPERATIONS	8
DOCKING AN IPOD/IPHONE.....	8
PLAYING AN IPOD/IPHONE.....	8
RADIO & MISC. OPERATIONS	9
TUNING THE AM OR FM RADIO.....	9
SAVING AN AM OR FM RADIO STATION TO THE UNIT'S MEMORY.....	9
SELECTING A SAVED AM OR FM RADIO STATION.....	9
USING THE AUXILIARY INPUT.....	9
CONTROLS & CONTROL GLOSSARY	10-15
COMPANY INFORMATION	16
GREEN INITIATIVE.....	16
INTERNATIONAL SUPPORT.....	16
SERVICE INFORMATION.....	16

WARNINGS AND PRECATIONS

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To prevent fire or shock hazards, do not expose this unit to rain or moisture.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste
- **WARNING:** Lithium ion batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries. Tum que omante, vid pecesim aximei igingultum pubitere comant. Casta,



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the bottom of apparatus.
Les précautions d'emploi sont inscrites en bas de l'appareil.
- The marking information is located at the bottom of apparatus.
Les marquages sont inscrits en bas de l'appareil.

FCC Warnings

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FEATURES

 
- Dock plays and charges iPhone and iPod
- AM/FM radio with digital tuning
- Intelli Set™ auto clock set
- Dual alarm
- Digital clock
- Remote
- Digital volume control
- Preset EQ settings
- Auxiliary input for iPod shuffle and other audio devices
- Gradual wake
- Wake to iPod, radio, or buzzer
- Snooze function
- Sleep function
- Battery backup
- 0.8" LCD display with white backlight
- AC power
- Includes: AC/DC adapter, remote control, docking brackets for iPod

WHAT'S IN THE BOX

- IC689B
- AC/DC Adapter
- Remote Control
- Docking Brackets for iPod

AC/DC ADAPTER

Use the AC/DC Adapter to connect the unit to a standard AC Outlet.

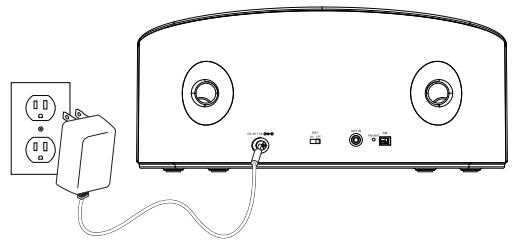


BATTERY BACKUP

Requires 1 CR2032 Battery. (pre-installed)

Please note, the Battery Backup is meant for short term unexpected power outages. It will only preserve the time and alarm times. None of the other playback functions will work solely off of the backup battery power.

To access the backup battery, use a phillips head screwdriver to remove the battery compartment door.

 
Only replace with an equivalent battery type

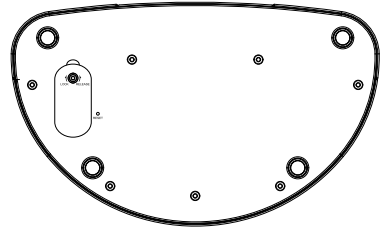

REMOTE BATTERIES

Requires 1 CR2025 Battery. (pre-installed)

 Only replace with an equivalent battery type

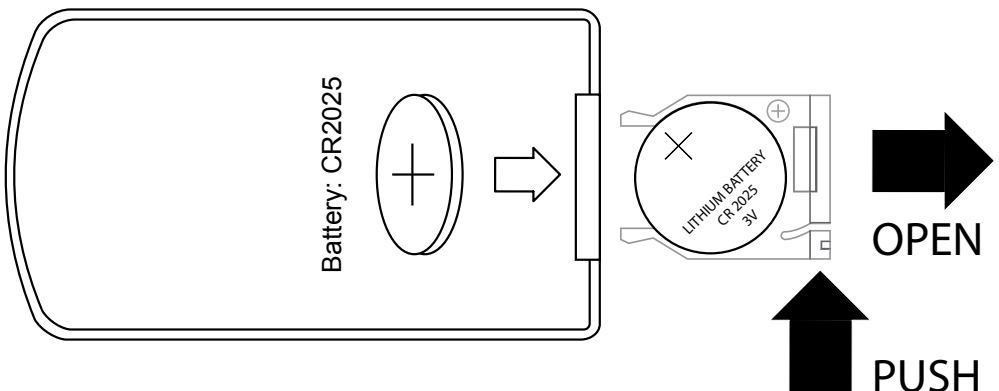

CLOCK OPERATIONS

SETTING THE CLOCK USING INTELL SET™

1. When the unit is first powered on, the time will automatically be set to Eastern Standard Time.
2. Press the **Power Button** to turn the unit off.
3. Press and hold the **Time Zone Button**.
4. While holding the **Time Zone Button**, press the **Hour/Minute Buttons** on the unit to adjust the time zone.

Refer to the Time Zone Chart to find your specific time zone.

MANUALLY SETTING THE CLOCK

1. Press the **Power Button** to turn the unit off.
1. Press and hold the **Clock Adjust Button**.
2. While holding the **Clock Adjust Button**, press the **Hour/Minute Buttons** to adjust the hour and minute.

A PM Indicator will appear on the display when the time is set in the PM.

3. After the correct time is set, release the **Clock Adjust Button** to finish setting the clock.

	Abbr.	Full Name	Time Zone
A-1	AST	Atlantic Standard Time	UTC - 4 hours
	ADT	Atlantic Daylight Time	UTC - 3 hours
A-2	EST	Eastern Standard Time	UTC - 5 hours
	EDT	Eastern Daylight Time	UTC - 4 hours
A-3	CST	Central Standard Time	UTC - 6 hours
	CDT	Central Daylight Time	UTC - 5 hours
A-4	MST	Mountain Standard Time	UTC - 7 hours
	MDT	Mountain Daylight Time	UTC - 6 hours
A-5	PST	Pacific Standard Time	UTC - 8 hours
	PDT	Pacific Daylight Time	UTC - 7 hours
A-6	AKST	Alaska Standard Time	UTC - 9 hours
	AKDT	Alaska Daylight Time	UTC - 8 hours
A-7	HAST	Hawaii-Aleutian Standard Time	UTC - 10 hours
	HADT	Hawaii-Aleutian Daylight Time	UTC - 9 hours

SETTING THE ALARMS

1. Press the **Power Button** to turn the unit off.

2. Press and hold the **Alarm 1 Button** or **Alarm 2 Button**.

3. While holding the **Alarm 1** or **2 Button** press the **Hour/Minute Buttons** to adjust the alarm time.

4. While holding the **Alarm 1** or **2 Button** press the **Source Button** to adjust the alarm source. (iPod, Radio, or Buzzer)

5. Release the **Alarm 1** or **2 Button** to finish setting the alarm.

6. Press the **Alarm 1** or **2 Button** to activate or deactivate alarm 1 or 2.

SETTING THE SLEEP TIMER

1. Adjust a docked iPod to the desired track, album, or playlist, or adjust the AM or FM radio to the desired station.

2. Press the **Sleep Button** repeatedly to cycle through the available sleep times (90, 80, 70, 60, 50, 40, 30, 20, or 10 minutes.)

3. When the sleep timer is set, "SLP" will appear on the display.

4. After the set amount of time has expired, the unit will power off.

DOCKING AN IPOD/IPHONE

1. Locate the numbered bracket that fits the iPod or iPhone that will be docked.

Each included Bracket has a number on it, indicating which iPod or iPhone model that bracket is compatible with.

 
 
- **See the separate bracket chart page to identify which bracket is needed.**
2. Snap the bracket into place over the **iPod Connector** in the dock.
 3. Connect the iPod or iPhone to the **iPod Connector** inside the dock.

When the unit is plugged in, using AC power, the docked iPod or iPhone will charge.

PLAYING AN IPOD/IPHONE

Follow the directions for docking an iPod or iPhone.

1. Press the **Power Button** to turn the unit on.
2. Press the **Source Button** to switch to *iPod Mode*.
3. Press the **Play/Pause Button** to begin playing audio from a docked iPod or iPhone.

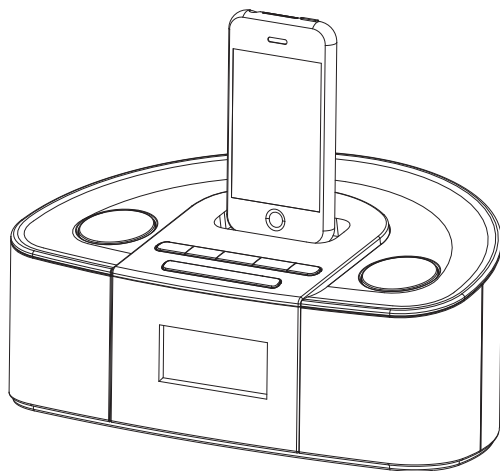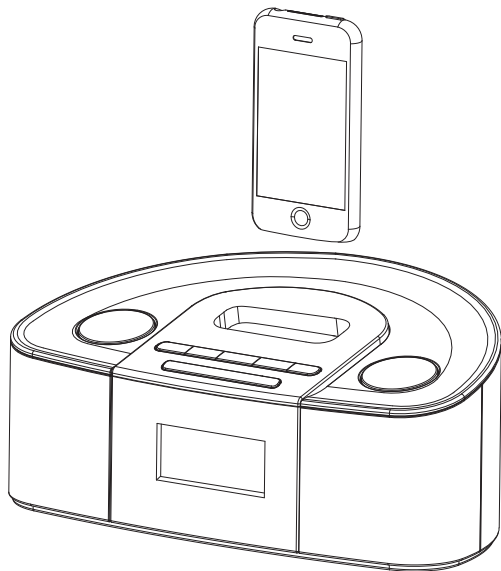

TUNING THE AM OR FM RADIO

1. Press the **Power Button** to turn the unit on.

2. Press the **Source Button** to switch to *Radio Mode*.

3. Press the **AM/FM Button** to switch between AM or FM radio mode.

 - Press the **Tune Buttons** to adjust the AM and FM radio station when in *Radio Mode*.

Press and hold the **Tune Buttons** to scan for the next available AM or FM radio station.

SAVING AN AM OR FM RADIO STATION TO THE UNIT'S MEMORY

4. Tune to the desired AM or FM radio station.

5. Press the **Memory Button** on the remote.

6. Press the **Memory Up/Down Buttons** to select a memory slot to save the current radio station to.

7. Press the **Memory Button** on the remote, to save the current AM or FM station to the selected memory slot.

Up to 20 AM and 20 FM radio stations can be saved to the unit's memory at one time.

SELECTING A SAVED AM OR FM RADIO STATION

1. Press the **Memory Up/Down Buttons** on the remote or the **Preset Buttons** on the unit to cycle through saved AM or FM radio stations.

USING THE AUXILIARY INPUT

1. Connect an MP3 player or other audio source to the **Auxiliary Input** on the back of the unit.

Requires a 3.5mm Line-Input Cable. (not included)

 
 
2. Press the **Power Button** to turn the unit on.

3. Press the **Source Button** to switch the unit to *Auxiliary Mode*.

 - Use the native controls on the MP3 player or other audio source to control playback options.

 - Use the volume controls on the unit to control the volume.

CONTROLS

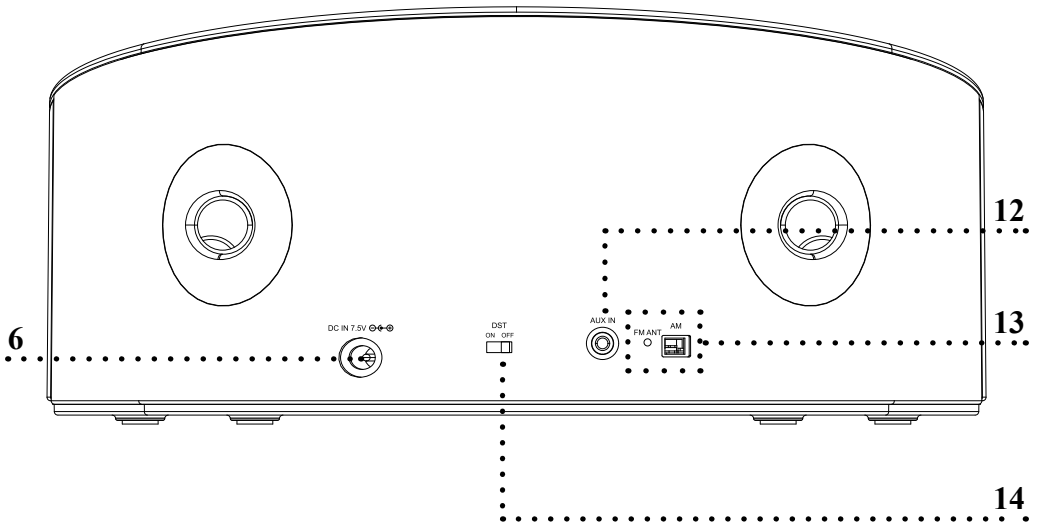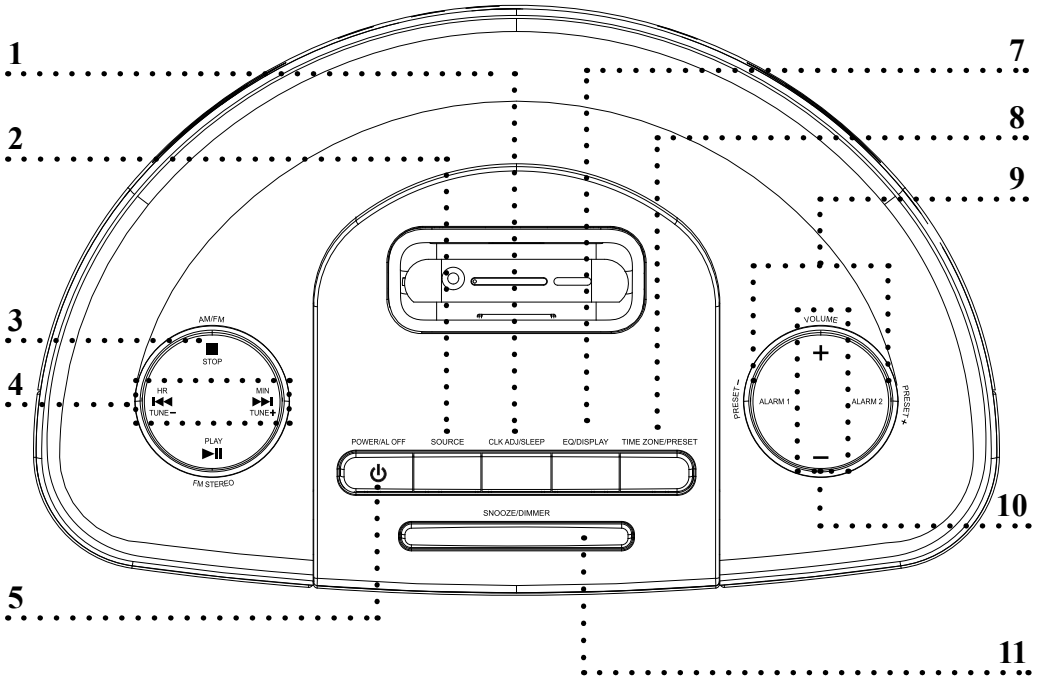

01. Clock Adjust/Sleep Button

Press the Clock Adjust Button to adjust the unit's clock.

Press the Sleep Button to adjust the unit's sleep timer. (90, 80, 70, 60, 50, 40, 30, 20, or 10 minutes)

02. Source Button

Press the Source Button to switch between the unit's different modes.

iPod Mode, Radio Mode, or Aux Mode

03. AM/FM/Stop Button

Press the AM/FM Button to switch between AM and FM radio when in *Radio Mode*.

Press the Stop Button to stop a docked iPod while playing.

04. Hour/Minute/Tune Buttons

Press the Hour/Minute Buttons to adjust the hour and minute when setting the clock or alarms.

Press the Tune Buttons to adjust the AM and FM radio station when in *Radio Mode*.

Press and hold the Tune Buttons to scan for the next available AM or FM radio station.

Press the Tune Buttons to skip between songs on a docked iPod when in *iPod Mode*.

Press and hold the Tune Buttons to search within an individual track on a docked iPod when in *iPod Mode*.

05. Power/Alarm Off Button

Press the Power Button to turn the unit off and on.

Press the Alarm Off Button to turn the alarm off after it has sounded.

06. DC Power Input**07. EQ/Display Button**

Press the EQ Button to switch between the unit's preset equalizer settings. (*Classic, Rock, Pop, and Jazz*)

Press and hold the Display Button to view the time when in *Radio Mode*.

08. Time Zone/Preset Button

Press the Time Zone Button to adjust the unit's currently set time zone.

Press the Preset Button to save the current AM or FM radio station to the unit's memory.

09. Preset/Alarm Buttons

Press the Preset Buttons to cycle through saved AM and FM radio stations.

Press the Alarm Buttons to set alarm 1 or alarm 2, and to activate or deactivate alarm 1 or alarm 2.

10. Volume Buttons**11. Snooze/Dimmer Button**

Press the Snooze Button, after the alarm has sounded, to delay the alarm for an additional 9 minutes.

Press the Dimmer Button to adjust the brightness of the display.

12. Auxiliary Input

Use the Auxiliary Input to connect an MP3 Player or other audio source to the unit.

13. AM Antenna Connection & FM Wire Antenna

 
Use the AM Antenna Connection to connect the included AM Loop Antenna to the unit.

14. DST Button

Press the DST Button to turn Daylight Savings Time off or on.



POWER/
AL OFF



27

28

29

15

16

17

18

19

20

21

22

23

24

25

26

15. Power/Alarm Off Button

Press the Power Button to turn the unit off and on.

Press the Alarm Off Button to turn the alarm off after it has sounded.

16. Auxiliary Button

Press the Auxiliary Button to switch to *Auxiliary Mode*. When activated, the unit will output audio from the audio source connected to the Auxiliary Input.

17. Alarm 1 Button

With the unit powered off, press and hold the Alarm 1 Button to set alarm 1.

With the unit powered off, press the Alarm 1 Button to activate or deactivate alarm 1.

18. Repeat Button

Press the Repeat Button to repeat the current track, album, or playlist.

Press Once: Repeat current track.

Press Twice: Repeat album or playlist.

19. Alarm 2 Button

With the unit powered off, press and hold the Alarm 2 Button to set alarm 2.

With the unit powered off, press the Alarm 2 Button to activate or deactivate alarm 2.

20. Play/Pause/FM St. Button

Press the Play and Pause Button to play or pause a docked iPod.

In *Radio Mode* press the FM St. Button to turn FM Stereo Mode off and on.

21. Memory Button

Press the Memory Button to save the current FM or AM radio station to the unit's memory.

22. Time Zone Button

Press the Time Zone Button to adjust the currently set time zone.

See the Operations on setting the time for detailed instructions on using the Time Zone Button.

23. Sleep Button

Press the Sleep Button to adjust the unit's sleep timer. (90, 80, 70, 60, 50, 40, 30, 20, or 10 minutes)

24. EQ Button

Press the EQ Button to switch between the unit's preset equalizer settings. (*Classic, Rock, Pop, and Jazz*)

25. Display Button

Press and hold the Display Button to view the time when in *Radio Mode*.

26. Mute Button

Press the Mute Button to decrease the unit's volume completely.

27. Radio Button

Press the Radio Button to switch to *Radio Mode*. When activated, the unit can be switched between AM and FM radio modes.

 
28. iPod Button

Press the iPod Button to switch to *iPod Mode*. When activated, the unit will amplify audio from a docked iPod or iPhone.

29. Menu Button

Press the Menu Button to go to the previous menu on a docked iPod/iPhone.

This button works exactly like the "Menu" button on an iPod.

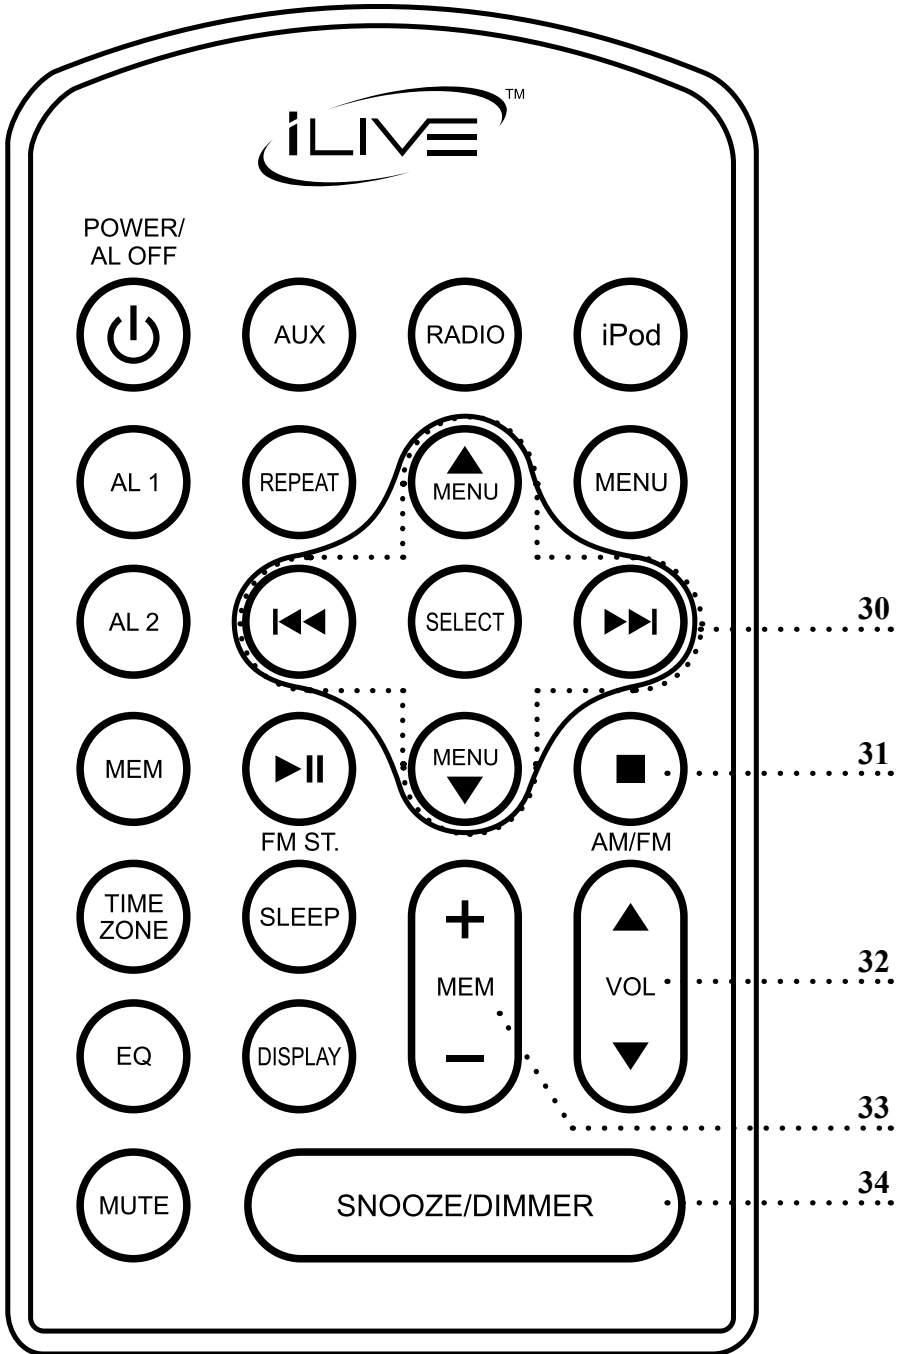

30. Skip/Search Buttons

Press the Skip/Search Buttons to skip tracks on a docked iPod/iPhone.

Press and hold the Skip/Search Buttons to search through an individual track on a docked iPod/iPhone.

Menu Up/Down Buttons

Press the Menu Up/Down Buttons to navigate through the menus on a docked iPod/iPhone.

Select Buttons

Press the Select Button to make a selection on a docked iPod/iPhone.

The Select Button functions exactly like the select button on an iPod.

31. Stop/AM/FM Button

Press the Stop Button to stop an iPod during play.

Press the AM/FM Button to switch between AM and FM radio modes on a docked iPod.

32. Volume Buttons

Press the Volume Buttons to adjust the unit's volume.

33. Memory Up/Down Buttons

Press the Memory Up/Down Buttons to cycle through AM and FM radio stations that have been saved to the unit's memory.

34. Snooze/Dimmer

Press the Snooze Button, after the alarm has sounded, to delay the alarm for an additional 9 minutes.

Press the Dimmer Button to adjust the brightness of the display.

COMPANY INFORMATION

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, visit the support section at www.ilive.net.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.ilive.net.

SERVICE INFORMATION

Address: 2116 Carr Street, St. Louis MO, 63106

Phone: 1-314-621-2881

Fax: 1-314-588-1805

Email: customerservice@ilive.net

Parts Email: partsinfo@dpi-global.com

Website: www.ilive.net

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>