

ENGLISH

BEFORE USING FOR THE FIRST TIME

- Operate the coffee maker for the first time using water only in order to rinse through the system.

MAKING COFFEE

- Do not use warm water.
- Do not use the jug without the lid (fig.9).
- Thanks to the anti drip system you can take off the glass jug while the coffee is flowing in order to serve a cup of coffee (depending on model).
- The coffee maker is supplied with a permanent filter. This can be used instead of a paper filter (shown in the diagram). Do not use a paper filter and permanent filter together as this may cause an overflow of coffee out of the filter holder.
- Wash the permanent filter after each use.
- Adjust the number of scoops of coffee to the strength of coffee required. As a guide, scoop for every two cups gives a medium to strong coffee.
- Once the coffee has filtered through, we recommend that you allow it to stand on the hot plate for 5 minutes before drinking.
- Note: cold milk straight from a refrigerator will decrease the temperature of the coffee.
- The jug is microwave proof

CLEANING

- Unplug and leave to cool before cleaning.
- Wipe the outside of the coffee maker with a damp sponge.
- Do not immerse the appliance, plug or cord in water.
- The removable parts can be washed in a dishwasher.

DESCALING


- Descale your coffee maker once a month.
- Always remove the permanent filter from the filter holder before descaling
- You can use descaling powder or white vinegar.
- If you use descaling powder, follow the instructions mentioned on the bag.
- If you use white vinegar :
 - Pour 1 cup of water and 1 cup of white vinegar into the watertank
 - Switch on and after 10 seconds, switch off
 - Leave for 30 minutes to allow the solution to descale the appliance. Switch on again and let the remainder of the solution filter through the coffee maker.
 - Operate twice with cold water only to rinse out before re-using.

SAFETY WARNINGS

- Be sure the power supply corresponds to that shown on the rating plate of the appliance. Be sure your socket is fitted with an earth pin.
- Keep out of the reach of children.
- Always disconnect from the mains supply when not in use and before cleaning.
- Do not use the appliance if either it or the cord is damaged, it has been dropped and is visibly damaged or functions abnormally.
- If an extension lead is used, it must be earthed in good condition.
- Do not immerse the appliance, plug or cord in water.
- The safety of this appliance complies with the technical regulations and standards in force.
- The appliance cannot be opened without special tools, therefore for any cleaning and repairs, you must consult an authorised service centre.
- This appliance has been designed for domestic use only.
- The manufacturer accepts no liability if the appliance is used for commercial purposes or in a manner which does not comply with the operating instructions.

WIRING INSTRUCTIONS

(for UK only)

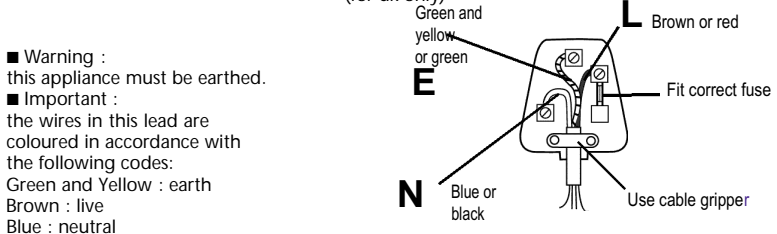

- Connect the green/yellow wire to the terminal in the plug marked “E” or by the earth symbol or coloured green or coloured green and yellow.
- Connect the brown wire to the terminal in the plug marked “L” or coloured red.
- Connect the blue wire to the terminal in the plug marked “N” or coloured black.
- A 13 amp fuse should be fitted when the appliance is connected to a BS1363 A plug.
- Seek professional advice if unsure of the correct procedure for the above.
- Important : if the electrical cord of this appliance is damaged or shows signs of wear, it must only be replaced by an authorised Tefal Service Centre (see section After Sales Service).

About your factory fitted plug (supplied with certain models only)

- The cord is already fitted with a plug incorporating an appropriate fuse. If the plug does not fit your socket outlet, see paragraph below. Should you need to replace the fuse in the plug supplied an appropriately rated approved BS 1362 fuse must be used (refer to wiring instructions specification for fuse rating). If the plug supplied does not fit your socket outlet, it should be removed from the mains lead and disposed of safely. The flexible cord insulation should be stripped back as appropriate and a suitable alternative plug fitted.
- If the plug has external access to the fuse (non-rewirable type plug) please note that the fuse cover is an important part of the plug. Please ensure that it is always refitted correctly. If you lose this cover please do not use the plug. You may contact Tefal UK Limited for a replacement.

After sales service information (for UK only):

If you have any problems or queries, please telephone our Customer Relations
HELPLINE:

0845 602 1454 - UK (calls charged at local rate)
(01) 47 51947 - Ireland

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>