

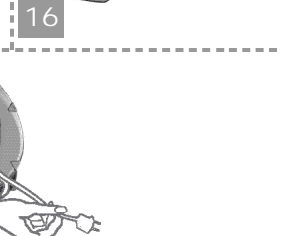
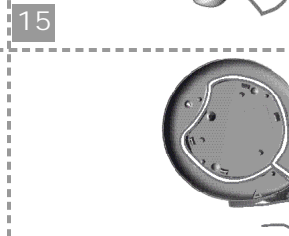
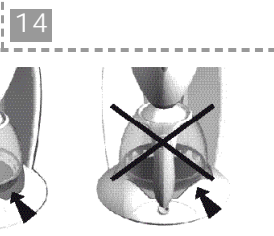
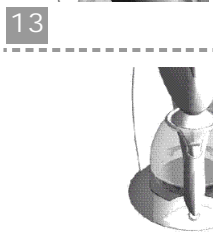
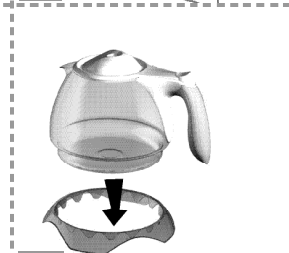
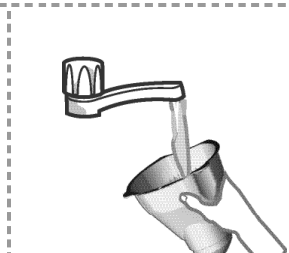
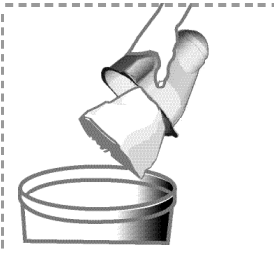
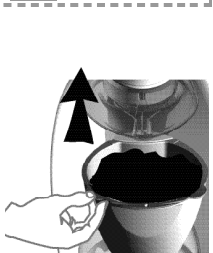
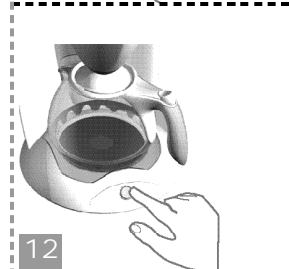
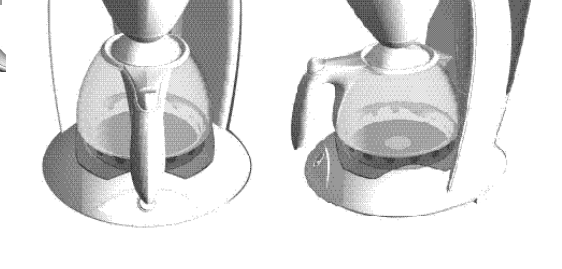
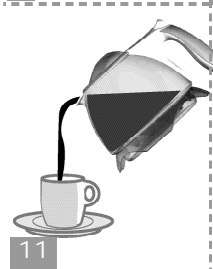
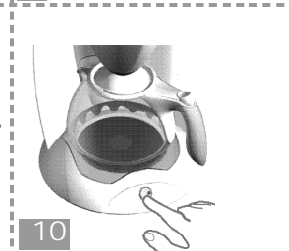
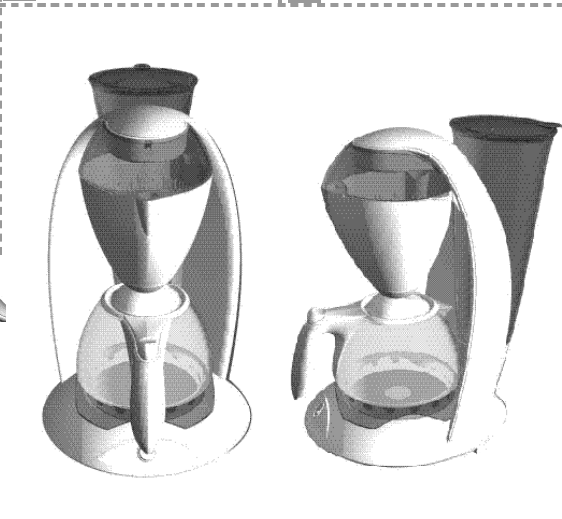
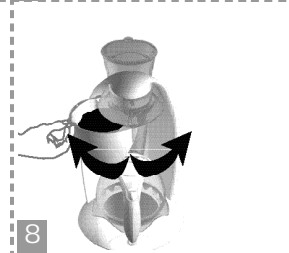
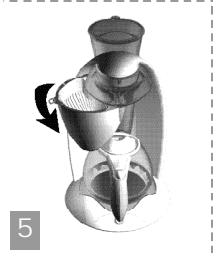
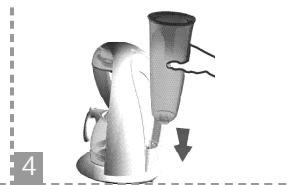


# *evolutive*

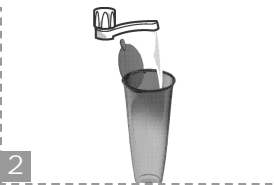

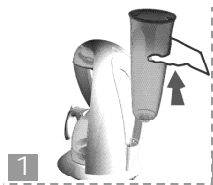

# England

## BEFORE FIRST USE

Operate the coffee-maker twice using water only to rinse the appliance through.

## MAKING COFFEE

(illustrations 1 to 12)

- Use cold water only. You can remove the water tank to fill it directly under the tap.
- Do not use the jug without its lid.
- A drip prevention valve means you can remove the jug during coffee-making.
- The jug is equipped with a removable impact and heat protective skirt to protect your work surface from the heat, so you can place the jug on it.
- The coffee maker is supplied with a permanent filter (for UK only). This can be used instead of a paper filter (shown in the diagram). Do not use a paper filter and permanent filter together as this may cause an overflow of coffee out of the filter holder..
- Once the coffee has filtered through, we recommend that you allow it to stand on the hot plate for 5 minutes before drinking.
- Note: cold milk straight from a refrigerator will decrease the temperature of the coffee.

## CLEANING

(illustrations 13 to 16)

- Unplug and leave to cool before cleaning. Do not clean the appliance when it is hot.
- Once the appliance has cooled down, you can clean it with a damp cloth.
- You can clean the removable parts in the dishwasher.
- The jug and its impact and heat protective skirt are microwave compatible.
- Do not immerse the coffee-maker in water.
- Wash the permanent filter after each use.

## DESCALING

De-scale your coffee-maker about once a month. If you use a commercial descaling powder or liquid, follow the instructions provided by the product manufacturer. If you use clear spirit vinegar:



- Mix 2 cupfuls of vinegar with 2 cupfuls of water.
- Pour the cold descaling solution into the water tank.
- Place a paper filter (or permanent filter) in the filter-holder.
- Position the jug equipped with its lid.
- Start up the coffee-maker.
- Stop the appliance once half the solution has run through and leave for an hour.
- Start up the coffee-maker again and let the solution run through.
- After descaling, the appliance must be rinsed at least 2 or 3 times with fresh water to rinse out the appliance. The guarantee does not cover scaling of coffee-makers.

## SAFETY INSTRUCTIONS

- Before switching on the appliance, check that your mains voltage corresponds to that printed on the underside of the appliance and that your supply socket includes an earth.
- Keep out of the reach of children.
- Disconnect the appliance every time you clean it.
- Do not let the supply cord hang free.
- Do not use the appliance if the plug, the cord or the appliance itself shows signs of damage.
- If the power supply cable is damaged, it must be replaced by an authorised service centre.
- Only use an extension of suitable rating and if it is in perfect condition.
- Do not immerse the appliance, plug or cord in water.
- This appliance complies with the applicable technical rules and standards.
- You cannot open the appliance without using a special tool. For all repairs, contact an authorised service centre.
- This product has been designed for domestic use only. Any professional use, inappropriate use or failure to comply with the instructions, TEFAL accepts no responsibility and the guarantee will not apply.
- After sales service information (for UK only) : If you have any problems or queries, please telephone our Customer Relations HELPLINE : 0845 602 1454 – UK (calls charged at local rate)

## WIRING INSTRUCTIONS (for uk only)

**Warning :**  
this appliance must be earthed.

**Important :**  
the wires in this lead  
are coloured in  
accordance with  
the following codes:  
Green and Yellow : earth  
Brown : live  
Blue : neutral



- Connect the green/yellow wire to the terminal in the plug marked "E" or by the earth symbol  $\perp$  or coloured green or coloured green and yellow.
- Connect the brown wire to the terminal in the plug marked "L" or coloured red.
- Connect the blue wire to the terminal in the plug marked "N" or coloured black.
- A 13 amp fuse should be fitted when the appliance is connected to a BS 1363 A plug.
- Seek professional advice if unsure of the correct procedure for the above.
- Important : if the electrical cord of this appliance is damaged or shows signs of wear, it must only be replaced by an authorised Tefal Service Centre (see section After Sales Service).



## About your factory fitted plug (supplied with certain models only)

- The cord is already fitted with a plug incorporating an appropriate fuse. If the plug does not fit your socket outlet, see paragraph below. Should you need to replace the fuse in the plug supplied an appropriately rated approved BS 1362 fuse must be used (refer to wiring instructions specification for fuse rating). If the plug supplied does not fit your socket outlet, it should be removed from the mains lead and disposed of safely. The flexible cord insulation should be stripped back as appropriate and a suitable alternative plug fitted.
- If the plug has external access to the fuse (non-rewirable type plug) please note that the fuse cover is an important part of the plug. Please ensure that it is always refitted correctly. If you lose this cover please do not use the plug. You may contact Tefal UK Limited for a replacement.

## VOR DEM ERSTEN GEBRAUCH

Die Kaffeemaschine zweimal nur mit Wasser ( ohne Kaffeepulver ) in Betrieb nehmen, um die Leitungen durchzuspülen.

## KAFFEEZUBEREITUNG (Abbildungen 1 bis 12)

Verwenden Sie nur kaltes Wasser. Der Wasserbehälter lässt sich leicht abnehmen und kann direkt unter dem Wasserhahn befüllt werden. Verwenden Sie die Kaffeekanne nie ohne Deckel.

Das Tropfstoppssystem ermöglicht es, die Kanne während der Kaffeezubereitung abzunehmen. Die Kanne ist mit einem abnehmbaren Serviering ausgestattet, der stoßfest und wärmeisolierend ist. Sie können die Kanne mit dem Serviering direkt auf den Tisch stellen.

## REINIGUNG

### (Abbildungen 13 bis 16)

Das Gerät vor dem Reinigen abkühlen lassen.

Die Kaffeemaschine mit einem feuchten Tuch abwischen.

Die abnehmbaren Teile können in der Spülmaschine gereinigt werden.

Die Kanne und der Serviering sind mikrowellengeeignet.

 
Die Kaffeemaschine nicht in Wasser tauchen.

## ENTKALKUNG

Entkalken Sie Ihre Kaffeemaschine je nach Gebrauchshäufigkeit ca. einmal im Monat. Im Handel erhältliche flüssige bzw. pulverförmige Entkalkungsmittel sind nach Herstellerangaben zu verwenden.

Bei Entkalken mit Essig:

- 2 Tassen Essig mit 2 Tassen kaltem Wasser vermischen.
- Die kalte Entkalkerlösung in den Wasserbehälter gießen.
- Eine Filtertüte in den Schwenkfilter einsetzen.
- Die Kaffeekanne mit aufgesetztem Deckel in das Gerät stellen.
- Die Kaffeemaschine einschalten.
- Wenn die Lösung zur Hälfte durchgelaufen ist, das Gerät ausschalten und eine Stunde wirken lassen.



- Danach das Gerät wieder einschalten und die restliche Lösung durchlaufen lassen.
- Nach dem Entkalken die Maschine unbedingt zweimal mit Wasser ( ohne Kaffeepulver ) in Betrieb nehmen, um die Leitungen durchzuspülen.
- Für verkalkte Kaffeemaschinen besteht kein Garantieanspruch.

## SICHERHEITSHINWEISE

- Prüfen Sie vor dem Anschließen, dass die Spannung des Netzanschlusses der auf dem Typenschild am Gerät angegebenen entspricht, und dass die Steckdose geerdet ist.
- Das Gerät außer Reichweite von Kindern stellen.
- Vor jeder Reinigung den Netzstecker ziehen.
- Das Kabel nicht herunterhängen lassen. Stolperfalle!
- Die Kaffeemaschine nicht in Betrieb nehmen, wenn das Kabel oder das Gerät selbst sichtbar beschädigt ist.
- Wenn das Kabel beschädigt ist, darf es ausschließlich vom Hersteller oder einer der autorisierten Servicestellen ersetzt werden.
- Verwenden Sie ein Verlängerungskabel nur dann, wenn es in einwandfreiem Zustand ist.
- Das Gerät nicht in Wasser tauchen.
- Dieses Gerät entspricht den geltenden technischen Vorschriften und Normen.
- Das Gerät kann nur mit einem Spezialwerkzeug geöffnet werden. Reparaturen dürfen nur von autorisierten Servicestellen durchgeführt werden.
- Das Gerät ist für den haushaltsüblichen und nicht für professionellen Gebrauch bestimmt. Im Falle der professionellen Nutzung gilt die Garantie nicht, und es wird keine Haftung übernommen.
- Wird das Gerät zweckentfremdet oder falsch bedient, kann ebenfalls keine Haftung für eventuelle Schäden übernommen werden.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>