 


TEFAL®

Astucio




TECHNICAL SPECIFICATIONS

Components

1. Painted steel body
2. Fixed reflector
3. Liftable heating element
4. Adjustable thermostat
5. Thermoplastic feet and handles
6. Removable cooking dish with Tefal non-stick coating
7. Glass lid

Depending on model :

8. Pilot light
9. Removable drip tray
10. Removable grill plate with Tefal non-stick coating

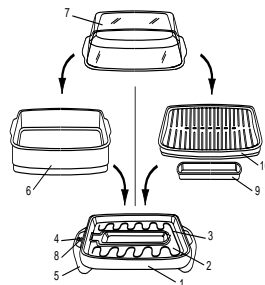

Electrical details

- Power and voltage are indicated on the appliance.
- Fixed cord.

If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

BEFORE FIRST USE

1. Remove all packing materials from the outside and inside of the barbecue.
2. Clean the cooking dish, the drip tray and the grill plate (depending on model) with hot water and wipe it with care.
3. Wipe the interior of the dish and the grill plate (depending on model) with a soft cloth and a little vegetable oil.

PLUGGING - PRE-HEATING

1. Check that the voltage of your appliance is the same as your mains.
2. Before each use, unwind the flex completely.
3. If you want to use your appliance with the grill plate (depending on model), place the drip tray in the appliance.
If you use your appliance in casserole function, do not place the drip tray in the appliance.
4. Place the cooking dish or the grill plate (depending on model) on the base of the appliance and make sure it is stable and well positioned.
5. Switch on at the mains.
In case an extension cable is necessary, it must be earthed, and its cross section must be at least 1 mm². When using an extension cable, secure it safely so that people do not trip over it.
6. Set the thermostat to the position of your choice (the positions indicated in recipes can be adjusted depen-

ding on your own taste).
Note : If you use your appliance in grill function, pre-heat it for 8 to 10 minutes at thermostat 4. For other functions, pre-heating is not necessary.

Warning : never put the lid on when pre-heating the appliance empty.

The pilot light (depending on model) switches off when the temperature is reached.

- N.B. : on first use, it is normal for the heating element to give off a small amount of smoke and odour.

ASSEMBLING THE APPLIANCE

Depending on the accessories supplied with your appliance, you can try 3 kinds of cooking :

casserole



grilling




(depending on model)

steam cooking (1)



(depending on model)

NOT TO BE DONE !

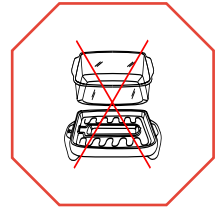


Warning :
never use the glass lid as a dish on the base of the appliance.

Note :

the cooking dish and the glass lid can also be used in the oven but they must never be used on any other heat source.

(1) For steam cooking :

- a. We recommend you add water in the bottom of the cooking dish, up to the maximum mark :




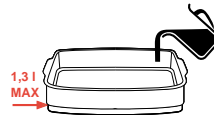


- b. Make sure you do not cover the openings of the grill plate with food to be cooked.

SAFETY WARNINGS

- Always unplug the appliance when not in use.
- Use only one appliance per plug and always use an earthed extension cable, with cross section of at least 1 mm².
- Never place aluminium foil or any other object between the cooking dish or the grill plate (depending on model) and the heating element.
- Place the appliance on a firm table : avoid using it on a soft base.
- Do not use any other cooking dish than the one supplied with the appliance.
- Never touch the metallic parts (body or grill plate) while the appliance is in use as they can become very hot.
- **We recommend you always using gloves when handling the cooking dish, the lid and the grill plate (depending on model) : steam emission can come out when opening lid.**
- Do not move your appliance when cooking in order to prevent any risk of burning.
- Never place your appliance on a fragile surface (glass table, piece of furniture...).
- **Do not place anything between the grill plate (depending on model) and the food (e.g. dish, aluminium foil...).**
- To keep the benefits of the non-stick coating inside the cooking dish :
 - never heat for more than a few minutes when empty (respect the time of pre-heating if this one is necessary) ;
 - use wooden utensils to stir food ;
 - do not cut directly in the cooking dish.
- Before switching off at the mains, turn the thermostat to the stop position (0).

    USE OF ADJUSTABLE THERMOSTAT

0	1	2	3	4
				
stop	keep warm / re-heat	simmer	fry	seal

Note : You can adjust the thermostat depending on the dishes to be cooked. With smaller quantities of food, it may be necessary to reduce the thermostat to a lower number.

CLEANING

- Unplug and leave the appliance to cool.
- **The body of the appliance and the fixed reflector** can be cleaned with a sponge and washing-up liquid. Avoid using an abrasive scouring pad.
N.B. : to easily clean the fixed reflector, raise the lift-able heating element.
- **The heating element** does not require cleaning, but when cold, it can be rubbed with a dry cloth to remove any food deposits.
- **The cooking dish, the lid, grill plate and the drip tray (depending on model)** must be cleaned after each use with normal washing-up liquid or in a dish-

washer. Scouring powders and scouring pads are not recommended.

Note : if food has burned, leave the cooking dish to soak a little while before cleaning.

- **NEVER IMMERSE THE APPLIANCE WITH HEATING ELEMENT AND CORD IN WATER.**

STORING THE APPLIANCE

So that the appliance does not take too much place in your cupboard, we advise you to stock the different accessories as indicated on the following drawing :



(some accessories are supplied depending on model)

FOR U.K. USERS ONLY : ADDITIONAL INFORMATION AND INSTRUCTIONS

WIRING INSTRUCTIONS

WARNING : ALL APPLIANCES MUST BE EARTHED.

IMPORTANT : the wires in this lead are coloured in accordance with the following codes.

Green and Yellow : Earth
Blue : Neutral
Brown : Live

Connect the Green/Yellow wire to the terminal in the plug marked "E" (or by the earth symbol) or coloured Green and Yellow.


Connect the Brown wire to the terminal in the plug marked "L" or coloured Red.

Connect the Blue wire to the terminal in the plug marked "N" or coloured Black.

Seek professional advice if you are unsure of the correct procedure for the above.

ABOUT YOUR FACTORY FITTED PLUG

The cord is already fitted with a plug incorporating an appropriate fuse. If the plug does not fit your socket outlet, see paragraph below. Should you need to replace the plug, please refer to the

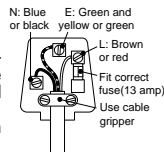

supplied, an appropriately rated approved BS 1362 fuse must be used (refer to electrical specification for fuse rating).

If the plug supplied does not fit your socket outlet, it should be removed from the mains lead and disposed of safely. The flexible cord insulation should be stripped back as appropriate and a suitable alternative plug fitted. The replacement plug must be equipped with an appropriate fuse. If the plug has external access to the fuse (non-rewirable type plug) please note that the fuse cover is an important part of the plug. Please ensure that it is always refitted correctly. If you lose this cover, please do not use the plug. You may contact Tefal U.K. Limited for a replacement.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>