

Digital TV Recorder



GPVR1250

Grundig Helpline: 1800 509 394 Australia

Grundig Helpline: 0800 450 259 New Zealand

Table of Contents

Table of Contents	1
Introduction.....	2
Safety Information.....	3
Remote Control.....	4
Front and Rear Panel Illustration.....	6
Connecting to Television Aerial and RF cable.....	7
Connecting to a Television	8
Connecting to a Surround Sound System.....	9
Getting Started	10
Channel Setting.....	10
System Setting	12
Channel List.....	18
Favourite List.....	19
Booking List.....	20
EPG Menu	21
Record Operations.....	22
Help and Advice.....	23
Technical Specifications	24
Guarantee	25

Introduction

About This Manual

This User Guide contains all the information you need to know about how to setup and watch free view channels using your set top box.

What is DVB-T?

It works like traditional TV, but because the signals are digital you need a set top box to convert them. This means more channels can be transmitted with extra features such as interactivity and wide screen pictures.

Accessories In the Box

Remove your digital set top box carefully from the box and remove the packaging from each part.

You will find the following items:

- Digital set top box with fitted mains plug
- Remote control with 2xAAA batteries (not installed)
- Instruction Manual
- AV cable
- RF loop through cable



Look out for this symbol. It indicates useful and important tips.



Trademark of the DVB Digital Video Broadcasting
Project(1991 to 1996)

Safety Information

Safety is Important



To ensure your safety and the safety of others, please ensure you read the Safety Instructions before you operate this product.

Keep this information in a safe place for future reference.

Please read all the safety information before use.

Safety Considerations

- Position the cables so that they cannot be walked on or pinched by items placed on or against them.
- Do not use the set top box in humid or damp conditions.
- Do not allow the set top box to get wet.
- Do not expose the set top box to dripping or splashing.
- Do not place water filled objects such as vases on top of the set top box.
- Do not place naked flame sources, such as candles, on top of the set top box.

Cleaning

- Always unplug the set top box before you clean it.
- Do not use liquid or aerosol cleaners.
- Clean the set top box with a soft, damp (not wet) cloth.

Ventilation

- The slots and openings on the set top box are for ventilation. Do not cover or block them as it may cause overheating.
- Never let children push anything into the holes or slots on the case.

Servicing

 
- There are no user serviceable parts in this set top box.
- When servicing refer to qualified service personnel.
- Contact the Bush helpline on **1800 509 394** in Australia or **0800 450 259** in New Zealand if you are ever in doubt about the installation, operation or safety of this unit.

Battery Disposal

- Please ensure batteries are disposed of safely.
- Never dispose of batteries in the fire or with household waste.
- Check with your local authority for disposal regulations.

Remote Control

Remote Key Function:

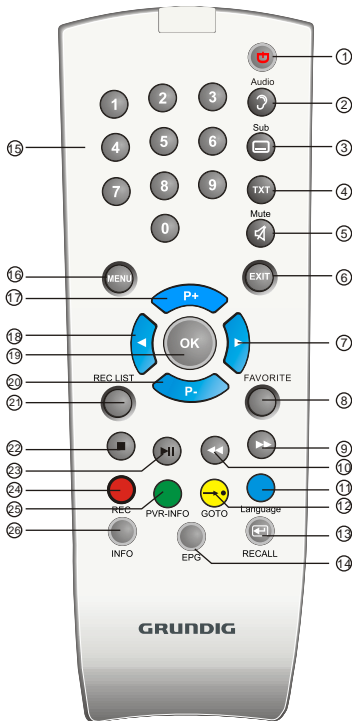


- 1) **STANDBY:** Used to switch the set topbox to on or standby.
- 2) **AUDIO:** Used to set the sound output, the available settings are STEREO, LEFT, RIGHT, MONO.
- 3) **SUBTITLE:** Used to switch among different subtitles that are broadcasted.
- 4) **TEXT:** Used to open teletext OSD display if teletext available in the broadcasted stream.
- 5) **MUTE:** Used to turn the sound on or off.
- 6) **EXIT:** Used to return to the previous screen or menu.
- 7) **VOL+:** Used to move around the menu screens or changing the volume in non-menu state.
- 8) **FAVORITE:** Used to access your favourite channels.
- 9) **FAST FORWARD:** Used to adjust the fast forward speed if in HDD playback mode.
- 10) **FAST BACKWARD:** Used to adjust the fast backward speed in HDD playback mode.
- 11) **BLUE key / LANGUAGE:** Used to implement different functions in menus according to the help information or switch among different audio languages that are broadcasted in non-menu state.
- 12) **YELLOW key/ GOTO:** Used to implement different functions in menus according to the help information or select the playback start time in HDD playback mode.
- 13) **RECALL:** Used to switch between the last two viewed channels.
- 14) **EPG:** Used to display information about the program being viewed and what's on next.
- 15) **NUMBER KEYS:** Used to select channel numbers or input numbers in menus.
- 16) **MENU:** Used to open the main menu window or return to the previous screen or menu.
- 17) **CH+:** Used to move around the menu screens or selecting the channels in non-menu state.
- 18) **VOL-:** Used to move around the menu screens or changing the volume in non-menu state.
- 19) **OK:** Used to confirm a selection within a menu.
- 20) **CH-:** Used to move around the menu screens or selecting the channels in non-menu state.
- 21) **RECORD LIST:** Used to view the recorded program list.
- 22) **STOP:** Used to stop the current recording or stop the HDD playback back to DTV mode.
- 23) **PLAY/PAUSE:** Used to resume the playback if stopped or in time shifting mode (FF, FB, PAUSE etc) or pause the the current picture or do time-shifting.
- 24) **RECORD:** Used to implement different functions in menus according to the help information, or record the current viewed channel directly, or select the record duration if pressed again in non-menu state.
- 25) **PVR INFO:** Used to implement different functions in menus according to the help information or display the time information and progress bar and play state in HDD playback mode.
- 26) **INFO:** Used to display information about the channel being viewed or further information about the program when in small EPG screen.

Note: SUBTITLE/TEXT/LANGUAGE may not available for all channels.

Installing the Batteries

 Remove the battery cover from the remote control and put place 2 x AAA size batteries inside the compartment. Make sure to match the + and - of the batteries with the marks inside the battery compartment

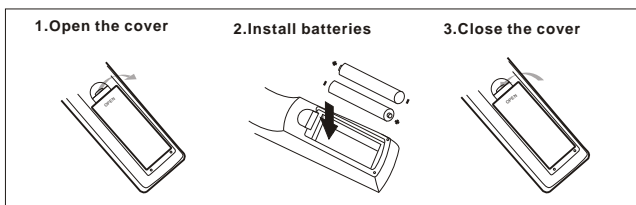

Using the Remote Control

To use the remote control, point it towards the front of the digital set top box. The remote control has a range of up to 7 metres from the set top box at an angle of up to 60 degrees.

 
The remote control will not operate if its path is blocked.



Sunlight or very bright light will decrease the sensitivity of the remote control.


Front Panel and Rear Panel Illustration

1. Front panel

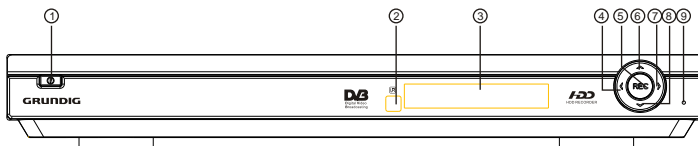

- 1) **POWER BUTTON:** Used to switch the main power of the settop box on and off.
- 2) **REMOTE CONTROL SENSOR:** Used to receive the signal from the remote control.
- 3) **LED DISPLAY:** Used to display the channel number and time information and other play states.
- 4) **VOLUME DOWN:** Used to decrease the volume without using the remote control.
- 5) **RECORD:** Used to record the program manually, and select the record duration if pressed it again.
The user can change the watching channel if recording the specific program
- 6) **CHANNEL UP:** Used to change channels without using the remote control.
- 7) **VOLUME UP:** Used to increase the volume without using the remote control.
- 8) **CHANNEL DOWN:** Used to change channels without using the remote control.
- 9) **STANDBY INDICATOR:** Used to visually show power state of the settop box, the red LED will be lit if the settop box entered standby mode.

 2. Rear panel

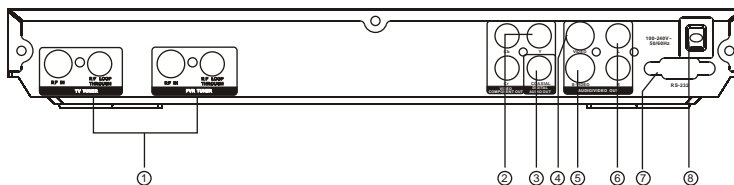


- 1) **RF IN/ RF LOOP THROUGH (PVR and TV tuner)**
PVR/TV RF IN socket connects to your external aerial. PVR/TV RF LOOP THROUGH socket will bypass the input RF signal to another tuner or your TV or another video system.
See connection pages for details
- 2) **VIDEO COMPONENT (Y,Cb,Cr):** These sockets output component video signal.
- 3) **COAXIAL:** This socket connects to a coaxial socket on your surround sound system to output digital audio.
- 4) **VIDEO:** This socket outputs composite video signal.
- 5) **S-Video:** This socket outputs separate Y/C video signal.
- 6) **AUDIO L/R:** This socket outputs analog audio L/R signal.
- 7) **RS-232 PORT:** This socket is only used for software upgrade.
- 8) **MAIN POWER CABLE:** This is used to connect to your main power supply.


Connecting to Television Aerial and RF cable

There are 2 kinds of connections for the TV aerial and RF cable presented below:

 
1.

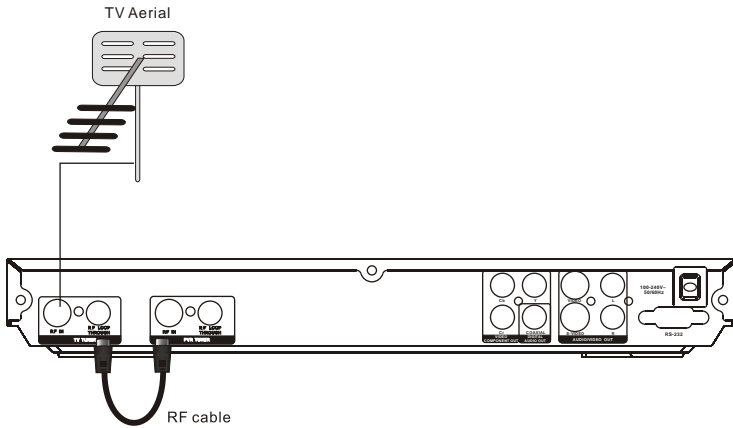

 
2.

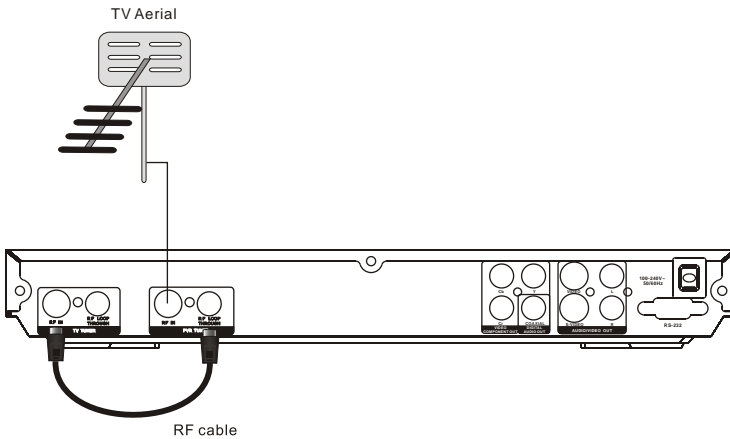

Connecting to a Television

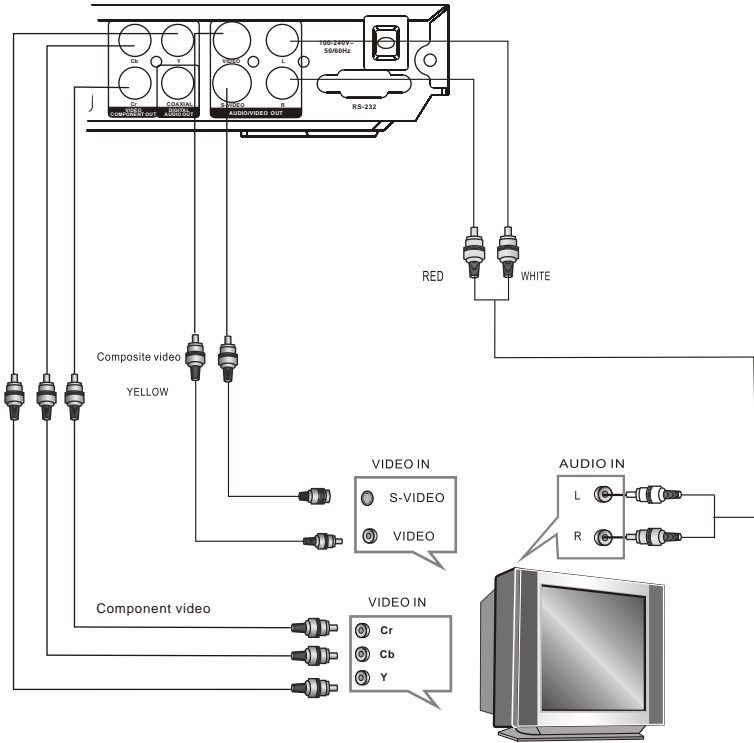 


Connecting to a Surround Sound System

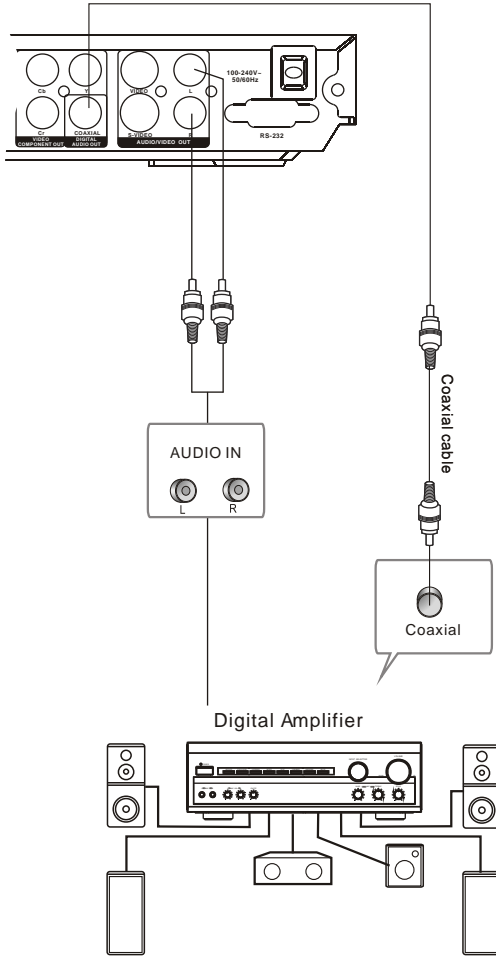 


Getting Started

Switching On for the First Time

Ensure all connections have been made following the diagrams on the previous pages for reference.

 
To switch on the set top box, press the  button on the set top box.

(To turn the set top box to standby mode, press  button on the remote control).

Switch on the TV and select the AV programme channel(EXT,AV, External Source or similar). Your set top box will automatically scan.

Scan finished will display for a moment on TV after all stations are found and automatically stored. If you want to scan again, follow the procedure below:

Press **MENU** button on the remote control, the set top box main menu will display.

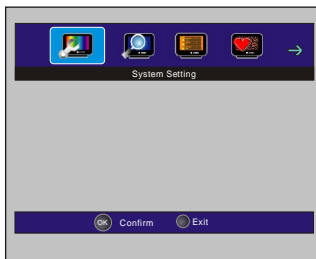


1. Channel setting




Select the **Channel Setting** menu by using the arrow buttons on the remote control.


Press the  button when the **Channel Setting** menu is highlighted.

 
Press  button again when **Channel Search** is highlighted.

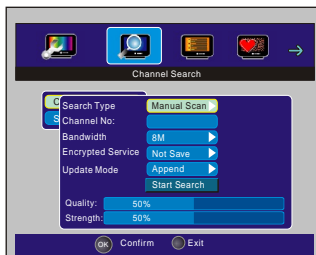



Select the **Auto Scan** tab by using the arrow and the  buttons on the remote control.

 Press the  button when the **Start Search** tab is highlighted. The following menu will display.

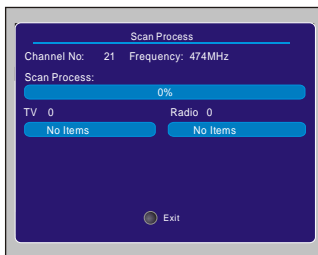

The set top box will scan for all the available digital TV and radio stations available in your area.

There is also a progress bar shown as a percentage.




Do not turn off the set top box until the digital TV and radio stations have been stored. Otherwise you will need to scan them again.

 
You are now ready to start viewing and listening to your digital tv and radio channels.

LCN On/Off

LCN(Logical Channel Number): A number that uniquely identifies a logical channel.

Select the **LCN** option in the **Channel Setting** menu using the arrow buttons.

Press the  button when selected. The following menu will be displayed.

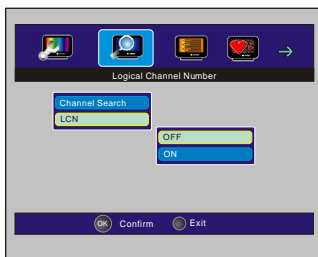

The **LCN On/Off** option allows you to select how your channel number will be displayed in the channel list or selected when pressed the digits key.

 
2. System Setting

From here you can set the Time, Sleep timer, Language, Parental settings, A/V settings, PVR setting or revert to the factory settings.


① Time Setting


Press the **MENU** button and select **System Setting** option using the arrow buttons.


Press the  button when selected. The following menu will display.

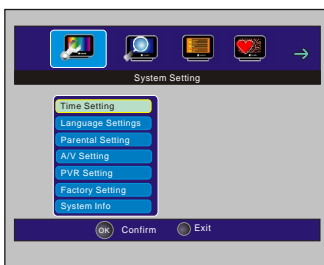


Time Zone Setting

 Select **Time Zone Setting** option using the arrow button. Press the  button when selected. The following menu will display.

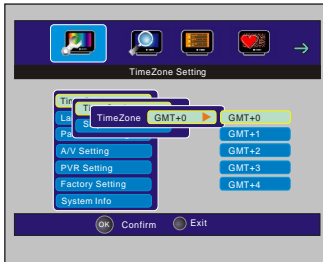

Press the  or  buttons until the correct time zone is displayed.



Press the  button to confirm your selection.

 




The time zone can't be changed if the broadcast stream have time zone information. That means the user setting will only take effect if there is no time zone information in the stream.


Sleep Timer Setting

Open the **Time Setting** menu as previously explained. Highlight the **Sleep Timer setting** option using the arrow buttons.

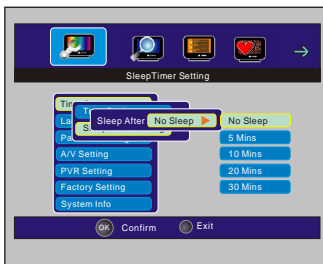Press the  and  button and the menu below will be displayed.



Press the  or  button to select the sleep time.

Press the  button to confirm your selection.


② Language Setting

Select the **Language Setting** option using the arrow buttons.


Press the  button when selected. The following menu will display.






③ Parental Setting

Select the **Parental Setting** option using the arrow buttons. Press  button when selected.



Enter the right Pin Code then press the  button. If the Pin code is entered incorrectly, **Pin Code Error** will be displayed.

Use the  or  buttons to select the required option, then press the  button to confirm.

Change Pin Code

The Change Pin Code menu allows you to change the password, which currently defaults as **6666**.

Enter your new **PIN** code using the numerical buttons on the remote control.


Press the  button and enter the new PIN code again.

 
Press the  button to confirm the new PIN code.







Please note that your new PIN code must contain 4 digits.

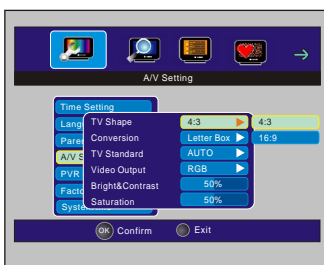④ A/V Setting

Select the **A/V Setting** option using the arrow buttons. Press the  button when selected. The following menu will display.



To change the settings, first use the  or  buttons to select the required menu, then use the  or  buttons to select the new option required.

TV Shape

You can select either 4:3 or 16:9 format. 4:3 should be used for standard square shaped television screens, and 16:9 should be used for wide screen rectangular shaped television screens.

Conversion

You can select Full Frame, Pan Scan or Letterbox. Choose the setting which best matches your television.

Standard

The standard setting is used to set the signal input to your TV. There are two different standards available on your set top box, PAL and NTSC. If you are In Australia PAL is the standard format.



If NTSC is chosen for your televisions you may experience interference and picture rolling.



Video Output

The Video Output setting is used to set the colour signal to your TV. There are 3 different settings available on your set top box: S-Video, CVBS, YCbCr. If you are unsure which setting to use consult the manufacturer's manual for your television.




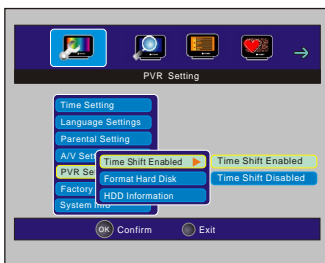 
If S-Video/YCbCr is chosen for a non compatible television, you will typically experience a washed out or a ghosted effect picture.

Brightness and Contrast/Saturation

You can use  and  buttons to adjust the brightness and contrast or saturation of the video output.

⑤ PVR Setting

Select the PVR setting option using the arrow buttons. Press the  button when selected. The following menu will display.



Time Shift Enabled/Disabled

This enables or disables the time shift function. The duration is up to 1 hour.


Format Hard Disk

 
Formatting is necessary when using the hard disk for the first time. The system will auto reset after the successful formatting

HDD Information

It will show the HDD capacity.

⑥ Factory Setting

Select the **Factory Setting** option using the arrow buttons. Press the  button when selected. The following menu will display.

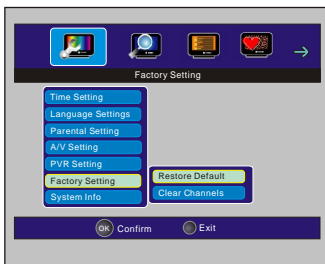

Restore Default

 
The **Restore Default** menu allows you to reset the menu settings.

Clear Channels

The **Clear Channels** menu removes all channels from the Channel list. To restore the channel list, you will need to rescan.


⑦ System Info


The System Info menu displays the software version and hardware version.

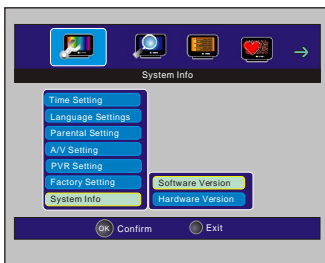



3. Channel List

The channel list is used to look at all the broadcasting TV or Radio channels received by the set top box.

To access the channel list press the  button in the non-menu state.


To edit the channel list, press the **MENU** button and select **Channel List** using the arrow keys, press the  button when it's highlighted.







To view a different channel, press either the  or  button, each channel selected will be previewed in the upper right hand box.

To switch between TV and Radio channels, press the RED button.


To view/listen to a channel, press the  button.

 
To Lock&Unlock/Delete/Move a channel, press the  button.

To lock a channel and prevent people from watching it, highlight the channel that you want to lock by using either  or  button, press the  button, press the  button when highlight Lock&Unlock in the popup menu. Enter the right PIN code in the following PIN code form, the channel will be locked, a lock icon will be displayed at the back of the channel name after a successful lock operation. If the PIN code is entered incorrectly, the "Pin Code Error" message will be displayed which indicate the operation failed. Unlock operations work similar to the above lock operations.




4. Favourite List

The favourite list is used to store your frequently watched channels without having to search them in the Channel List or EPG menus.

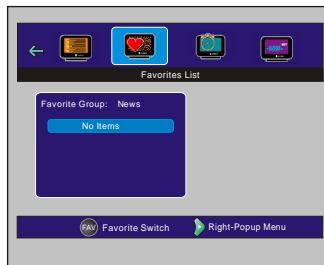





To edit the favourite list, press the MENU button and select Favourite List using the arrow keys, press the  button when it's highlighted.



Adding a Favourite Channel

First use the RED button to select a favourite group, the choices are News, Movie, MTV, Finance, Other. Then press the  button and  button to enter the pop up Add menu, select the channel you want to add to the specific favourite group then press the  button, the added channel will be displayed in the left hand column. Repeat the same procedure until all your desired channels have been added to the specific favourite group.




Deleting a Favourite Channel

First use the RED button to select a favourite group. Select the channel that you want to delete in the favourite list menu using the  or  button, press the  and  button to enter the pop up Delete menu, then press the  button to enter delete confirmation menu, press the  button to delete the selected channel from the favourite list and press the EXIT button to cancel the delete.

Viewing a Favourite Channel

 
To access the favourite list quickly without edit, press the FAVOURITE button directly in non-menu state or other menus.

To change the favourite group, press the RED button.


Select the desired favourite channel using the  or  button, press the  button to confirm when highlighted, now you can watch the selected channel.


5. Booking List

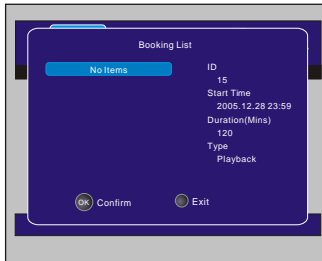

The booking list is used to display all the booking events you have in the EPG menu or you have added manually. The booking list menu is displayed below:



 It will display the event ID, start time, duration, purpose (playback or record) for each event.

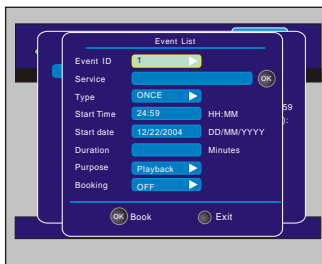
To add a booking event manually, press the  button in the booking list menu, the event list menu will display:



 
The user can change the event ID using the  button to start a new booking event, press the  button to select the booking channel, the booking type can be ONCE, DAILY, WEEKLY. The start time and start date and duration should be valid, the booking purpose can be Record or Playback, after all the above selection is ok, switch the booking to on, the booking will take effect if no invalid selection, otherwise the related error message will display.

6. EPG Menu (Electronic Programme Guide)

The EPG menu is used to look at what is being broadcast on a TV or Radio channel later in the day.




To access the EPG menu, press the **MENU** button and select the EPG menu using the arrow keys. When it is highlighted press the  button to access.

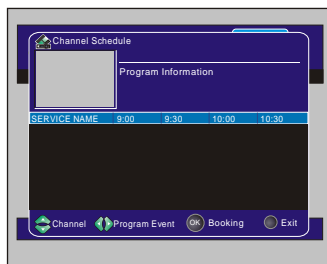

The following menu will display:



A preview of your current channel will be displayed in the upper left hand box.

The detailed program information of your current viewed channel will be displayed in the upper right hand box.

To see what is going to be broadcast after this programme, press the  button to change the time. Each press of the  button will increase by half an hour. Pressing the  will move the time back half an hour.

To view a different channel press either the  button or  button. Each channel selected will be previewed in the upper left hand box.

To book a desired channel for later watching or recording, press the .

To exit the EPG menu and watch the selected channel, press the **MENU** or EXIT button.

Record Operations

Before using the record operations, please check the two tuner (TV/PVR tuner) connections in connection pages.

Watch One Channel While Recording Another

The recording will receive the digital TV signal from the PVR tuner and the watching will receive the digital TV signal from TV tuner, this makes it possible to watch one channel while recording another channel.

There are 3 kinds of methods to start a recording:

- 1). Press the RECORD key while watching the live TV, the recording of the current channel will start in several seconds, you can press the RECORD key again while recording started to set the duration of the recording, the default duration is 2 hours.
 - 2). Schedule Recording in full EPG menu, press the OK button to booking a recording once you selected a valid column.
 - 3). Schedule Recording in Booking List menu, press the OK button to start a new booking event. Please refer to former Booking List page for detail.
- Once recording takes effect, the user can change the current viewed channel as they want while the system is still recording at the background.

Time-Shifting Function

Have you been interrupted with a phone call or the doorbell while watching live TV programs, inevitably missing out on a crucial scene? Pause and replay live TV shows by simply pressing the Pause button and then Play button to pick up right where you left off. Just like the live TV mode, This PVR recorder provides a slew of file playback functions such as pause, instant replay, time-shifting with the scroll bar, fast-forward, rewind and so on.



Changing the viewed channel while recording

Press the CH+/- keys to change the watching channel while the PVR is doing background recording.



The user can only record the programs they want from the PVR TUNER.

The RECORD button.

Pressing the **RECORD** button, the record will start, you can press  and  to change your watching channel while recording the specific program.

The STOP button

Press the **STOP** button will stop the current recording.

The PVR INFO button

Press this button and time information and progress bar will be displayed when recording or playback of the program.

The REC List button

Press this button and the recorded program list will be displayed. You can Play/Continue/Rename/Delete/Lock&Unlock the recorded program.

The button , SLOW and PAUSE button.

If the Time Shift function is enabled in System Setting/PVR Setting, you can use these buttons to do time shifting feature.

Help and Advice

Problem	Probable cause	What to do
Standby light not lit	Mains lead unplugged Mains fuse blown	Check mains lead Check fuse
No signal found	Aerial is disconnected Aerial is damaged/misaligned Out of digital signal area	Check aerial lead Check aerial Check with dealer
No picture or sound	AV connect error	Check AV cable
Encrypted channel message	It is a payper view channel	Select an alternative channel
No response from remote control	Set top box is switched off Remote control is not aimed correctly Front panel obstructed Remote control batteries inserted incorrectly Remote control batteries exhausted	Plug in and turn on set top box Aim remote control at front panel Check for obstructions Check batteries are inserted correctly Replace remote control batteries
Square blocks in picture or picture freezes	Aerial may not be compatible Aerial is damaged/misaligned	Check with dealer Check aerial



If none of the above suggestions seem to work, try switching your set top box off and then on again. If this does not work, contact the service helpline.

Technical Specifications

Power Supply

Input Voltage	100-240V~ 50/60Hz.
Power Consumption	Maximum 15W, Standby 5W.

Decoder

Video Formats	SD, 4:3/16:9 Switchable.
Audio Format	MPEG Layer I & II, 32/44.1/48Khz.
Video Outputs	CVBS, S-Video, YCbCr

Connections

Main Power Cable	Fixed Type
Tuner	2 Antenna Input/ 2 Therefore Output
RS-232	1 for software upgrade
RCA	1 CVBS output 1 R/L output 1 COAXIAL SPDIF digital audio output 1 YCbCr output
S-VIDEO	1 S-VIDEO output



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of life separately from your household waste.

For more information please contact your local authority.

Guarantee

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alteration that affects the performance or reliability of the product.

If guarantee is required please contact the Grundig Helpline 1800 509 394 (within Australia) or 0800 450 259 (within New Zealand). Have your receipt of purchase on hand

This guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly assembled and operated in accordance with the instructions contained in this manual.
- The product must be used solely for domestic purposes.
- The guarantee does not cover accidental damage, misuse, cabinet parts or consumable items.
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damages.

This guarantee is in addition to, and does not diminish, your statutory or legal rights.



PO BOX 6287
Silverwater NSW 1811
<http://www.grundig.net.au>
Grundig Helpline: 1800 509 394 Australia
Grundig Helpline: 0800 450 259 New Zealand

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>