

# HAIR CLIPPER TITAN

**MC 4540**

# GRUNDIG



# SAFETY

---

Please note the following information when using the appliance:

- The appliance is designed for domestic use only.
- To prevent damage and danger from improper use, please observe the operating instructions and keep them in a safe place.
- Never use the appliance in the bath, shower or over a wash-basin filled with water when it is connected to the mains plug; nor should it be operated with wet hands in this case.
- Do not immerse the appliance in water completely.
- The appliance may only come into contact with water when it is disconnected from the mains adapter and this is not plugged in.
- Do not drop the appliance.
- Keep the appliance away from children.
- Do not open the appliance under any circumstances. No warranty claims are accepted for damage caused by incorrect handling.



- When the appliance is being charged or operated via a mains plug it must not come into contact with water or any other liquid. Even the proximity to water is a hazard.
- Always pull out the mains adapter after charging.

# OVERVIEW

---

Fold out page 2 so that you have the illustrations in front of you.

## Controls

- A** Ceramic blade of the cutting head.
- B** Steel blade of the cutting head.
- C** Switch for switching on and off.
- D** Charge indicator.
- E** Socket for plugging in the mains adapter plug or connecting to the charging unit.
- F** Mains adapter cable in the socket of the charging unit.
- G** Charging unit.
- H** Attached comb attachment.

## Accessories

- 1** Mains adapter.
- 2** Charging unit.
- 3** Storage case.
- 4** Eight comb attachment for different trim lengths and for making hair thinner.
- 5** Oil.
- 6** Scissors.
- 7** Cleaning brush.

# POWER SUPPLY

---

## Operation with rechargeable batteries

When using the built-in rechargeable nickel metal hydride batteries, use the mains adapter supplied as a charger.

- 1 Plug the mains adapter into the **E** socket, and plug the mains adapter into the mains socket.
  - The display **D** lights up on »Charge«.
  - Once loading is complete, the display changes to »Full«.

### Notes

- Completely charge up the batteries (12 hours) before you first use them or if you have not used them for a long time.
- The charging time is 12 hours when the appliance is switched off. If you switch on the appliance while it is charging, charging will stop.
- The ambient temperature should be between 5 °C and 40 °C.

- When fully charged, the appliance works for around 45 minutes. It is not advisable to charge the batteries after every use, especially if you do not use the appliance for the full 45 minutes. Only charge the batteries when they are completely discharged. This increases their life. Do not charge them every day.

### Using the charging unit

- 1 Plug the socket **E** of the appliance into the plug in the charging unit.
- 2 Plug the mains adapter cable into the socket of the charging unit.
- 3 Insert the mains adapter plug in the socket.

### Note


- Ensure that the appliance and the charging station are completely dry before charging.

## Environmental note

- This appliance contains nickel metal hydride batteries. Do not dispose of it with your household waste at the end of its service life. Open the housing. Take the used batteries out and make sure to dispose of them in an environmentally sound manner, for example using public recycling sites. Find out about the legal regulations which apply in your area.

## Mains operation (with mains adapter)

Check if the mains voltage on the supplied mains adapter type plate corresponds to your local mains supply. The only way to disconnect the device from the mains supply is to unplug the adapter.

- 1 Plug the mains adapter cable into the  socket.
- 2 Insert the mains adapter plug in the socket.
  - The built-in batteries are switched off.

## Note

- Only use the appliance in battery mode when in the bathroom or beside a water connection; never run it from the mains.

# OPERATION

## Special features

The appliance has a ceramic/stainless steel (**A** and **B**) cutting head.

## Trimming hair

- 1 Put on a comb for the cutting grade you need (see the table below).



- 2 To do this, latch the holders **1** of the comb attachment into the pins on the right and left side of the appliance **2**. First, push the left holder over the left pin, then the right holder over the right pin. Ensure that the holder you fixed first does not spring off the pin while you are doing this.



- 3 Place a towel around the neck and shoulder of the person whose hair you are trimming. Make sure the person is seated so that their head is roughly at your eye level. Before trimming, comb the hair so that it falls naturally and you can see the direction in which it grows.
- 4 Switch on the appliance using the switch **C** and start trimming.
- 5 Turn off the appliance using the **C** switch when you have finished trimming.
- 6 Take off the comb.

# OPERATION

---

## Comb attachment grades

Comb #1	2 mm
Comb #2	3 mm
Comb #3	6 mm
Comb #4	9 mm
Comb #5	12 mm
Comb #6	16 mm
Comb #7	20 mm
Comb #8*	

\* is designed for thinning out hair.

### Note

- The stated trim lengths describe the remaining hair length. All the lengths here are approximate.

### Note

- Without the mains adapter, the charged appliance can be used for wet hair in the bathroom. Never immerse the appliance in water and never let the charging station, mains adapter and cable come into contact with water.

## Useful tips

- Hold the appliance with a relaxed and comfortable grip.
- Always cut against the natural direction of the hair.
- As you cut, take a break at regular intervals. You can always make a correction, but not once the hair has been cut.
- Only cut a small amount the first time you use the trimmer. This is the only way to get used to the variable grades.
- Do not force the comb through the hair. Let it guide you.
- Keep combing the hair. Only look for hair which is too long and comb out clippings.



# CLEANING AND CARE

---

## Cleaning and care

- 1 Switch off the appliance and unplug it if you are running it from the mains.
- 2 Take off the comb.
- 3 Clean the housing, the cutting head and the comb attachment with a soft damp cloth or the supplied brush.

### Note

- The cutting head and the appliance can be cleaned under running water. However, you must never completely immerse the appliance in water.
- 4 Before using the appliance again, dry all parts completely using a towel.

- 5 Do not use cleaning agents.
- 6 Put the comb back on again.

### Notes

- Remove any clippings after each use.
- Normally the cutting head of your appliance does not need to be oiled. If you want to maintain the original condition of the cutting head for as long as possible, it is worth oiling it at regular intervals (with the oil provided).

# CLEANING AND CARE

---

## Storage

If you do not want to use the appliance for a long period of time, please store it carefully.

- 1 Ensure that it is unplugged and completely dry.
- 2 Store the parts in the original packaging in a cool, dry place.
- 3 Make sure the appliance is kept out of reach of children.

## Environmental note

This product has been made from high-quality parts and materials which can be re-used and recycled.

Therefore, do not throw the product away with normal household waste at the end of its life. Take it to a collection point for recycling electrical and electronic devices. This is indicated by this symbol on the product, in the operating manual and on the packaging.



Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.

## Guarantee

The guarantee does not cover the cutting head or defects which do not significantly impair the value or function of the appliance. The guarantee is invalidated if the appliance is damaged, opened or improperly used.

## Technical data



This product fulfils the European directives 89/336/EEC and

73/23/EEC.

### Power supply

Batteries: Nickel metal hydride

Mains adapter



Ni-MH



Technical and design modifications reserved.

## Service und Ersatzteile

Unsere Geräte werden nach den neuesten technischen Erkenntnissen entwickelt, produziert und geprüft. Sollte trotzdem eine Störung auftreten, so bitten wir Sie, sich mit Ihrem Fachhändler bzw. mit der Verkaufsstelle in Verbindung zu setzen. Sollte dies nicht möglich sein, wenden Sie sich bitte an das GRUNDIG-Service-Center unter folgenden Kontaktdaten:

**Telefon: 0180/5231852\***

**(Montag bis Freitag von 08.00 bis 18.00 Uhr)**

**Telefax: 0180/5231846\***

**<http://service.grundig.de>**

**E-Mail: [service@grundig.com](mailto:service@grundig.com)**

\*12 Cent/Min. aus dem deutschen Festnetz. Änderungen vorbehalten.

Unter den obengenannten Kontaktdaten erhalten Sie ebenfalls Auskunft über den Bezug möglicher Ersatz- und Zubehörteile.

## GRUNDIG Kundenberatungszentrum

### Montag bis Freitag von 8.00 bis 19.00 Uhr

Deutschland: 01 80 / 523 18 80 \*

Österreich: 08 20 / 220 33 22 \*\*

\* gebührenpflichtig (0,12 €/Min. aus dem Festnetz)

\*\* gebührenpflichtig (0,145 €/Min. aus dem Festnetz)

Haben Sie Fragen?

Unser Kundenberatungszentrum steht Ihnen werktags stets von 8.00 – 19.00 Uhr zur Verfügung.

**Grundig Multimedia B.V.**

Atrium, Strawinskylaan 3105 • NL-1077 ZX Amsterdam • <http://www.grundig.com>  
72011 900 7000

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>