

FOR A GOOD REASON

GRUNDIG

TOASTER

TA 4060

de

en

fr

it

pt

es

sv

nl

pl

no

tr

el





DEUTSCH 05-13

ENGLISH 14-20

FRANÇAIS 21-27

ITALIANO 28-34

PORTUGUÊS 35-41

ESPAÑOL 42-48

SVENSKA 49-55

NEDERLANDS 56-62

POLSKI 63-69

NORSK 70-76

TÜRKÇE 77-83

ΕΛΛΗΝΙΚΑ 84-90

SAFETY AND SET-UP

Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damages due to improper use!

Keep the instruction manual for future reference. Should this appliance be given to a third party, than this instruction manual must also be handed over.

- The appliance is designed for domestic use only.
- Do not use the appliance for anything other than its intended use. The Toaster is designed for toasting and warming bread and buns only.
- Do not use the appliance outdoors or in the bathroom.



- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull out the plug.
- For additional protection, this device should be connected to a household faulty current protection switch with no more than 30 mA. Consult your electrician for advice.
- Do not immerse the appliance, power cord or power plug in water or in other liquids; do not hold it under running water and do not clean parts in dishwasher.
- Disconnect the power plug after using the appliance, before cleaning the appliance, before leaving the room or if a fault occurs.
- Do not disconnect the plug by pulling on the cord.
- Do not wrap the power cord around the appliance.
- Prevent damage to the power cord by not squeezing, bending or rubbing it on sharp edges. Keep the cord away from hot surfaces and open flames.

- Do not use an extension cord with the appliance.
- Never use the appliance if the power cord or the appliance is damaged.
- Our GRUNDIG Household Appliances meet applicable safety standards, thus if the appliance or power cord is damaged, it must be repaired or replaced by the dealer, a service centre or a similarly qualified and authorized service person to avoid any dangers. Faulty or unqualified repair work may cause danger and risks to the user.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- Keep the appliance always out of the reach of children.
- The appliance should not be used by the following persons, including children: those with limited physical, sensory or mental capabilities and also those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the appliance or if they use it under the supervision of a person responsible for their safety. Children should always be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance unattended while it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.
- Before using the appliance for the time, clean all parts. Please see details in the "Cleaning and Care" section.
- Dry the appliance and all parts before connecting it to mains supply and before attaching the parts.
- Never operate or place any part of this appliance on or near to hot surfaces such as gas burner, electric burner or heated oven.

SAFETY AND SET-UP

- The bread can set on fire because of overheating. Never use the appliance in or near to combustible, inflammable places, materials and furniture. Do not let the appliance come into contact with or become covered by inflammable materials e.g. curtains, textiles, walls, etc. Please make sure that the appliance is always kept a safe distance away from flammable materials and furniture.
- Do not use paper, cardboard, plastic in or under the appliance.
- Use bread slices which are suitable to the bread slots.
- Operate the appliance with delivered parts only.
- Do not use the appliance with damp or wet hands.
- Always use the appliance on a stable, flat, clean, dry and non-slip surface.
- Make sure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- Position the appliance in such a way that the plug is always accessible.
- There is a danger of burns. Avoid contact with hot surfaces; the outer casing becomes very hot during use.
- Do not stick any foreign objects on the appliance.
- This appliance must not be operated with an external clock timer or separate remote control system.
- When using for the first time, smoke can develop due to production residues. However, this does not mean the appliance is defective. The first time you switch it on, use the appliance as you normally would, but without bread. Ensure for proper room ventilation.
- In case of fire, disconnect the plug from the wall socket before using appropriate firefighting measures.
- To avoid the risk of fire, frequently remove crumbs from crumb tray. Make sure the crumb tray is placed correctly. Always ensure that there is sufficient ventilation during use.
- If the toaster begins to emit smoke during operation, immediately stop the toasting process. Should bread get stuck in the toaster, always unplug the appliance before you pull out the bread. Be careful the bread can be very hot.
- The toaster can only be switched on when the plug is connected to a wall socket.
- Do not use any tools or objects in the appliance. Metal objects could cause short circuits or electric shock. Do not damage the heating elements and mechanics.
- Do not use the appliance as a source of heat.
- Do not attempt to dislodge bread when the appliance is switched on.
- Do not toast the bread with extremely runny ingredients such as butter.

AT A GLANCE

Dear Customer,

Congratulations on the purchase of your new GRUNDIG Toaster TA 4060.

Please read the following user notes carefully to ensure you can enjoy your quality product from GRUNDIG for many years to come.

A responsible approach!



GRUNDIG focuses on contractually agreed social working conditions with fair wages for both internal employees and suppliers, as well as on the efficient use of raw materials with continual

waste reduction of several tonnes of plastic each year – and availability of at least 5 years for all accessories.

For a future worth living.

For a good reason. Grundig.

Special features

The GRUNDIG Toaster is equipped with:

- 800 watt output.
- Defrost function.
- Reheat function.
- Variable browning control.
- High-lift function.

Controls and parts

See the figure on page 2.

- A** Warming rack lever
- B** Warming rack
- C** Bread slot
- D** Housing
- E** Crumb tray
- F** Start lever
- G** Stop button
- H** Defrost button
- I** Reheat button
- J** Browning control

OPERATION

Preparation

- 1 Remove all packaging and sticker materials and dispose of them according to the applicable legal regulation.
- 2 Before using the appliance for the first time, clean the appliance (See the "Cleaning and care" section).
- 3 Make sure that the appliance is sitting in an upright position and on a stable, flat, clean, dry and non-slip surface.

Note

- When using the appliance for the first time, smoke can develop due to production residues. However, this does not mean the appliance is defective. The first time you switch it on, use the appliance as you normally would, but without bread. It is recommended to use the medium setting of the browning control **J** to burn in. Ensure for proper room ventilation.

Toasting

- 1 Insert only one slice of bread in each of the two bread slots **C**.
- 2 Connect the power plug into the wall socket.
- 3 Using the browning control **J** select the desired degree of browning.

Notes

- Turning the browning control to the left will give the lightest degree of browning and to the right the darkest. The browning degree can vary depending on the type of bread.
- When toasting several slices of bread consecutively, the toaster will become hotter and therefore the bread will gradually become darker. Therefore select an appropriate browning degree. Let the toaster cool down after each toasting process for minimum 30 seconds.
- The degree of browning of one slice is darker than two slices, although the browning control **J** is set to the same level.

- 4 Press the start lever **F** down until it automatically snap into place.
 - The toasting process begins. The indicator light of the stop button **G** illuminates during the toasting process.

Notes

- If the power plug is not connected into the wall socket, the start lever **F** does not snap into place.
 - The degree of browning can also be adjusted during the toasting process with the browning control **J**.
- 5 The appliance automatically switches off as soon as the set degree of browning has been reached.
 - The start lever **F** springs back up and the stop button **G** light goes off. The toast slices are pushed upwards and can be taken out of the toaster.

Notes

- To cancel the toasting process before it has finished, press the stop button **G**. The start lever **F** springs back up and the toast slices can be taken out of the toaster.
- After the start lever **F** springs back up, you can use high-lift function by pushing the start lever **F** upwards.

Caution

- Be very careful when taking the toast slices out of the toaster as the metal parts of the toaster and also the bread can become very hot.
- 6 Disconnect the appliance from the wall socket.
 - If toast slices get stuck in the toaster, switch the toaster off immediately by pressing the stop button **G**. Pull the power plug out of the wall socket. Let the toaster cool down completely. Carefully try to take the bread out of the toaster without damaging the sensitive heating elements and other parts. Do not use any electroconductive objects to remove the bread from the toaster.

OPERATION

Toasting frozen bread

- 1 Follow the steps from 1 to 4 at the "Toasting" section.
- 2 Press the defrost button **H**.
 - The indicator lights of the defrost button **H** and stop button **G** illuminate and the toasting process begins.

Note

- When the defrost button **H** is pressed, the toasting process takes longer than with normal toasting.
- 3 The appliance automatically switches off as soon as the set degree of browning has been reached.
 - The start lever **F** springs back up; defrost button **H** and the stop button **G** lights go off. The toast slices are pushed upwards and can be taken out of the toaster.

Notes

- To cancel the toasting process before it has finished, press the stop button **G**. The start lever **F** springs back up and the toast slices can be taken out of the toaster.
- After the start lever **F** springs back up, you can use high-lift function by pushing the start lever **F** upwards.

Caution

- Be very careful when taking the toast slices out of the toaster as the metal parts of the toaster and also the bread can become very hot.
- 4 Disconnect the appliance from the wall socket.

Warming up already toasted bread

- 1 Follow the steps from 1 to 4 at the "Toasting" section.
- 2 Press the reheat button **I**.
 - The indicator lights of the reheat button **I** and stop button **G** illuminate and the warming up process begins.
- 3 The appliance automatically switches off as soon as the set degree of warming has been reached. The start lever **F** springs back up; reheat button **I** and the stop button **G** lights go off. The toast slices are pushed upwards and can be taken out of the toaster.

Notes

- To cancel the toasting process before it has finished, press the stop button **G**. The start lever **F** springs back up and the toast slices can be taken out of the toaster.
- After the start lever **F** springs back up, you can use high-lift function by pushing the start lever **F** upwards.

Caution

- Be very careful when taking the toast slices out of the toaster as the metal parts of the toaster and also the bread can become very hot.
- 4 Disconnect the appliance from the wall socket.

OPERATION

Warming up buns

This toaster is equipped with an integrated warming rack **B**.

Notes

- Do not toast bread and warm up buns at the same time.
- Do not warm up toast slices on the warming rack **B**. The toast slices hinder sufficient ventilation.
- If you accidentally activate the wrong mode (defrost instead of reheat or reheat instead of defrost), then the selected mode must be cancelled first by pressing the stop button **G** before you can select the right mode.

- 1 Press down warming rack lever **A** until it snaps into place.
 - This sets the warming rack **B** in the upright position.
- 2 Position the buns on the rack.
- 3 Connect the power plug into the wall socket.
- 4 Using the browning control **J** select the desired degree of warming.
- 5 Press down the start lever **F**.
 - The indicator light of the stop button **G** illuminates and the warming up process begins.
- 6 Turn the buns in order to reach a consistent browning.
- 7 The appliance automatically switches off as soon as the set degree of warming has been reached.
 - The start lever **F** springs back up; and the stop button **G** light goes off.

Note

- To stop the toasting process before it has finished, press the stop button **G**.
- 8 After warming up the buns, take them off the rack and push the warming rack lever **A** upwards. This will return the warming rack lever **A**.
 - 9 Disconnect the appliance from the wall socket.



Caution

- The buns and the housing **D** of the toaster can become very hot during and directly after the toasting process. Do not touch them with bare hands.

INFORMATION

Cleaning and care

Caution

- Never use petrol, solvents or abrasive cleaners, metal objects or hard brushes to clean the appliance.
 - Never put the appliance or power cord in water or any other liquids.
- 1 Turn the appliance off and disconnect it from wall socket.
 - 2 Let the appliance cool down completely.
 - 3 Remove the crumbs after each use by pulling out the crumb tray . Clean the crumb tray with a damp cloth only. Before pushing back the crumb tray in the appliance assure that the tray is dry. Do not let bread crumbs collect inside the toaster, they may cause fire.
 - 4 Turn the toaster upside down and shake it slightly to remove bread crumbs from inside.
 - 5 Use a damp soft cloth and a small mild cleanser to clean the housing  of the appliance. Dry the housing thoroughly.

Note

- Before using the appliance after cleaning, dry all parts carefully using a soft towel.

Storage

If you do not plan to use the appliance for a long period of time, please store it carefully.

Make sure the appliance is unplugged and completely dry.

Wrap the power cord around the cable coil on the bottom of the toaster.

Store the appliance in a cool, dry place.

Make sure the appliance is kept out of the reach of children.

Environmental note

This product has been made from high-quality parts and materials which can be re-used and are suitable for recycling.



Therefore, do not dispose of the product with normal household waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please consult your local authorities to find out where the nearest collection point is.

Help protect the environment by recycling used products.

Technical data

This product conforms to the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.



Power supply: 230 V~, 50 Hz

Power: 800 W

Technical and design modifications reserved.

www.grundig.com
72011 907 9000

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>