

Spin-drier

User's manual

Haier

This manual is for

T60-32

 
- Please read this manual carefully before using.
- Retain it for future reference.



Contents



● Names of the parts.....	1
● Safety precautions.....	2
● The musts in using	4
● Using sequence.....	5
● Trouble-Shooting *Answers to question.....	7
● Packing list *Specification	8

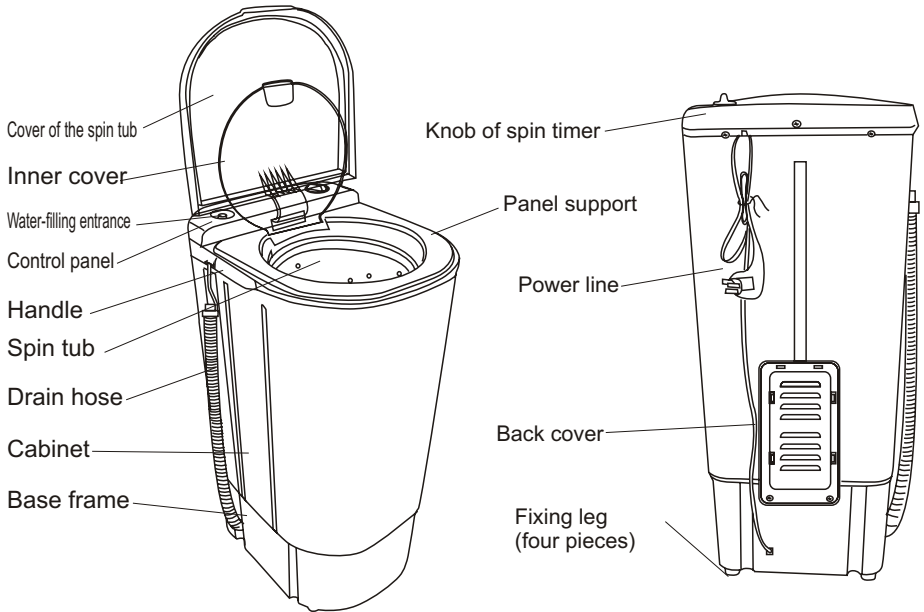Names of the parts



Note: The figures in this manual can only be regarded as diagrammatic sketches. Please understand that, due to constant improvement of design, the extractor and its accessories that you have purchased may be inconsistent with these figures in the manual.


Meaning and description of the symbols

<p>Warning sign</p> 	<p>Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents, otherwise it may cause damage of the machine or injure the personal safety of the user.</p>
<p>Forbidding sign</p> 	<p>Contents marked with that symbol are actions forbidden to perform. Performing of those actions may result in damage of the machine or injure the personal safety of the user.</p>

- Please check if the power receptacle has good earthing condition before using to guarantee your safety.

Safety precautions

 Please insert the power cord into special receptacle with rated voltage. Be sure to use single-phase two pins receptacle. If possible, please adopt electric leakage protector.

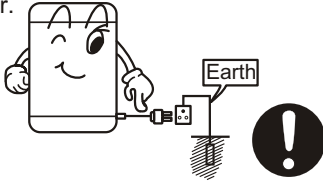


When the machine is normally using, please put the power plug at the location easily to be inserted and extracted by hand. Be sure to pull the plug off when there's power failure, or the machine is being moved, cleaned or when it is idle.



- Do not bend, stretch, twist, bind the power cord by force, or reform it. Do not press or clamp it with heavy items.
- Keep the prong of the power plug clean. If dust is found on the power plug, please wipe it off with dry cloth.
- If the power cord and power plug are bad, or the receptacle is loose, be sure to have it replaced by the technicians of our special shop or our agent, or the after-sale service department for the sake of avoiding any risk.



 
In case the spin dryer is installed on ground with carpet, do not block the ventilation hole with carpet.

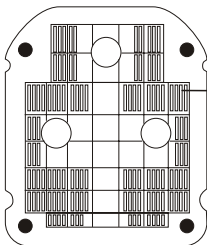


Ventilation hole at the bottom of the spin dryer



 Do not share one receptacle with other electric appliances. Do not use it in case that the power plug is damaged or the inserting into the receptacle is loose.

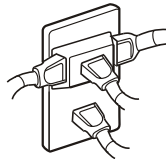

 Do not put the machine at damp place like the bathroom. Never wash it with water. Do not place wet laundries on the control panel.

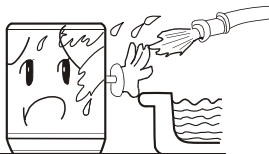

Do not wash water-proof laundries such as the raincoat, bicycle shelter etc. To avoid abnormal vibration during spinning.



Safety precautions

 
Do not stretch hands into the working machine. It is dangerous even if the rotation is slow. Take special care of the children.



Do not decompose, repair or alter the machine by yourself.




Do not put any hot or heavy items (such as the kettle with hot water) on the washing machine.

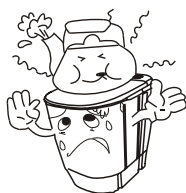


Do not wash laundries with volatile materials (such as thinner, petrol etc.).



 Handicapped or children without care shall not use the machine.

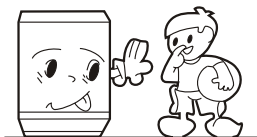

 Keep the machine away from direct sunlight and heat source like the heater.

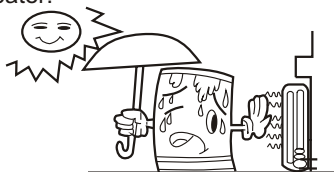

Slanting or uneven ground may result in unstable working or abnormal noise. Please make the machine stand horizontally.

The musts in using

Usage of the panel



 
- Water-added rinsing-spinning, to be used during defoaming -spinning.

- Set the spinning duration depending on the category and amount of the articles.
- To set to below 1 minute, first set to 2 minute then turn it back. it can increase the service life of the timer

Usage of the drain hose

The drainage shall be smooth with the drain hose.

1. The height of the drain hose shall be less than 10cm, or the drainage will not be smooth enough and cause incomplete drainage.
2. Do not tramp or press the drain hose.
3. If the drain hose is too long, cut it at mid point. To make smooth drainage, cut the front end of the hose slantingly.
4. If extra drain hose is needed, please make separate purchase. The inner diameter of the extra hose shall not less than 30mm, and the length shall not exceed 1.5m.

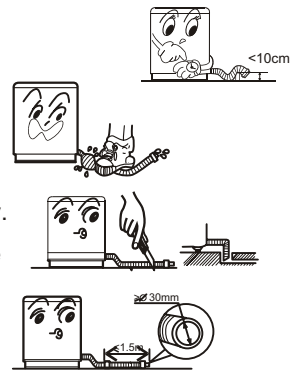

Select the spinning time

List 1

Laundries	Towel, turkish towel, bed sheet	Shirt, Pajamas	Underwear, Underpants	Blending thin clothes
Spin time(min.)	About 4~5	About 2~4	About 1~2	within about 1

Notes:

- The capacity of spinning of the machine refer to the largest weight of the standard laundries under dry condition that can be spinned in one time. Laundries quantity in one cycle shall be lower than the rated capacity.
- The thickness, size, type of the cloth will influence the actual spinning time.

 
Using sequence

Preparation before spinning

- 1、 Please make the machine stand horizontally.
- 2、 Confirm that the washing machine is earthed reliably . Then insert the power plug into the receptacle. Do not connect the earth terminal to the gas pipe and tap water pipe.
- 3、 Put down the drain hose .

Spin process


- 1、 Put the laundries in properly
- 2、 Put the gland in properly
- 3、 Close the inner and outer cover of the spin tub
- 4、 Do you need water-added “Rinsing-spinning”
“Water-added rinsing-spinning” has an effect that can remove the surplus liquid dirt, It works in a way as follows:

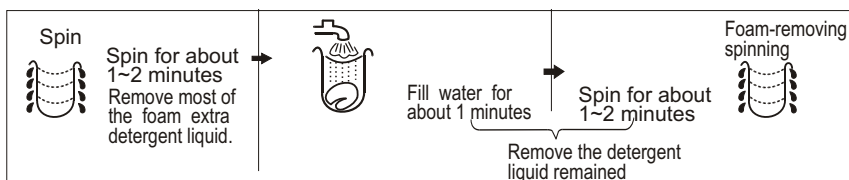

Note: If there needs no “water-added rinsing-spinning”, set the duration for spinning directly.

- The effect is best when the laundries quantity is below 80% of the rated value.

 5、 Select spin time

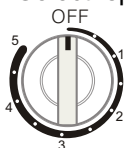

Select suitable spin time according to the laundries, and do spinning
Refer list 1 of page 3



Spin timer

 
6、 Take the laundry out when the spinning ends.

When the spinning ends, open the top lid and the interior lid. Then take out the depression cover and laundry after the spinning drum has stopped rotation completely.

Note: ● Refer to the Notes on Spinning carefully.

Install the water inlet hose

The water hose should be connected as shown in the right figure.

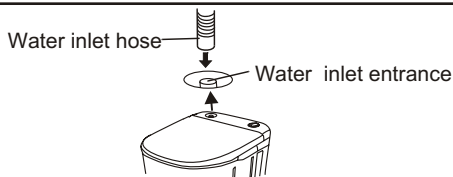


Notes on Spinning

Use the foam-removing spinning to remove the extra detergent liquid. It can both shorten the washing time and save the water consumption.



 - Please put in the gland properly even if the laundries quantity is small.
- Do not leave any articles above the depression cover.

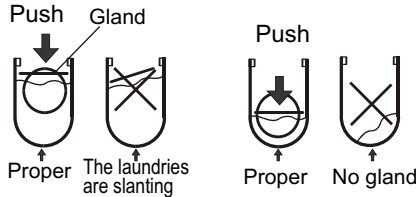

To protect your laundries and washing machine, please take out all of the coins, buttons, sand, hairpin and other foreign materials before washing.

In spinning, it will pause the work if you open the outer cover of the spintub. Close it to resume the spinning.

During the spinning, the draining hose must be leveled down. Do not lift or hang it up.

Disposal after spinning

- 1、 Hang up the drain hose.
- 2、 Pull off the power plug and hang up the power cord.
- 3、 Wipe the complete unit with soft cloth twisted dry.
- 4、 Open the inner/outer cover of the spin tub for some time (about one hour), then close them.

Maintenance

- 1、 Wipe off the water drops on the surface and inside the tub with clean soft cloth.
- 2、 Be sure to pull off the power plug before maintenance.

- If the cabinet is dirty, wipe it with wet soft cloth
- Do not wash it directly by water.
 - Wipe with neutral detergent if too dirty
 - Do not wipe with thinner, petrol, alcohol, etc.





Trouble-shooting Answers to question

(If there's breakdown, please pull off the power plug before checking) The following phenomena are not breakdowns sometimes. Please confirm again before sending it to repair. If there are real breakdowns, please come to the special maintenance department or after-sale service department of our company. Do not repair it by yourself.

Phenomena	The reason-How to solve
The machine does not act.	<ul style="list-style-type: none">● Is there power failure--Please use it when there's power supply.● Is the power plug loose--Insert the power plug tightly.
There's abnormal sound and violent vibration during spinning	<ul style="list-style-type: none">● Is the machine slanting--Adjust the machine to be even● Is the gland pressed evenly--Put the gland in properly● Check if the laundry is inclined to one side--Take it out and replace it evenly.● Check if there are any metal articles in the laundry. -- take them out.● Check if it is too full with the laundry-- load the laundry only in the right amount.● Check if there are any articles out of the spinning drum -- put them into the drum.

 Packing list

Name	Quantity
● User's manual	● One piece
● Water inlet hose 	● One piece
● Gland 	● One piece
● Spin-drier	● One set

Specification

Injection pressure(MPa)	0.02~0.2
Rated spinning capacity (kg)	6.0

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>