

HANNspree Xv Quick Start Guide

JT01-32E2 32" Liquid Crystal Display TV

 
This guide is designed as a reference to help you start using your LCD TV quickly. Please refer to the User's Manual for more detailed installation and safety instructions.

Front View



- 1. Volume down button
- 2. Volume up button
- 3. OSD Menu button
- 4. Channel down button
- 5. Channel up button
- 6. Enter button
- 7. Power button
- 8. Infrared receiver
- 9. Power LED indicator

Rear View

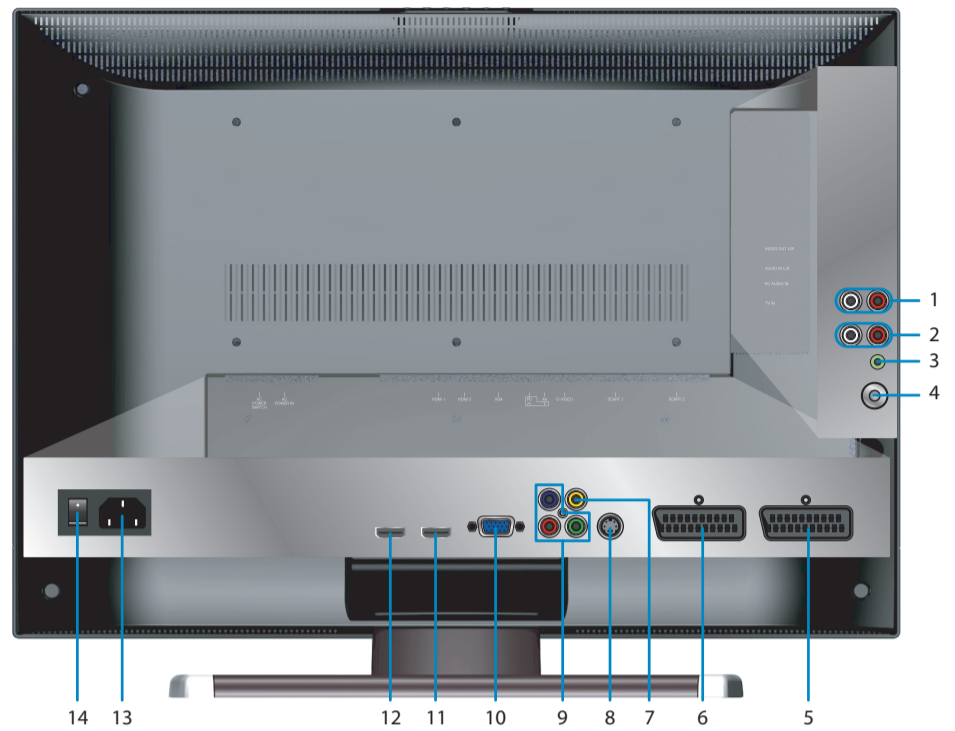

- 1. Audio Output for AV, S-Video or YPbPr components (L/R)
- 2. Audio Input for AV, S-Video or YPbPr/ HDMI-DVI components (L/R)
- 3. Audio Input for VGA
- 4. RF Antenna / Cable TV Input
- 5. SCART2 / SCART2-SV Input
- 6. SCART1 Input
- 7. Composite Video input
- 8. S-Video Input
- 9. YPbPr/ HD Component Video Input
- 10. VGA (15 pin) Signal Input from Computer
- 11. HDMI2 Input Terminal (19 pin)
- 12. HDMI1 Input Terminal (19 pin)
- 13. AC Power Input
- 14. AC Power Switch

Making Connections

Connecting to Antenna/Cable TV



1. Connect one end of the UHF/VHF (Antenna) or CATV cable to the TV IN jack (UHF/VHF IN jack) on the back of the TV.
2. Connect the other end of the UHF/VHF (Antenna) or the CATV cable to the Antenna or CATV socket.


Connecting to VCR, VCD or DVD Player

The illustrations below show you how to connect your TV to a VCR, VCD or a DVD player.


With RCA AV cable



 
With S-Video cable

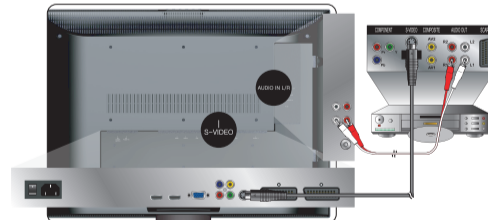

With YPbPr cable

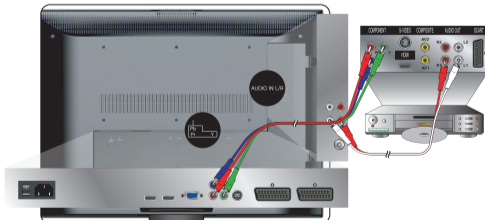 

With SCART1

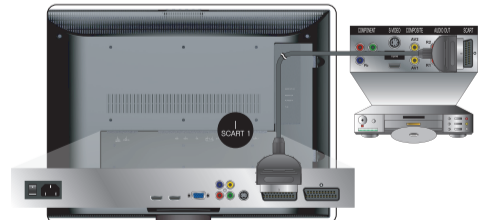 

Connecting the Power Cord

 


1. Plug the power connector into the AC-IN input jack on the rear cover of the TV-set.
2. Insert the three-pronged plug at the other end of the power cord into a power outlet.
3. Turn the main power switch on to supply power to the TV.

Getting Started

Selecting Input Source

1. Make sure your TV is turned on and a device such as a DVD player is connected.
2. Press the **SOURCE** button on the remote control and use the **◀ / ▶** button to select the required input source between PC, HDMI1, HDMI2, TV, YPbPr, AV, SVIDEO, SCART1, SCART2, and SCART2-SV.
3. Press **ENTER** to confirm your selection.

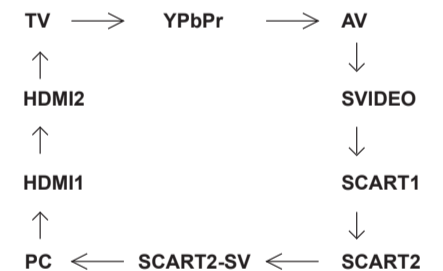

Auto Channel Scan

Follow the instructions below to automatically preset the channels for your TV before watching it for the first time.

1. Press the **"MENU"** button on your remote control or the control panel.
2. Use the **▲ / ▼** button to select Channel Menu.
3. Press the **◀ / ▶** button to select country.
4. Press the **"ENTER"** button to start Auto Scan.

Note: After performing Auto Scan, you need not do it again when turning on your TV next time.

Auto Scan



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>