

# Haier®

## Model # IPDS-10

### iPod / iPhone Rotational Docking Station



## USER MANUAL

## TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS .....	2
PREPARATION FOR USE .....	4
USING THE AC ADAPTOR .....	4
CONNECTING EXTERNAL DEVICES .....	5
LOCATION OF CONTROLS & INDICATORS .....	6
REMOTE CONTROL .....	7
OPERATING INSTRUCTIONS .....	8
iPod / iPhone OPERATION .....	9
iPod / iPhone OPERATION CONTROLS .....	10
VIDEO OPERATION .....	11
TROUBLESHOOTING GUIDE .....	12
MAINTENANCE .....	13
TECHNICAL SPECIFICATION .....	13
DOCK ADAPTOR / APPLE DEVICE COMPATIBILITY CHART .....	14
APPLE DEVICE COMPATIBILITY CHART .....	15
WARRANTY .....	16

## IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- 2.) Install this unit in accordance with the manufacturer's instructions.
- 3.) Only use attachments / accessories specified by the manufacturer.
- 4.) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit. When a cart is used, use caution when moving the cart/unit combination to avoid injury from tip-over.
- 5.) Use replacement parts as specified by the manufacturer.
- 6.) Do not install this unit near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 7.) The unit shall not be exposed to dripping or splashing water and no object filled with liquids, such as vases, shall be placed on the apparatus.
- 8.) Do not use this apparatus near water and clean the unit with dry cloth only.
- 9.) Disconnect the unit from the power source when cleaning.
- 10.) No naked flame sources, such as lighted candles, should be placed on the unit.
- 11.) Keep the player clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- 12.) Do not block any ventilation openings; the ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. Give minimum 100 mm distances around the apparatus for sufficient ventilation.
- 13.) To prevent fire or shock hazard, do not expose this unit to rain or moisture.
- 14.) Do not subject the product to harsh impacts. Do not drop the appliance. This may result in damage to the product and loss of data.
- 15.) Care required with the use of this apparatus in moderate climates.
- 16.) Do not use this apparatus in an extremely dry environment, as this can lead to static discharge which can damage the player.
- 17.) When the unit experienced a crash due to a strong electromagnetic field or other interference. Please first switch off the mains and disconnect the main unit with the main power supply for a few minutes. Reconnect the unit with the power supply to reset the unit software, the unit will return to normal operation.
- 18.) To prevent fire or shock hazard, do not use this plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.
- 19.) Unplug this unit during lightning storms or when unused for long periods of time.
- 20.) Where the MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

## IMPORTANT SAFETY INSTRUCTIONS

- 21.) Do not destruct the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 22.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 23.) Do not overload wall outlet. Use only power source as indicated.
- 24.) Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
- 25.) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged. Liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, or has been dropped, does not operate normally.
- 26.) Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 27.) Attention should be drawn to the environmental aspects or battery disposal.
- 28.) This product is not intended for commercial use. Household use only.
- 29.) Do not install this apparatus in a confined space, such as a book case or built-in cabinet. Minimum distance(about 10cm) around the apparatus for sufficient ventilation.
- 30.) To be completely disconnected the power input, the mains plug of apparatus shall be disconnected from the mains.

### **Servicing:**

- This unit contains no user serviceable parts. Refer to qualified personnel.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of this product.

## PREPARATION FOR USE

### Contents:

 
1 x Main Unit, 1 x Remote control, 1 x Instruction manual, 1 x Main adaptor,  
4 x iPod inserts

### Unpacking And Set Up

- Remove the contents from the box and remove all packing material from the main unit. We recommend that you save the box & packing material in the event that the unit ever needs to be returned for service.
- Remove any descriptive labels or stickers from the top or front panels of the unit but do not remove any labels or stickers from the back or bottom panels.

## USING THE AC ADAPTOR

Connect the small female plug of the AC adaptor to the DC IN Jack on the back panel.  
Connect the housing of the AC adaptor to the 120V AC outlet.

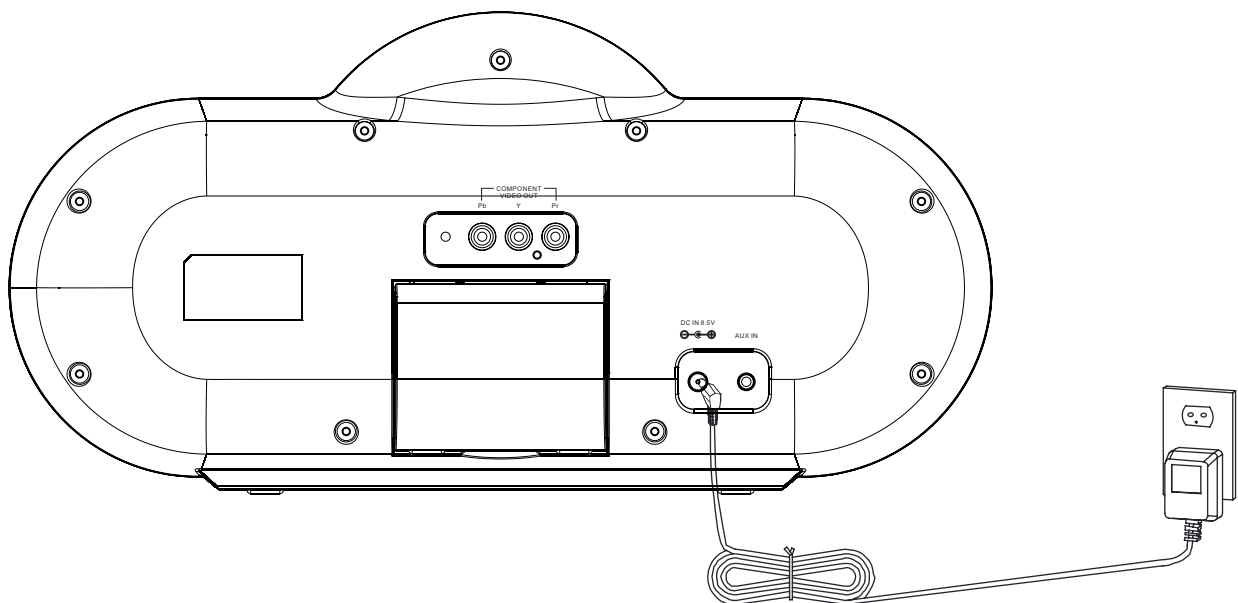

Connect the housing of the AC adaptor to the 120V AC outlet.

### NOTES:

- *The housing of the AC adaptor may become warm during operation. This is normal.*
- *To reduce the risk of electric shock never connect or disconnect the AC adaptor while your hands are wet.*
- *Please use original AC adaptor supplied with the unit, to avoid damage to the unit.*
- *Ensure the power lead is connected to the speaker unit BEFORE connecting to the mains socket.*

 
## CONNECTING EXTERANL DEVICES

### Auxiliary Input Jack

This system include a auxiliary input on the back cabinet labeled "AUX IN". The input allow you to connect external audio sources and play the audio through the speakers of the system. You may find it convenient to connect equipment use occasionally(such as iPod shuffle or another Mp3 player).


### Complete the connections as shown below:

- **AUX** connection requires a 3.5mm audio cable to connect your external audio source to the **AUX** input on the back of the main unit.

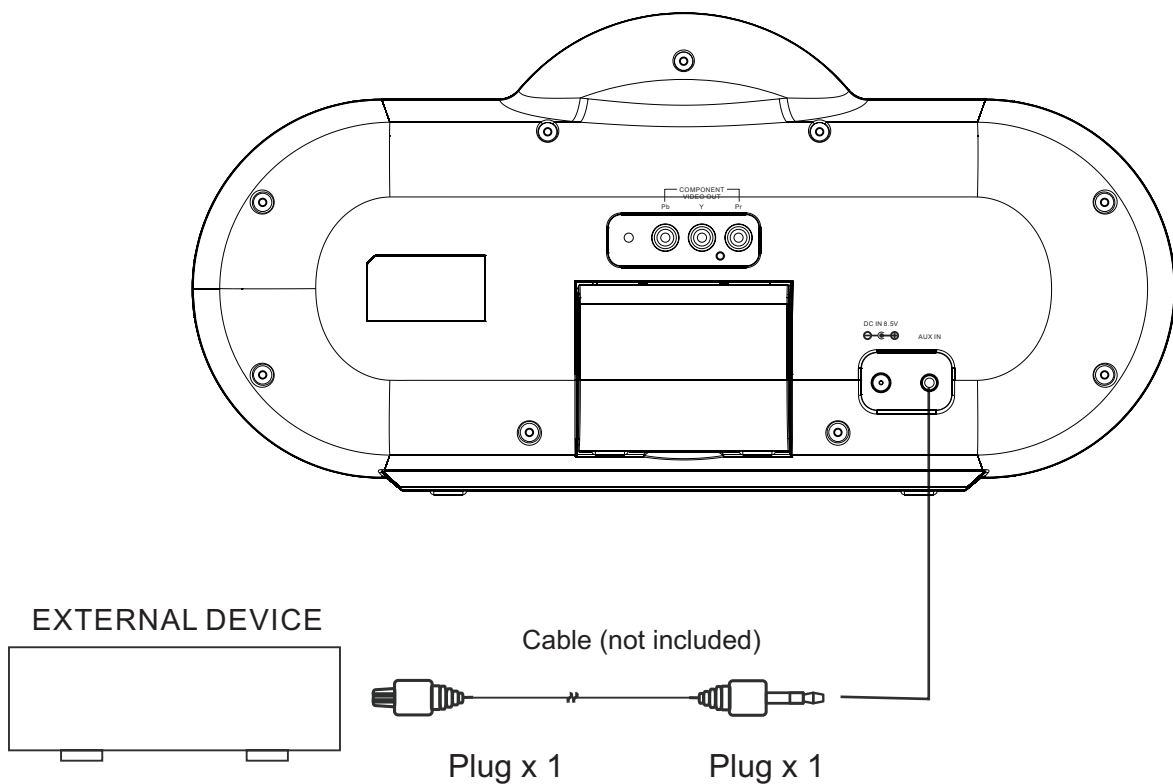


**NOTE:** If an iPod is docked, it must be removed before you can listen to the **AUX** input.

## LOCATION OF CONTROLS & INDICATORS

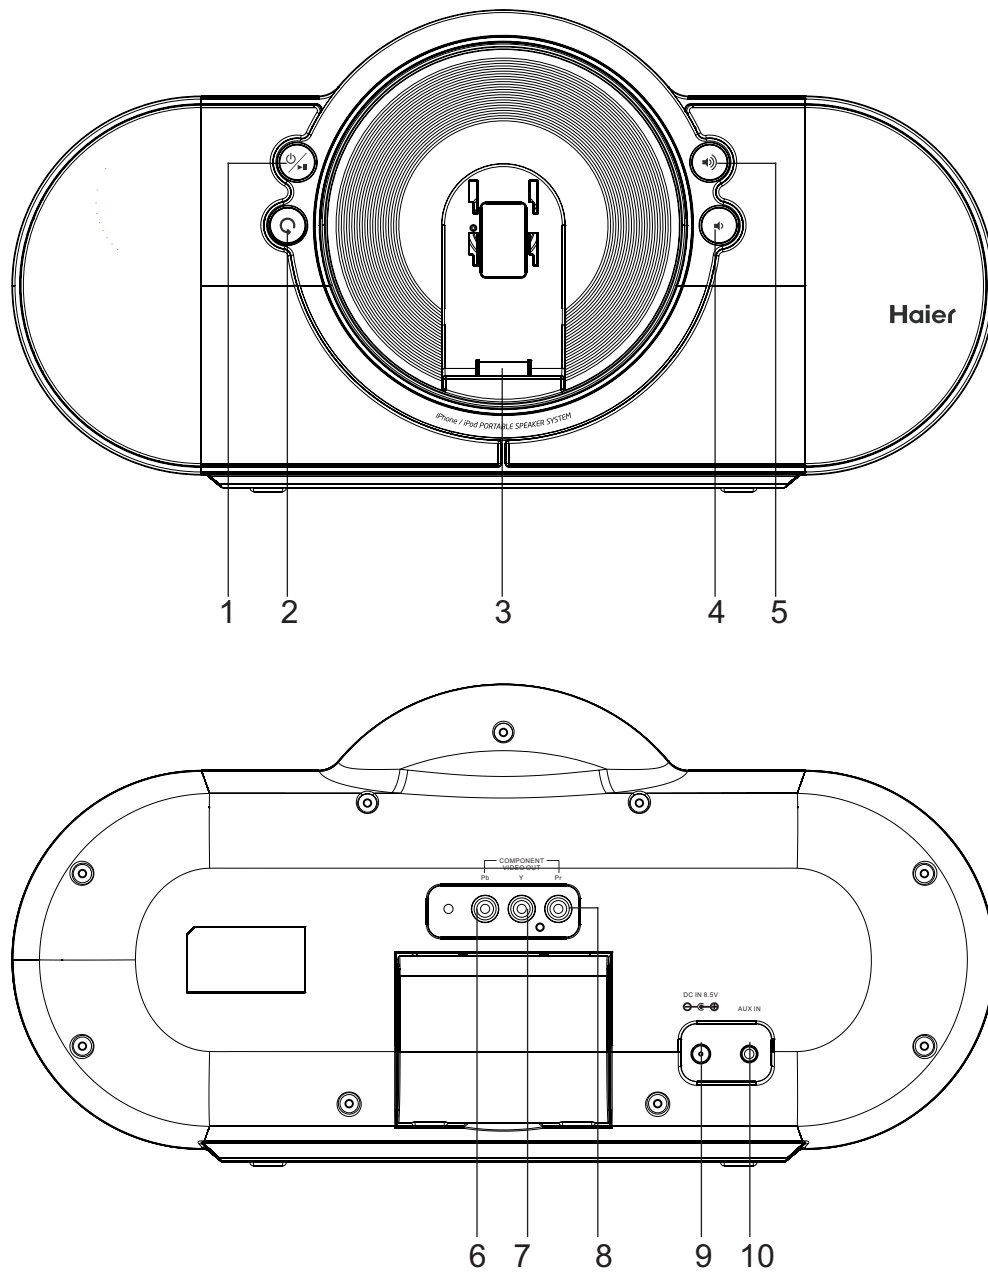 

1. POWER ON/OFF/PLAY/PAUSE Button
2. ROTATE Button
3. Universal Dock for iPod/iPhone
4. VOLUME - Button
5. VOLUME + Button
6. COMPONENT VIDEO OUT Pb Jack
7. COMPONENT VIDEO OUT Y Jack
8. COMPONENT VIDEO OUT Pr Jack
9. DC IN Jack
10. AUX IN Jack


# REMOTE CONTROL

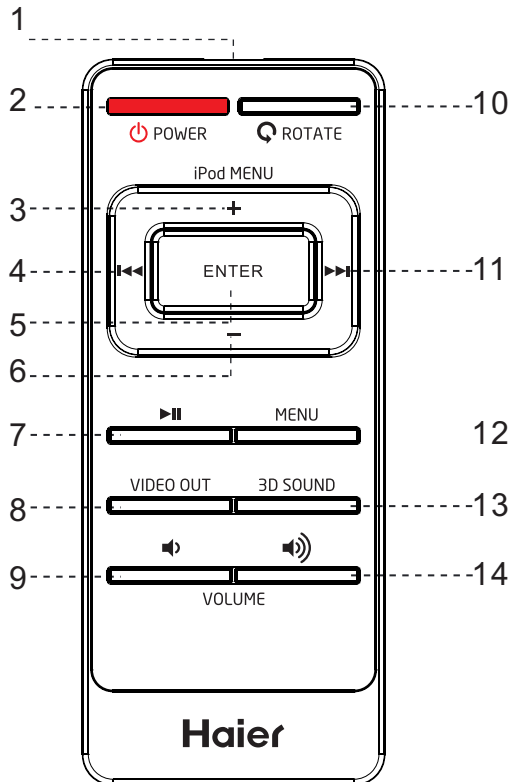 

1. Remote Control Transmitter
2. ⏻ Power Button
3. iPod MENU + Button
4. SKIP ⏮ Button
5. ENTER Button
6. iPod MENU - Button
7. PLAY / PAUSE ⏪ Button
8. VIDEO OUT Button
9. VOLUME 🔊 Button
10. ROTATE ↻ Button
11. SKIP ⏭ Button
12. MENU Button
13. 3D SOUND Button
14. VOLUME 🔊 Button

## Using The Remote Control

 The CR2032 lithium battery is already installed in the remote control. Pull out the small mylar insulation tab as shown in the illustration to begin using the remote control.

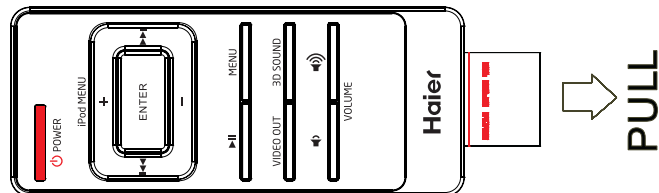


To use the remote controller, point the remote control transmitter on the remote control toward the remote control receiver on the front panel of the main unit and press the desired button. The effective range of the remote controller is approximately 20 feet. Please note that bright sunlight or artificial light may interfere with the proper operation of the remote control.

## Battery Replacement

 When the remote operation becomes weak or intermittent, it is time to replace the remote control battery. Pull out the battery holder, remove the old battery and install a new CR2032 battery in the holder as shown in the illustration. Slide the holder back into the remote control.

NOTE: If the battery is installed incorrectly the remote control will not work.

- Make sure that you have removed the mylar insulation tab from the remote control.

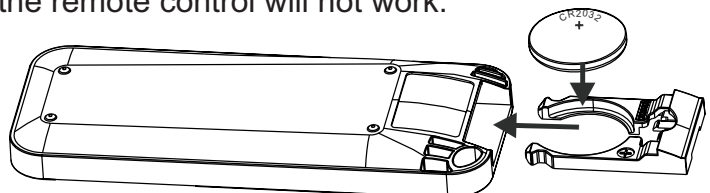

- Ensure the system is connected to an AC outlet that is always "live".



## OPERATING INSTRUCTIONS

### General Controls

Most of the main functions of this system can be operated by the controls on the top panel of the main unit, or by the buttons on the remote control. If a specific function can only be operated by the remote control, or by the top panel controls, this will be clearly indicated in the instructions.

When operating this system with the remote control, make sure that the IR (Infrared) transmitter on the front of the remote control is pointed at the remote sensor on the front panel of the main unit.

The effective operating range of the remote control is approximately 20 feet. Please note that bright sunlight or room lighting may interfere with the remote control operation. If the remote control is not operating properly, try reducing the brightness of the room or moving closer to the main unit. If this does not solve the problem, it may be time to change the remote control battery.

## iPod/iPhone OPERATION

### Choosing The Correct Adaptor

 


**When connecting an iPod / iPhone to this iPod Dock, please ensure that the correct adaptor plate is used. FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE iPod / iPhone.**

The iPod dock comes with 4 removable dock adaptor. Using the correct adaptor ensures the proper fit for your iPod / iPhone and help to reduce the stress on the connector when operating the iPod / iPhone.

#### To place a dock adaptor:

1. Refer to the compatibility table on the next page and select the correct dock adaptor for the iPod / iPhone.
2. Place the proper adaptor from your iPod / iPhone accessories into the dock and press it into position. The adaptor will only go in one way. The iPod dock connector should fit through the opening in the bottom of the adaptor.
3. Carefully align and then gently insert the iPod/iPhone into the dock.(The iPod/iPhone must not be in a case or "SKIN")
4. To remove/replace a dock adaptor, first remove the iPod/iPhone, then grip the adaptor and pull gently upwards.

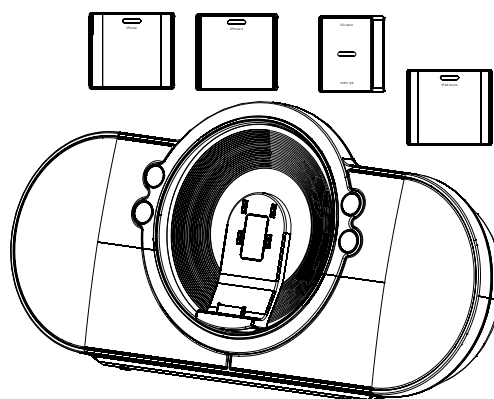

## iPod/iPhone OPERATION

### Charging your iPod / iPhone



**NOTE:** Please make sure you are using the correct insert from your iPod / iPhone and that it is properly docked into this unit.

**FAILURE TO DO SO MAY DAMAGE THE iPod / iPhone.**

When an iPod / iPhone is inserted into the dock, it will go to standby mode then turn off. While the iPod / iPhone is docked in the system, it will recharge (until fully charged).

## iPod/iPhone OPERATION CONTROLS

### Volume Controls

To increase or decrease the system volume, press the **VOLUME**  or  button on the remote control or on the front panel.

If the volume is less than the default level when the unit is set to standby, when the unit is powered up again the volume will return to the default level.

If the volume is higher than the default level when the unit is set to standby, when the unit is powered up again the volume will remain at that level.

### 3D SOUND Button(On Remote Control Only)

The preset allows your to adjust the sound characteristic for the most popular types music. Press the **3D SOUND** button on the remote control to cycle the music for surround on and off.

**▶/||** (Play/Pause)(on Remote Control Only) – Press this button on the remote control to begin playback on your iPod/iPhone. Press again to Pause playback.

**▶▶ / ◀◀** Skip Forward/Back buttons(on Remote Control Only) - During playback press to skip forward or backward to the next or previous track.




 

**MENU** button(Remote control only) - Press this button to access the Menu of the iPod or iPhone which is playing. This button operates exactly like the **MENU** button on the iPod itself.

## iPod/iPhone OPERATION CONTROLS

**+ / - (Plug/Minus) buttons (on Remote Control Only)** - After pressing the **MENU** button to access the iPod/iPhone Menu, press the **+ / -** buttons to move up(+) or down(-) within the Menu display.

**ENTER** button (Remote Control Only) - After selecting the desired Genre, Album, Song, etc in the Menu display with the **+ / -** buttons, press the **ENTER** button to Enter (Open) that Genre, Album, or begin playback of the selected song.

**ROTATE** button - When iPhone playing, press the button for rotate the display view.

- 1.) If necessary, press the  **POWER ON/OFF/PLAY/PAUSE** button on the front panel or press **ON** button on the remote control to turn the system 'On'.
- 2.) Make sure that you have inserted the correct adaptor from your iPod / iPhone accessories into the dock and then insert your iPod or iPhone into the adaptor. The word "iPod" stops flashing and remains 'On'. Your iPod/iPhone display will come on. If you were playing music on your iPod/iPhone before inserting in the dock your iPod/iPhone may change to pause mode, but it may take several seconds for your iPod or iPhone to go through the authentication process. If your iPod or iPhone was in the pause mode when inserted into the dock it may remain in the pause mode. In that case press the  **POWER ON/OFF/PLAY/PAUSE** button on the front panel or **Play/Pause (▶||)** button on the remote control to release the pause mode and resume playback.
- 3.) To skip forward or backward to different tracks, press the **▶▶ / ◀◀** button on the remote control.
- 4.) The **MENU** button on the remote control works the same way as the **MENU** button on your iPod. Press the **MENU** button repeatedly to access the Main Menu of your iPod. Press the **+ / -** buttons on the remote control to navigate Up or Down through the displayed Menu list. When the desired Genre, Artist, Album, or Song is 'highlighted' on your iPod Menu display, press the **ENTER** button on the remote control to 'Enter' or 'Select' the highlighted item. If the highlighted item is a specific song, pressing the **ENTER** button will begin playback of the song.
- 5.) To pause iPod playback press the  **POWER ON/OFF/PLAY/PAUSE** button on the front panel or **▶||** button on the remote control. Press again to release pause and resume iPod playback.
- 6.) To stop iPod playback press and hold the  **POWER ON/OFF/PLAY/PAUSE** button on the front panel or **▶||** button on the remote control until your iPod shuts off and enters the 'Charging' mode. However please note that the system power remains 'On'.
- 7.) To shut the system 'Off' completely, press the  **POWER ON/OFF/PLAY/PAUSE** button on the front panel or **OFF** button on the remote control for 3 seconds, until your iPod shuts off and enters the Charging mode. The front panel power LED lighting turns "off".

## VIDEO OPERATION


### Connecting the Video Cord to View a Video/Picture from iPod/iPhone

When viewing a video/picture from iPod/iPhone on your TV, use a component video cord (not supplied) to connect the COMPONENT VIDEO OUT jack on the unit and the component video input on your TV.

- After you have connected the unit, change the video input mode on your TV. For details, also refer to the instruction manual for your TV.

The below diagram show the connection options available.

 **NOTE:** Consult your iPod documentation for details on how to enable video output on your model of iPod / iPhone.

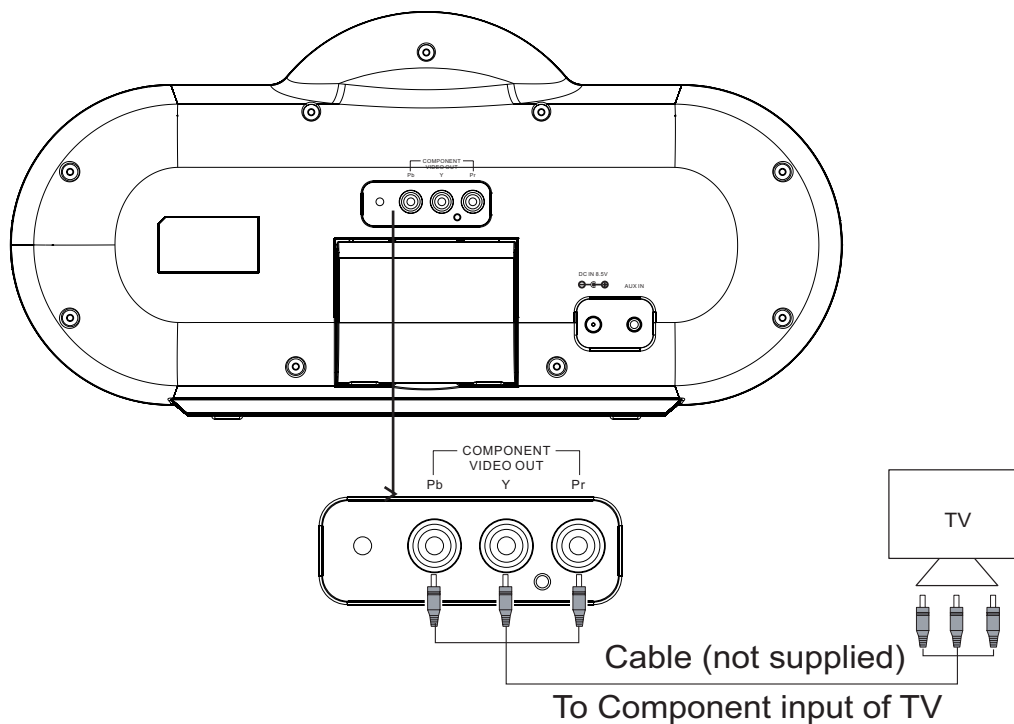

#### Remarks:

- When you have your iPod outputting video and the unit connected to your TV, you may need to change the output setting to TV output.
- Press the **VIDEO OUT** button on the remote control to escape the current video playback select the Video by using + / - button, then press **ENTER** button to resume on TV screen.

Video play on iPod / iPhone ↔ TV out with Component out

#### NOTES:

- Due to the software used in iPod Nano 3G & iPod Classic, to change the video the video output mode you will need to press the **MENU** button to escape the current video playback, then press **ENTER** to resume.
- Component video output to television is supported by iPod nano (3rd, 4th and 5th generation), iPod touch (2nd generation), and iPod classic at 480p or 576p resolution; and by iPod touch (1st generation), iPhone, iPhone 3G, iPhone 3GS, iPhone 4.

## TROUBLESHOOTING GUIDE

Symptom	Possible Cause	Solution
iPod Player		
Unit does not respond (no power)	AC adaptor is not plugged into a wall outlet or the connector is not plugged into the DC IN jack on the back of the unit.	Plug the AC adaptor into a wall outlet and plug the connector into the DC IN jack on the unit.
	Using no or wrong iPod insert	Make sure the dock insert is the proper fit for the iPod.
iPod does not dock properly	iPod did not install properly	Remove the iPod from the dock and check for obstruction on the connections in the dock and on the iPod. Then reseal it in the dock.
iPod does not respond to the unit	iPod is not installed properly	Remove the iPod from the dock and check for obstruction on the connections in the dock and on the iPod. Then reseal it in the dock.
	iPod is locked up	Please make sure your iPod is working properly before docking into the unit. Please refer to the iPod manual for details.
	Using first or second generation iPod, iPod shuffle or other devices.	This unit cannot control those iPod or other devices.
iPod did not charge up	iPod is not installed properly	Remove the iPod from the dock and check for obstruction on the connections in the dock and on the iPod. Then reseal it in the dock.
	iPod is locked up/frozen	Please make sure your iPod is working properly before docking into the unit. Please refer to the iPod manual for details.
	iPod battery has problem	Please make sure your iPod is working properly before docking into the unit. Please refer to the iPod manual for details.

### Remarks:

If troubleshooting(see above)does not eliminate the problem, disconnect the unit from the mains power and re-connect after a few seconds. Resetting causes the unit to restore its factory default setting and results in all the setting made by the user being deleted.

## MAINTENANCE

### Cleaning The Unit

- To prevent fire or shock hazard, disconnect your unit from the main power source when cleaning.
- If the cabinet becomes dusty wipe it with a soft dry cloth. Do not use any wax or polish sprays on the cabinet.
- If the cabinet becomes dirty or smudged with fingerprints, it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes, which will damage the finish of your unit.

**Caution:** Never allow any water or other liquids to get inside the unit while cleaning.

## TECHNICAL SPECIFICATION

### 1. General

Power requirements

AC Adaptor Model: GPE248-085220-1

Input: AC 100-240V ~ 50/60Hz 0.75A

Output: DC 8.5V 2.2A 18.7W

Max power consumption

20W

Dimensions of main unit

376mm(L) x 69mm(W) x 183mm(H)

Weight of main unit

1.0 Kg

### 2. Amplifier

Power Output

5W x 2 THD 10%

### 3. Speaker system

Impedance

4  $\Omega$  2" Speaker x 2 / 2.5" Passive woofer x 2

### 4. AUX IN

Input

$\Phi$  3.5mm

Max voltage

1 V

Impedance

47 K $\Omega$

### 5. Remote Control

Power consumption

 

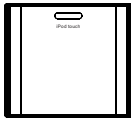 
 
3V

Battery size







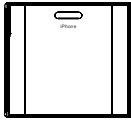








 

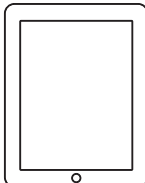 
CR2032

**Specifications subject to change without notice.**

## DOCK ADAPTOR / APPLE DEVICE COMPATIBILITY CHART

<p>A</p> 	<p>iPhone, iPhone 3G, iPhone 3GS, iPod classic(1st/2nd generation), iPod video(5th generation) iPod photo, iPod 4th generation, iPod mini,</p>
<p>B</p> 	<p>iPhone 4</p>
<p>C</p> 	<p>iPod Touch(1st / 2nd generation) iPod nano(1st / 2nd / 3rd generation)</p>
<p>D</p> 	<p>iPod nano(4th / 5th generation)</p>

## APPLE DEVICE COMPATIBILITY CHART

 <p><b>iPod mini</b> 4GB 6GB</p>	 <p><b>iPod</b> 4th generation 20GB 40GB</p>	 <p><b>iPod</b> 4th generation (color display) 20GB 30GB 40GB 60GB</p>
 <p><b>iPod</b> 5th generation(video) 30GB 60GB 80GB</p>	 <p><b>iPod nano</b> 1st generation 1GB 2GB 4GB</p>	 <p><b>iPod nano</b> 2nd generation (aluminum) 2GB 4GB 8GB</p>
 <p><b>iPod nano</b> 3rd generation(video) 4GB 8GB</p>	 <p><b>iPod nano</b> 4th generation(video) 5th generation (video camera) 8GB 16GB</p>	 <p><b>iPod nano</b> 6th generation 8GB 16GB</p>
 <p><b>iPod classic</b> 80GB 160GB</p>	 <p><b>iPod classic</b> 2nd generation 120GB</p>	 <p><b>iPod touch</b> 1st/2nd generation 8GB 16GB 32GB</p>
 <p><b>iPod touch</b> 4th generation 8GB 32GB 64GB</p>	 <p><b>iPhone</b> 4GB 8GB 16GB</p>	 <p><b>iPhone 3G</b> 8GB 16GB</p>
 <p><b>iPhone 3GS</b> 8GB 16GB 32GB</p>	 <p><b>iPhone 4</b> 16GB 32GB</p>	 <p><b>iPad</b> 16GB 32GB 64GB</p>

"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. **Please note that the use of this accessory with iPod, iPhone or iPad may affect wireless performance.**



## WARRANTY

This Haier brand product, when shipped in its original container, will be free from defective workmanship and Materials, and agrees that it will, at its option, either repair the defect or replace the defective product with a New or re-manufactured equivalent at no charge to the purchaser, for parts or labor for the periods set forth Below:

This warranty does not apply to the appearance of the product or the exterior of the product, which has been Damaged or defaced, altered or modified in design or construction. It does not apply to the additional Excluded items set forth below:

The warranty commences on the date the item was purchased and the original purchase receipt must be Presented to the authorized service center before warranty repairs are rendered. The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANT ABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Haier.

The warranties described herein shall be the sole and exclusive warranties granted by Haier and shall be the sole and exclusive remedy available to the purchaser. Correction of defects in the manner and for the period of time described herein, shall constitute complete fulfillment of all abilities and Responsibility of Haier to the purchaser with respect to the product, and shall constitute full satisfaction of all claims, whether based On contract, negligence, strict duality or otherwise. In no event shall Haier be liable, or in any way responsible for any damages or defects in the product which were caused by repairs or attempted repairs performed by anyone other than an authorized service center or dealer; nor shall Haier be liable, or in any way responsible for incidental or consequential economic or property damage. Some states do not allow the Exclusion of incidental or consequential damages, so that above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. Warranty period for this product: 90 days for Labor, and one Year for parts. Additional items excluded from warranty coverage: non rechargeable batteries.

Where to obtain service: For the location of the nearest Haier authorized service center or to obtain product Literature, accessories, supplies or customer assistance, please call 1-877-337-3639.

What to do to obtain service: ship or carry in your product to an authorized service dealer or center .Be Sure to have proof of purchase. If you ship the product, be sure it is packaged carefully.

Haier America  
New York, NY 10018

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>