 


**Hamilton Beach®**

*Iron*

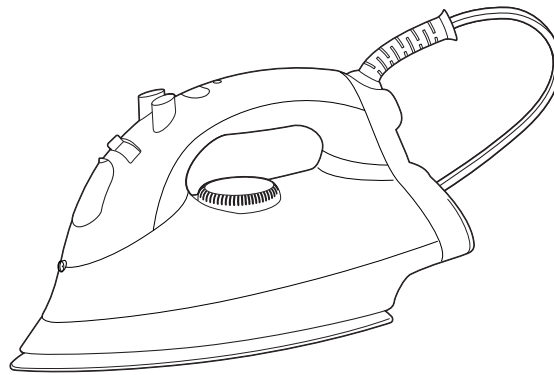

**English ..... 2**  
**USA: 1-800-851-8900**  
**Canada : 1-800-267-2826**

**840111900**

## IMPORTANT SAFEGUARDS

When using your flat iron, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Use iron only for its intended use.
3. To protect against risk of electric shock, do not immerse the iron in water or other liquids.
4. The iron should always be turned to OFF before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
6. Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
7. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Contact an authorized service facility for information on examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
9. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.

### SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

## SAVE THESE INSTRUCTIONS!

2

 
## CONSUMER SAFETY INFORMATION

**This product is intended for household use only.**

This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.

### Parts and Features

1. Reset Button\*
2. Automatic Shutoff/Power Light
3. Spray and Blast Buttons\*
4. Adjustable Steam Switch
5. Flip Open Water Tank Cover
6. Water Tank
7. Temperature Control Dial
8. Soleplate
9. Heel Rest
10. Swivel Cord

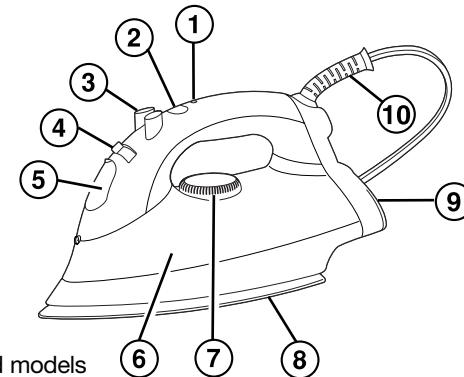

\* Featured on selected models

3

## Before First Use

---

- Steam vents should be cleaned before first use. Prepare iron for steam ironing, then iron over an old cloth for a few minutes while letting the iron steam. This will clean the vents.
- Many irons spit or sputter during the first few uses with tap water. This happens as the steam chamber becomes conditioned. This will stop after a few uses.
- During first use of the iron, it may appear to smoke. This will stop and does not indicate a defect or hazard.

## To Dry Iron


---

1. Plug in iron.
2. Turn the Adjustable Steam Switch to the Dry Iron position.
3. Turn the Temperature Control Dial to desired temperature. Allow 3 minutes for iron to reach desired temperature.
4. To turn iron off, turn Temperature Control Dial to **OFF**.

## To Steam Iron

---

1. Unplug iron. Flip open water tank cover. Using a cup, slowly pour 8 ounces of tap water into the water tank opening as illustrated.
2. Plug in iron.
3. Turn the Temperature Control Dial to the desired setting in the steam range. With the iron in an upright position, allow 3 minutes for the iron to reach desired temperature. Do not preheat the iron with the soleplate facing down.

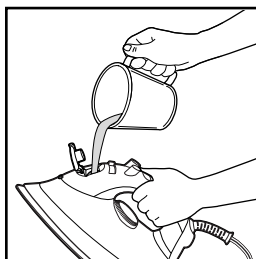

4

4. Set the Adjustable Steam Switch to desired steam output.
5. To turn iron off, turn Adjustable Steam Switch to Dry Iron. Turn Temperature Control Dial to **OFF**.
6. Empty water from the iron following directions in “Caring for Your Iron and Soleplate.”

## Water

 
Please use ordinary tap water. If you have extremely hard water, alternate between tap water and distilled water for use in the iron.

## Features (on selected models)

---


### Adjustable Steam Switch

This switch provides minimum steam for wool or maximum steam for linen. Set the switch to **O** to change to Dry Iron.

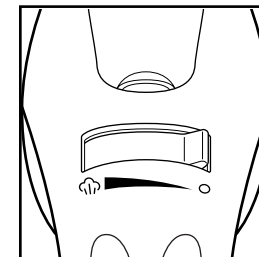

### Spray and Blast Buttons

 Push Blast Button for an extra blast of steam. Push Spray Button to release a fine spray of water for difficult wrinkles in cotton or linen.

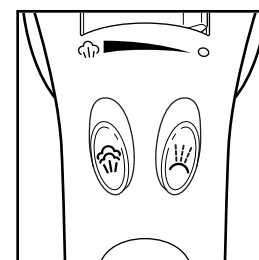


5

## Features (on selected models)

 
### Automatic Shutoff Light and Reset Button

If the iron is an Automatic Shutoff model, the light comes on when the iron is first plugged in. After 1 hour the iron will shutoff and the light will go out. Push the Reset Button to turn the iron back on for another hour of ironing.

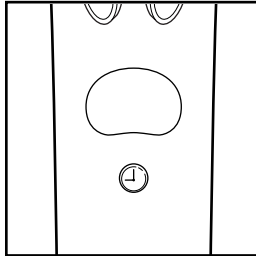

### Vertical Steam

1. Unplug iron. Flip open water tank cover. Using a cup, slowly pour 8 ounces of tap water into water tank opening.
2. Plug iron into outlet.
3. Turn the Temperature Control Dial to highest setting.
4. Allow three minutes for the iron to reach desired temperature.
5. Hang garment in a location that is not susceptible to damage from heat or moisture. Do not hang in front of wallpaper, window, or mirror.
6. Hold iron about 6 inches away from garment and press and release the Blast Button to steam out wrinkles. Do not press the Blast Button more than once every 2 seconds.
7. To turn iron off, turn Temperature Control Dial to Off. Unplug iron.
8. Empty water from the iron following directions in "Caring for Your Iron."

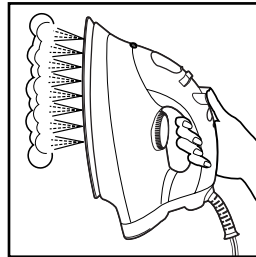


**NOTE:** Do not allow hot soleplate to touch delicate garments.

6

### Power Light

Models that do not have the automatic shutoff and the reset button, do have a power light. This light comes on when the iron is plugged in. The light will remain on even if the Temperature Control Dial is turned to off. The light will stay on until iron is unplugged.

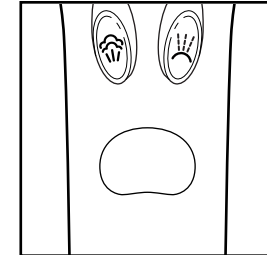


## Fabric Setting Chart

Steam Setting	To Iron	Ironing Instructions
○	Off	
	Nylon	Dry iron on the wrong side of the fabric.
	Acrylic	Dry iron on the wrong side of the fabric.
	Silk	Dry iron on the wrong side of the fabric.
	Polyester	Iron with fabric still damp.
☁	Wool	Steam iron on the wrong side of fabric.
	Rayon	Iron on the wrong side of fabric.
	Cotton	Iron while still damp using steam and/or spray.
	Linen	Iron on wrong side of fabric while still damp.

7

## Caring for Your Iron and Soleplate

1. The Water Tank of your iron should be emptied after each use. Turn Temperature Control Dial to **OFF**. Unplug the iron and hold over a sink. Turn iron upside down until Water Tank Opening is parallel with sink. Water will run out of water tank opening.

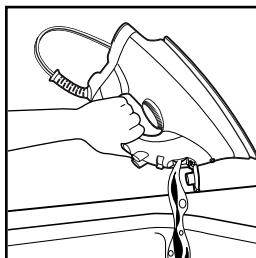

2. After iron has completely cooled, wrap cord loosely around the iron and store in an upright position. **Do not store iron laying flat on soleplate.**

### Soleplate

1. Never iron over zippers, pins, metal rivets, or snaps, as these may scratch the soleplate.
2. To clean occasional build-up on the soleplate, wipe with a sudsy cloth. Do not use abrasive cleansers or metal scouring pads.
3. Always store iron upright in the heel rest position.

## Troubleshooting

PROBLEM	THINGS TO CHECK
<b>Won't heat</b>	<ul style="list-style-type: none"> <li>• Is the iron plugged in and the outlet working? Check the outlet by plugging in a lamp.</li> <li>• Is the Temperature Control Dial turned to a fabric setting?</li> <li>• If automatic shutoff model, is light on? If not, press Reset Button.</li> </ul>
<b>Water is leaking</b>	<ul style="list-style-type: none"> <li>• Do not overfill the water tank.</li> <li>• If steam ironing, is Adjustable Steam Switch in a steam position, the Temperature Control Dial in the steam range and did the iron have enough time to preheat?</li> <li>• If dry ironing, make sure the Adjustable Steam Switch is in the DRY IRON position.</li> </ul>
<b>Won't steam</b>	<ul style="list-style-type: none"> <li>• Check the water level.</li> <li>• Is the Adjustable Steam Switch in the STEAM position?</li> <li>• Has the iron had enough time to preheat?</li> </ul>
<b>Leaves spots</b>	<ul style="list-style-type: none"> <li>• ALWAYS empty the water tank of the iron after using. Water left in the tank may discolor clothing and soleplate.</li> </ul>
<b>Twisted cord</b>	<ul style="list-style-type: none"> <li>• If the iron cord should become twisted, unplug iron and let cool. Hold iron cord in the middle of entire length. Let plug and iron dangle freely until cord uncoils. This will extend the life of your iron cord.</li> </ul>

## Customer Service

If you have a question about your iron, call our toll-free customer service number. Before calling, please note the model, type, and series numbers and fill in that information below. These numbers can be found on the bottom of your iron. This information will help us answer your question much more quickly.

**MODEL:** \_\_\_\_\_ **TYPE:** \_\_\_\_\_ **SERIES:** \_\_\_\_\_

### LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of two (2) years for Hamilton Beach Portfolio products or one (1) year for Hamilton Beach products from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades, and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

### CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900

In Canada 1-800-267-2826

Web site address: [www.hamiltonbeach.com](http://www.hamiltonbeach.com)

**KEEP THESE NUMBERS FOR FUTURE REFERENCE!**

HAMILTON BEACH PROCTOR-SILEX, INC.

263 Yadkin Road  
Southern Pines, NC 28387

PROCTOR-SILEX CANADA, INC.

Picton, Ontario K0K 2T0

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>