


Hamilton Beach®

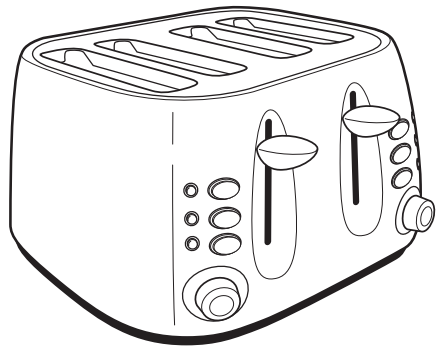

Toasters

Read before use.



In an effort to reduce paper waste, Hamilton Beach Brands, Inc., has reduced the size of this Use and Care guide and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

hamiltonbeach.com

USA: 1.800.851.8900

Canada: 1.800.267.2826

840202600

⚠ WARNING To reduce the risk of fire:



- Do not operate while unattended.
 - Do not use with food that has been spread with butter, jelly, frosting, etc.
 - Do not use with rice cakes, fried foods, frozen prepared foods, or non-bread items.
 - Do not use with toaster pastries. Always cook toaster pastries in a toaster oven broiler.
 - Do not cover or use near curtains, walls, cabinets, paper or plastic products, cloth towels, etc.
 - Closely supervise when used by or near children.
 - Always unplug toaster when not in use.
- Failure to follow these instructions can result in death or fire.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not operate toaster while unattended.
3. Close supervision is necessary when any appliance is used by or near children.
4. Do not attempt to dislodge food when toaster is plugged in.
5. To protect against electric shock, do not immerse cord, plug, or toaster in water or other liquid.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, or moving toaster.
7. Do not operate toaster with a damaged cord or plug or after toaster malfunctions or has been damaged in any manner. Call our toll-free customer service number for information on examination, repair, or adjustment.
8. Oversized foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electrical shock.
9. Do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts, resulting in risk of electric shock.
10. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls, overhead cabinets, paper or plastic products, cloth towels, and the like, when in operation.
11. Do not operate toaster in an enclosed space, such as an appliance cabinet, caddy, garage, or other storage area.
12. Do not cook, warm, or toast rice cakes, fried foods, non-bread items, or toaster pastries. Toaster pastries should be heated in a toaster oven broiler. Do not heat any food product that has been spread or iced with margarine, butter, jelly, frosting, syrup, or other spread. Follow toasting chart.
13. Failure to clean crumb tray may result in a fire hazard.
14. Do not place on or near a hot gas or electric burner, or in a heated oven.
15. Do not touch hot surfaces. Use handles or knobs.
16. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
17. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.

18. Before unplugging toaster, make sure bread lifter is in "up" position.
19. Do not use outdoors.
20. Do not use toaster for other than intended use.

SAVE THESE INSTRUCTIONS

Other consumer safety information


This appliance is intended for household use only.

WARNING! Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.

Parts and features

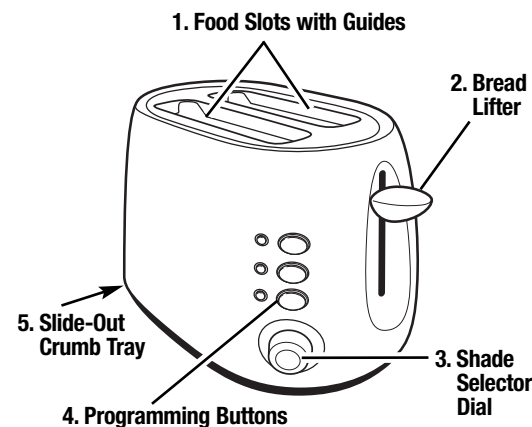

- 1. Food Slots with Guides**
- 2. Bread Lifter** – Push down bread lifter to start toaster. The **CANCEL** button may be pushed or the bread lifter may be lifted up to stop toasting during a cycle.
- 3. Shade Selector Dial** – The shade selector ranges from light toast (1) to dark toast (5). Adjust by turning the dial to desired setting before using.
- 4. Programming Buttons**
DEFROST: Use only on frozen foods that were made to be placed in a toaster. This feature allows additional time for the food to thaw and heat through. Press **DEFROST** button after toast cycle has started.
BAGEL: Use to toast only one side of a cut bagel, English muffin, or bun. Load toaster with cut side of food facing in; the outer heating elements are turned off during this cycle. Press **BAGEL** button after toast cycle has started.
CANCEL: To cancel or end a cycle, press **CANCEL** and the cycle will stop.
- 5. Slide-Out Crumb Tray** (see "Cleaning" section for more information).

How to toast

1. Plug toaster into electrical outlet.
2. Place appropriate food items in slots. If toasting bagels, English muffins, or buns, place in slots with cut sides facing inside wall of toaster. Select toast shade and press down bread lifter. If desired, select the **DEFROST** or **BAGEL** function. **NOTE:** The bread lifter will not latch down unless the toaster is plugged in.
3. At the end of toasting cycle, bread will pop up automatically.
4. To stop the toasting cycle sooner, lift up bread lifter or press the **CANCEL** button.

Toasting chart

FOOD	SHADE SETTING	OPTIONAL SETTING
Regular bread	2 to 4	
English muffins	3 to 5	BAGEL
Bagels or buns	3 to 5	BAGEL
Frozen bread	3 to 5	DEFROST
Frozen bagels	4 to 5	DEFROST
Frozen waffles	4	DEFROST

Toaster pastries (such as Pop-Tarts®):

Do not heat in toaster—use toaster oven broiler. If you must use toaster—ALWAYS set to lowest shade setting, NEVER heat cracked, broken or warped pastries, and NEVER leave unattended.

Pop-Tarts® is a registered trademark of the Kellogg Co.


Tips and troubleshooting

- To remove food that becomes lodged in food slots, disconnect from outlet and allow toaster to cool. Turn toaster upside down and shake. Do not use fork or other utensil that could damage heating element or result in risk of fire or electric shock.
- When toasting a single slice, you may notice variations in bread color from side to side.
- Setting 5 is the darkest shade of toast color. If a darker shade is desired, reset at 3. Watch closely and toast for a second cycle.

Cleaning

NOTE: If the toaster is used every day, the crumb tray should be cleaned once a week.

1. Unplug toaster and let cool.
2. Slide out crumb tray, discard crumbs, and wipe tray with clean cloth. Replace crumb tray.
3. Wipe outside of toaster with a damp cloth. Do not use abrasive cleansers that may scratch the surface of the toaster.

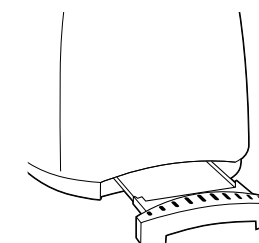

Limited warranty

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>