 


Repeat Playback



To Repeat all tracks on a disc

1. Push Repeat button twice. Repeat Indicator (REPEAT ALL) lights up.
2. Push Play/pause button to begin repeat playback. When the end of the last track is reached, the selection returns to track 1 for repeat play all tracks. To release Repeat function. Push Repeat button. Repeat indicator goes off. When the end of the last track is reached, the play stops automatically.

To repeat a track on a disc :

 
1. Push the forward skip button until the desired track number appears in the Track Number Display.
2. Push Repeat button. Repeat Indicator (REPEAT 1) lights up.
3. Push Play/pause button to begin repeat playback. When the end of the track is reached, the playback of the track is repeated.

Installing Batteries:

You will need 8 "C" size batteries. (1.5V x 8)

NOTE: Alkaline batteries will normally last longer and reduce the possibility of battery leakage.

1. Open Battery Door
2. Install Batteries As Shown

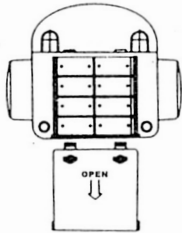

NOTE: Watch carefully the ⊕ and ⊖ ends of the batteries If you don't install batteries correctly the set will not work.

NOTE: If the sound becomes weak and unclear, the batteries may be weak. Replace all eight batteries at once.

NOTE: Remove batteries if unit is not to be used for a long period of time (about 30 days or more) to prevent battery leakage and possible damage to the unit.

BATTERY INSTRUCTIONS

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-Zinc) or rechargeable (Nickel-Cadmium) batteries.

Non- rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the toy before being charged.

Only batteries of the same or equivalent type as recommended are to be used.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed for the toy.

The supply terminals are not to be short-circuited.

The use of the Microphone

1. Plug the tail-end of the Handy Microphone into the Mic jack (No.10 on diagram).
2. When using the Microphone turn the switch to on position.
3. Speak in normal voice about 2 inches from the Microphone.
4. Avoid placing Microphone close to speakers of the unit to prevent squeaking noise due to feedback from speakers.
5. When not using Microphone always disconnect it from the unit.

Specifications

General

Power Source:	DC12V "C" Size battery x8, (UM2, IEC R14)
Output power:	1.5w + 1.5W
Speakers:	(3") Full range Speaker x 2
Load Impedance:	Headphones 16-50 ohms (Recommended 32 ohms)
Dimensions:	255mm(L) X 190mm(W) X 120mm(H)
Weight:	1.2 KG

CD Play

Type: Compact Disc player

Audio Channels: 2

Wow And Flutter: Unmeasurable (Less than 0.001% W.Peak).

CAUTION

IT IS IMPORTANT TO CHECK REGULARLY FOR DAMAGE TO THE CORD PLUG ENCLOSURE OR OTHER PARTS OF THE ADAPTOR TO PREVENT FROM POTENTIAL HAZARDS.

THE TRANSFORMER USED WITH THE TOY MUST COMPLY WITH THE REQUIREMENT OF EN60742

PRODUCT SUPPORT

For technical support, contact us:

Web: www.HamiltonBuhl.com

Email: techsupport@hamiltonbuhl.com

Phone: 1-800-631-0868

KIDS-CD20

SING-A-LONG

PORTABLE STEREO

WITH COMPACT DISC

DIGITAL PLAYER

 


Instruction Manual



www.HamiltonBuhl.com

Features And Controls

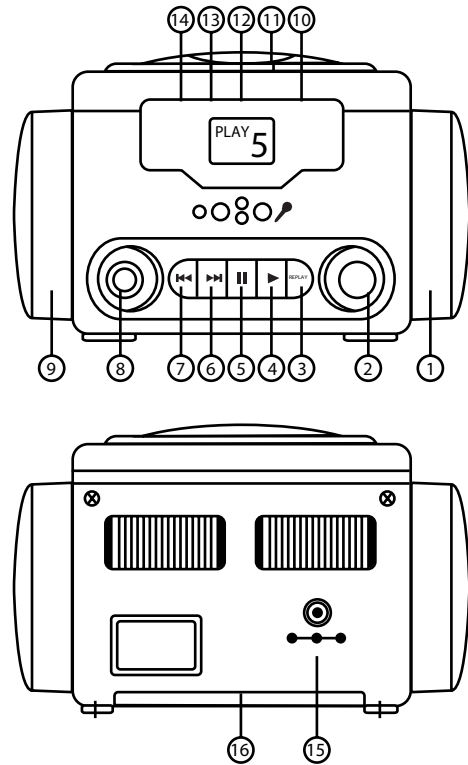

1. Right Speaker
2. Volume Control Knob
3. Repeat Button
4. Play/Pause Button
5. Stop Button
6. Skip/ Search Button
7. Skip/ Search Button
8. Power On/Off Button
9. Left Speaker
10. Mic Jack
11. Open Door Button
12. Power Indicator
13. LCD Display
14. Phone Jack
15. DC Jack
16. Battery Compartment



 
The Owner's Manual contains important operating and maintenance instructions. For your safety, it is necessary to refer to the manual.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING.

NOTE:

This unit will become warm used for a long period of time. This is normal and does not indicate a problem with the unit. This CD Player includes micro-processors which may malfunction as a result of external electrical Interference or noise. If the CD Player is not working properly, disconnect the power source (batteries, AC household power or DC car adaptor) and then reconnect it.

CLASS 1 LASER PRODUCT

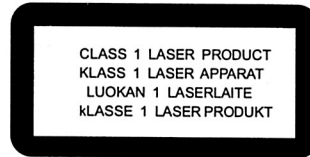

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.
VARNING: OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. STRÅLEN ÄR FARLIG.
VARO! AVATAESSA OLET ALLTINA NAKYMATÖMÄLLE LASERSÄTEIL YLLE. ÄLÄ KATSO SÄTEESEEN.
ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLNING.



This product contains a low power laser device. The product you have purchased has been carefully engineered and manufactured to give you reliable operation. Read this manual before operating the unit to become familiar with its features.

 
IMPORTANT NOTES:

- Keep instructions- The safety and operating instructions should be retained for future reference.
- Make sure not to obstruct the ventilation openings.
- When using with batteries, make sure that they are installed correctly before turning the power on.
- Store your CDs in a cool area to avoid damage from heat.

POWER SUPPLY

1. Battery Operation - Release battery cover by pressing the two clips downwards and pulling the battery cover towards you and remove. Insert 8 C size (UM2) batteries as indicated (batteries not included). Please observe the correct battery polarities or the set will not operate.

2. AC Operation - When using an AC adaptor (included) specification is 12V DC BOOMA with the polarity as follows:



Plug the tail - end of the AC Adaptor into the DC socket (No. 15 on diagram). Then insert the Main Adaptor into your AC supply, the set is now ready to operate on AC power.

 
TO LISTEN TO A CD

1. Push the power knob




2. Press "DOOR OPEN" button to open the door and insert the CD with label facing up and close the door.


OPEN DOOR BUTTON

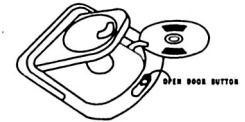

 
3. Press the "PLAYPAUSE" button once to start the playback of CD from track number 01.



 4. To "PAUSE" during play back press the pause button



 
5. To "STOP" during playback press the stop button.



THE DISPLAY WILL SHOW THE TOTAL NO. OF SONGS

TO LISTEN TO A CHOSEN TRACK

 1. In stop mode press one of these keys until you search the selected track.

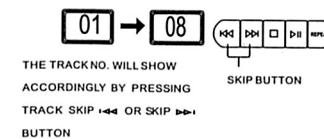

THE TRACK NO. WILL SHOW ACCORDINGLY BY PRESSING TRACK SKIP < or SKIP > BUTTON

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>