

CLOCK WITH BIG DIGITAL LCD DISPLAY

Model 94738

ASSEMBLY & OPERATING INSTRUCTIONS



Due to continuing improvement, actual product may differ slightly from the product described herein.



3491 Mission Oaks Blvd., Camarillo, CA 93011
Visit our Web Site at www.harborfreight.com

Copyright© 2006 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

For technical questions and replacement parts please call 1-800-444-3353.

THANK YOU for choosing a **HARBOR FREIGHT TOOLS** product. For future reference, please complete the owner's record below:

Model _____ **Serial No.** _____ **Purchase Date** _____

SAVE THE RECEIPT, WARRANTY AND THESE INSTRUCTIONS. It is important that you read the entire manual to become familiar with the unit BEFORE you begin assembly.

Technical Specifications

Battery:	2 "AA" (not included)
LCD (Liquid Crystal Display):	Month, Day, Count Down, Temperature
Time LCD:	5-13/16"
Wall Mount or Desktop (folding legs)	
Time LCD:	5-13/16" L X 2-3/8" H
Month/Day/Temperature:	5-13/16" L X 2-3/8" H
Net Weight:	1.20 Lbs.



READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT!

Safety Warnings and Precautions

WARNING: When using product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.

Read all instructions before using this product!

1. **Store idle equipment.** When not in use, the Digital Clock must be stored in a dry location. Always lock up products and keep out of reach of children.
2. **Use the right product for the job.** There are certain applications for which the Digital Clock was designed. Do not modify the Digital Clock and do not use the Digital Clock for a purpose for which it was not intended.
3. **Check for damaged parts.** Before using any product, any part that appears damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for any broken or damaged parts and any other conditions that may affect its operation. Replace or repair damaged or worn parts immediately.
4. **Replacement parts and accessories.** When servicing, use only identical replacement parts. Use of any other parts will void the warranty.
5. **Do not operate product if under the influence of alcohol or drugs.** Read warning labels on prescriptions to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, do not operate the product.

Warning: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Unpacking

When unpacking your Digital Clock, check to make sure that the product is intact and undamaged. If any parts are missing or broken, please call **HARBOR FREIGHT TOOLS** at: **1-800-444-3353**.

Operation

Your Digital Clock requires no assembly. It is important that you read the entire manual to become familiar with the product BEFORE you use the Digital Clock.


Installing and Replacing the Battery

1. Press down on the release tab on the back of the Clock to open the Battery Compartment-see Figure 1.
2. Insert two "AA" batteries (not included) and line up polarity with the markings indicated in Battery Compartment.
3. When the Battery is running low, the LCD readout will become light and difficult to read. This indicates that the battery needs replacing.

Digital Clock Functions


1. **Calendar:** Date can be set to any date up to 2099.
2. **Alarm Tone:** The alarm can be set for any time. The alarm tone will continuously ring for one minute.
3. **Snooze Button:** Snooze can be turned "On" or "Off" as desired.
4. **Pre-set Alarm:** The alarm can be pre-set for any time up to 30 hours ahead.
5. **Thermometer:** The Thermometer will give readings from -10° C/14° F to 50° C/122° F.
6. **Time Readout:** Time can be set to either military or standard time (12 hours or 24 hour periods).

Figure 1

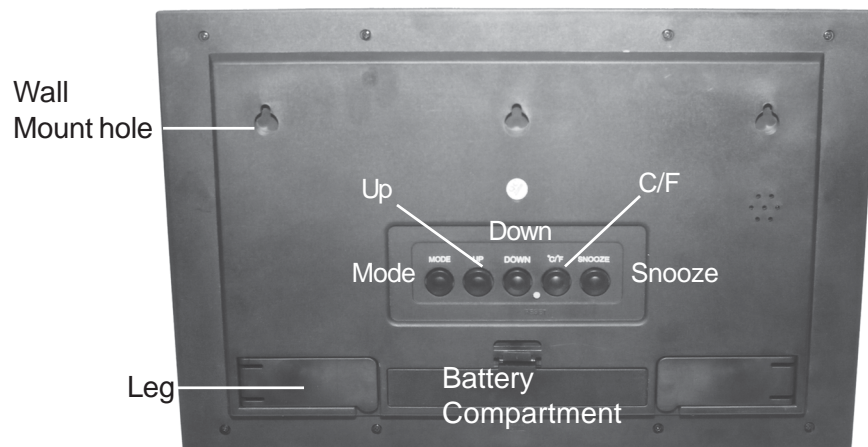

Setting the Clock

1. The mode changes each setting in the following order; hour, minute, month, day, week, alarm hour and alarm minute. Temperature settings and snooze each have their own button-see Figure 1.
2. Press the Mode button and the Up or Down Button to run through each of the above settings until you arrive at the setting you desire to change or set.
3. Once you have arrived at the mode you desire to change or set (hour, minute, month, day, alarm hour, alarm minute) press UP or Down button to move the setting up or down to the desired number.
4. To activate the snooze setting, press the Snooze Button.
5. To change from degrees Fahrenheit to degrees Celcius, or vice-versa, press the C/F Button.
6. The Digital Clock has folding Legs which can be pulled out to rest the Clock on a desktop-see Figures 1 and 2. The Legs can be folded out to create a rest.
7. The Digital Clock can be mounted to a surface using the wall mount holes located on the back-see Figure 1.

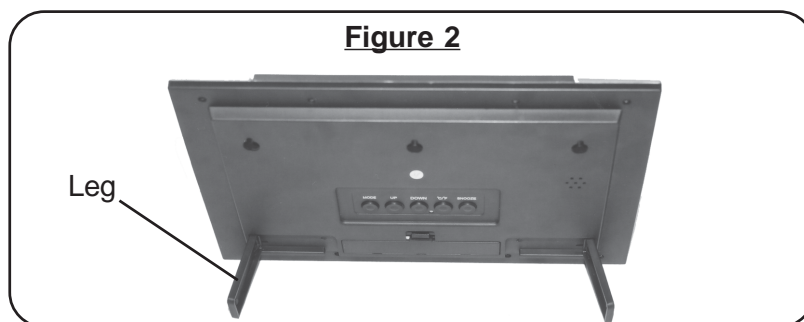

8. Use a level to set an even line to hang the Digital Clock. Use a drill to set the path for each screw or mounting hook (both not included). Make sure the drilling path is clear and free of obstacles such as wires, cables and lines. Insert screws or mounting hooks into a stud.

Troubleshooting

1. LCD flashes continously: Battery charge is to low. Replace battery.
2. Display doesn't change when Buttons are pushed: Circuit needs to be reset or batteries are dead. Remove the battery, wait 30 seconds, replace battery and turn the Digital Clock "ON". If this does not work, replace the batteries.
3. LCD display does not show: Batteries have poor connection or battery voltage is to low. Take the batteries out and adjust connections. Replace the batteries as necessary.

Maintenance

1. Protect the Digital Clock from rough use. It is susceptible to damage from being dropped, struck, or other abuse.
2. Keep the Digital Clock clean and dry. Occasional cleaning with a clean rag will extend its life and good appearance.
3. Keep out of the reach of children.

No replacement parts are available for this product.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER NOR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>