

# V60 power kettle Buono

EVKB-80U



※This kettle is for boiling water only.

## Instruction Manual

Thank you very much for your purchase.  
For instructions on how to use this product, please be sure to read this instruction manual. After reading the manual, store it in a safe place.

## Table of Contents

Special Features of V60 Power Kettle .....	1
Before Using .....	2
Safety Precautions .....	3~7
Instructions .....	8
Parts List .....	9
Product Care .....	9~10
Troubleshooting .....	10
Specifications .....	Back Cover

**HARIO**

EVKB-80U  
Instruction Manual 1205

# Special Features

- Slim spout allows for hot water to be used directly for making drip coffee.
- Power cord may be stored under the kettle.
- Easy to operate. One flip of the switch to boil water. Boil 0.8L of water in about 5-1/2 minutes.  
\* May vary depending on room temperature and water temperature.
- Boil from as little as 1 cup (about 0.15 liters) of water.
- “Automatic Power Off” feature automatically switches the Power Kettle off when water has boiled.
- “Boil-dry Protection” feature automatically cuts off power in the event of accidentally turning on an empty kettle.
- Cordless kettle can be rotated 360° and be detached from any angle. Making it easy to carry and pour.
- Stainless steel makes it stain-resistant and hygienic.



Use directly for drip coffee



Easy-grip handle



Lights up while heating











 



Cord storage

# Before Using

## About warning symbols

This instruction manual indicates important points by using warning symbols, as shown in the table below, in order to use this product safely and prevent danger or injury to the user and others. These symbols are listed according to the severity of danger or injury and the urgency of the situations that may occur when the product is misused. Please read this instruction manual with a full understanding of the meaning of each symbol. Also, please make sure to follow any points with a warning symbol as they are important instructions regarding safety.

List of warning symbols	Warning symbol details
 <b>Danger</b>	A situation whereby there is a possibility for the danger of death or serious injury.
 <b>Warning</b>	A situation whereby the danger of death or serious injury is possible.
 <b>Caution</b>	A situation whereby injury or only physical damage may occur.
 +  =  <b>Electrical hazard</b>	△Denotes notifications for Danger / Warning / Caution. The specific details of the warning are described within the symbol. The example on the left indicates an electrical hazard.
 +  =  <b>Disassembly prohibited</b>	⊘Denotes prohibited actions. The specific actions are described in the text within or adjacent to the symbol. The example on the left indicates that disassembly is prohibited.
 +  =  Please remove plug from the electrical outlet	● Denotes enforced or designated actions. The specific instructions are described within the figure. The figure to the left indicates removing the power plug from the electrical outlet.

# Safety Precautions

● Please read the “Safety Precautions” beforehand and use the product correctly in order to prevent electric shock, burns, fire or breakage.

## ⚠ Danger

The Power Connector of the Power Plate is a live connection point for the Power Kettle. Avoid paper clips, hairpins and other metal objects from coming into contact with the Power Connector as this may cause electric shock, short circuits or fires.



## ⚠ Danger

Do not place directly over open flames.



## ⚠ Warning

When the power cord or plug turns exceptionally hot stop use immediately.



 
## ⚠ Warning

Always connect to a power outlet rated at 15A or over and ensure that the Power Kettle is the only appliance connected to that circuit. Sharing an outlet with other appliances may overheat the outlet and cause a fire.



## ⚠ Warning

Persons other than service technicians must not disassemble, repair or remodel the product. Doing so could result in an outbreak of fire or injury due to malfunctions.

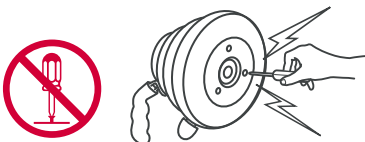

## ⚠ Warning

Do not submerge the bottom of the Power Kettle or the Power Plate in water as this may cause electric shock, short circuits or fire.



# Safety Precautions

## Warning

Do not touch the stainless body of the Power Kettle or the lid while or immediately after boiling water as this may cause burn injuries.



## Warning

Do not allow children to use the product. Do not use around children. Keep out of reach of children.



## Warning

Do not subject the Power Kettle to strong impact. This may result in damage, malfunction or shorten service life.



## Warning

Do not drop the product or apply impact to the handle or body of the product. The handle mount or spout may become deformed and fall off or cause water leakage.



## Warning

Do not use the product if the handle mount rattles or becomes loose. Because the Kettle body may fall from the handle when you lift it up. It may cause burns.



## Warning

Do not use if the power cable or plug is damaged, or when the plug is loose when inserted into the electrical outlet. Doing so could result in electric shock, short circuit or outbreak of fire.



# Safety Precautions

## Warning

Please periodically remove dust and other particles from the power plug. Build up of dust on the plug may result in insulation failure from moisture and other elements and may cause a fire. Please remove the plug and clean with a dry cloth.



## Warning

Do not plug in or unplug the Power Cord with a wet hand as it may cause electric shock.



 
## Warning

Make sure that the Power Cord is plugged in all the way. If the plug is loose, it may cause electric shock or fire due to overheating. Do not use damaged plugs or loose power outlets.




## Warning

Please make sure to pull out the Power Cord by the plug and not the cord. Pulling the cord may result in electric shock, short circuits or fires.

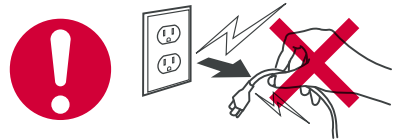


## Warning

 Please unplug the product from the power outlet when not in use. Keeping it plugged in may result in injury, burns, electric shock or short circuits due to insulation aging.

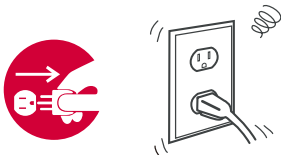

## Warning

 Only use AC 120V outlets. Failure to do so may cause fires or electric shock.

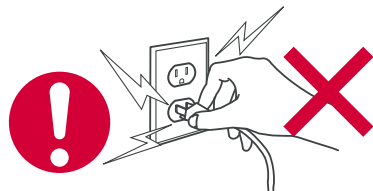

# Safety Precautions

## Warning

Do not overfill the Power Kettle beyond the MAX level (0.8L). Overfilling may result in boiling over and cause burns.



 
## Warning

Do not use the Power Kettle if the water is below the minimum level (0.15L). The automatic Boil-dry Protection and Automatic Power Off feature may not function properly.



## Warning

Do not use the Power Kettle on an unstable surface as it may result in injury or malfunction.

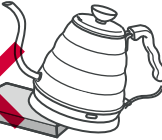

## Warning

The power plate is for the exclusive use of this kettle. Do not use for other products. Also, do not use power plates for other products for this kettle.



## Warning

Do not damage the cord or power plug. Do not break, modify or use near other heating devices. Do not forcibly bend, twist, pull, place heavy objects on or bundle the cord. Using them in damaged conditions may lead to electric shock, short circuits or fires.



## Warning

Do not use the product if the Power Cord Plug or Power Cord is damaged. Please contact your dealer or our customer service for repairs.



 
## Warning

Do not open or close the lid with force. Hot water may boil over and cause burns. Also, do not tilt, shake or move the Power Kettle while holding the lid. It may cause hot water to spill and cause burns.



## Caution

Always turn off the switch and unplug the Power cord before cleaning to avoid injury.

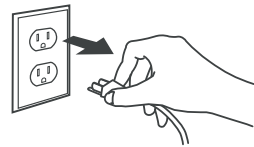

# Safety Precautions

## Caution

Do not move the Power Kettle while it is in use on the Power Plate as it may result in injury or malfunction.



## Caution

Do not open the lid while boiling water as it may lead to failure of the Automatic Power Off function.



## Caution

Only water should be heated in the Power Kettle to avoid any malfunctions.



## Caution

Do not open the lid or add water to the Power Kettle while boiling water as it may result in burns from hot steam.



## Caution

Do not use the Power Kettle in locations exposed to direct sunlight, where pets can pass by or in places with high humidity such as a bathroom. Such practice may result in deformation of the kettle body, malfunction, accident or fire.



## Caution

Do not turn on the Power Kettle if is empty. The Dry-boil Protection feature will cut the power off but the metal plate will be heated and may cause burns or malfunctions.



## Caution

Be careful of injuries when handling or cleaning the tip of the spout.



## Caution

Handle with care if the product is broken. Follow instructions of your local municipality for disposal.



- ※This product is for boiling water only.
- ※Do not use for other purposes such as brewing tea.
- ※This product does not come with a function to keep water warm.
- ※This product is for in-home use only.
- ※For use in the USA only.



# Instructions

## -Preparations-

Wash the inside of the Power Kettle thoroughly before first use and boil water following the steps shown in “Boiling Water” below to confirm that the kettle operates properly. Pour out the water once the kettle has been tested.

## -Boiling Water-

### 1 Pour water into the Power Kettle



**Warning**

The Power Kettle should be filled between the minimum level (0.15L) and MAX level (0.8L).

Overfilling the kettle may cause the water to boil over. An insufficient amount of water may prevent the Dry-boil Protection or Automatic Power Off features from functioning properly.



**Caution**

Do not pour water into the kettle when it is set on the Power Plate.

2

### Put the lid in place and set the Power Kettle on the Power Plate.



**Caution**

Set the lid with the steam port on the spout side.

May lead to burns from hot steam if set on the handle side.



**Caution**

Secure the cord firmly in the cutout. Place the Power Plate on a stable level surface.



**Caution**

Ensure that no foreign object is caught in the Power Connector of the Power Plate. Ensure that the Power Connector is completely dry before setting the Power Kettle.

3

### Plug the Power Cord into a power outlet and press down the ON/OFF switch to turn on the power.



**Caution**

The Power Kettle and the lid will become extremely hot while boiling water. Do not place hands or face near these parts.

 


**Caution**

Do not lift the lid while boiling water. Hot steam will blow out and may cause burns.

4

### Power will automatically cut off when the water is boiled.

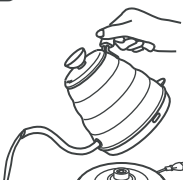

**Caution**

 
Do not tilt the kettle with force. Hot water may spill and cause burns.



**Caution**

Make sure the ON/OFF switch is turned OFF after use.

# Parts List

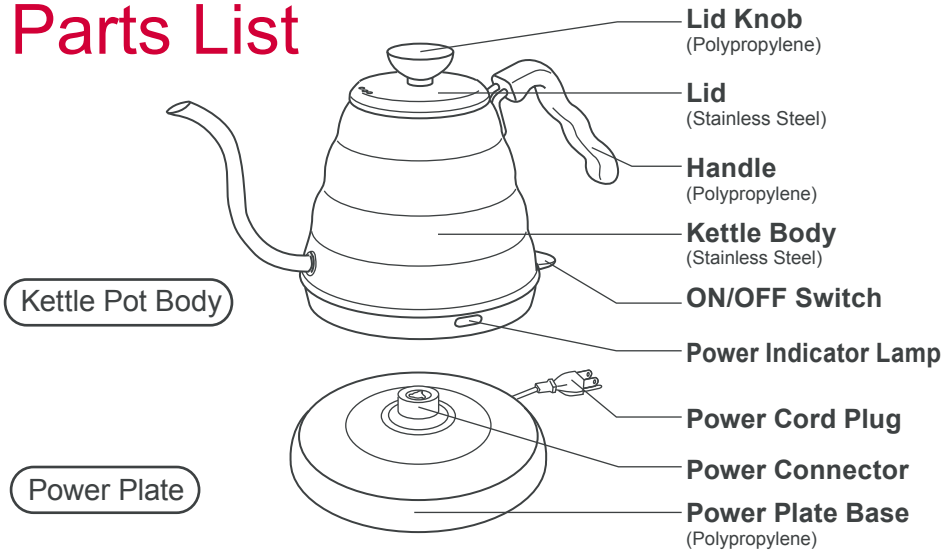

# Product Care



**Always unplug the Power Cord and make sure the Power Kettle has cooled before cleaning.**

## -Care instructions for the Power Plate and Kettle Exterior-

- Use a soft dry cloth. For hard to clean surfaces dip cloth in a mild dish detergent diluted with water and wipe. Then use a damp cloth to wipe off the dish detergent. Do not wash the entire kettle in water, use abrasive dish detergents or use organic solvents such as paint thinner, benzene or kerosene.
- Do not pour water over or submerge the kettle in water as it may cause malfunctions.
- Do not leave in contact with silver, aluminum or other metal products as it may lead to rusting.

 
## -Care instructions for the Power Kettle Interior-

- The white stains that appear inside the kettle are deposits of minerals found in water. They are not harmful to the body but we suggest cleaning the kettle regularly following the instructions below.
1. Fill the kettle to the MAX level (0.8L) then add 30 grams of citric acid and stir.
  2. Place the lid on and boil the water. Let it stand for about an hour after boiling.
  3. Pour out the hot water and rinse thoroughly with water. If deposits still remain, use a sponge to wipe the deposits and rinse thoroughly.
  4. If the scent of citric acid is a concern, rinse the kettle thoroughly and then fill with water and boil again. Pour out the water once it has boiled.
- This product is not dishwasher safe.

# Product Care

## -Storing the Power Plate-

The Power Cord may be stored inside the Power Plate. Wind the Power Cord around the bottom of the Power Plate three times and set the end of the cord in the cutout. Secure the cord firmly in the cutout when in use and/or in storage.

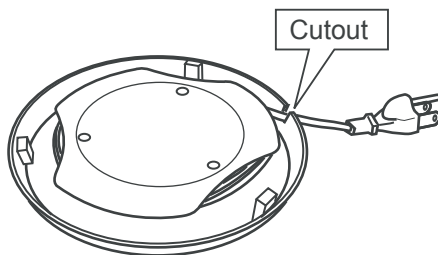

# Troubleshooting

● Check the following.

Problem	Cause	Solution
Power does not turn on	Power cord is not plugged in.	Make sure the Power Cord is plugged all the way in.
	Sensor of the protection system is at high temperature due to repeated use.	Turn the power off and let the Power Kettle stand for a while before turning it back on.
Automatic Power Off does not work.	There is an insufficient amount of water in the kettle.	Pour more than 0.15L of water into the kettle and turn it on.
	The lid is not placed on properly.	Push down on the lid until it clicks into place.
	The Power Kettle is used in a location, such as near a window, where it is exposed to wind.	Use the Power Kettle in locations where it is not directly exposed to wind.

## Inquiries about the product

If you have any inquiries about the product, please contact customer service (Please refer to “After Sales Service” on the back cover). It is dangerous to disassemble or repair the product so please do not try to attempt repairs on your own.

# Specifications

Power Source	AC120V 60Hz
Power Consumption	1000W
Capacity	Maximum 0.8L Minimum 0.15L
Size	W295×D156×H175(mm)
Cable Length	0.9m
Weight	0.8kg
Material	Kettle, Lid / Stainless Steel Handle, Lid Knob / Polypropylene Power Plate / Polypropylene

MADE IN CHINA

## After Sales Service

### 1. Warranty

This product is warranted only against defects that are due to faulty material or workmanship for a period of one (1) year from the date of original consumer purchase. This warranty does not cover damage from abuse, neglect, use for commercial purposes, or any other use not found in the printed this instruction manual.

### 2. For Repairs

Please make sure to contact a customer service within the warranty period before sending the product to the store. We will repair the product at no charge based on the content of this warranty. If the warranty period has expired charges may be applied. Please contact a customer service representative for details.

### 3. Minimum holding period for repair parts

We will store repair parts for a minimum of 5 years after production has terminated for the Power Kettle Buono.

**Customer Service / Main Distributor**

**Hario North America LLC**  
customerservice@hariosnorthamerica.com

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>