 


**OVER 9 months**  
**05068**

**PLAYSKOOL**<sup>®</sup>


# Tip 'n Play™ Teapot

 **Thank you for choosing this PLAYSKOOL brand product!**

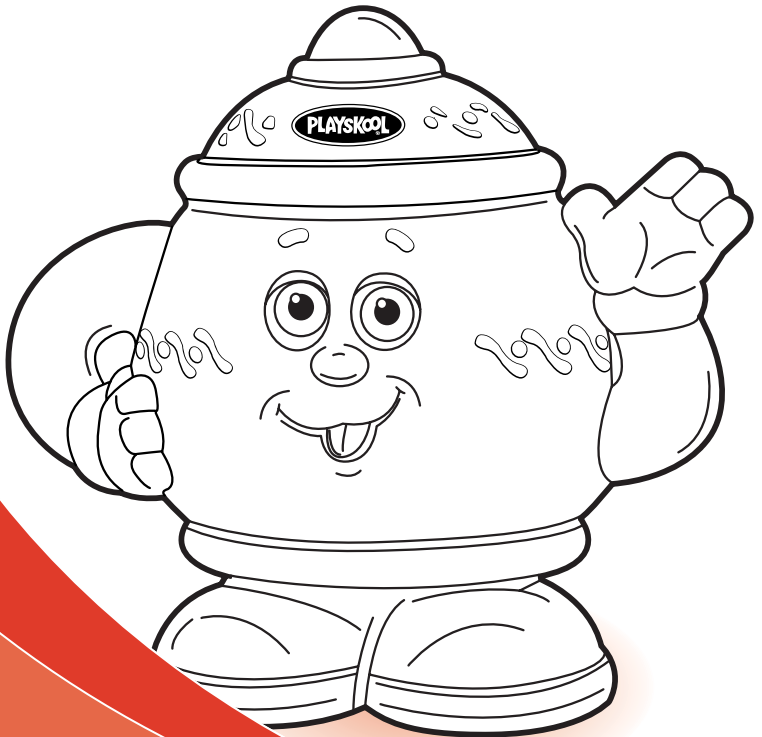


## TO PLAY

**PLEASE NOTE:** THE TOY IS SHIPPED IN "DEMO" MODE. MOVE THE SWITCH (LOCATED ON BOTTOM OF TOY) TO "PLAY" FOR USE AT HOME.

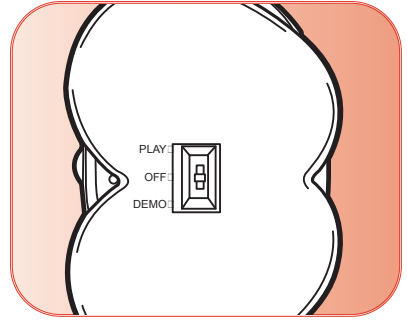

 - The TIP 'N PLAY Teapot is a musical toy that "brings to life" the classic children's song "I'm a Little Teapot."
- Tip the teapot to hear part of the song, or press the button on top to hear the whole song!

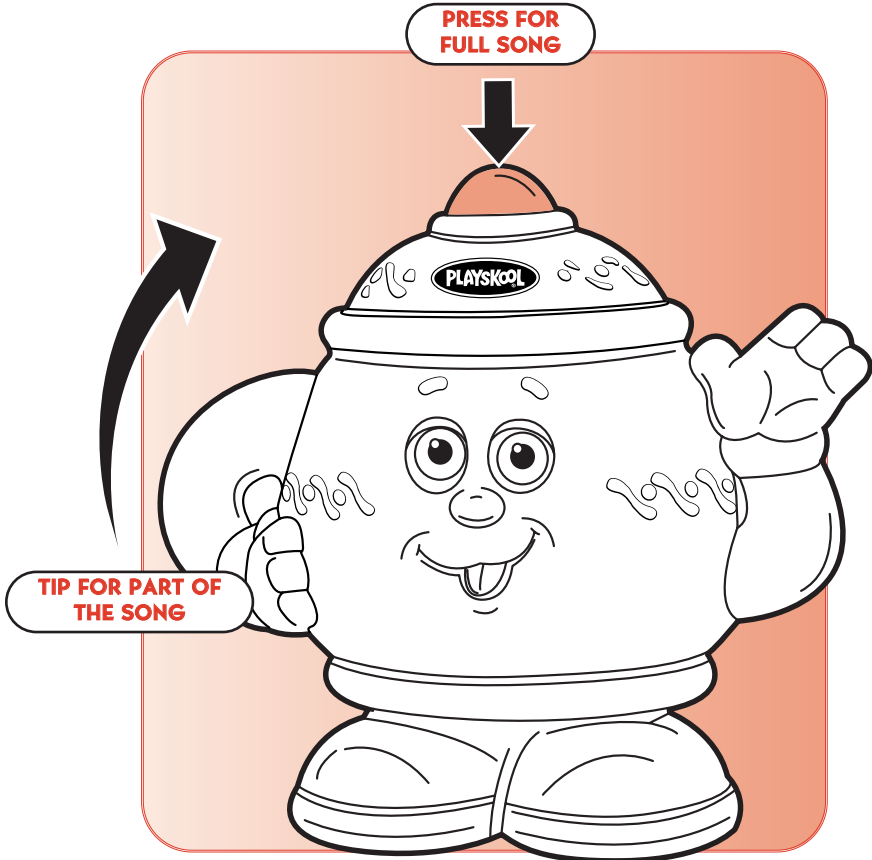


**Note:** Slide switch to "OFF" to prevent accidental activation. If toy does not respond, reset by moving the switch to off, then on.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## TO REPLACE BATTERIES

 Using a Phillips/cross head screwdriver, loosen screw in battery cover (screw will remain attached to cover). Remove and discard old batteries. Insert 3 fresh 1.5V "AA" or R6-size batteries into battery compartment. Alkaline batteries recommended. Replace cover and retighten screw.

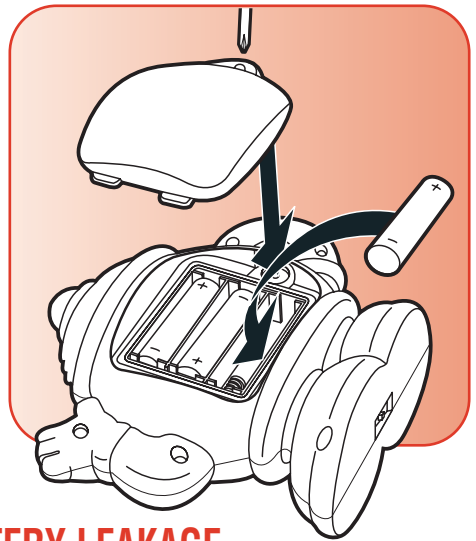

### **⚠ CAUTION: TO AVOID BATTERY LEAKAGE**

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

### **IMPORTANT: BATTERY INFORMATION**

Please retain this information for future reference.

Batteries should be replaced by an adult.

### **⚠ CAUTION:**

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.



© 2003 Hasbro. All Rights Reserved.  
® denotes Reg. U.S. Pat. & TM Office.  
05068 P/N 6286600100



Questions? Call: 1-800-PLAYSKL

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>