



**BUZZSAW™**

## IMPORTANT

If you pull on the Buzzsaw™ handle and it does not move, do not force the handle back: a Ballistic Ball is stuck in the blaster. The blaster will not fire when you depress the trigger.

Try doing one or both of the following:

- Feed an additional ball into the loading tube: this may dislodge the stuck ball.
- Insert the eraser end of an unsharpened pencil into the barrel of the blaster, pushing the stuck ball back until it clears the launching wheel.

Now try again to pull the handle and fire a ball.

Also note that you should never pull back on the handle with excessive force: doing so, over time, may damage the blaster.

© 2006 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

52831 PN 6633260000

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>