

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including any interference that may cause undesired operation. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.



© Disney
®* and/or ™* & © 2002 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.
6641 P/N 6164040000



Questions? Call: 1-800-327-8264

Download from www.Somanuals.com. All Manuals Search And Download.

AGES 4+
6641



 
Electronic Deluxe B.E.N.

Thank you for choosing this exciting
Treasure Planet toy!

For best play, please
read and follow all
instructions.


Includes 2 "AA"/LR6
batteries. Phillips
screwdriver (not
included) needed for
battery replacement.

Includes:
Poseable B.E.N. Figure
Memory chip

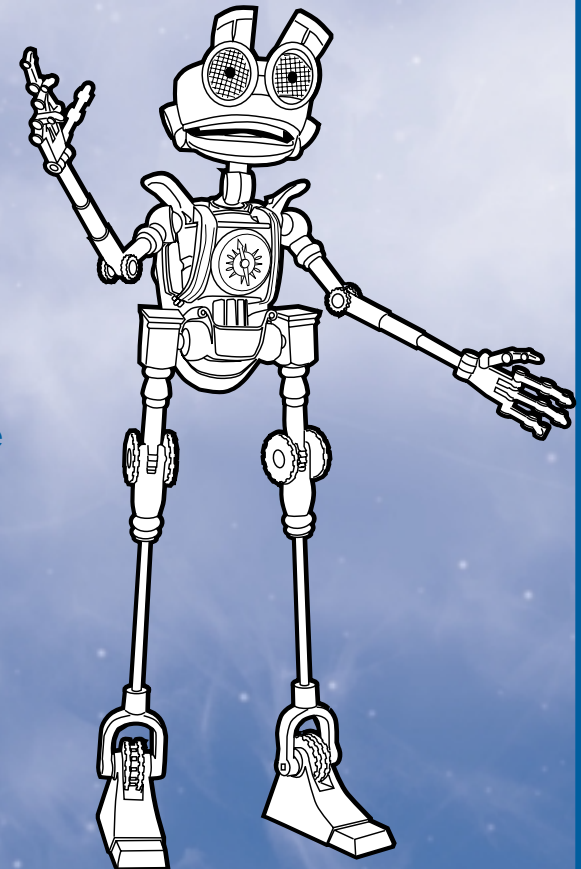

Play Instructions

 Electronic Deluxe BEN's Memory Chip

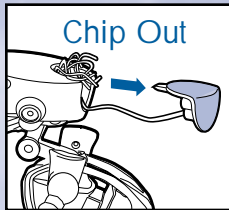

When memory chip is removed, figure says "lost" phrases.


 
 
 
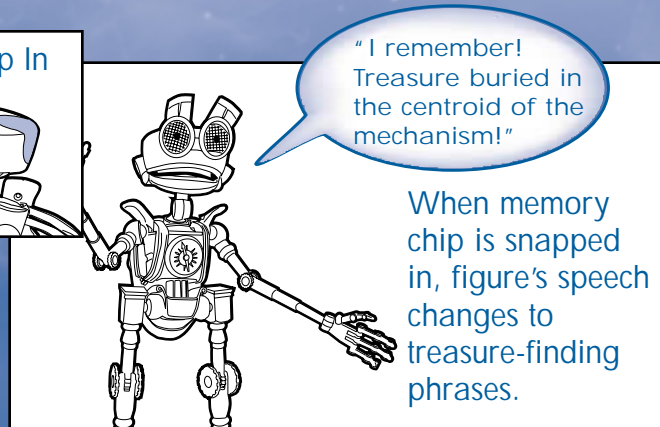 



Figure folds down into rolling vehicle mode as shown.

 Press and hold button on side for rolling robot sound!

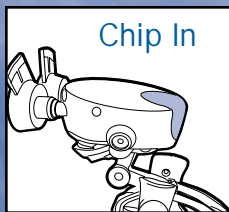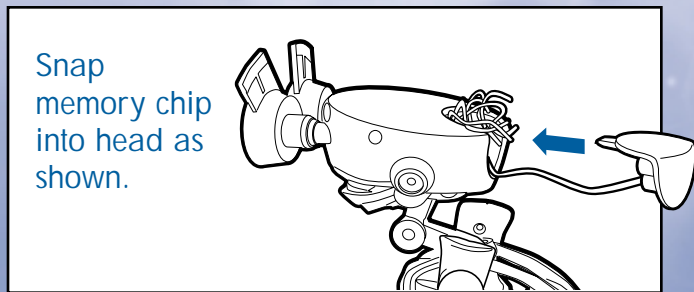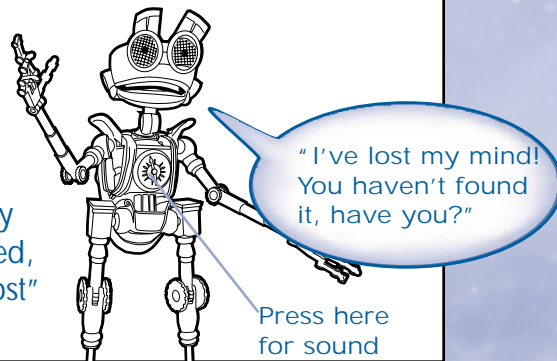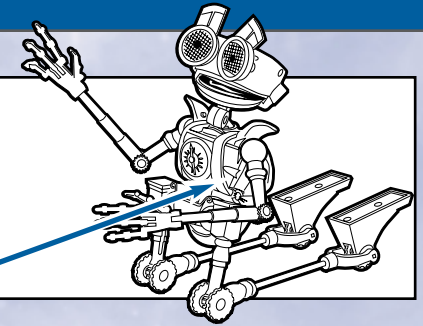

To Replace Batteries

 Using a Phillips screwdriver (not included), remove screw in battery compartment door. Remove door. Insert 2 fresh "AA"/LR6 batteries into compartment. Replace door and fasten screw tightly.

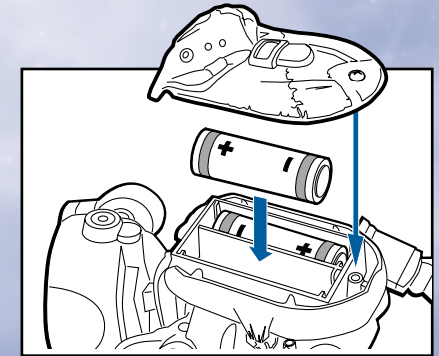

! CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturer's instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>