

### USER GUIDE

## Keypad Features

### DISPLAY

The keypad features a 2-digit numeric display for zone identification and pre-designated English-language prompts (e.g., “ALARM,” “AWAY,” “STAY,” “CHECK,” etc.) for indicating system status. See *Figure 1*.

### FUNCTION KEYS

The function keys are located behind a decorative door and are continuously backlit for ease in use. (Check the *User’s Guide* that accompanies the control panel for detailed instructions on the use of these keys.)

The function keys include keys for panic alarm activation. The panic alarms are activated by pressing key pairs [1] & [\*], [3] & [#], or [\*] & [#], or a Special Function Key (see below). Whether these panic keys function and the type of panic alarms they produce is determined by the control panel’s capability and programming. (Check with your installer for the availability and type of alarm of these panic keys.)

### SOUNDER

The sounder is a piezo-electric sounder that pulses for fire alarms and generates a two-tone sound for burglary and audible panic alarms.


### KEYPAD LEDS

The keypad contains two LEDs that indicate the status of the system as follows:

LED	Function
Green	Lights when the system is ready to arm (no zone faults are present).
Red	Lights when the system is armed.

### SPECIAL FUNCTION KEYS

These are four keys located to the left of the numeric keys (see *Figure 1*). The keys may be programmed by your installer for panic alarms or other special functions such as macros (a frequently used series of key entries). **Function keys must be held down for at least 2 seconds to activate an alarm.** (Check with your installer for the programmed function of these keys.)

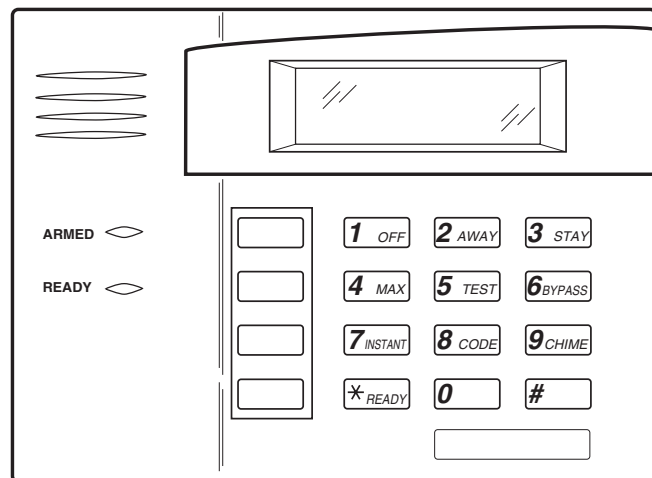

**Figure 1: ADEMCO 6150RF Keypad/Transceiver with Front Door Removed**

## User Mode

---

This mode gives you the capability of enabling and disabling individual wireless keys that have been directly programmed into the ADEMCO 6150RF. This is particularly useful if a user loses a wireless key.



---

This mode may only be accessed if the ADEMCO 6150RF is powered up for at least 1 minute. **Only** wireless keys programmed directly into the ADEMCO 6150RF may be enabled and disabled using this mode.

---

### ENTER THE USER MODE

Press the [1] and [3] keys simultaneously for a few seconds (make sure the unit has been powered for at least 1 minute prior).

### CHANGING THE STATUS OF A TRANSMITTER

On the display, “dE” and “-” flashes alternately. Enter the number of the wireless key transmitter (1-8).

Then “d” and the wireless key number you entered flash alternately with “1” or “0” on the display. A “1” indicates the wireless key is enabled, a “0” indicates it is disabled. Enter [1] to enable or [0] to disable the wireless key. All wireless keys are defaulted to 1 (enabled).

Press the [\*] to accept the entry.

Repeat the procedure for all the wireless keys whose status you want to change.

### EXITING THE USER MODE

To exit the User mode press [\*] when “dE” and “-” flash alternately on the display.

# Honeywell

165 Eileen Way, Syosset, New York 11791

Copyright © 2004 Honeywell International Inc.

[www.honeywell.com/security](http://www.honeywell.com/security)



K4461-1V1 4/05 Rev. A

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>