

COMPACT CUBE™

COMPACT REFRIGERATOR

USE AND CARE MANUAL

MODEL 88037 – 2.8 CUBIC FEET

SAFETY INFORMATION----- 2

WELCOME----- 2

IMPORTANT SAFETY INSTRUCTIONS----- 2

DISPOSAL OF OLD REFRIGERATOR----- 3

GROUNDING----- 4

PRODUCT DIAGRAM----- 5

TEMPERATURE CONTROL----- 5

SPECIFICATIONS----- 5

OPERATING THE COMPACT REFRIGERATOR----- 6

SETTING UP THE COMPACT REFRIGERATOR----- 6

UNPACKING----- 6

LOCATION OF THE COMPACT REFRIGERATOR----- 6

INSTALLATION INSTRUCTIONS----- 6

ADJUSTING THE LEGS----- 6

TURNING ON THE POWER----- 7

STARTING THE COMPACT REFRIGERATOR----- 7

CONTROLLING THE TEMPERATURE AND STORING FOOD----- 7

FREEZER AND ICE TRAY COMPARTMENT----- 7

CHANGING THE REVERSIBLE DOOR----- 8

CARE AND CLEANING----- 9

CLEANING THE INTERIOR AND EXTERIOR----- 9

DEFROSTING THE COMPACT REFRIGERATOR----- 9

IN THE EVENT OF A POWER FAILURE----- 9

KEEPING THE COMPACT REFRIGERATOR PROPERLY VENTALITED----- 9

PREPARING FOR VACATION----- 9

TRANSPORTING THE COMPACT REFRIGERATOR----- 9

TROUBLESHOOTING----- 10-11

CONSUMER SUPPORT----- 12

WARRANTY----- 12

WELCOME!

Congratulations, you have acquired a high-quality Honeywell Compact Refrigerator. This unit is packed with many features that you will find convenient to use. An easy-to-use temperature adjustor can be used to find the perfect setting for your compact refrigerator.

Follow the safety precautions and operating instructions provided in this easy-to-use manual. Please take the time to read it, and save these instructions for future use.

Please also remember to record the model and factory number, which is the label placed on the back of the unit. Save your receipt by stapling it to this manual for convenient access.

Model number: **88037**

Factory number _____

Date of purchase _____

Store Location _____

!! IMPORTANT SAFETY INSTRUCTIONS !!

Please Read Before Using

When using electrical appliances, basic safety precautions must be followed, including the following:

WARNING - To reduce the risk of injury please follow these important guidelines:

- 1) This appliance must be grounded. Connect only to properly grounded outlet. See "IMPORTANT GROUNDING INSTRUCTIONS" on page 4.
- 2) Install or locate this appliance only in accordance with the provided installation instructions.
- 3) Use this appliance only for its intended use as described in the manual. Do not store corrosive chemicals or vapors in this appliance. This appliance is specifically designed to refrigerate food, beverages and other perishable food products. **Note: The appliance is not designed for industrial or laboratory use.**
- 4) As with any appliance, close supervision is necessary when used by children.

- 5) Do not attempt to service the appliance. This appliance must be serviced only by a qualified technician.
- 6) Do not operate this appliance if the power cord or plug has been damaged.
- 7) Do not operate if the appliance has been damaged or dropped.
- 8) Do not use this product near water – for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
- 9) Do not immerse cord or plug in water.
- 10) Keep this appliance away from hot surfaces and open flames – **including stoves/ovens, heaters, radiators, etc.**
- 11) This appliance is intended for household use only. **Do not use this appliance outdoors.**
- 12) Unplug this appliance before cleaning or wiping up spilled liquids.
- 13) Do not allow children to climb, stand or hang on the outside of the appliance, or on the shelves inside the unit. This could tip the appliance over and cause serious injury. Children must be supervised by an adult when using this product.
- 14) **Save these Instructions!**

DISPOSAL INSTRUCTIONS

If you are getting rid of your old refrigerator, please follow these instructions to help prevent accidents.

BEFORE YOU THROW AWAY YOUR OLD REFRIGERATOR:

- 1) Take off the doors and discard separately.
- 2) Leave the shelves in place so that children may not easily climb inside.

REFRIGERANT DISPOSAL (applies only to Compressor Cooling units):


Your old refrigerator may have used a regulated refrigerant in its cooling system. These refrigerants are believed to harm Stratospheric Ozone. If you are throwing away your old refrigerator, make sure the refrigerant is removed and recovered for proper disposal by an EPA-certified technician. If you intentionally release this refrigerant, you can be subject to fines and imprisonment under provisions of environmental legislation.

If the refrigerator door has a lock, please disable.

IMPORTANT GROUNDING INSTRUCTIONS

and use of extension cords

Three-pronged
(grounding) plug

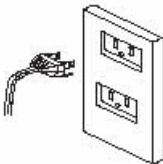

Properly polarized and
grounded outlet

The compact refrigerator must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. If the outlet is a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet. **Do not under any circumstances cut or remove the third (ground) prong from the power cord.**

 
WARNING-Improper use of grounding can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded and either:

1. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-prong grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked electrical rating of the extension cord shall be equal to or greater than the rating of the appliance, or
2. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

PRODUCT DIAGRAM


1. Freezer Compartment
(transparent door)
2. Ice Cube Tray
3. Shelf
4. Foot
5. Temperature Control Adjustor
6. Door Shelf
7. Can Dispenser
8. Door

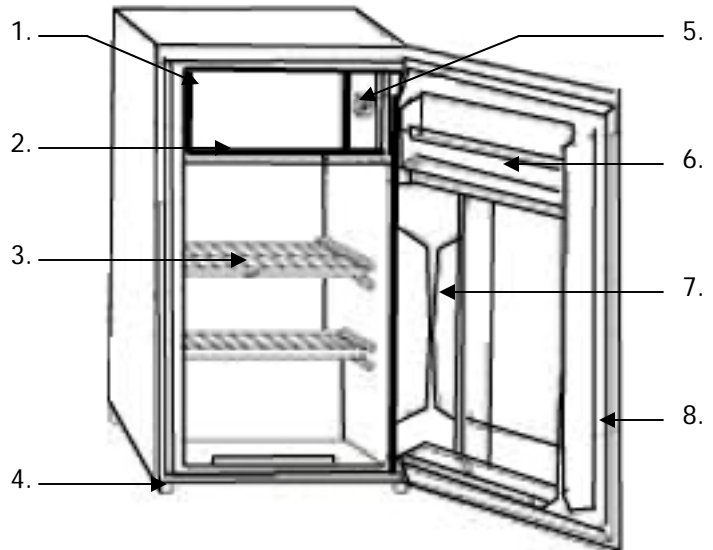

TEMPERATURE CONTROL ADJUSTOR AND LIGHT

Turn the temperature adjustor
"clockwise" for cooling.

 - "1" is the warmest setting
- "6" is the coldest setting

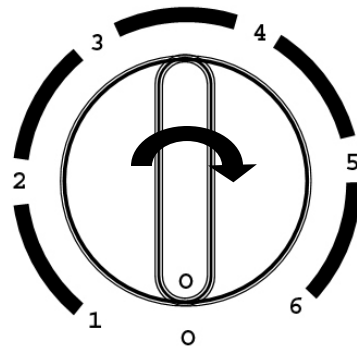

SPECIFICATIONS

Model-----	88037
Power Source-----	115V ~ 60Hz
Size-----	2.8 cubic feet (80 liters)
Power-----	80 W
Refrigerator Dimensions-----	43.4 (L) x 47.2 (D) x 68.3 (H) cm 17.1 (L) x 18.3 (D) x 27.0 (H) inches
Net Weight-----	21.5 kgs / 47.3 lbs

SETTING UP THE COMPACT REFRIGERATOR

UNPACKING

Remove all packing materials and accessories. Examine the compact refrigerator for any damage such as dents or broken door. Do not install if the refrigerator is damaged.

Do not tilt the compact refrigerator at an angle of more than 45 degrees while moving it.

NOTE: Allow the compact refrigerator to stand upright for approximately 24 hours before connecting the power source. This will let the compressor settle from being handled during transportation.

Starting the compact refrigerator too soon and not allowing the compressor to settle can result in a lack of cooling.

Also before operating, clean the refrigerator thoroughly. Wipe the outside with a soft dry cloth and wipe the interior with a clean moist cloth.

If discarding an old refrigerator, please see "Disposal Instructions" on page 3.

 
LOCATION OF THE COMPACT REFRIGERATOR

Find a suitable area for your compact refrigerator. Do not place the refrigerator outside, or any other place where the refrigerator will be exposed to water, sunlight, or other harsh weather conditions. The refrigerator must not be placed in environments where the ambient temperature drops below **10°C (50°F)** degrees because it will not run often enough to maintain the desired temperatures.

PLACEMENT INSTRUCTIONS

The compact refrigerator is a free standing appliance and can be installed next to counters and walls. It can not be placed under a counter.

For the compact refrigerator to function properly, it is important to have a clearance of at least 15 cm (6" inches) from the back of the compact refrigerator to the surface next to it. A clearance of at least 10 cm (4" inches) is required from each side of the compact refrigerator to the surface next to it.

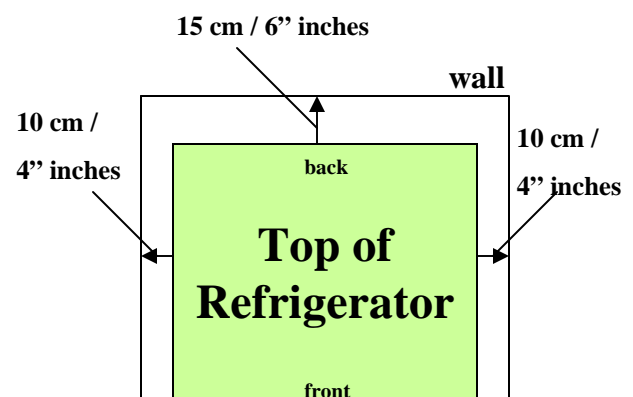


NOTE: THE SPACING IS NECESSARY FOR AIR CIRCULATION

ADJUSTING THE LEGS OF THE REFRIGERATOR

The compact refrigerator has adjustable legs on the front of the unit. These legs can be used to adjust the height and stabilize the unit. To lengthen the leg, turn the leg counter-clockwise and to shorten the leg, turn clockwise.

 ADJUSTABLE LEG

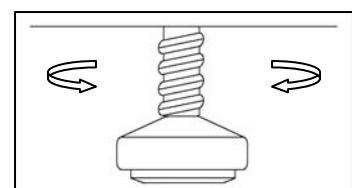

OPERATING THE COMPACT REFRIGERATOR

TURNING ON THE POWER

Plug the compact refrigerator into a suitable 120V three prong power outlet. The refrigerator will begin operating, even if the temperature adjuster is set in the off ("O") position. (See "Important Grounding Instructions" on page 4)

STARTING

After the compact refrigerator is plugged into the proper outlet, turn the internal temperature adjuster dial to the desired setting and close the door. Let the refrigerator cool for 24 hours before storing food.

 
CONTROLLING THE TEMPERATURE AND STORING FOOD

The internal temperature of the compact refrigerator is controlled by the temperature adjuster located in the upper right hand corner inside the refrigerator.

Turn the temperature adjuster clockwise to set the desired temperature. The "1" position sets the warmest temperature and "6" position sets the coldest temperature.

Note: By setting the temperature to the "5" or "6" position, it may cause freezing depending on the ambient temperature. The "6" position should be used primarily for making ice.

THERMOSTAT

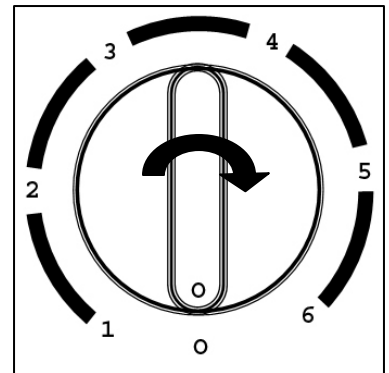

ICE TRAY AND FREEZER COMPARTMENT

The ice tray compartment of the compact refrigerator is for making ice cubes with the provided ice cube tray. The compartment is located directly under the freezer compartment. Simply pull out the shelf and use the ice tray for making ice cubes.

The freezer compartment is for short-term storage (3-4 days at the most) for some store bought frozen foods. Make sure the frozen products are in contact with the walls of the freezer compartment. This allows for maximum freezing capabilities.

When making ice cubes or storing frozen food, turn the temperature adjuster to the "5" or "6" position, but please be aware that, by doing so, the refrigerator compartment will get colder.

 
 
CHANGING THE REVERSIBLE DOOR

The refrigerator has been built with the door hinges on the right.

If you wish to change the opening direction, follow these instructions:

NOTE: UNPLUG THE REFRIGERATOR FROM THE ELECTRICAL OUTLET PRIOR TO CHANGING THE REVERSIBLE DOOR.

1. Empty everything in the refrigerator, including shelves and food.
2. First remove the upper and lower hinge covers on the left and right side by hand.
3. Remove the six screws (using a Phillips screwdriver) that are on the top and bottom of the cabinet.

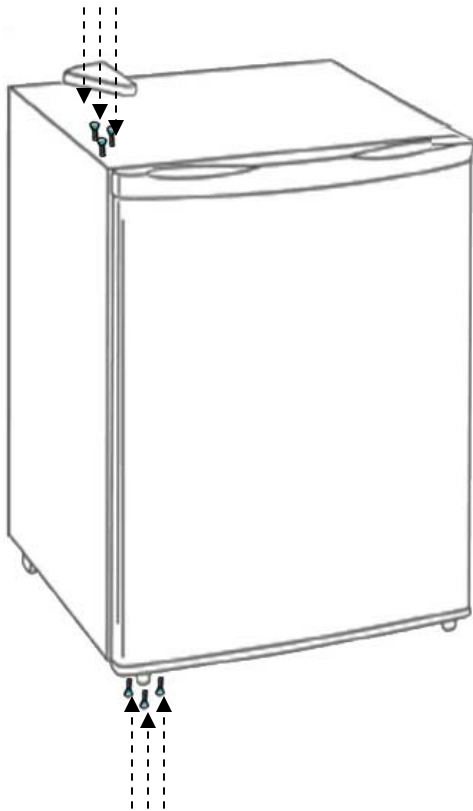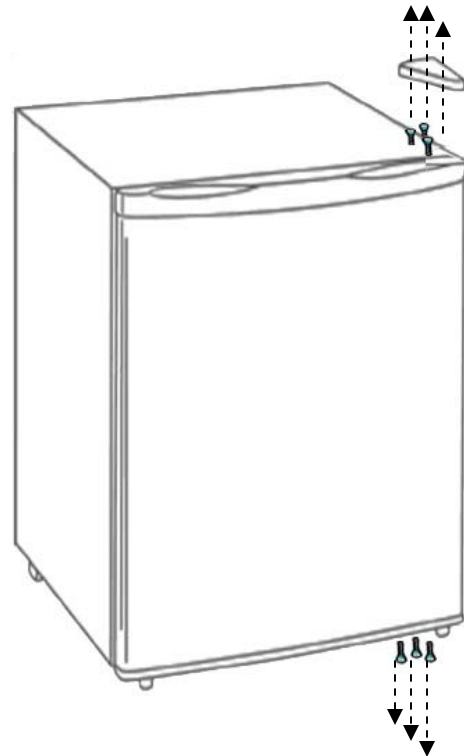

4. Remove the upper and lower hinges and lift the door and place it on a padded surface to prevent scratches.

4A. All parts removed must be retained to reinstall the door.

5. Transfer the hinges and screws to the left, place the upper hinge pin into the upper hole of the door, then tighten the three screws on the top, then the other three on the bottom. Put the flat hinge cover over the hinge holes on the left.
6. Open the door carefully and slowly to make sure the door is correctly attached and closing properly.

CARE AND CLEANING

TO CLEAN THE INTERIOR AND THE EXTERIOR OF THE COMPACT REFRIGERATOR

Always unplug the refrigerator before cleaning. Do not use a hard brush or sponge. Use light soapy water with a soft cloth. To dry, use a dry soft cloth or towel.

To prevent odors from forming in the refrigerator, place an opened box of baking soda inside. Replace the box every three months.

DEFROSTING THE COMPACT REFRIGERATOR

Unplug the refrigerator. Once the frost melts, carefully wipe down the outside or inside of the refrigerator. When dry, plug back in the refrigerator.

NOTE: DO NOT USE A HEATER OR ANY SHARP UTENSIL TO REMOVE FROST.

IN THE EVENT OF A POWER FAILURE

In the event of a power failure, do not open the refrigerator door frequently. A slight and gradual increase in temperature could have an effect on the preservation of food.

KEEPING THE INTERIOR OF THE REFRIGERATOR VENTILATED

In order to keep the refrigerator proper ventilated and cool, here are some helpful hints to follow:

- Do not overload your refrigerator. If too many goods are stored in the refrigerator, the interior circulation could be obstructed.
- Do not open the door too frequently or keep the door open for long periods. This will cause the internal temperature to increase.
- Make sure that all sides of the refrigerator are properly ventilated. (see installation instructions on page 6).

PREPARING THE COMPACT REFRIGERATOR FOR VACATION

Many foods, such as dairy products, can spoil even when properly refrigerated. For long vacations or absences, remove all food from the refrigerator and unplug the power supply. Move the temperature adjuster to the lowest temperature setting (the "O" position) and clean the interior.

TRANSPORTING THE COMPACT REFRIGERATOR

For transporting the compact refrigerator, secure all loose items, such as shelves and ice trays by taping them securely in place to prevent damage.

NOTE: BE SURE THE REFRIGERATOR STAYS IN AN UPRIGHT POSITION DURING TRANSPORTATION.

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
1) The compact refrigerator is not cooling.	1) No Power Supply	1) Make sure the refrigerator is plugged into a 3 prong outlet.
	1a) Low voltage	1a) Make sure the refrigerator is plugged into a proper 120V outlet.
	1b) Blown fuse or tripped circuit breaker	1b) Change fuse or reset circuit breaker. It is recommended that a qualified electrician change the fuse or reset the circuit breaker.
2) The refrigerator is not reaching the desired temperature.	2) The refrigerator is placed too close to a heat source.	2) Keep the refrigerator away from sun light and other heat sources.
	2a) Poor ventilation	2a) Make sure the refrigerator is ventilated properly and make sure that loose debris and other objects are away from the fan.
	2b) The door is opened frequently, or for a long period of time, or was not properly shut.	2b) Make sure the door is properly closed tight and do not open the door frequently.
	2c) The temperature adjustor is set too high	2c) Make sure the temperature adjustor is properly set. It may need to be set to a cooler temperature.
3) The refrigerator is too cold	3) The temperature adjustor is set too low.	3) Adjust the temperature setting to a higher temperature.
	3a) The ambient temperature is too cold.	3a) Keep the refrigerator in an ambient temperature above 10°C (50°F) .

TROUBLE SHOOTING

PROBLEM

POSSIBLE CAUSES

WHAT TO DO

4) There is too much frost or moisture forming in and around the refrigerator.

4) There is too much humidity or the ambient temperature is too low.

4) If frost builds up, unplug the refrigerator to defrost. Once defrosted, wipe the surface dry with a clean towel, then plug back in the refrigerator.

5) The refrigerator is making noise.

5) It is placed on an uneven or unlevelled surface.

5) Place the refrigerator on a level surface or adjust the legs accordingly.

5a) The compressor is operating.

5a) This normal.

NOTE: The compressor will operate more frequently:

- **When the refrigerator is first plugged in (for the first 24 hours).**
- **When a large amount of food is placed in the refrigerator.**
- **When the door is opened frequently.**
- **In hot weather.**

6) The refrigerator has an odor.

6) Foods are putting out odors.

6) Foods with strong odors should be sealed tight.

NOTE: It is recommended to keep an open box of baking soda in the refrigerator; replace every 3 months.

6a) Interior needs to be cleaned

6a) See "Care and Cleaning" on page 9.

CONSUMER SUPPORT

Questions? How to contact:	Telephone:	1-800-579-7990 (Monday – Friday 8:30 AM – 5:30 PM PST)
	Email:	support@honeywell-compactappliances.com sales@honeywell-compactappliances.com
	Website:	www.honeywell-compactappliances.com

LIMITED 1-YEAR WARRANTY

What does this warranty cover?

- Any defect in materials or workmanship in the manufactured product
- Missing parts for a period of 90 days from the date of purchase

What does this warranty not cover?

- Service trips to your home to teach you how to use the product.
- Improper installation.
- Failure of the product if it is abused, misused, altered or used in any manner not in accordance with manufacturer's instructions.
- Products that are used for a commercial purpose.
- Replacement of house fuses or resetting of circuit breakers.
- Damage to the product caused by accident, fire, floods, power surges or acts of God.
- Any service to the product
- **Incidental or consequential damage caused by possible defects with this appliance, its installation or repair.**

For how long after the original purchase?

- One (1) year.

How do I make a return?

Return to the retailer from which it was purchased, along with a copy of the store receipt within the given period of time allowed for returns by the retailer (i.e. 90 days). After this period of time, contact TTI Appliances at 1 (800) 579-7990 for further instructions.

This warranty excludes any cost of shipping to and from TTI Appliances.

How does state or province law relate to this warranty?

-This warranty is extended to the original purchaser only for products purchased for household use within the country of purchase. **Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.**

-Exclusion of implied warranties: Except where prohibited or restricted by law, there are no warranties, whether express, oral or statutory which extend beyond the description on the face hereof, including specifically the implied warranties of merchantability or fitness for a particular purpose.

**Warrantor:
TTI Appliances
11100 Santa Monica Blvd. Suite 560
Los Angeles, CA 90025**

Please complete and return warranty registration card.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>