

# Hotpoint Service Offices

**SERVICE CALL:** If you have a problem with your appliance ring your local Service Office. **SPARES and ACCESSORIES:** To purchase spares and accessories send your Accessories Order Form to your Spares Centre. If the accessory or spare part you want is not on the form then contact your Spares Centre for prices and availability. Please address all correspondence to Hotpoint Spares Centre or Hotpoint Service Office as applicable.

Service Offices and Spares Centres are open between 8.30 am-5.00 pm Monday to Friday, 8.30 am-12.30 pm Sats except on Public Holidays.

## IRELAND

**Northern Ireland:**  
256 Ormeau Road, Belfast,  
BT7 2FZ.  
Tel: Belfast 647111.  
**Eire:** 35/36 Arran Quay,  
Dublin 7.  
Tel: Dublin 726922.  
Spares and accessories may be ordered from either address.

## NORTH WEST

• **KENDAL:** 28 Highgate, LA9 4SX.  
Tel: Kendal 24483  
• **PRESTON:** 24/25 Cannon Street,  
PR1 3NR. Tel: Preston 24311.  
• **ST. HELENS:** 40 Cowley Hill Lane,  
WA10 2AD. Tel: St. Helens 35152.  
• **ELLESMERE PORT:**  
1 Church Parade, L65 2ER.  
Tel: 061-356 2141.  
• **STOCCPORT:** 44/46 Station Road,  
Fision Mersy, SK4 3JL. Tel: 0677  
Tel: Service Office 061-432 0255.  
Spares Centre 061-432 0255.

## WALES

• **LLANIDNOU JUNCTION:** Conwy Road,  
LL31 9RZ. Tel: Deganwy 62626.  
• **BRIDGEND:** 18 Victoria Road,  
Bridgend, CF31 3SL.  
Tel: Service Office Bridgend 64121  
Spares Centre Bridgend 64127.

## WEST MIDLANDS

• **STONE-ON-TRENT:** West Avenue,  
Nelson Estate, Kidsgrove, ST7 1TN.  
Tel: Kidsgrove 774511.  
• **ALDRIDGE:** Westgate, WS9 8UX.  
Tel: Service Office Aldridge 743374  
Spares Centre Aldridge 743377.

## SOUTH MIDLANDS


• **DUNGOT:** 224 Broadway, OX11 8RS.  
Tel: Didcot 817711.  
Spares and accessories may be ordered from either Aldridge or Wembley Centres.

## SOUTH WEST

• **BRISTOL:** 3/5 Brington Hill, Brington, BS4 580. Tel: Bristol 714471.  
• **PLYMOUTH:** 69 Mulvey Plain, PL4 6JH. Tel: Plymouth 262831.  
• **TOTTEN:** South Hampshire Industrial Park, Salisbury Road, SO4 3SA.  
Tel: Service Office Totton 661981  
Spares Centre Totton 661983.

In accordance with its policy of progressive product design, the Company reserves the right to alter specifications.

Hotpoint Ltd, Peterborough PE2 9UB, England

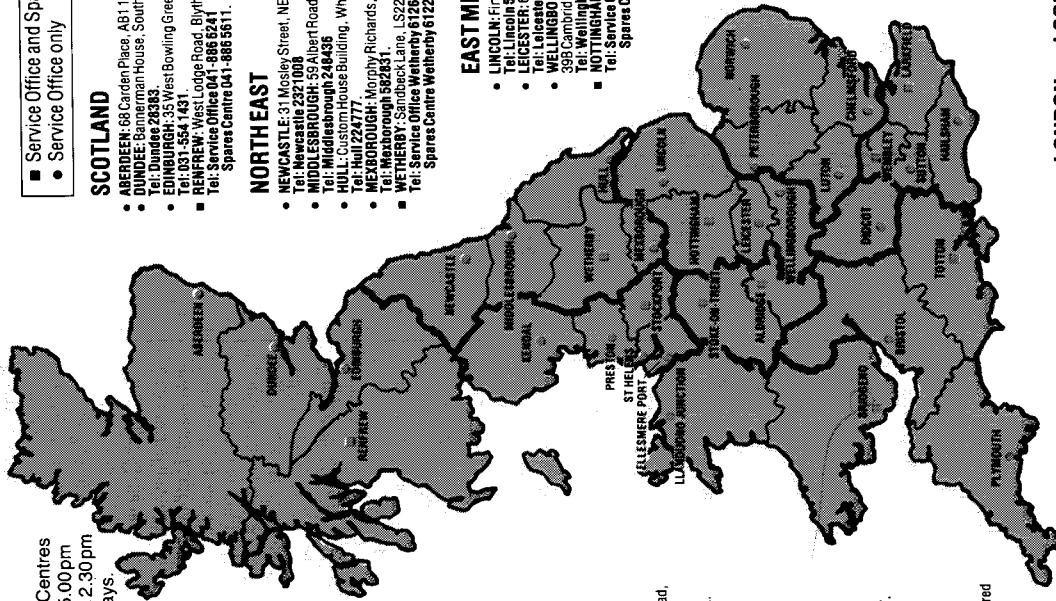

- Service Office and Spares Centre
- Service Office only

## SCOTLAND

• **ABERDEEN:** 68 Carden Place, AB1 1UL. Tel: Aberdeen 642283.  
• **DUNDEE:** Bannerman House, South Tay Street, DD1 1NR.  
Tel: Dundee 25303.  
• **EDINBURGH:** 35 West Bowling Green Street, Leith, EH6 5NX.  
Tel: Edinburgh 4941.  
• **BELFRISK:** 1491 Lodge Road, Blythswood Estate, Pf  
Tel: Service Office 041-886 6241  
Spares Centre 041-886 6511.

## NORTHEAST

• **NEWCASTLE:** 31 Mosley Street, NE1 1YF.  
• **MIDDLESBROUGH:** 35A Bert Road, TS1 1NG  
Tel: Newcastle 2321008  
• **MIDDLESBROUGH:** 240435  
Tel: Middlesbrough 240435  
• **HULL:** 122/127  
Tel: Hull 2421777  
• **MERBOTHOROUGH:** Morphy Richards, Swinton Works, S64 8AJ.  
Tel: Merborth 582831.  
• **WETHERBY:** Sarnbeck Lane, LS22 4TW.  
Tel: Service Office Wetherby 61261/61444  
Spares Centre Wetherby 61221.

## EAST MIDLANDS

• **LINCOLN:** Firth Road, LN6 7BW.  
Tel: Lincoln 512300  
• **LEICESTER:** 65 Belgrave Gate, LE1 3HR.  
Tel: Leicester 514455.  
• **WELLINGBOROUGH:**  
395 Cambridge Street, NWS, LDV.  
Tel: Wellingborough 223089, N62 3 JB  
• **NO. 100**  
Tel: Service Office Nottingham 662431  
Spares Centre Nottingham 660387.


## EASTERN

• **NORWICH:**  
92 Upper St. Giles Street,  
NR2 1LT.  
Tel: Norwich 620581.  
• **PETERBOROUGH:**  
Celta Road, PE2 9UB  
Tel: Peterborough 64741.  
• **LUTON:** 5 Crawley Road,  
LU1 1HX.  
Tel: Luton 459211.  
• **CHELMSFORD:**  
Industrial Buildings,  
Beehive Lane, CM2 9TE.  
For postal codes RM, IG  
Chelmsford 492433  
Remainder of Essex  
Chelmsford 269331.  
Spares and accessories may be ordered from Hotpoint Spares Administration Dept., Celta Road, Peterborough, PE2 9UB. Tel: Peterborough.

## LONDON and SOUTH EAST

• **SUTTON:** 251, Nicholas Road, SM1 1EH. Tel: 01-649 0821  
• **HAIL SHAM:** 1 Kingswood, North Street, BN27 1DD.  
• **WEMBLEY:** 66 East Lane, HA9 7PC.  
Tel: Office for S. Herts and Middlesex 01-904 4399  
Office for postal codes W, NW, WC, SW 1, 3, 5, 6, 7, 10  
N, E; EC 01-908 4722  
SE and rest of SW 01-908 2511  
Spares Centre 01-904 0201.  
• **LARKFIELD:** Larkfield Trading Estate, New Hyde Lane,  
ME20 6SW. Tel: Service Office Maidstone 716671  
Spares Centre Maidstone 716651.

# FULL INSTRUCTIONS FOR INSTALLING AND OPERATING YOUR HOTPOINT DOUBLE OVEN MODEL 6181

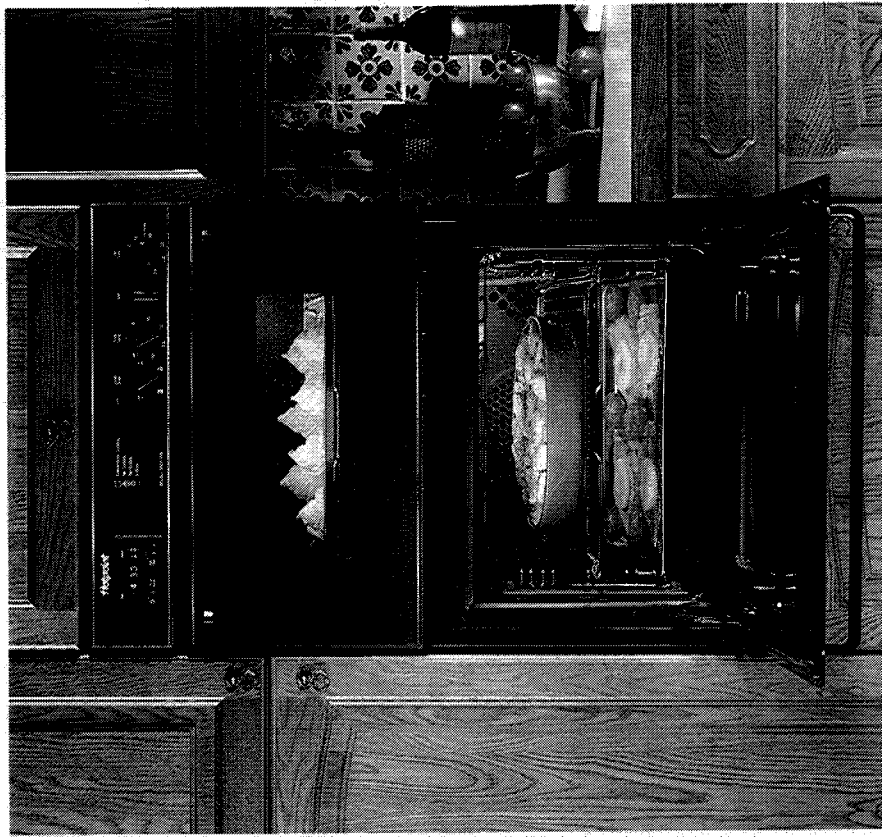

# Hotpoint®

## Before you operate your new Hotpoint Built-In/Built-Under Oven

### Please read these instructions fully.

1. Ensure that the oven is installed by a qualified electrician following the instructions below.
2. For your own safety and to get the best results from your oven it is important to read through this Handbook **before** using your oven for the first time.

### Electrical Requirements

- Any electrical wiring must be carried out in compliance with the appropriate IEE and electricity board regulations by a qualified electrician, eg. your local electricity board or a contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC).

- **WARNINGS – INCORRECT INSTALLATION COULD AFFECT THE SAFETY OF THE OVEN.**

- ALL APPLIANCES MUST BE EARTHED.

- BEFORE CONNECTING OR INSTALLING THE OVEN THE ELECTRICITY SUPPLY MUST BE SWITCHED OFF.

- **THE INSTALLER MUST** check that the voltage shown on the rating plate corresponds with the house electricity supply.

- The oven must be connected to a suitable double pole isolating switch, having a contact separation of at least 3 mm in all poles, placed in a readily accessible position, adjacent to the unit.

- If the oven is to be wired into a socket/connector unit this may be positioned behind the oven provided the following requirements are met:

- i) The connector unit must not project more than 25 mm from the wall.
- ii) The top of the connector must not be more than 100 mm above the base of the oven recess.

- After unpacking the oven stand it on the packing base to avoid damage.

### Electrical Connections

- Remove the terminal cover at the rear base of the oven. Pass the cable through the cable clamp and connect to the appropriate terminals provided. Allow sufficient cable so that the oven can be set down on the floor whilst still connected up. Tighten the screws on the cable clamp and replace the terminal cover. Make mains connections.

## Hotpoint Service Cover

### Satisfaction Guaranteed or Your Money Back

Hotpoint gives you a unique 'Satisfaction Guaranteed' promise – valid for ninety days after you have purchased your Hotpoint product. If there is a problem with your Hotpoint appliance just call your Hotpoint Service Office. If necessary we will arrange for an engineer to call. If the problem is not resolved by us under this Guarantee, Hotpoint will replace your appliance or, if you prefer, give you your money back. This Guarantee is additional and subject to the terms of Hotpoint's Five Year Parts Guarantee.

### Hotpoint's Free Five Year Guarantee

From the moment your appliance is delivered, Hotpoint guarantees it for **FIVE YEARS**.

- In the Five Years all replacement parts are **FREE** provided they are fitted by our own Service Engineer. During the first year our Engineer's time and labour is also free.
- After the first year we will charge for our Engineer's time and labour. We do, however, operate a range of Service Plans (see opposite) which for an annual payment enables you to cover any repair costs which may be necessary.
- All of our service repairs are guaranteed for twelve months in respect of our labour and any parts fitted.
- The appliance must be used in the United Kingdom and must not be tampered with or taken apart by anyone other than our own Service Engineer.
- You may, however, buy parts which can be safely fitted without specialist knowledge or equipment. The correct fitting of such parts, provided they are genuine Hotpoint spares, will not affect your Guarantee. Parts are available from our main Hotpoint Spares Centres (see back page).
- Our Guarantee does not cover the cost of any repair which is needed because of power cuts, accidents or misuse. Nor does it cover the cost of any visit to advise you on the use of the appliance. Please read the instruction book thoroughly.
- If at any time during the Guarantee period we are unable to repair your appliance, we will refund any repair costs paid to us in the previous twelve months. We will also offer you a new appliance at a reduced charge instead of a repair.
- Our Guarantee is in addition to and does not affect your legal rights.
- Should you need independent advice on your consumer rights, help is available from your Consumer Advice Centre, Law Centre, Trading Standards Department and Citizens Advice Bureau.

- All Hotpoint servicing is done by our own Service Organisation located throughout the United Kingdom and Southern Ireland. It will be happy to deal with any problems.

### Hotpoint's Service Care

Whether you have just one or a number of Hotpoint appliances in your kitchen Hotpoint has a range of Service Schemes to give you complete peace of mind.

### Service Cover

One annual payment covers you for all repairs for **individual appliances**.

If two or more appliances are covered a 20% reduction is made on each fee. There is also the option of **Service Cover with Maintenance** at an additional cost. Service Schemes are renewable each year by mutual agreement.

### Cooker Cover

One annual payment covers you for all repairs for **any number of Hotpoint Ovens, Microwaves, Hobs and Cooker Hoods** purchased. There is also the option of **Cooker Cover with Maintenance** at additional cost.

### Kitchen Cover

One annual payment covers you for all Repairs and a Maintenance Check for **all Hotpoint appliances owned** which are less than ten years old. Kitchen Cover also covers loss of food up to the value of £250 in our refrigeration and freezer products. Any additional Hotpoint appliances purchased after you have joined **Hotpoint Kitchen Cover** will automatically be included during the current annual period of cover without any further charge.

### Appliance Registration

To ensure that you have the opportunity to benefit from any of the above Service Schemes you should complete and return immediately the Appliance Registration Form supplied with your appliance. Full details and costs of our Service Schemes together with an application form will be sent to you at the end of the first year of the guarantee.

### Annual Safety/Maintenance Checks

Hotpoint strongly recommends that all its appliances are regularly checked for electrical and mechanical safety whether or not they are covered by a Service Plan.

### Proof of Purchase

For future reference please attach your purchase receipt to this booklet and keep it in a safe place.

### Spares and Accessories

 

Spares and accessories can be ordered from your local Hotpoint Spares Centre (listed on the back page), using the order form enclosed.

## If something goes wrong...

### wrong...

First, don't panic!

There may be nothing wrong. Check the points below before calling your Hotpoint Service Office.

1. Check that the mains supply has been switched on.
2. Check that the oven timer has been set to , manual operation and not left on automatic (see pages 8 and 9).
3. Have you turned both the Lower Oven Selector and the Oven Temperature Selector to the appropriate positions?
4. If grilling have you turned the relevant Oven Thermostat to  or 'Grilling' and the Grill Selector to the required setting?

## If it still won't work...

### Contact the Service Office

If there is still a problem with your oven after checking the points mentioned previously:

1. Switch off the oven at the oven control panel.
2. Call your nearest Hotpoint Service Office or local importer (outside the UK). The telephone number is shown on the back page. Note the number down in the space below:

.....

When you contact us we will want to know the following:

1. Your name, address and post code.
  2. Your telephone number.
  3. Clear and concise details of the fault.
  4. The model number (6181) serial number (found on the base front of the oven) and the colour.
  5. The date of purchase. Enter the date here:
- .....
6. If you have taken out one of the Hotpoint Service Schemes.

Please make sure you have these ready when you call.

Hotpoint's own Service Engineer. The address and telephone number of your nearest Hotpoint Service Office is in your local telephone directory.

Our spare parts are designed exclusively to fit only Hotpoint appliances. Do not use them for any other purpose as you may create a safety hazard.

## Spare Parts

Please remember your new appliance is a complex piece of equipment. 'DIY' repairs or unqualified and untrained service people may put you in danger, could damage the appliance and might mean you lose cover under Hotpoint's Parts Guarantee.

If you do experience a problem with the appliance don't take risks; call in

## Contents

	Page
Before you operate your new Hotpoint Double Oven	2
Electrical Requirements	2
Installing your Oven	4-5
The main parts of your Oven	6
The Cooking Systems in your Oven	7
... Controls	8-9
The Automatic Oven Timer	10-11
Before using your Oven for the first time	11
Position of shelves	12
Cooking in the Top Oven – Grilling	12
– Conventional Cooking	12-13
Cooking in the Lower Oven – Conventional Cooking	13-14
– Fan Cooking	14
– Fan Grilling	15
Care and cleaning of the Oven	16-17
If something goes wrong	18
If it still won't work	18
Hotpoint Service Cover	19
Hotpoint Service Offices and Spares Centres	back page

## Retention of this Instruction Book

This Instruction Book must be kept handy for reference as it contains important details on the safe and proper use of the appliance.

If you sell or pass the appliance to someone else, or move house and leave it behind, make sure this Book is also provided so the new owner can become familiar with the appliance and safety warnings.

If the Book is lost or damaged a copy may be obtained from Hotpoint Ltd, Celta Road, Peterborough, PE2 9JB.

# Installing your Double Oven

## Dimensional Requirements

Dimensions for the housing unit recess and the oven are given in Figure 1.

The housing unit must be firmly attached to the wall before the oven is installed.

The housing unit into which the oven is to be placed should be solid wood or have a melamine or laminate finish.

Adequate ventilation must be provided (see Figure 2). Particular attention must be paid to ensure that the air inlet and outlet areas are kept clear. Sufficient space must be left between the top of the housing unit and the ceiling to allow a free flow of air.

However, if higher cooking temperatures are not regularly used then it may be necessary, in order to prevent heavy soiling, to run the ovens at maximum temperature for at least two hours, from time to time. Should it be necessary the 'Stay Clean' side and roof panels can be removed. The side and roof liners simply slide out.

Remove the metal shelf fittings from the side liners simply push the metal fittings upwards until the base section is disengaged from the retaining holes. To replace the fitting place the longer locating ends into the retaining holes at the top of the liner and allow the fitting to slide down to engage the base section in the retaining holes.

The 'Stay Clean' liners can then be washed in warm soapy water followed by rinsing in clear water. Dry well with a soft cloth.

**NOTE: DO NOT use enzyme washing powder, harsh abrasives or chemical oven cleaners of any kind.**

**DO NOT wash them in a dishwasher.**

## Oven Fittings

The shelf fittings can be removed as described previously. They and the wire shelves can be cleaned either in a dishwasher or by using a fine steel wool soap pad to remove stubborn stains.

## Oven Interiors

To clean the oven interiors remove all the oven fittings and if necessary the 'Stay Clean' liners.

All types of oven cleaners can be used, but **DO NOT** allow abrasive cleaners or oven spray to come into contact with the 'Stay Clean' liners, oven surround or trims. Use a fine steel wool soap pad to remove stubborn stains.

## How to replace the oven lights

Should the oven lights fail to work, **switch off** the mains supply to the oven. Access to the bulbs can be gained after first removing the lamp cover by turning anti-clockwise. The bulb can then be unscrewed and replaced by one of a similar type (Part No. 613002) which can be obtained from your nearest Hotpoint Service Centre (see back cover).

**NOTE: Additional shelves and baking sheets can be obtained from your local Hotpoint Spares Centre, listed on the back page.**

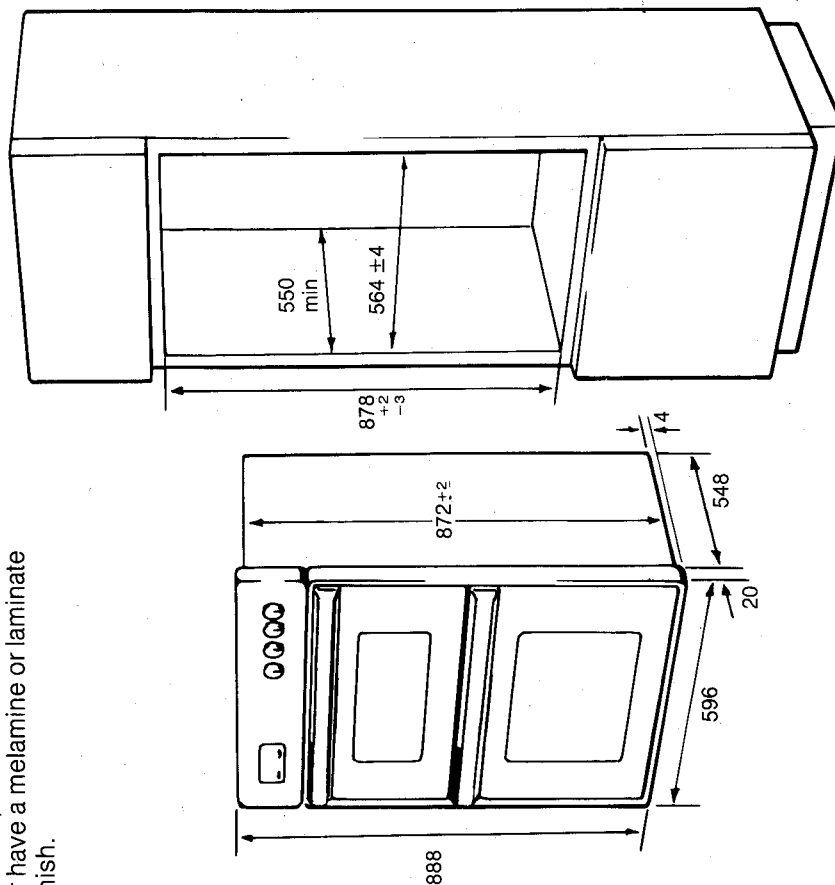


Figure 1

## Care and cleaning of the Double Oven

**WARNING: BEFORE CLEANING SWITCH THE OVEN OFF AT THE COOKER CONTROL PANEL AND ALLOW IT TO COOL.**

### Cleaning the outside

Clean the outside by wiping with a damp cloth using a small amount of detergent, followed by wiping down with a dry clean cloth.

**Note: DO NOT use scouring pads or abrasive powder which will scratch the glass.**

### Cleaning the Oven Doors

Both doors can be removed for cleaning. To do this, open the door and swing the hinge 'stops' upwards and towards the user (Figure 6).

Close the door as far as the 'stop' position. Lifting the door slightly, pull it, complete with hinges, up and away from the oven housing (Figure 7).

Replace the oven doors after cleaning and ensure that the 'stop' has been pushed into position.

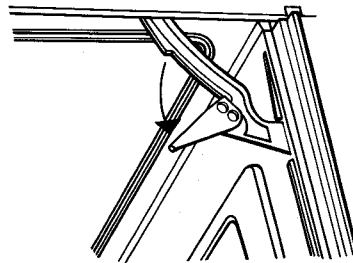


Fig 6

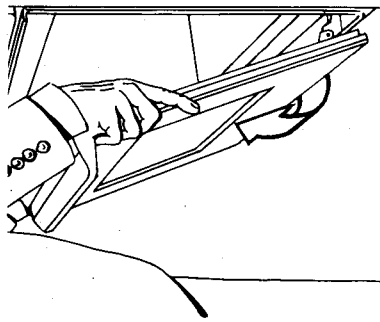


Fig 7

Stubborn stains on the inside of the doors can be removed by using a liquid cleaner, eg *Jif*. During cleaning the doors must not be immersed in water. Do not use scouring pads or abrasive powder which will scratch the glass. Cleaners which contain bleach should also not be used as they may dull the surface. After cleaning, wipe down with a damp cloth and dry with a soft cloth.

**WARNING: DO NOT RUN THE OVENS WITHOUT THE DOORS FITTED.**

### Cleaning the inside

'Stay Clean' side, roof liners and back panel (top oven only) can be purchased as an optional extra. These liners can be obtained either through your local Hotpoint Service Centre or your retailer (Part No. 6002 and 6006).

'Stay Clean' liners are covered with special enamel which absorbs cooking soils. At higher temperatures the soiling is slowly destroyed. In most cases normal cooking at higher temperatures will permit this cleaning to take place automatically.

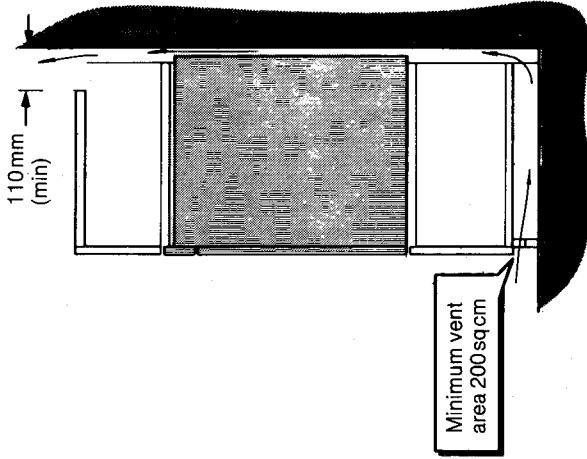


Figure 2

## Installing the Oven into the Housing Unit

Do not lift or carry the oven by the door handles. It is advisable to remove the oven doors before attempting to lift the oven.

To do this open the door fully and swing the hinge 'stops' upwards towards the installer (Figure 3). Close the door as far as the 'stop' position. Lifting the doors slightly pull them, complete with hinges, up and away from the oven housing (Figure 4). Then lift up the oven using the handles in the side of the oven casing and push it into the recess, being sure that the connecting cable is not trapped beneath or behind. Centralise the oven within the housing unit and secure through the side trims using two of the black screws supplied. Replace the oven doors, ensuring that the 'stop' has been pushed into position.


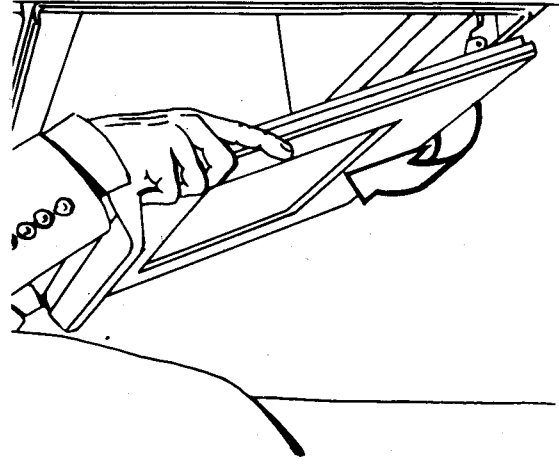


Figure 3

Figure 4

# The main parts of your Double Oven

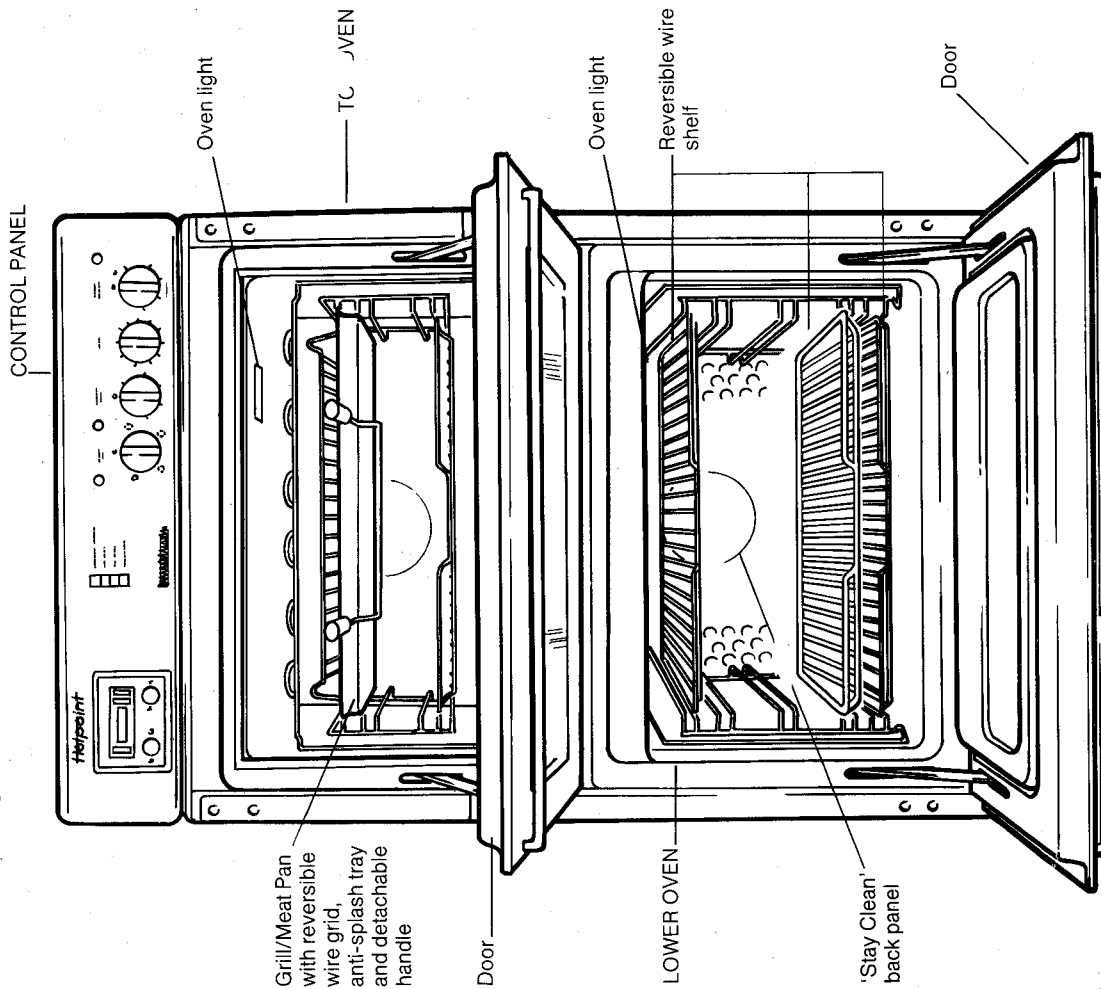


## Oven furniture

Should include:

- 3 wire shelves, 1 grill shelf, 1 grill/meat pan with wire grid and detachable handle, 1 lower drip pan.

**WARNING: DO NOT TOUCH THE GLASS DOORS WHEN THE OVEN IS IN USE AS THESE AREAS CAN BECOME HOT.**

pieces a lower temperature and a longer grilling time will be necessary.

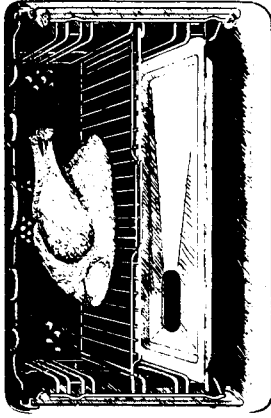

For ordinary grilling we would normally recommend using the Top Oven Grill with the Grill Selector (see page 12). However, if necessary the top element in the Lower Oven can be used as a full power grill by turning the Lower Oven Selector to [symbol] and the Oven Temp Selector to [symbol], but the oven door must be CLOSED. Alternatively it can be used at a lower setting by turning the Oven Selector to [symbol] and the Oven Temp Selector to a lower temperature. Care however should be taken with delicate foods, eg fish – as the grill will come on full initially in order to raise the temperature.

## Condensation

Under certain conditions condensation may become evident on the inner door and water may drip through the vent. This is normal when heat and moisture are present and may be a result of any of the following:

1. Kitchen temperature and ventilation.
2. The moisture content of the food eg, meat, roast/jacket potatoes, Yorkshire pudding, roasting meat etc.
3. The quantity of food being cooked at any one time.

It is normal for a built-in/built-under cooker to vent from a front aperture either situated in the handle or between the oven door and the fascia.



**Defrosting Without heat** – for frozen foods such as cakes, fruit, etc the Oven Temp Selector should be set at 'O' (Off) and shelf position 2 used.

**With heat** – for chicken portions, sausages, meat rolls, etc turn the Oven Temp Selector to 50-75°C and again use shelf position 2. This method of defrosting is only recommended for food up to 2 kg in weight and the food should be cooked immediately afterwards.

## Fan Grilling

Turn the Lower Oven Selector to [symbol] and the Oven Temp Selector to the required temperature. The heat for Fan Grilling is provided by the grill element at the top of the oven and this heat is circulated around the food by the fan. The element and the fan are switched on and off alternately. It is ideal for roasting a joint or a chicken and has the same result as if you were cooking on a rotisserie but more economically as the door is left closed. There is no need to pre-heat the oven. Insert the grill pan and anti-splash tray on the floor of the oven or at shelf position 1. Place the food on one of the oven shelves and insert it at shelf position 1, 2 or 3, depending on the height of the food. For large pieces of meat or several

 
 
more than one shelf then the Fan Cooking System is recommended.

### Roasting

If roasting in an open dish, shelf position 2 is recommended. If roasting directly in the meat pan, use the anti-splash tray supplied so that during the cooking all the fat drains into the cavity base. This ensures that oven cleaning is kept to a minimum. If roasting or cooking a casserole in a closed dish it should be placed on a shelf either at position 1 or 2 depending on the size of the dish.





### Fan Cooking

Turn the Lower Oven Selector to  and the Oven Temp Selector to the required temperature. The heat for Fan Cooking is provided by an element situated at the back of the oven and around the fan. Therefore with this cooking system it is possible to utilise the floor of the oven, either by standing baking tins directly on the floor of the oven or by placing an inverted shelf () on the floor. This allows for greater flexibility within the oven.

### Baking

 The advantage of this method of cooking is that as the oven heats up more quickly and generally foods cook at a lower temperature than in a conventional oven, pre-heating the oven is only required for certain types of food, eg Yorkshire pudding, bread, or if the cooking time is less than 25 minutes. Since the distribution of heat is more even most foods will cook satisfactorily in any shelf position, but the shelves should be evenly spaced. If only one shelf is being used then position 1 is preferable. Temperatures selected should be 10-30°C lower than with conventional heating – see separate cookery book.





When cooking a complete meal – for instance roast beef, roast potatoes, Yorkshire pudding and apple pie – place meat/potatoes upon anti-splash tray in meat pan on an inverted shelf () situated on the floor of the oven, with the apple pie and Yorkshire pudding on an inverted shelf () at position 3.

When batch baking large quantities of food for home freezing or parties, use shelf positions 1, 3 and 4.

Remember to place the food to be cooked in the centre of each shelf to allow for even air circulation around the food. It may be necessary to increase the cooking times by a few minutes to allow for the larger mass of food, and to take out food on the upper shelf slightly earlier. If you are batch baking you will need to pre-heat the oven.

Detailed charts covering temperatures and shelf positions for Fan Cooking are given in the recipe book supplied.

## The Cooking Systems in your Double Oven

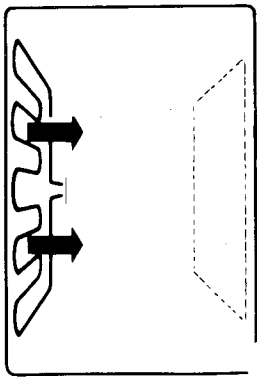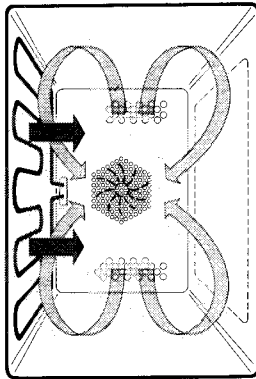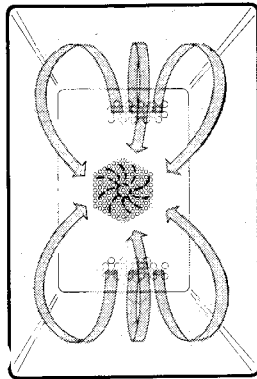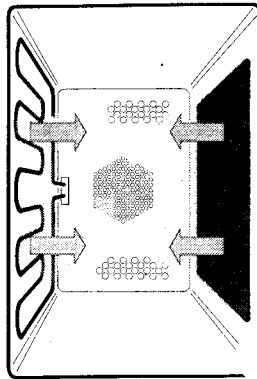

Your new Double Oven is equipped with four different cooking systems:

- 1. Conventional Cooking (Lower and Top Oven)** – with upper and lower heat. This system is particularly suitable for roasting and baking on one shelf only.
- 2. Variable Grilling (Top Oven)** – the oven can also be used for conventional grilling with a fully controllable grill.


**NOTE: The Oven Door should be closed when grilling.**

- 3. Fan Cooking (Lower Oven)** – the fan oven operates by constantly blowing heated air, from an element wrapped around the fan, into the oven. This gives improved efficiency and, in general, enables the use of lower temperatures for cooking. It also means that there is less need to be particular about shelf positions and that you can bake at more than one level simultaneously (Batch Baking).


- 4. Fan Grilling (Lower Oven)** – this is a combination of heat from the grill element and hot air circulated by the fan. Joints of meat and poultry will be browned as if they were cooked on a rotisserie or spit but more economically as the door is left closed.

These four systems of cooking are described more fully in the separate Recipe Book and we would suggest you read right through the Introductory Section of that book **before** using the oven.

# The Controls

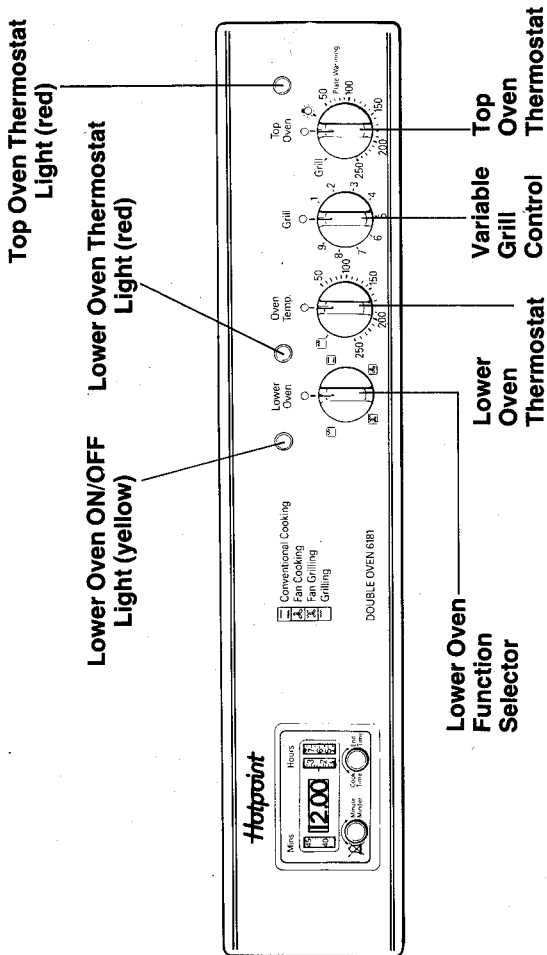

## Lower Oven Controls

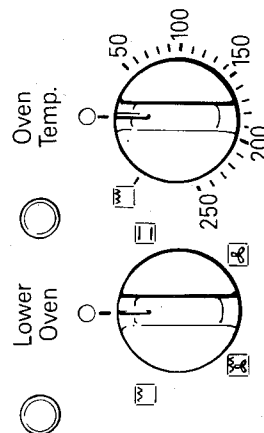

Before using the Lower Oven the Lower Oven Selector must be turned to the appropriate position. The control has four settings.

- Conventional Cooking
- Fan Cooking
- Grilling
- Fan Grilling


Now turn the Oven Temperature Selector clockwise to the required temperature. The thermostat light will immediately come on when either Conventional or Fan is selected and will remain on until the oven reaches the required temperature. The light will then automatically go on and off during cooking as the oven thermostat maintains this temperature. If the thermostat light does not come on when the thermostat is turned on, make sure that the Manual Symbol is visible in the End Time Scale in line with the indicator point.

# Cooking in the Lower Oven

To obtain the best results it is recommended that you use the wire shelves and meat pan provided individually or if cooking on more than one shelf, in conjunction with your own baking tins.

Only put in the shelves or fittings you actually want to use. Unused shelves only restrict access and get in the way. If possible it is a good idea to remove the fittings when you have finished cooking so that when you next come to use the oven you do not inadvertently heat up unnecessary shelves or tins – as well as being more convenient this will even save electricity.

## Position of shelves

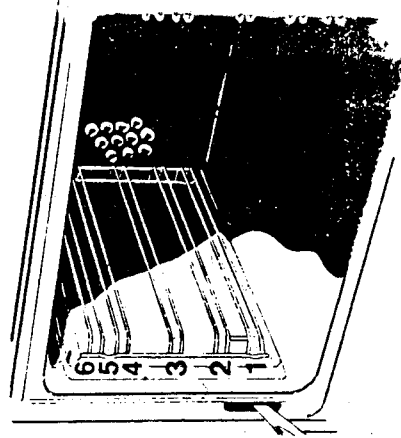

**Conventional Cooking** Turn the Lower Oven Selector to and the Oven Temp Selector to the required temperature.

**Baking** Always place the item you are baking in the centre of the shelf. You will find that shelf position 1 or 2 will give the best results. If you are baking on

If using aluminium foil **never** allow the foil to touch the sides of either of the ovens. **Never** cover the interior or shelves with foil.

**Baking** Always place the item you are baking in the centre of the shelf and locate the shelf at shelf position 1. If using the flat baking tray supplied always have the sloping edge towards the front.

**Roasting** When roasting shelf position 1 is recommended. If roasting directly in the meat pan use the anti-splash tray so that, during cooking, all the fat drains into the cavity base, this ensures that oven cleaning is kept to a minimum.

Detailed charts covering temperatures and shelf positions for Conventional Cooking are given in the recipe book supplied.



## Cooking in the Top Oven

The Top Oven can be used for normal cooking, but on a smaller scale. Where necessary it is advisable to stand dishes on a baking tray to avoid spillage on to the floor of the compartment. Most foods will cook at a slightly lower temperature in the smaller Top Oven than in the larger Lower Oven.

### Position of Shelves




### Grilling

The grilling facility in the Top Oven enables you to use the full width of the grill.

To use the full width of the grill turn the Top Oven Thermostat to 'Grilling'. The grill power can be adjusted by means of the Grill Selector (settings 0-9).

Grilling should be done with the Top Oven door CLOSED. There is no need to pre-heat. Use the grill pan with the anti-splash tray and the reversible grill pan, if necessary, in positions 2-4, according to the thickness of the food. If you find excessive smoke being emitted then turn the Grill Selector to a lower setting and/or move the grill pan to a lower position.

**WARNING. THE GRILL PAN MUST BE CLEANED AFTER EVERY USE. EXCESS FAT BUILD UP IN THE BOTTOM OF THE PAN COULD CAUSE A FIRE HAZARD.**

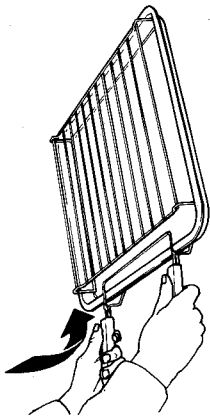

Fix the grill pan handle securely in position. With the grill pan handle in the vertical position, place the chrome section centrally over the grill pan lip. Drop the handle away from the grill pan and ensure that the handle is secure before use (see illustration).

### Conventional Cooking

Turn the Top Oven Selector to the required temperature. The heat for Conventional Cooking is provided by the Grill element and the element under the floor of the oven. Therefore **DO NOT COOK DIRECTLY ON THE FLOOR OF THE OVEN**, or place food too close to the top element.

### Warming Dishes


The Top Oven is ideal for warming dishes and keeping food hot. Dishes should not be placed directly on the floor of the oven and the Top Oven Selector should be turned to 'Plate Warming'.

**WARNING: DO NOT PUT DELICATE CHINA OR ITEMS WHICH COULD BE AFFECTED BY HEAT INTO THE OVEN.**

When Fan Grilling or Grilling is selected the thermostat light will not operate. After use always set the Lower Oven Selector and the Oven Temperature Selector back to 'O' (Off).

If required the top element in the Lower Oven can be used as a Grill by setting the Lower Oven Selector to 'Grill' and the Oven Temperature selector either to or a lower setting on the Temperature Selector if less than full power is required. Always remember to keep the oven door closed.


## Top Oven Controls

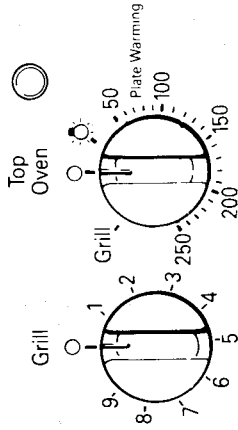

To heat this oven, turn the Top Oven Selector clockwise to the required temperature. The Thermostat Light will immediately come on and remain on until the oven reaches the selected temperature. The light will then automatically go on and off during cooking as the Oven Thermostat maintains this temperature. After use always turn the Top Oven Selector anti-clockwise back to 'O' (Off).

To use the grill set the Top Thermostat Control to the 'Grilling' position and the Grill Selector within the range 1-9.


## The Automatic Oven Timer

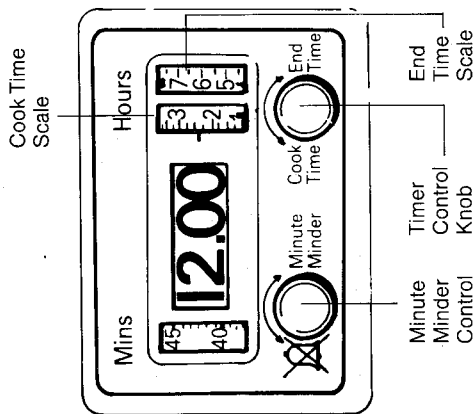


Both the Lower and Top Ovens, with the exception of the Grills, can be controlled by the Automatic Timer. The Timer is controlled by the Digital Clock. Check that the clock is showing the correct time, if not reset it by pulling out the Minute Minder Control Knob and turning it clockwise until the correct time appears.

### The Minute Minder

 
The Minute Minder can be used independently or in conjunction with the automatic timer and will give an audible reminder for periods of up to 60 minutes. It does not control the operation of the ovens.

Turn the Minute Minder Control Knob clockwise (do not pull it) and set the required time on the Minute Minder scale. The scale will run back to 'O' and a bell will ring. To switch off the bell, turn the Minute Minder Control anti-clockwise until  appears in the window in line with the indicator point.

**Note:** If the clock does not operate when the appliance is switched on at the mains or after a power failure, make sure that the Minute Minder is set to .


### To set the Timer to switch ON and OFF automatically

 The End Time scale is marked in 1/2 hour graduations and the Cook Time scale is marked in quarter-hour graduations.


1. Turn the Timer Control clockwise until the time you want the meal to finish cooking is set on the End Time scale.
2. Turn the Timer Control anti-clockwise until the length of time you want the meal to cook is shown on the Cook Time scale (this sets the switching-on time).
3. Turn the appropriate Oven Selector (or Selectors if using both ovens) to the required temperature and if using the Lower Oven the Lower Oven Selector to the type of heating required (see page 9).
4. The oven will automatically be switched ON when the pre-selected start time has been reached and switched OFF when the stop time has been reached.
5. After use turn the Selector(s) to 'O' (Off) and turn the Timer Control clockwise so that the setting  (Manual) shows on the Cook Time scale.

### To set the Timer to switch OFF only

 
The timer may be used to switch the oven(s) off providing the cooking period does not exceed 3 1/2 hours.

1. Turn the appropriate Oven Selector(s) to the required temperature and if using the Lower Oven the Lower Oven Selector to the type of heating required (see page 9).
2. Turn the Timer Control clockwise until the time you wish the meal to finish cooking is set on the End Time scale.
3. Turn the Timer Control anti-clockwise so that the length of time until the required finishing time shows on the Cook Time scale.
4. The oven will be automatically switched OFF when the stop time is reached.
5. After use turn the appropriate Selector(s) to 'O' (Off) and turn the Timer Control clockwise so that  (Manual) shows on the Cook Time scale.

### To cancel the Timer and return to MANUAL operation

 If you wish to use the oven manually after a timed operation has been set, turn the Timer Control clockwise until  (Manual) shows on the Cook Time scale.


### IMPORTANT

 After cooking automatically **ALWAYS** make sure that the timer has been set to  (Manual) operation and the appropriate Selector(s) returned to 'O' (Off).


**WARNING: CHILDREN SHOULD NOT BE ALLOWED TO PLAY WITH THE CONTROLS OR TAMPER WITH THE APPLIANCE.**

## Before using your Double Oven for the first time

In some models the shelf racks will have to be inserted. To do this first push the long ends of the racks into the top openings in the side walls and then insert the bottom ends in the holes provided.

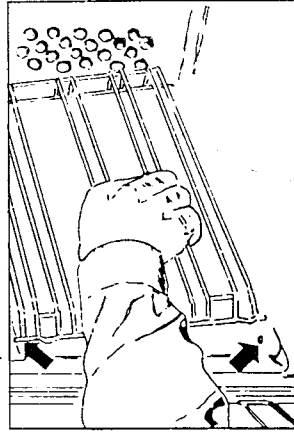

### Make sure the electricity supply is switched ON

To remove the 'new smell', heat up the empty ovens for 30 minutes keeping the doors closed. To heat up the Lower Oven turn the Lower Oven Selector to  – the Mains ON/OFF light and the light inside the oven will come on – and set the Lower Oven Temp Selector to 250. When you do this the Lower Oven Thermostat light on the Control Panel and the light inside the Lower Oven will come on. To heat up the Top Oven turn the Top Oven Selector to 250 – the Top Oven Thermostat light and the light inside the Top Oven will come on.

The new smell is due to any temporary finish on oven fittings and elements and also any moisture absorbed by the lagging. The odour will cease after a short period of use. Ensure that the room is well ventilated (eg, open a window or door) and that persons who may be sensitive to the odour avoid any fumes. It is suggested that any pets be removed from the room until the 'new smell' has ceased.



## Key Contacts

### **After Sales Service**

Over 1100 trained specialists, directly employed by us, ensure that you have complete confidence in both the appliances and services we offer.

### **Repair Service**

UK: 08709 066 066

(Open 8 to 8 Mon - Fri, 8 to 6 Sat & 10 to 4 Sun)

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: 1850 302 200

Note: Our Service Operators will require the following information:

Model Number

Serial Number

### **Extended Warranties**

UK: 08709 088 088

(Open 8 to 6 Mon - Fri)

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: 1850 502 200

### **Genuine Parts and Accessories**

UK: 08709 077 077

(Open 8-30 to 5-30 Mon - Fri, 8-30 to 12 Sat)

[www.theservicecentre.co.uk](http://www.theservicecentre.co.uk)

Republic of Ireland: (01) 842 6836

General Domestic Appliances Limited, Morley Way, Peterborough, PE2 9JB

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>