



**HUAWEI**

**ETS8121**

---

**Cordless Phone**

**USER GUIDE**

Copyright © Huawei Technologies Co., Ltd. 2009. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

#### **Trademarks and Permissions**



**HUAWEI**, **HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

#### **Notice**

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

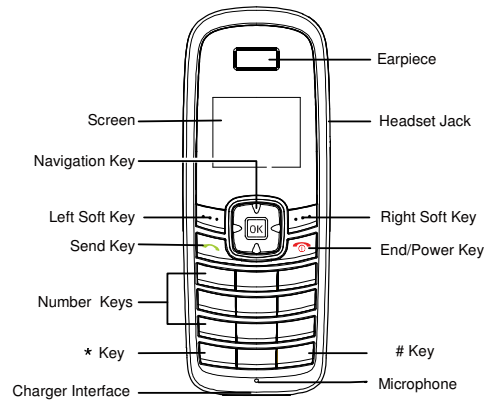 
#### **NO WARRANTY**

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

#### **Import and Export Regulations**

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.






## Your Cordless Phone



**Note**



 
 




- This is a sketch. Your cordless phone may be different. It is subject to your actual one.
- To achieve the optimal effect, use the cordless phone away from the charger stand.

## Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> <li>View the dialed calls in the standby mode.</li> <li>Make or answer a call.</li> </ul>
	<ul style="list-style-type: none"> <li>Power on the cordless phone by pressing and holding it.</li> <li>Power off the cordless phone by pressing and holding it in standby mode.</li> <li>End a call or reject an incoming call.</li> <li>Return to the home screen.</li> </ul>
	Select the option displayed on the lower left corner of the screen.
	Select the option displayed on the lower right corner of the screen.
	<ul style="list-style-type: none"> <li>In the standby mode, press Navigation key to access the shortcut screen.</li> <li>During a call, press <b>left</b> key or <b>right</b> key to adjust the volume of the earpiece.</li> </ul>
Number Keys	<ul style="list-style-type: none"> <li>Enter numbers and characters.</li> <li>Speed-dial cordless phone numbers in the standby mode (by pressing and holding the <b>1-9</b> keys).</li> <li>Select a submenu item labeled with the corresponding number.</li> </ul>
* key	<ul style="list-style-type: none"> <li>Perform different operations for different functions of the cordless phone.</li> <li>Unlock the keypad in the standby mode (by press Menu and then press * key).</li> </ul>

Press...	To...
# key	<ul style="list-style-type: none"> <li>Perform different operations for different functions of the cordless phone.</li> <li>Lock the keypad in the standby mode (by pressing and holding it).</li> </ul>

### Screen Icons

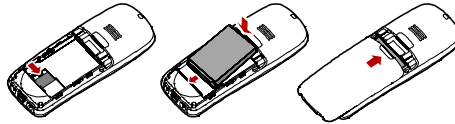 
Icon	Description	Icon	Description
	Network signal strength		Battery power level
	Calling		Alarm clock is on
	<ul style="list-style-type: none"> <li>Message received</li> <li>Memory for messages is full, when the icon is blinking</li> </ul>		Keypad is locked
	Remind by sound / Without sound remind		Remind by vibration

## Menu Tree

<b>Messages</b>	<b>Phone Book</b>	<b>Call History</b>
<ol style="list-style-type: none"><li>1. Write</li><li>2. Inbox</li><li>3. Outbox</li><li>4. Draft</li><li>5. VoiceMail</li><li>6. Settings</li><li>7. Memory Status</li></ol>	<ol style="list-style-type: none"><li>1. Name List</li><li>2. Add New</li><li>3. Speed Dials</li><li>4. Memory Status</li></ol>	<ol style="list-style-type: none"><li>1. Missed Calls</li><li>2. Answered Calls</li><li>3. Outgoing Calls</li></ol>
<b>Applications</b>	<b>Phone Settings</b>	
<ol style="list-style-type: none"><li>1. Alarm</li></ol>	<ol style="list-style-type: none"><li>1. Profiles</li><li>2. Call settings</li><li>3. Time &amp; Data</li><li>4. Languages</li><li>5. Network Service</li><li>6. Security</li><li>7. Version</li><li>8. Key Guard</li><li>9. Safe Code</li></ol>	

### Installing the SIM Card and Battery

Make sure that the golden area on the SIM card is facing downwards and the cut-off edge is correctly fit to that of the card holder.








### Charging the Battery



1. Connect the cordless phone to the charger stand.
2. Connect one power adapter connector to the charger stand.
3. Connect the charger to an AC power socket. During the charging, the animation of charging icon is displayed.
4. When the cordless phone is fully charged, disconnect the charger from the AC power socket first. Then disconnect the charger stand from the charger.
5. When the charging icon becomes static, the cordless phone is fully charged.

- Note**
- Remove the battery if the FWT is left unused for a long period.
  - If the battery of your FWT has not been used for a long time or the battery is exhausted, the screen of the FWT may not function when you charge the battery again. This is normal. After the battery is being charged for a while, you can power on the FWT for use.




## Using the Function Menu

1. In the standby mode, press  to display the **Menu** interface.
2. Press **Up** or **Down** key to scroll in the menu.
3. Press  to display the menu.
4. Display the submenu in either of the ways:
  - Press **Up** or **Down** key to scroll to a submenu item and press  to select the submenu.
  - Press the **Number** key corresponding to the number of a submenu to select it.
5. Press  to return to the previous menu or return to the home screen.
6. Press  to return to the home screen.




## Making a Call



1. In the standby mode, enter a phone number.
2. Press  to dial the number.
3. Press  to end the call.



- Note**
- When the cordless phone is locked, enter the lock code to unlock the cordless phone first; otherwise, you can only make emergency calls or answer calls.
  - In the standby mode, press  to view the dialed calls. Select a record and press  to dial this number.
  - Select a contact from the cordless phonebook and press  to call this contact.
  - During a call, press OK key to switch the Hands free.

### Answering a Call

When there is an incoming call, you can press  or  to answer it, or press  to reject it.

If the any-key answer function is enabled, you can press any key except  and  to answer an incoming call.

### Cordless phone Lock

The cordless phone lock protects your cordless phone from unauthorized use. The default cordless phone lock code is 00000000. You can change it into any numeric string of 4 to 8 digits.




If the cordless phone lock is enabled, you need to enter the correct cordless phone lock code when you power on the cordless phone.

### PIN and PUK

The personal identity number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) can

unlock the blocked PIN. Both the PIN and PUK are delivered with the SIM card. For details, consult your service provider.


### Locking the Keypad

In the standby mode, press and hold  to lock the keypad. When the keypad is locked, you can press  or  to answer an incoming call or make emergency calls.



 

You can press  and  to unlock the keypad.

When the keyguard function is enabled, if there is no operation on the cordless phone for a preset period, the keypad is locked automatically.

### Changing the Text Input Modes

The indicator of the current text input mode is displayed on the screen. In the editing mode, press  to change the input mode.

#### Note

- In the editing mode, press  once to delete the letter on the left of the cursor. Press and hold  to delete all the entered letters.
- In the "ABC", "Abc" or "abc" input mode, press  once to enter a space, twice to enter "0".
- In the "ABC", "Abc" or "abc" input mode, press  repeatedly to select and enter the commonly used punctuations.

### Entering English (ABC, Abc or abc)


In the "ABC", "Abc" or "abc" input mode, you can press a key labeled with the desired letters once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

**Note** If the letter you want to enter is on the same key as the previous one, you can enter the latter one only after the cursor appears again or after you press the **Right** key to move the cursor to the next space.

### Entering Numbers

1. In the "123" input mode, press a key labeled with the desired number.
2. In the "ABC", "Abc" or "abc" input mode, press a key continuously or press and hold it until the desired number appears on the screen.

### Entering Symbols

1. In any input mode, press  to display a symbol list.
2. Press **Up** or **Down** Key to select the desired symbol.
3. Press the corresponding number key to enter the symbol.

### Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

#### Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

#### Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of hearing aids. For any such problems, consult your service provider.

## Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

## Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

## Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.

- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between -10°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

### **Prevention of Hearing Damage**

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

### **Safety of Children**

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

### **Accessories**

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

### **Battery and Charger**

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.

- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

### **Cleaning and Maintenance**

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

### **Emergency Call**

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

### Certification Information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the mobile device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 1.2 W/kg, and when properly worn on the body is 0.537 W/kg.

### Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

### Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the

device, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification). You are recommended to visit the Web site regularly for up-to-date information.

### **EU Regulatory Conformance**

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification).



Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all countries of European Union.

Version: V100R001\_01 Part Number: 31010ASC



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>