



MODEL 30150 AIR CLEANER INSTRUCTION SHEET

YOUR HUNTER AIR CLEANER HAS BEEN DESIGNED TO REMOVE BOTH VISIBLE AND INVISIBLE PARTICLES OF AIR POLLUTION FROM THE AIR WE BREATHE.

The polluted air enters through the large front grille. The large particles, such as dust and lint, are trapped and held by a washable pre-filter. The polluted air then passes through two mechanical filters to remove the smaller airborne particles. The air then passes through a charcoal filter to remove odors. The cleaned air then re-enters the room out of the top grille on the air cleaner.

PREPARATION FOR OPERATION:

Remove the unit from the carton and inspect it for possible damage. Remove the large descriptive label that is statically held on to the front grille.

OPERATION OF YOUR AIR CLEANER:

CAUTION: Please observe the following safety precautions for the use of your air cleaner. Be certain the unit is unplugged from the wall outlet any time you are cleaning the unit or replacing the filters. The unit is equipped with a safety interlock to disconnect all power to the unit during servicing, but the unit should be unplugged for maximum safety.

1. Place the air cleaner on the floor in a place convenient for use. The maximum efficiency can be obtained by placing it in the center of the largest wall in the room. The unit can be against the wall or out a few feet. This will provide the best re-circulation of air in and out of the unit. There should not be any objects directly in front of or over the unit, as this will adversely affect the air flow of the unit. The unit may also be stood up or laid down on a shelf, but this may affect the efficiency of the unit.

2. Plug the unit into any 120 volt standard electrical household outlet.

3. Turn the unit on by pressing the "on" button. The unit will respond by first coming on at low speed. You can then adjust the speed to "medium" or "high" speed by pressing the "on" button one or two more times. The unit should be operated on high speed initially, so the room can receive its' initial cleaning.

CONTROLS:

Your unit is equipped with electronic controls for on-off, speed adjustment, filter monitoring, and an automatic timer to turn the unit off after a specified time. The speed adjustment has been described above.

The filter monitor is a guide to check the unit for filter replacement and cleaning. Should the light come on, check the unit for dirty filters. Clean and replace the filters as necessary. To reset the filter monitor, use a pencil or paper clip to push on the reset button through the hole in the nameplate. The filter light will go out.

The automatic shutoff will turn the unit off after 1, 2, 4, or 8 hours, depending on the selection made. To activate the timer, press the timer button one, two, three or four times to select the time desired. The unit will automatically shut off after the selected time has passed.

CLEANING GRILLE AND PRE-FILTER:

NOTE: Be certain the unit is unplugged from the wall outlet before proceeding to clean the unit. The unit can be cleaned in a dishwasher or sink. To clean the unit, lay the unit on its' back. Grasp the front grille at the bottom as shown in fig. 1. Lift up to unsnap the grille at the bottom and unhook the grille at the top. The grille contains the pre-filter. It can be set in the top rack

of a dishwasher, with the grille facing downwards. Use the wash cycle only. Make sure the unit is completely dry before replacing the unit. Replace filters as described below and replace grille. To replace grille, hook the tabs on the top of the grille into the slots in the top of the unit. Push lightly on the bottom of the grille until it snaps into place.

To clean the grille assembly in a sink, remove the grille as described above. Spray it with a good household cleaning agent. Place the grille assembly in a large sink or tub and soak in dishwashing liquid for 20 to 30 minutes. Remove and rinse thoroughly. Shake all of the water off of the unit and let dry completely. Repeat process if necessary. Replace the filters as described below and replace grille assembly as described above.

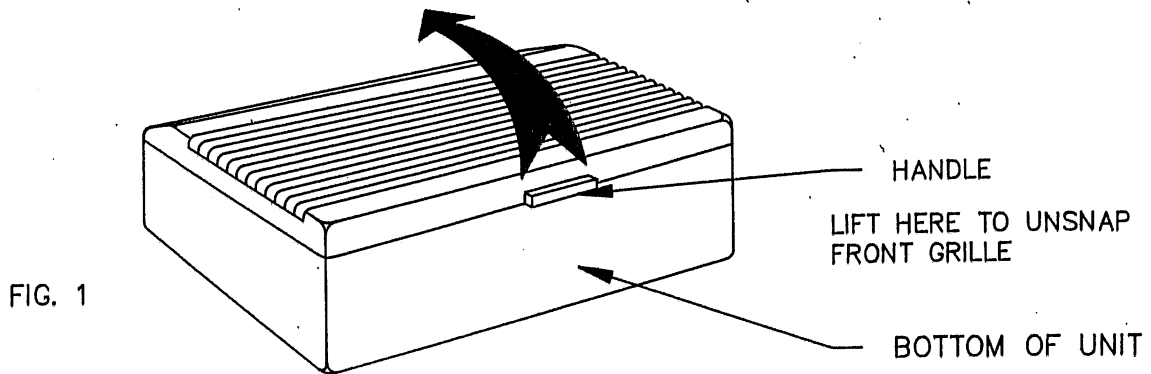


FIG. 1

REPLACEMENT OF FILTERS:

NOTE: Replacement filters are available from the store where you purchased the air cleaner. They also can be purchased directly from Hunter Fan Company. (See enclosed order form). They come in a single pack that includes both filters on the charcoal filter. The model number for the filters for this unit is:

HUNTER MODEL NUMBER 30910

With the grille removed and the unit on its' back, remove the first filter, the screen behind it, the next filter, and the charcoal filter behind it. Replace the filters in the reverse order that they were taken out. Leave the unit on its' back when replacing filters, screens, and grille. Be certain filters cover the complete area of the screens, and that no air can leak around them. Replace the front grille, stand unit upright and plug into the wall.

TROUBLE SHOOTING GUIDE:

CONDITION	CHECK	WHAT TO DO
Unit does not turn on	<ol style="list-style-type: none"> 1. Power cord 2. Selector switch 3. Front grille interlock 	<ol style="list-style-type: none"> 1. Be certain unit is plugged into wall outlet. 2. Press the "on" switch 3. Be certain grille is fully in place at bottom.
Unit does not clean the air properly	<ol style="list-style-type: none"> 1. Filters 	<ol style="list-style-type: none"> 1. Be certain filters are properly in place. 2. Replace as necessary as outline in the instructions.

if you have checked the above problems and still have trouble, call (901) 745-9222



HUNTER FAN COMPANY
2500 FRISCO AVENUE
MEMPHIS, TN 38114

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>