



**OWNER'S GUIDE**  
**FOR MODEL 90245**

**JETSTREAM™**

**HUNTERS HIGH VELOCITY FAN**

**ENGLISH**  
See page 1

**ESPAÑOL**  
Vea la página 9

**FRANÇAIS**  
Consulter la page 17

# IMPORTANT SAFETY INFORMATION

## Read & Save These Instructions

### CAUTION

When using electrical appliances, basic precautions should always be taken to reduce the risk of fire, electric shock and personal injury:

1. Read all instructions before using this fan.
2. Improper assembly may result in the risk of fire, electric shock or personal injury.
3. The power plug must be removed from the power socket when not in use, before cleaning, servicing, maintenance and before moving to another location.
4. Place the fan on a flat, dry, stable surface to avoid tipping over.
5. Use fan only for intended use, as described in this instruction manual.
6. NEVER insert fingers, pencils or any other objects through the grille.
7. DO NOT operate this fan:
  - if the cord is damaged
  - if the fan malfunctions
  - if the fan has been dropped or damaged in any way
8. To disconnect, grip plug and pull from wall outlet. NEVER yank on cord.
9. This product is intended for garage, workshop, and indoor residential use only.
10. DO NOT operate fan in the presence of explosive and/or flammable fumes.
11. DO NOT place fan or any parts near an open flame, cooking or any other heating appliances.
12. DO NOT use near curtains, plants, window treatments, etc.
13. Never operate the fan if the grilles are not properly installed. Operating the fan without the grilles could result in serious injury.
14. The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
15. This appliance has a grounded three-prong plug and is suitable for grounded receptacle use only. An adapter is available (sold separately at home improvement or your local hardware store) for connecting three-blade grounding-type plugs to two-slot receptacles. The adapter must be properly grounded. DO NOT attempt to defeat the purpose of this safety feature.

## WELCOME

Thank you for choosing a Hunter Fan. This manual gives you complete instructions for using your fan.

Before using your fan, record the following information for your records and for warranty assistance.

Model Name \_\_\_\_\_

Date Code \_\_\_\_\_

Date Purchased \_\_\_\_\_

Where Purchased \_\_\_\_\_

\_\_\_\_\_

**Please attach your receipt or a copy of your receipt to this manual for future reference.**

## UNPACKING

As you unpack the fan, save the carton and packing materials in case you want to move or ship the unit in the future.

Carefully remove all items from the box.

NOTE: It is best to have someone hold the box while you lift the fan and the protective packaging out of the carton.

Make sure all shipping materials are removed from fan before operating.


# GROUNDING INSTRUCTIONS

This appliance is for household use only and may be plugged into any 120-volt AC electrical outlet (ordinary household current). DO NOT use any other type of outlet.


## WARNING

**This unit is suitable for grounded receptacle use only.**

The power cord has a grounded plug as shown in Figure 1A. The fan must be plugged into an electrical outlet that can accommodate the grounding pin. If your electrical outlet can not accommodate the grounding pin, then you must purchase and install one of the two types of adapters shown in Figure 1B.

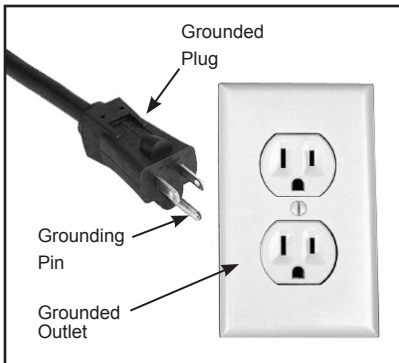 

**FIGURE 1A**

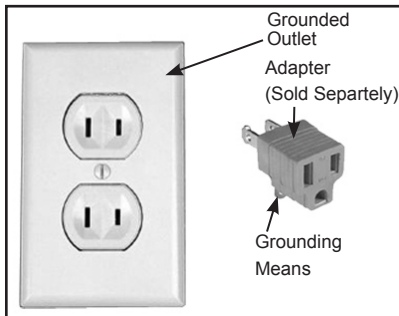 


**FIGURE 1B**

## LINE CORD SAFETY TIPS


1. NEVER pull or yank on the cord or the appliance.
2. To insert plug, grasp it firmly and guide it into the outlet.
3. To disconnect the appliance, grasp the plug and remove it from the outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, the appliance should be serviced and the line cord replaced. Please return it to our Service Department or to an authorized service representative.
5. NEVER wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and could cause it to fray and break.
6. DO NOT operate appliance if the line cord shows any damage, if the appliance works intermittently or stops working entirely.

# ASSEMBLY

 
1. Remove the 2 Pre-Installed Bolts [a] of the right end of the unit, with the included Allen Wrench [b]. The allen wrench is located inside the electrical box cover (see figure 3 below).

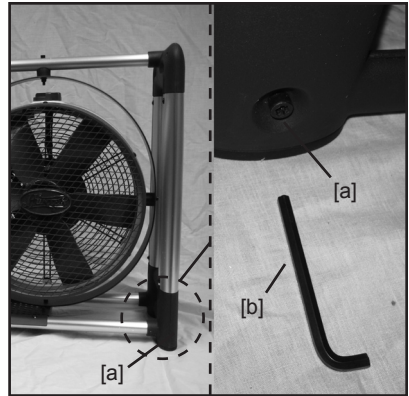

2. Attach the Wheel Bracket Assembly [a] using the Longer Bolts [b] provided in the sack parts and tighten using the allen wrench provided.

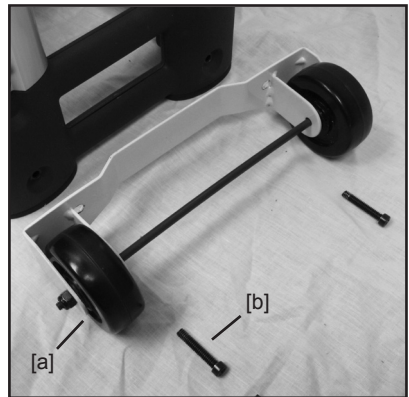 

 3. Store the Allen Wrench [a] in the cover of the electrical box. This wrench can be used to adjust the tilt / swivel resistance (see page 6).

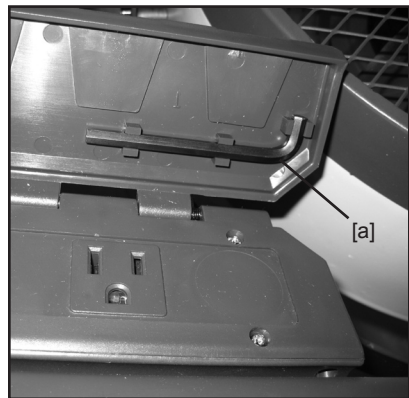


# OPERATION

## ELECTRICAL BOX


- Grounded
- Circuit breaker protected with 7A overcurrent protection [a].

 NOTE: If the breaker trips, unplug all cords and hit the reset button on the side of the box.

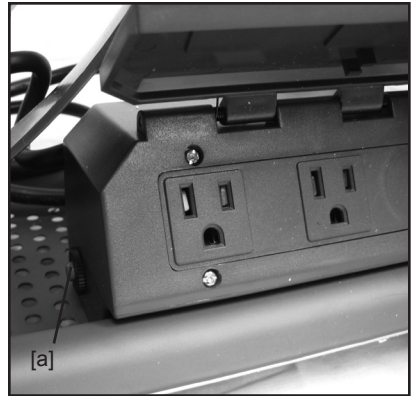

## ADJUSTING TILT /SWIVEL RESISTANCE

 1. The cover of the electrical box holds the allen wrench needed for this operation (see page 5, step 3).
2. To adjust tilt resistance locate fasteners on both sides of the fans [b].
  - To increase tilt resistance - turn clockwise.
  - To decrease tilt resistance - turn counter-clockwise.
3. To adjust swivel resistance locate fasteners along the handle above each fan [a].
  - To increase swivel resistance - turn clockwise.
  - To decrease swivel resistance - turn counter-clockwise.

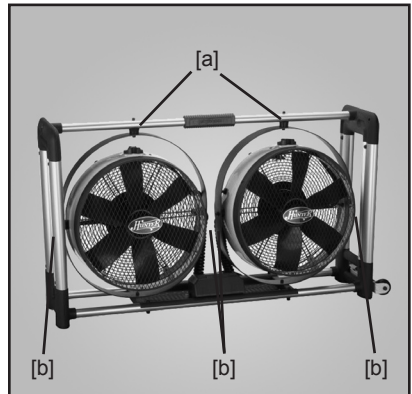

## FAN SPEED

1. Each fan can be independently operated.
2. Use speed control rotary knob to control the fans 3 speeds: High, Medium, and Low.



# STORAGE

1. ALWAYS store the fan in a dry place.
2. NEVER store the fan while it is still plugged in.
3. NEVER wrap the cord tightly around the fan.
4. DO NOT put any stress on the cord where it enters the fan, as it could cause the cord to break.

## MAINTENANCE

This fan is permanently lubricated and will not require additional lubrication (oil) for the life of the fan.

This fan requires little maintenance and contains no user serviceable parts. DO NOT try to fix it yourself. Contact qualified service personnel if servicing is needed.

### TO CLEAN:

1. Before cleaning, turn the fan off and remove the plug from electrical outlet. Wipe off excess dust with a lint-free cloth.
2. DO NOT immerse the fan in water or any other liquid.

## TROUBLESHOOTING

PROBLEM	SOLUTION
• Can not adjust the angle of the fan.	• Loosen the swivel and tilt bolts with provided allen wrench
• Fan will not tilt	• Loosen tilt.
• Fan will not stay upright.	• Tighten tilt.
• Fan will not swivel.	• Loosen swivel.
• Fan will not hold horizontal position.	• Tighten swivel.
• Electrical box has no power.	• Reset circuit breaker.

If you have tried these troubleshooting solutions and still have trouble, visit our Website at <http://www.hunterfan.com>

or call 888-830-1326 for Technical Assistance from 7 AM to 7 PM Central Time Monday thru Friday and 8 AM to 5 PM Central Time on Saturday.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>