

Dual Circulation Fan

Owner's Guide



English

Model
90436
90441
90442

Form# 44096-01
20130220

©2013 Hunter Fan Co.


Download from www.Somanuals.com. All Manuals Search And Download

SINCE 1886
Hunter[®]

CONTENTS

Parts Identification	3
Specifications	3
Safety Precautions	4
Fused Plug	5
Operating Instructions	6
Care and Maintenance	7
Technical Support	7
Warranty	8
Products	9

 PARTS IDENTIFICATION

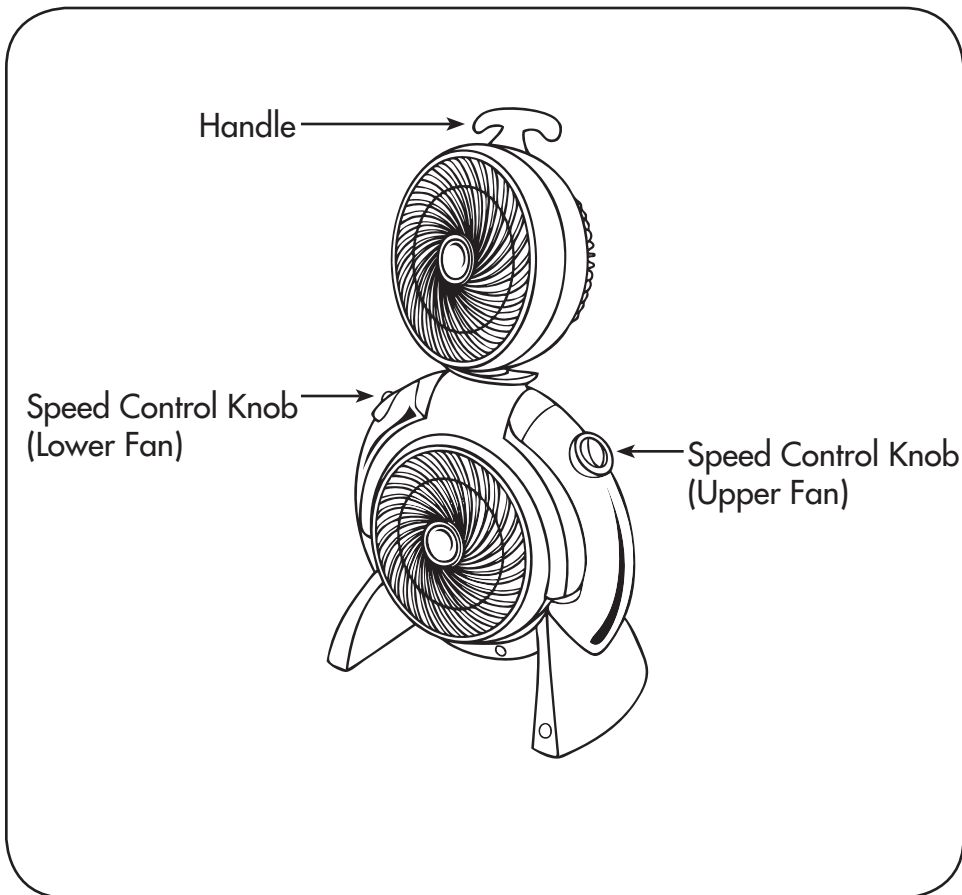

SPECIFICATIONS

INPUT VOLTAGE	120v / 60Hz
POWER RATING	60W
FAN BLADE SIZE	7.6in. (upper/lower)

SAFETY PRECAUTIONS

READ AND SAVE THESE INSTRUCTIONS! Read this entire manual before operating this product. When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

1. **Use this fan only as described in this manual.** Improper usage may cause fire, electric shock or personal injury.
2. To protect against electric shock, do not immerse unit, plug or cord in water. Do not spray with liquid or use near water sources.
3. This product is intended for residential use **ONLY**. **DO NOT** use outdoors.
4. This appliance has a polarized plug (one blade is wider than the other). See figure 1. To reduce the risk of shock, this plug is intended to fit in a polarized outlet one way only. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do Not** attempt to bypass this safety feature.
5. Close supervision is necessary when any appliance is used by or near children.
6. Turn the fan OFF and unplug from the outlet when not in use, before moving and before cleaning.
7. To unplug the fan, first turn the unit OFF, grip the plug and pull from outlet. Never pull or tug by the cord to remove from the outlet.
8. **Do Not** operate the fan with a damaged cord, plug or any physical damage.
9. **Always** use the fan on a dry leveled surface.
10. **Do Not** operate in the presence of explosive and/or flammable fumes.
11. **Do Not** place or operate near open flame or sources of heat (stove, fireplace, etc.).
12. The use of unauthorized attachments is not recommended. This may cause fire, electrical shock, or injury.
13. This unit is designed for use on a 120V/60Hz outlet only.
14. **Do Not** insert fingers or any objects through the grill during use. Avoid contact with moving parts.
15. A loose fit between the AC outlet and plug may cause overheating and distortion of plug. Contact a qualified electrician to replace worn outlet.
16. The plastic feet on this product may interact with wood and cause damage to furniture. **Do Not** place on fine wood furniture.

FUSED PLUG

This plug is a safety feature. It contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged. To reduce the risk of fire, electric shock and personal injury, **DO NOT** remove, replace, repair or tamper with the originally supplied plug. If the Fan does not function properly, it may be due to the safety device incorporated in this plug.

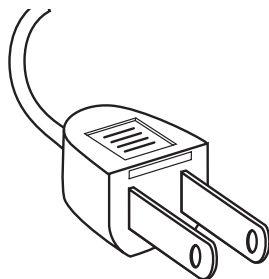 


Figure 1.

If the fuse fails, it is generally due to a short circuit or circuit overload. Replace the fuse as per the instructions below. If the replacement fuse fails, immediately unplug the unit and contact our technical support department for assistance.

Fuse Replacement:

1. To replace the fuse, first turn the unit off and unplug it from the wall. Locate the door on top of the plug. Figure 1.
2. Slide the door on top of the plug towards the blades. Figure 2.
3. Carefully remove the fuse from the clips holding it on the top and bottom. Figure 3.

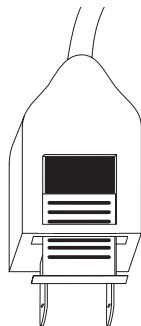 


Figure 2.

Warning! Electrical Hazard! Only replace with a fuse type and rating matching what was removed from the product. If the product fails a second time, immediately unplug it and contact our technical support at 1-888-830-1326.

4. Gently push the fuse back into the pins that will hold it in place.

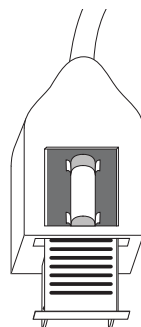 


Figure 3.

Note: If the fuse is not seated properly, the unit will not function.

5. Slide the Door back over the fuse box in the plug.
6. Plug the fan back in and resume use.

OPERATING INSTRUCTIONS


FAN OPERATION (Figure 4.)

Speed Control Knob

SYMBOL	FUNCTION
0	Off
1	Low
2	Medium
3	High

- Turning the speed control knob to "0" will set the fan to the "OFF" position.
- Set the Fan Base on a dry, level surface.
- Plug cord into any standard 120 volt AC outlet. Make sure the Speed Control Switch is in the '0' (Off) position.
- Adjust the speed by turning the Speed Control Switch to 1, 2 or 3

 Speed Control Knob (Upper Fan)

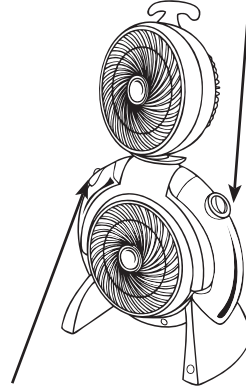

Speed Control Knob (Lower Fan)

Figure 4.

FAN ORIENTATION

Wind orientation can be adjusted manually as follows (please refer to Figure 5):

- A: adjust to 180° angle.
- B: adjust to 90° angle.
- C: adjust to 90° angle.

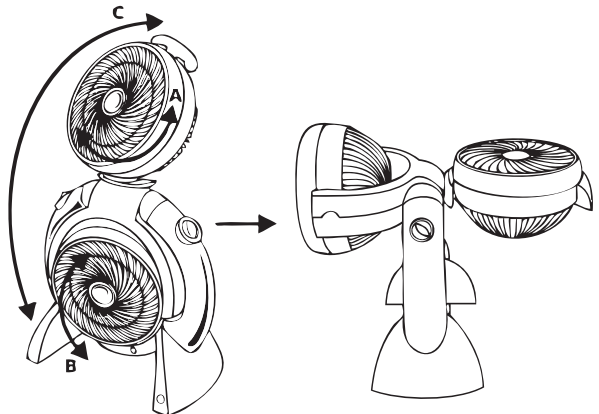 


Figure 5.

CARE AND MAINTENANCE

- Always unplug the appliance before cleaning.
- Do not immerse the fan in water or other liquids and never allow water to drip onto the motor housing.
- Use only a soft, damp cloth to gently wipe the outer surfaces of the fan.
- To clean between grills, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove dust.
- Do not use gasoline, paint thinner or any other corrosive cleaning solutions.
- If the fan will not be in use for an extended period of time, you may leave the fan assembled. Cover to protect from dust. Store in a cool, dry place.

TECHNICAL SUPPORT

If you have any additional questions or problems with your Hunter Portable Fan, please call:

USA: 1-888-830-1326
Canada: 1-866-268-1936

Hours of operation are from 7:00 am to 7:00 pm Monday - Friday and 8:00 am to 5:00 pm on Saturday, Central Time. You may also contact us over the Internet at www.hunterfan.com.

WARRANTY

The Hunter Fan Company makes the following limited warranty to the user or consumer purchaser of this Hunter Portable fan:

If your Hunter Portable Fan motor fails at any time within one year after the date of sale to you due to a defect in material or workmanship, labor to repair the defect will be provided free of charge at our nearest service center or our Service Department in Memphis, Tennessee. You will be responsible for labor costs after this one-year period. The foregoing limited warranty applies only to the motor itself, and does not apply to electronic controls such as remote controls, remote control receivers or transmitters used in conjunction with the motor. These electronic control items are included in the one year limited warranty below.

If any part of your Hunter Portable Fan other than the motor fails at any time within one year after the date of sale to you due to a defect in material or workmanship, we will repair or, at our option, replace the defective part free of charge for parts and labor performed at our nearest service center or at our Service Department in Memphis, Tennessee.

IF THE USER OR CONSUMER PURCHASER CEASES TO OWN THE FAN, THIS WARRANTY AND ANY IMPLIED WARRANTY WHICH THEN REMAINS IN EFFECT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE VOIDED. NO WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS MADE IN RESPECT TO THE GLASS GLOBES OR LIGHT BULBS OR THE FINISH ON ANY METAL PORTION OF THE FAN. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IN RESPECT TO ANY HUNTER FAN MOTOR OR OTHER FAN PART, IS EXPRESSLY LIMITED TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE FOR SUCH MOTORS AND OTHER PARTS.

This warranty is voided if your Hunter Fan is not purchased and used in the USA.

This warranty excludes and does not cover defects, malfunctions or failures of any Hunter Portable fan which were caused by repairs by persons not authorized by us, use of parts or accessories not authorized by us, mishandling, improper installation, modifications, or damage to the Hunter Portable fan while in your possession, or unreasonable use, including failure to provide reasonable and necessary maintenance.

To obtain servicing, contact the nearest Hunter authorized service center or the Hunter Fan Company Service Department, 7130 Goodlett Farms Pkwy. Suite

 
400, Memphis, Tennessee 38016. Please contact us before shipping your fan to us. If we authorize you to ship it to us, you will be responsible for all insurance and freight or other transportation charges to our factory service center. We will return your Hunter Fan freight prepaid. Your portable fan should be properly packed to avoid damage in transit since we will not be responsible for any such damage. Proof of purchase is required when requesting warranty service. The purchaser must present sales receipt or other document that establishes proof of purchase.

IN NO EVENT SHALL HUNTER FAN COMPANY BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

PRODUCTS

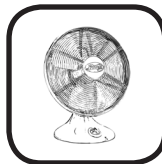

To learn more about Hunter Fan Company products, please see our Web page at:
www.hunterfan.com

Hunter
Fan Company

7130 Goodlett Farms Pkwy., Suite 400
Memphis, Tennessee 38016

Printed in China and Taiwan
Downloaded from www.Somanuals.com. All Manuals Search And Download.

Hunter
SINCE 1886

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>