 




The CENTURY

High Performance Oscillating Fan

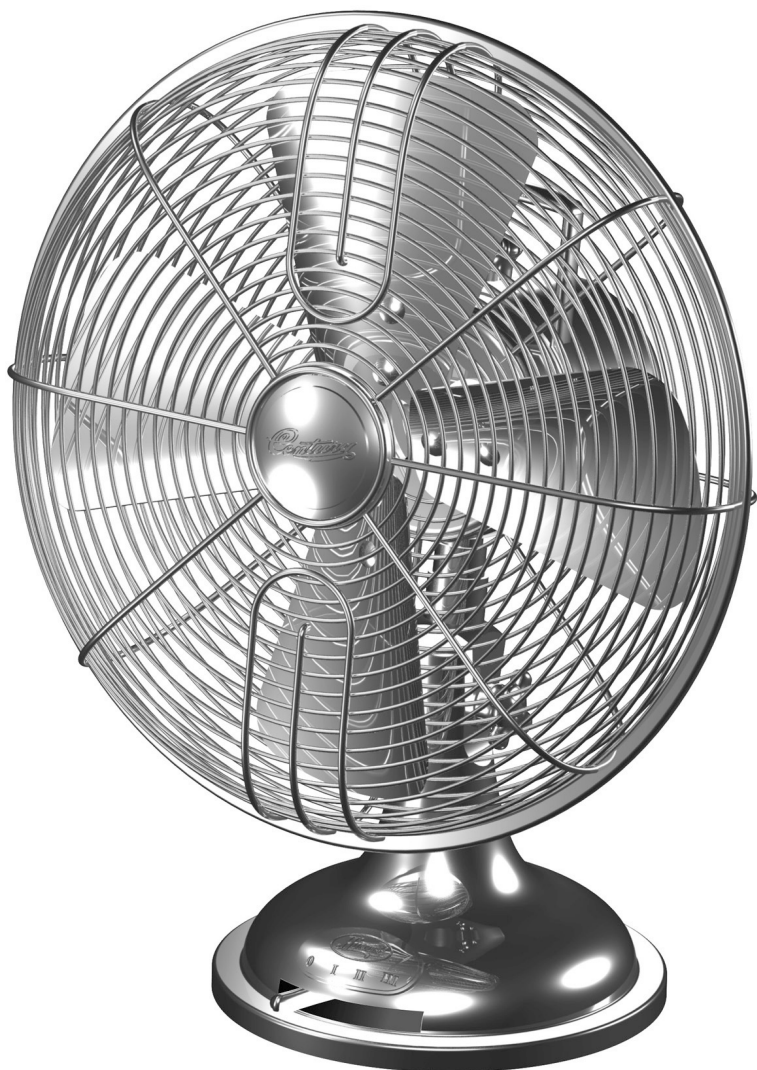

OWNER'S GUIDE
FOR MODELS 94024, 94025

IMPORTANT SAFETY INFORMATION

Read & Save These Instructions



WARNING

To reduce the risk of fire or electrical shock, **DO NOT** use this fan with any solid-state speed control device.



CAUTION

When using electrical appliances, basic precautions should always be taken to reduce the risk of fire, electric shock and personal injury:

1. Read all instructions before using this fan.
2. Improper installation may result in the risk of fire, electric shock or personal injury.
3. To prevent the risk of fire and electric shock, **DO NOT** use the unit near windows. Rain and moisture may create an electrical hazard.
4. The power plug must be removed from the power socket when not in use, before cleaning, servicing, maintenance and before moving to another location.
5. **DO NOT** put fan in a damp place or where humidity is high – such as a bathroom.
6. The fan should be placed on a flat, stable surface or tabletop to avoid overturning.
7. Use fan only for intended use, as described in this instruction manual.
8. To protect against electrical shock, **DO NOT** immerse unit, plug or cord in water or spray with liquids.
9. Close supervision is necessary when any appliance is used by or near children.
10. **NEVER** insert fingers, pencils or any other objects through the grill when the fan is running.
11. **DO NOT** operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner.
12. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
13. To disconnect, grip plug and pull from wall outlet. **NEVER** yank on cord.
14. **ALWAYS** use on a dry surface.
15. This product is intended for household use only and not for commercial or industrial use.
16. **DO NOT** operate fan in the presence of explosive and/or flammable fumes.
17. **DO NOT** place fan or any parts near an open flame, cooking or any other heating appliances.
18. **DO NOT** use near curtains, plants, window treatments, etc.

WELCOME

Thank you for choosing the Hunter Century Table Fan. This manual gives you complete instructions for using your fan. Here are some the features you will enjoy with your fan:

- An attractive design that enhances any decor
- A powerful Hunter motor for maximum air flow
- Three speeds to adjust your comfort level

Before installing your fan, record the following information for your records and for warranty assistance.

Model Name _____

Date Code _____

Date Purchased _____

Where Purchased _____

Please attach your receipt or a copy of your receipt to this manual for future reference.

UNPACKING

As you unpack the fan, save the carton and packing materials in case you want to move or ship the unit in the future.

Carefully remove all items from the box.

NOTE: It is best to have someone hold the box while you lift the fan and the protective packaging out of the carton.

Make sure all shipping materials are removed from fan before operating.

GROUNDING INSTRUCTIONS

This appliance is for household use only and may be plugged into any 230-volt AC electrical outlet (ordinary household current). **DO NOT** use any other type of outlet.



Continental European
Plug & Socket

FIGURE 1

LINE CORD SAFETY TIPS

1. **NEVER** pull or yank on the cord or the appliance.
2. To insert plug, grasp it firmly and guide it into the outlet.
3. To disconnect the appliance, grasp the plug and remove it from the outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, the appliance should be serviced and the line cord replaced. Please return it to our Service Department or to an authorized service representative.
5. **NEVER** wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and could cause it to fray and break.
6. **DO NOT** operate appliance if the line cord shows any damage, if the appliance works intermittently or stops working entirely.

OPERATION

1. Place the fan on a dry, safe, flat surface where it cannot fall or be pulled by the cord.
2. Plug the fan into a 230-volt AC electrical outlet (ordinary household current). DO NOT use any other type of outlet. Make sure that the rated voltage of the fan is the same as the power source before plugging it into the power source.
3. Turn the fan "ON" or "OFF" by sliding the Power/Speed Control to the right or left. The power should always be OFF before unplugging the fan.
4. To select the speed, move the Power/Speed Control from OFF to the desired speed setting: O (off), I (low), II (medium), III (High).
5. To control the upward and downward direction of airflow, loosen the screw on the side of the fan housing neck. Adjust to the desired angle and tighten the screw.
6. To make the fan oscillate, push

the oscillation knob down. To stop oscillating, pull the oscillation knob up. The oscillation knob is located on the top of the fan housing, near the handle. This appliance is for household use only.

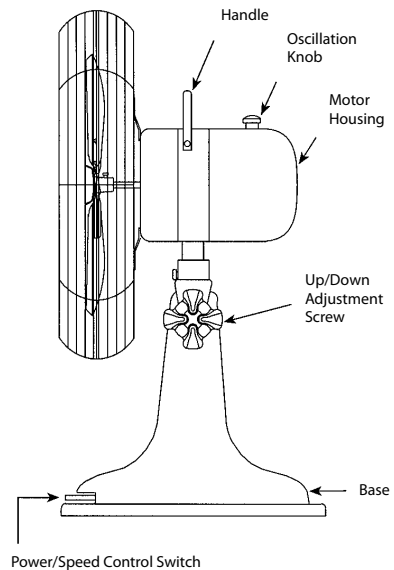 


FIGURE 3

MAINTENANCE

This fan is permanently lubricated and will not require additional lubrication (oil) for the life of the fan. This fan requires little maintenance and contains no user serviceable parts. DO NOT try to fix it yourself. Contact qualified service personnel if servicing is needed.

TO CLEAN:

1. Before cleaning, turn fan off and unplug from electrical outlet. Wipe off excess dust with a lintfree cloth.
2. To ensure adequate air circulation to the motor, keep vents located at the rear of the motor housing free from dust accumulation. A vacuum cleaner hose can be used to clean these vents.
3. DO NOT immerse the fan in water or any other liquid.

CLEANING GRILL AND BLADE:

1. Turn the fan off and unplug from the electrical outlet.
2. Disassemble grills by carefully removing the screw on the bottom of the grill and by squeezing the ring to remove the hook from the hole. See Figure 4.
3. Disassemble blades by carefully removing the blade screw behind the blades. The blades should slide off.
4. Grills and blades may be cleaned with mild soap and water.
5. Use a soft, slightly damp cloth to wipe the remaining fan parts.
6. DO NOT allow water or any other liquid to get into the motor housing or base.

7. Reassemble the fan after blades and grills have dried completely. First, replace the blades. When replacing the blade screw, you should feel some resistance as the screw engages the bar. Next, align the grills, replace the ring, place the hook in the hole and replace the screw.
8. DO NOT plug fan into an electrical outlet until it has been fully reassembled.

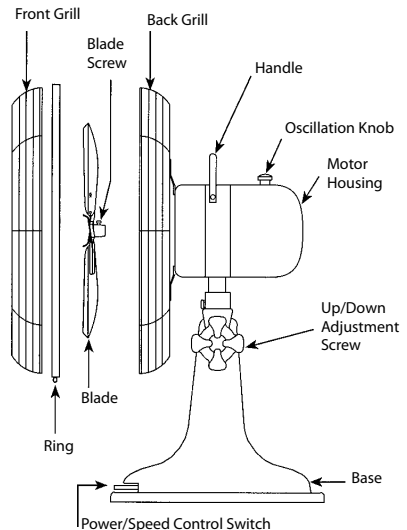 


FIGURE 4

1. Disassemble and clean fan before storing.
2. Keep the original packaging for the purpose of storing the fan.
3. ALWAYS store the fan in a dry place.
4. NEVER store the fan while it is still plugged in.
5. NEVER wrap the cord tightly around the fan.
6. DO NOT put any stress on the cord where it enters the fan, as it could cause the cord to break.

PROBLEM

- Fan will not oscillate.

SOLUTION

- Push down on knob on top of motor housing to activate oscillation.
-

PROBLEM

- Can not adjust the angle of the fan.

SOLUTION

- Loosen the screw on the side of the fan neck. Adjust to the desired angle and tighten the screw.
-

If you have tried these troubleshooting solutions and still have trouble, call 01-901-743-1360 (USA) or visit our Web site at <http://www.hunterfan.com>.

WARRANTY

HUNTER FAN COMPANY PRODUCT

HUNTER CENTURY PORTABLE FAN

5 YEAR LIMITED GUARANTEE

Express Manufacturer's Guarantee (the "Guarantee")

This Hunter Century Portable Fan ("Century Fan") is guaranteed by The Hunter Fan Company of 2500 Frisco Avenue, Memphis, Tennessee 38114 United States of America (tel 01 901 743 1360) ("Hunter") for the benefit of the original user or consumer purchaser ("You") for a period of five years after the original date of purchase, against defects in material or workmanship ("Defect"). If such a Defect occurs, Hunter will repair or replace the Defective part free of charge, or refund the purchase price at Your discretion. Labour to repair the Defective Part will, likewise, be provided free of charge.

This Guarantee relates solely to Defects to the Century Fan.

What does the Guarantee not cover?

This Guarantee does not extend to the finish on any metal portion of the Century Fan.

The Guarantee does not cover any damage caused to any property by a defective Century Fan, except, in the case of non-business purchases, for loss or damage caused by a defective Century Fan resulting from the negligence of Hunter.

This Guarantee will not apply if:

- (a) the Century Fan is not purchased in European Union; or
- (b) any fault, defect, loss, damage, injury or claim results from the improper or incorrect use of the Century Fan, improper repairs of the Century Fan by non authorised persons, the direct or indirect acts of a third party, or any other reason whatsoever with the exception of a Defect in your Century Fan.

The Guarantee will no longer be effective if You cease to own the Century Fan.

How do You claim under this Guarantee?

If You wish to claim under this Guarantee please return the Century Fan to the retailer from where you initially purchased the Century Fan. Your Century Fan should be properly packed to avoid damage in transit and we will not be responsible for any such damage that occurs if you fail to do this. You must provide your sales receipt or other document establishing proof of purchase when claiming under the Guarantee.

Statutory Rights

In the case of non-business use purchases, this Guarantee is in addition to, and in no way affects, Your statutory rights relating to faulty or misdescribed goods or services.

Business Use

If you have bought this Century Fan acting in the course of your business, trade or profession, then this Guarantee is in place of and to the extent permitted by law replaces and excludes all other warranties and conditions whether express or implied by common law, statutory or otherwise.

FOR ADDITIONAL INFORMATION REGARDING THE HUNTER FAN COMPANY, PLEASE REFER TO THEIR WEBSITE AT: <http://www.hunterfan.com/index.html>.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>