



# Operation Guide PQ-32/32B/DQ-545/545B

**ILLUSTRATION**

**PQ-32/32B**

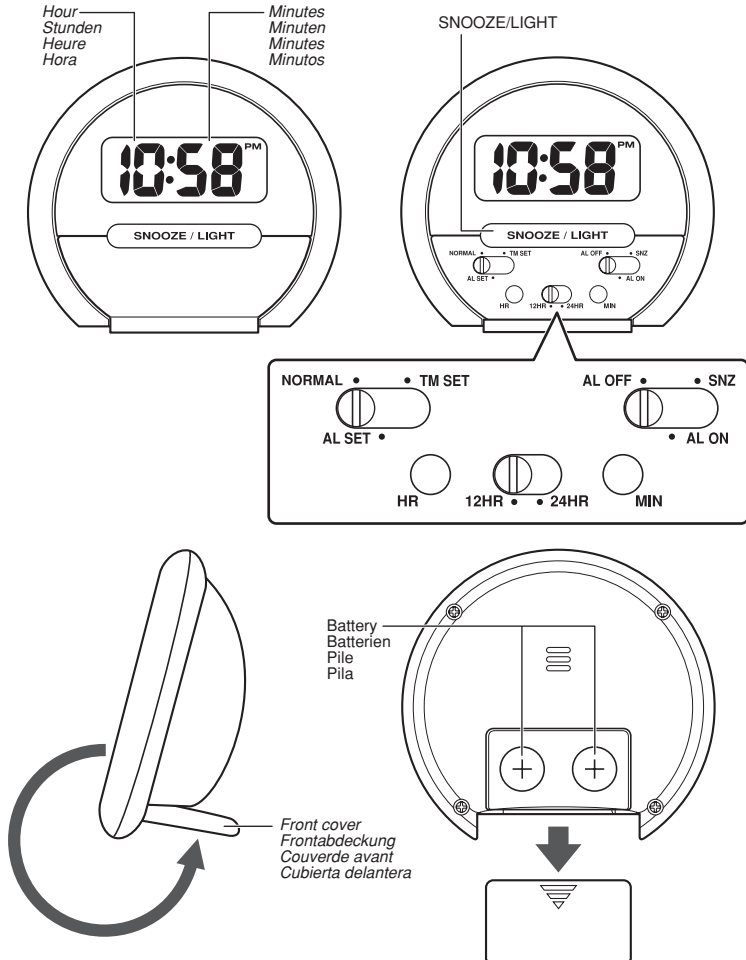

**DQ-545/545B**

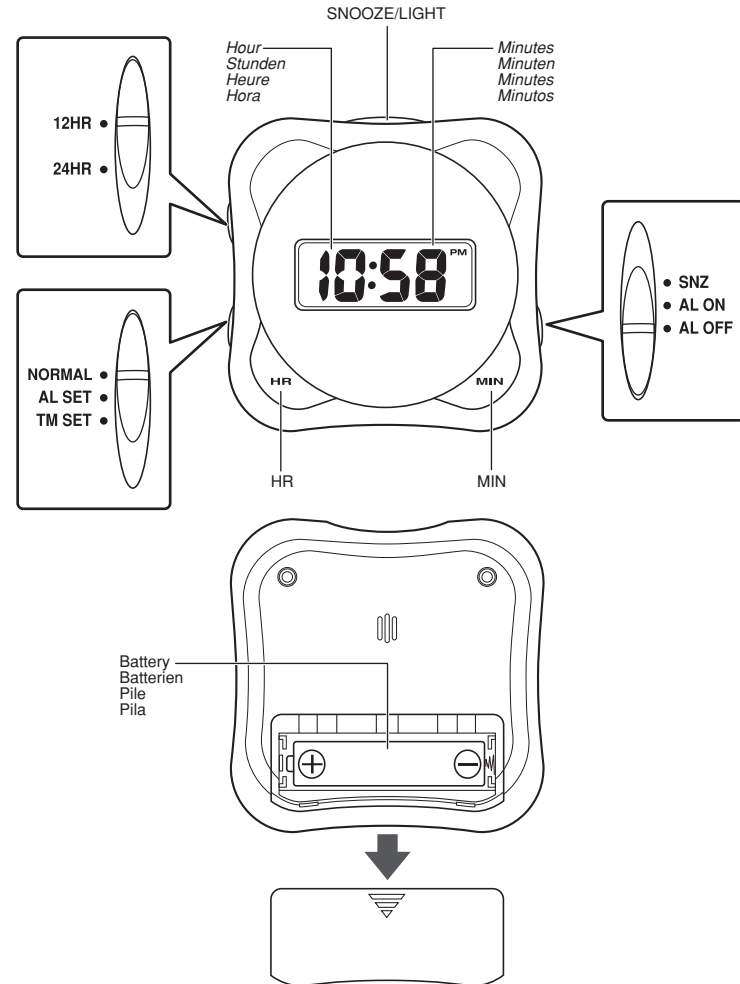

- A sticker is affixed to the glass of this clock when you purchase it. Be sure to remove the sticker before using the clock.
- Depending on the clock model, its configuration may differ somewhat from that shown in the illustration.

## **SETTING THE TIME**

1. Slide the selector to **TM SET**.
2. Press **HR** to increase the hour digits and **MIN** to increase the minutes digits. Holding down either button changes its setting at high speed.
- Though the seconds are not displayed, they reset to 00 when you press **MIN**.
3. After you set the time, change the selector to **NORMAL**.

## **USING THE ALARM**

The alarm of this clock features a Snooze Function, which lets you catch a few more minutes sleep in the morning.

### ***To set the alarm time***

1. Slide the selector to **AL SET**.
2. Press **HR** to increase the hour digits and **MIN** to increase the minutes digits. Holding down either button changes its setting at high speed.
3. After you set the alarm time, change the selector to **NORMAL**.

### ***To turn the alarm on and off***

Slide the selector to **SNZ** or **AL ON** position to switch the alarm on, or to **AL OFF** position to switch it off.

### ***To use the alarm***

1. Set the alarm time and switch the alarm on.
2. When the alarm time you set is reached, the alarm starts to sound. When alarm is sounding, press the **SNOOZE/LIGHT** button to stop it. When the snooze feature is turned on, the alarm will sound again in about 8 minutes.
- You can stop the repeating alarm at any time by sliding the selector to **AL OFF** position.

### ***To view the current alarm time setting***

1. Slide the selector to **NORMAL**.
2. Press **HR** or **MIN** to display the currently alarm time setting.

### ***To test the alarm***

1. Slide the selector to **SNZ** or **AL ON**.
2. Press **HR** and **MIN** at the same time to sound the alarm.

## **ILLUMINATING THE DISPLAY**

Hold down the **SNOOZE/LIGHT** button to illuminate the display. The light will go out automatically after about two seconds, even if you keep the button depressed.

## **BATTERY REPLACEMENT**

Replace batteries whenever the display of the clock becomes dim and difficult to read.

1. Pressing down lightly on the battery compartment cover, slide it in the direction indicated by the arrow and remove it.
2. Remove both old batteries.
3. Load new batteries. Make sure that their positive (+) and negative (-) ends face in the correct directions. If you load batteries incorrectly they can burst and damage the clock.
4. Replace the battery compartment cover.

### **Battery precautions**

- Keep batteries out of the reach of small children. If a battery is accidentally swallowed, contact your physician immediately.
- Be sure to load the batteries with their positive (+) and negative (-) ends facing correctly.
- Replace the batteries at least once a year, even if the current batteries are working properly.
- Never charge the batteries that come with the clock.
- Should the batteries ever leak while in the clock, wipe out the fluid with a cloth, taking care not to let any get onto your skin.
- The batteries that come with the clock lose some of their power during transport and storage.
- Never mix old and new batteries, or batteries of different brands.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>