

# OPERATOR'S MANUAL

# WLM2203A-X

INCLUDING: SPECIFICATIONS, SERVICE KITS, GENERAL INFORMATION, PARTS, TROUBLESHOOTING  
 INCLUDE MANUAL: S-633 GENERAL INFORMATION (PN 97999-625)

RELEASED: 5-3-99  
 REVISED: 8-1-11  
 (REV. G)

**2" AIR MOTOR**  
**3:1 RATIO**  
**0 - 375 P.S.I. RANGE**

## WLM2203A-XX TWO-BALL PUMP SERIES



**READ THIS MANUAL CAREFULLY BEFORE INSTALLING,  
 OPERATING OR SERVICING THIS EQUIPMENT.**

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

### SERVICE KITS

- Use only genuine ARO® replacement parts to assure compatible pressure rating and longest service life.
- **637224 Pump Rebuild Kit.** Includes the necessary soft parts for normal service of the entire pump.

### SPECIFICATIONS

<b>Model Series</b> (Refer to option chart)	WLM2203A-XX
<b>Type</b>	Air Operated, Two Ball, Double Acting Oil Pump
<b>Ratio</b>	3:1
<b>Air Motor Diameter</b>	2" (5.08 cm)
<b>Stroke</b>	3" (7.62 cm)
<b>Air Inlet (female)</b>	
models WLM2203A-X1	1/4 - 18 N.P.T.F. - 1
models WLM2203A-X2	Rc 1/4 (1/4 - 19 BSP Taper)
<b>Material Inlet (female)</b>	
models WLM2203A-X1	3/4 - 14 N.P.T.
models WLM2203A-X2	Rp 3/4 (3/4 - 14 BSP Parallel)
<b>Material Outlet (female)</b>	
models WLM2203A-X1	1/2 - 14 N.P.T.
models WLM2203A-X2	Rp 1/2 (1/2 - 14 BSP Parallel)
<b>Pump Construction</b>	Carbon Steel
<b>Dimensional Data</b>	see "Pump Data"
<b>Weight</b>	see chart

### PERFORMANCE

<b>Air Inlet Pressure Range</b>	0 - 125 p.s.i. (0 - 8.6 bar)
<b>Fluid Pressure Range</b>	0 - 375 p.s.i. (0 - 25.9 bar)
<b>Maximum Rec'd Cycles / Minute</b>	125
<b>Displacement In<sup>3</sup> Per Cycle</b>	6.2
<b>Volume / Cycle</b>	3.46 oz. (102.28 ml)
<b>Cycles Per Gallon (Liter)</b>	37 (9.8)
<b>Maximum Working Flow Rate</b>	6 g.p.m. (23 l.p.m.)
<b>Maximum Flow Rate</b>	9 g.p.m. (34 l.p.m.)
<b>Noise Level @ 100 p.s.i. - 124 c.p.m.</b>	80 db(A)*
<b>Accessories Available</b>	61113 Wall Mount Bracket 66073-1 Air Line Connection Kit

\* The pump sound pressure level has been updated to an Equivalent Continuous Sound Level (L<sub>Aeq</sub>) to meet the intent of ANSI S1. 13-1971, CAGI-PNEUROPS S5.1 using four microphone locations.

### PUMP DATA

**MODEL WLM2203A-XX**

Labels in diagram:  
 Air Inlet (female) See "Specifications"  
 Material Outlet (female) See "Specifications" NOTE: Pump is assembled with material outlet located 180° from the air inlet.  
 2" N.P.T. Bung Adapter  
 Material Inlet (female) See "Specifications" Models WLM2203A-1X  
 "A"  
 "B"  
 Material Inlet (female) See "Specifications" Models WLM2203A-3X, -4X, -5X

Dimensions:  
 18-1/32" (458.0 mm)  
 1-5/16" (33.4 mm)  
 6-29/32" (175 mm)

NOTE: Dimensions are shown in inches and (mm), supplied for reference only and are typically rounded up to the nearest 1/16 inch.

MODEL	"A" (mm)	"B" (mm)	WEIGHT (kg)
WLM2203A-1X	N / A	N / A	11 (4.99)
WLM2203A-3X	40-1/16" (1017.3)	22-1/32" (559.3)	13.5 (6.12)
WLM2203A-4X	49-13/16" (1265.0)	31-25/32" (806.9)	14.4 (6.53)
WLM2203A-5X	57-7/16" (1458.6)	39-13/32" (1000.6)	15 (6.80)

Figure 1

### IMPORTANT

This is one of two documents which support the pump. Replace-ment copies of these forms are available upon request.

- WLM2203A-XX MODEL OPERATOR'S MANUAL
- S-633 GENERAL INFORMATION LUBRICATION PISTON PUMPS

**INGERSOLL RAND COMPANY**  
 209 NORTH MAIN STREET - BRYAN, OHIO 43506  
 (800) 495-0276 • FAX (800) 892-6276  
 www.ingersollrandproducts.com

PATENTED

©2011



## PARTS LIST / WLM2203A-XX

Item	Description (size in inches)	Qty	Part No.
1	Bolt	(4)	94333
2	Upper Cap	(1)	95035
✓ 3	Track Gasket	(2)	94311
4	Sleeve	(2)	94316
✓ 5	“O” Ring (1/16” x 11/16” o.d.)	(4)	Y325-15
✓ 6	“O” Ring (1/8” x 3/4” o.d.)	(4)	Y325-206
7	Spool	(2)	94310
✓ 8	“U” Cup (1/8” x 3/4” o.d.)	(2)	Y240-7
✓ 9	“O” Ring (.106” x .587” o.d.)	(2)	15066-PM
10	Muffler	(1)	95037
11	Cylinder	(1)	94249
12	Retaining Ring	(1)	94406
✓ 13	“U” Cup (3/16” x 2” o.d.)	(2)	Y240-23
14	Piston	(1)	94780
15	Lower Cap	(1)	95038
✓ 16	“O” Ring (1/8” x 1-3/8” o.d.)	(1)	Y325-216
17	Bushing	(1)	94332
✓ 18	Packing (1/4” x 1-5/8” o.d.)	(1)	94337
✓ 19	“O” Ring (3/32” x 1” o.d.)	(1)	Y325-117
20	Piston Rod	(1)	94779
21	Groove Pin (3/16” o.d. x 1-1/8” long)	(1)	94338
22	Spring	(1)	94705
23	Ball (.7500” dia.)	(1)	Y16-224
24	Inner Check	(1)	94279
✓ 25	“O” Ring (3/16” x 1-7/16” o.d.)	(1)	Y325-319
26	Base (models WLM2203A-X1)	(1)	94309
	(models WLM2203A-X2)	(1)	94309-1
27	Nut	(4)	93828
✓ 28	Copper Gasket	(1)	96031
29	Tube	(1)	94314-1
✓ 30	“O” Ring (3/32” x 1-9/16” o.d.)	(1)	Y325-126

Item	Description (size in inches)	Qty	Part No.
31	Ball (1.000” dia.)	(1)	90532-6
32	Ball Stop Pin (.187” dia. x 1.430” long)	(1)	94339
33	Foot Valve (models WLM2203A-X1)	(1)	94315
	(models WLM2203A-X2)	(1)	94315-1
✓ 34	“O” Ring (1/16” x 7/16” o.d.)	(1)	Y325-11
36	Adapter (models WLM2203A-X1)	(1)	94447
	(models WLM2203A-X2)	(1)	94447-1
37	Foam Liner	(2)	95039
38	Ground Screw (#10 - 32 x 1/4”)	(1)	93005
39	Bung Ass’y (includes items 40 and 49)	(1)	67145-3-B
40	Thumb Screw (1/4” - 20 x 1-1/2”)	(1)	Y197-158-C
41	Pipe Extension - (models WLM2203A-31)	(1)	94523-3
	3/4 - 14 N.P.T. x 30-1/8” - (models WLM2203A-41)	(1)	94523-4
	3/4 - 14 N.P.T. x 37-3/4” - (models WLM2203A-51)	(1)	94523-5
	Rp 3/4 (3/4 - 14 BSP taper x 20-3/8”) - (WLM2203A-32)	(1)	94537-3
	Rp 3/4 (3/4 - 14 BSP taper x 30-1/8”) - (WLM2203A-42)	(1)	94537-4
	Rp 3/4 (3/4 - 14 BSP taper x 37-3/4”) - (WLM2203A-52)	(1)	94537-5
42	Valve Housing (WLM2203A-X1)	(1)	94535
	(WLM2203A-X2)	(1)	94535-1
43	Ball Guide	(1)	77904
44	Ball (1.0000” dia.)	(1)	Y16-232
✓ 45	“O” Ring (3/32” x 1-7/16” o.d.)	(1)	Y325-124
46	Ball Seat (models WLM2203A-X1)	(1)	94534
	(models WLM2203A-X2)	(1)	94534-1
47	Valve Ass’y (includes items 42 thru 46)		
	(models WLM2203A-31, -41, -51)	(1)	67085
	(models WLM2203A-32, -42, -52)	(1)	67085-1
48	Washer	(1)	94515
49	Nut (1/4” - 20)	(1)	Y12-4-C
✓	Gadus S2 U1000 Grease Packet	(1)	94833
✓	Parts in Repair Kit		637224

### GENERAL DESCRIPTION

Model WLM2203A-XX series two-ball double acting pumps are intended to be used primarily for oil transfer and delivery systems. It is best to use this pump with low - medium viscosity fluids. It uses carbon steel and other materials which make it compatible with most petroleum based lubrication products. The two-ball design provides better priming of the lower foot valve. Double acting pumps will deliver material on both the up and down stroke.

NOTE: If this pump was purchased separately (not part of a system), consult your sales representative for compatible dispensing accessories which will best match the application. All accessories must be able to withstand the maximum pressure developed by the pump.

### OPERATING AND SAFETY PRECAUTIONS

**READ THE GENERAL INFORMATION MANUAL INCLUDED FOR ADDITIONAL OPERATING AND SAFETY PRECAUTIONS AND OTHER IMPORTANT INFORMATION.**

**STATIC SPARK. Can cause explosion resulting in severe injury or death. Ground the pump and pumping system.**

**EXCESSIVE INLET PRESSURE. Can cause explosion resulting in**

**severe injury or death. Do not exceed maximum operating pressure of 25.5 bar (370 p.s.i.) at 8.5 bar (123 p.s.i.) inlet air pressure. Do not run pump without using a regulator to limit air supply pressure to the pump.**

$$\text{PUMP RATIO X INLET PRESSURE TO PUMP MOTOR} = \text{MAXIMUM PUMP FLUID PRESSURE}$$

Pump ratio is an expression of the relationship between the pump motor area and the lower pump end area. EXAMPLE: When 125 p.s.i. (8.6 bar) inlet pressure is supplied to the motor of a 3:1 ratio pump it will develop a maximum of 375 p.s.i. (25.9 bar) fluid pressure (at no flow) - as the fluid control is opened, the flow rate will increase as the motor cycle rate increases to keep up with the demand.

**EXCESSIVE MATERIAL PRESSURE. Can cause equipment failure resulting in severe injury or property damage. Do not exceed the maximum material pressure of any component in the system.**

NOTICE: Thermal expansion can occur when the fluid in the material lines is exposed to elevated temperatures. Example: Material lines located in a non-insulated roof area can warm due to sunlight. Install a pressure relief valve in the pumping system.

**Replacement warning label (pn 94520) is available upon request.**

# PARTS LIST / WLM2203A-XX

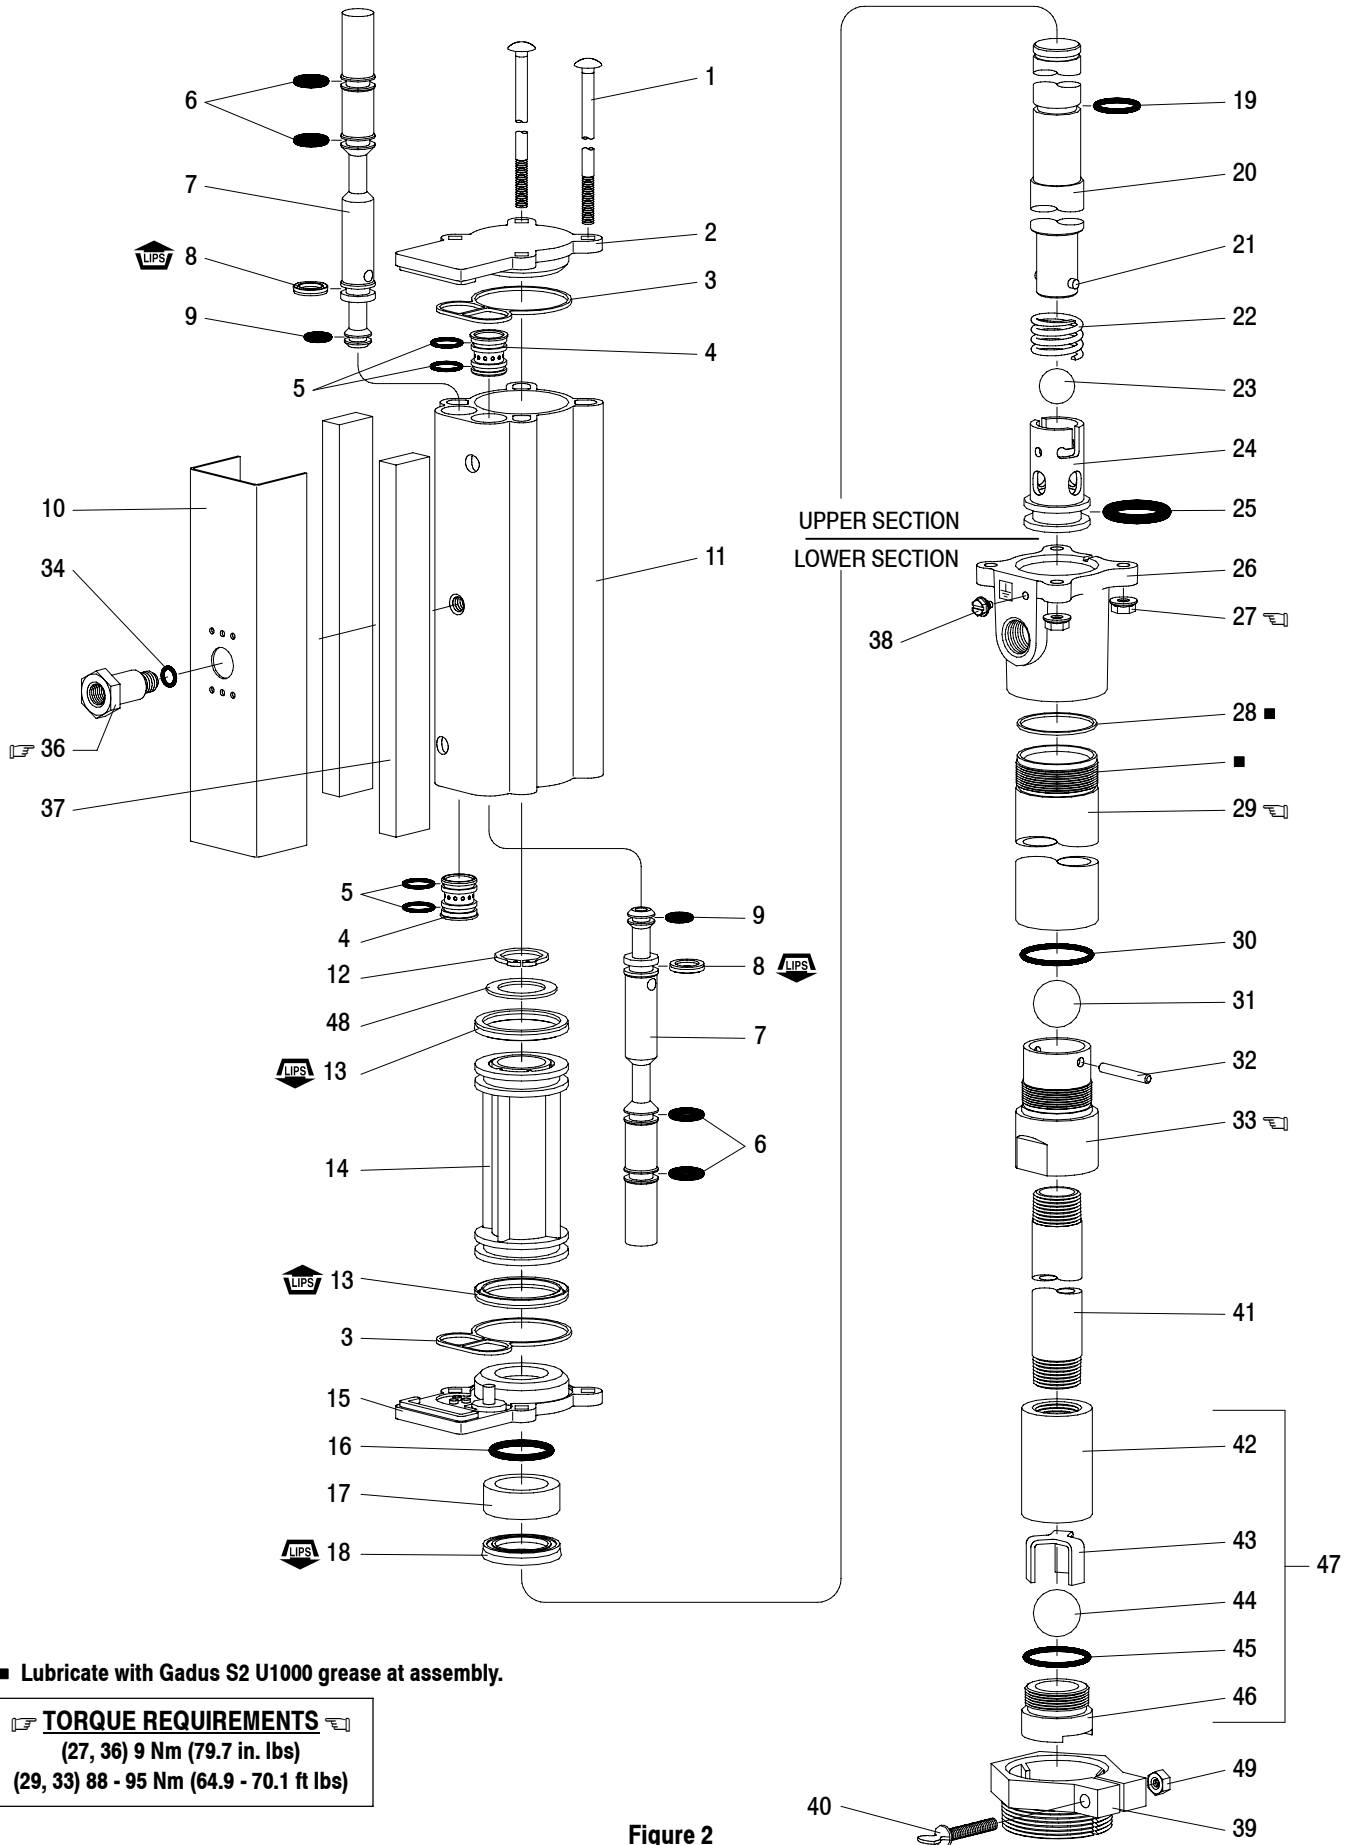


Figure 2

## PLACING INTO SERVICE

### AIR AND LUBRICATION REQUIREMENTS

Filtered air will help extend the life of the pump, allowing the pump to operate more efficiently and yield longer service life to moving parts and mechanisms.

- Install an air line filter to provide good quality clean and dry air. Install it up stream from the regulator.
- Use an air regulator on the air supply to control the pump cycle rate. Install the regulator as close as possible to the pump.
- In most installations, lubrication is not required. If the pump needs to have lubrication, install an air line lubricator and supply it with a good grade of non-detergent oil or other lubricant compatible with Nitrile seals and set at a rate not to exceed one drop per minute.

### INSTALLATION

- Mount and secure the pump as required for the application.
- Attach a ground wire from the pump ground screw to a suitable ground.
- Connect a fluid hose to the pump outlet. In most cases a pipe sealant

should be used on thread connection. Tighten all fittings. Use caution not to damage threads.

## OPERATION

### START-UP

1. Turn the air regulator to "0" pressure setting.
2. Immerse the lower pump end into the material.
3. Open the dispensing device.
4. Start the pump cycling slowly by raising the pressure to 1.4 - 2.1 bar (20 - 30 p.s.i.).
5. Close the dispensing device. Allow the pump to stall and build line pressure. Check for any leaks and tighten fittings as needed. Adjust pressure as required for the application.

### SHUTDOWN

- Disconnect the air supply from the pump if it is to be inactive for a few hours. Open the dispensing device to relieve line pressure.

## SERVICE

### PUMP DISASSEMBLY / REASSEMBLY

**NOTICE:** The unique design of this pump allows for quick basic pump service without total removal from the drum (refer to the views below). **DISASSEMBLY - All threads are right hand. Refer to figure 2. These procedures are for the installation of repair kit parts. Disconnect air supply and relieve all system pressure prior to servicing.** Carefully remove the parts, inspect parts for damage, nicks or excessive wear and determine if any parts will need replacement.

Follow the three disassembly steps in the detail views below and place the pump on a clean bench.

1. Remove (1) bolts. Remove (18) packing, (17) bushing and (16) "O" ring.
2. Remove (36) adapter, releasing (10) muffler.
3. Grasp the (11) cylinder and remove the (20, 14) piston assembly.
4. Remove (15) lower cap and (3) track gasket. Remove (12) retaining ring and (48) washer, then pull (14) piston off (20) piston rod.
5. Remove (2) cap and (3) track gasket. Push on the large o.d. end of the (7) spool to remove the (4) sleeve. Grab the nose of (7) spool and pull out. Repeat for other sleeve and spool.

**REASSEMBLY - Thoroughly clean and lubricate all seals and bores with Shell Gadus S2 U1000 upon assembly. Replace all soft parts with new ones included in the repair kit.**

Note: Refer to the illustration (figure 2) for "U" cup lip seal direction.

1. Replace the seals on both the (7) spools and (4) sleeves.

2. Locate the valve chamber on the (11) cylinder where the 3/8" dia. hole is located and install one of the (4) sleeves. Insert the (7) spool from the opposite end. Next, install the remaining sleeve and spool.
3. Replace the (3) track gasket and install (2) cap.
4. Replace the (13) piston "U" cups (refer to figure 2 for proper orientation). Replace the (19) "O" ring and assemble (14) piston to (20) piston rod and retain with (48) washer and (12) retaining ring.
5. Install the (20, 14) piston assembly using great care to collapse the outer lip of the second "U" cup, allowing it to slip into the cylinder.
6. Replace the (3) track gasket and install the (15) cap. Install the (16) "O" ring onto the piston rod, replace (17) bushing and (18) packing.
7. Replace the (25) "O" ring and re-attach the (24) inner check.
8. Slide the pump assembly back into the (26) base / lower pump section. Press the sections together and align the air inlet and pump outlet as required and replace the four (1) bolts and (27) nuts (tighten to 9 Nm (79.7 in. lbs)).

## TROUBLE SHOOTING

**If the pump will not cycle or will not deliver material.**

- Be certain to check for non-pump problems including kinked, restrictive or plugged inlet / outlet hose or dispensing device. Depressurize the pump system and clean out any obstructions in the inlet / outlet material lines.
- Check all seals, including track gaskets.
- Check direction of "U" cup lips.

A) Remove the four nuts from the base of the Air Motor.

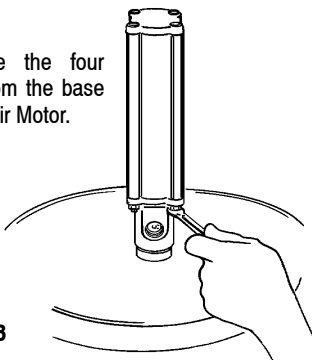


Figure 3

B) Grasp the lower motor cap and pull out the motor and upper section of the lower section.

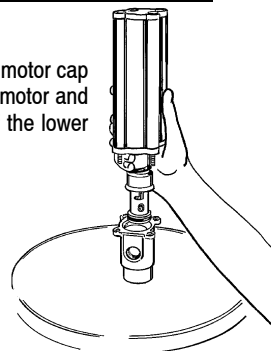


Figure 4

C) Unlock the (24) inner check from the piston rod.

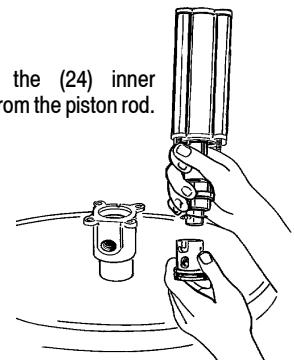


Figure 5

PN 97999-865

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>