

Thank you for purchasing a LifeWise Pulse Monitor Watch. Your watch combines a clock, a stopwatch, a countdown timer, and a pulse meter all in one convenient system, so it's easy to use, wherever you go!

Large Liquid Crystal Display — shows you large, easy-to-read digits.


START/STOP/AL — press to start or stop the stopwatch or view the alarm.

SET/RESET — press to select or reset a setting.

Alarm — sounds at the time you set.

MODE — press to switch between the clock, stopwatch, and countdown timer.

Stopwatch — lets you time events up to 100 minutes in length.

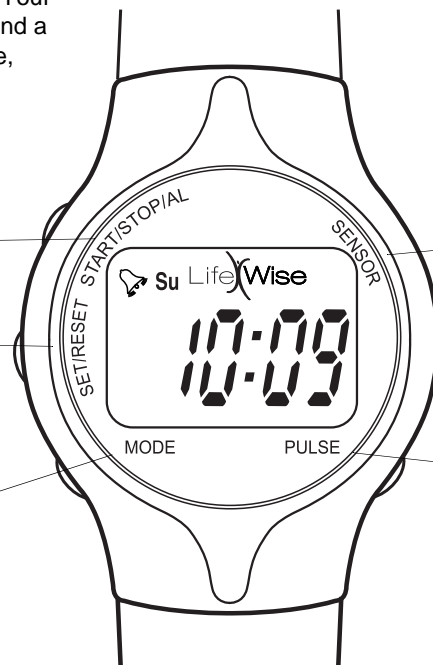

Time/Day Display — shows the time in a 12- or 24-hour format and the day of the week.

SENSOR — gently hold your finger against the sensor to take your pulse.

Pulse Meter — detects your pulse rate when you place your fingertip on the pulse sensor.

PULSE — press to activate the pulse meter.

Preset Countdown Timer — counts down from a specific time limit (3, 4, 5, 10, 15, 30, 60, or 90 minutes).

Your watch's display is covered by a protective film. Be sure to remove it before using your watch.

NOTE

- While setting the time and day, if you do not press any button within about 10 seconds, the watch returns to the current time display.
- The watch shows the time in a 12-hour or a 24-hour time format. If you use the 12-hour format, P appears at the left of the display for PM hours.

SETTING THE TIME AND DAY

1. Repeatedly press **MODE** until the time appears.
2. Hold down **SET/RESET**. The hour digits flash.
3. Repeatedly press, or hold down, **START/STOP/AL** to set the correct hour.
4. Press **SET/RESET** to store the hour. The minute digits flash.

Repeat Steps 3 and 4 to set the minute, day of the week, and time format. After setting the time format, the current time and day of the week appear.

SETTING THE ALARM TIME

1. Repeatedly press **MODE** until the current time appears.
2. Hold down **START/STOP/AL**. 12:00 (in 12-hour format), or 0:00 (in 24-hour format), or the last set alarm time appears. The watch beeps once. The alarm is turned on and appears.

3. While holding down **START/STOP/AL**, press **SET/RESET** once. The hour digits flash.
4. Repeatedly press, or hold down, **START/STOP/AL** to set the alarm hour.
5. Press **SET/RESET** to store the hour. The minute digits flash.
6. Repeat Steps 4 and 5 to set the minute. After completing setup, the current time appears.
7. To view the set alarm time, press **START/STOP/AL** and the preset alarm time appear.

At the set time, the watch sounds an alarm for about one minute. Press any button to silence the alarm before it automatically turns off. The alarm sounds again the next day at the same time.

TURNING THE ALARMS ON/OFF

To turn the alarm on or off any time, hold down **START/STOP/AL**. appears when the alarm is on and disappears when the alarm is off.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning

! — Important

📌 — Note

© 2003 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

NOTE


Using the Stopwatch

- When the stopwatch is running, press **START/STOP/AL** then **SET/RESET** to reset it to **00:00**.
- While the stopwatch is running, press **MODE** to use the watch's other features.

Using the Countdown Timer

- To reset the countdown timer when it is running, press **START/STOP/AL** to stop counting then repeatedly press **SET/RESET** until the selected countdown time limit appears.
- To reset the countdown timer when it is not running and the display is not set to the preset time limit, repeatedly press **SET/RESET** until the selected countdown time limit appears.

Using the Pulse Meter

- Do not press your finger tightly against the sensor.
- If your fingers are cold or heavily calloused, the pulse meter cannot take an accurate reading.  and **Err** appear.
- The sensor's range is from 40 to 199 beats per minute (bpm). If your heart rate is over 199 bpm, the meter only shows up to 199 bpm.

WARNING

- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.
- Always dispose of batteries promptly and properly. Do not burn or bury them.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.


This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99


USING THE STOPWATCH

The stopwatch counts the elapsed time up to 99 minutes and 59 seconds. When the timer reaches 99:59, it resets to 00:00 and begins counting up again.



1. Repeatedly press **MODE** until **▲** and **00:00** appear. 
2. Press **START/STOP/AL** to start counting. The elapsed time displays.
3. To stop or pause counting, press **START/STOP/AL**. To resume counting, press **START/STOP/AL** again.


USING THE COUNTDOWN TIMER

The countdown timer lets you select a specific time limit (3, 4, 5, 10, 15, 30, 60, or 90 minutes) and counts it down for you.

1. Repeatedly press **MODE** until **▼** and **0:00**, or the last selected time limit, appear.
2. Repeatedly press **SET/RESET** to select the desired count down time limit.
3. Press **START/STOP/AL** to start or stop the countdown. When the timer reaches **0:00**, the alarm sounds for 30 seconds. To silence the alarm sooner, press any button. 

USING THE PULSE METER

1. Place the watch on the desk, wear it on your wrist, or hold it in your hand.
2. Press **PULSE**.  and **- - - -** appear.
3. Gently place your fingertip over the sensor marked **SENSOR** at the upper right side of the watch.
4. The pulse meter beeps once and **0** appears.  flashes and the pulse meter beeps at the same rate as your heartbeat.

After about 8 seconds, the pulse meter sounds a long beep and the pulse rate appears. Then the previously displayed screen appears. 

CARE


Keep the watch dry; if it gets wet, wipe it dry immediately. Use and store the watch only in normal temperature environments. Handle the watch carefully; do not drop it. Keep the watch away from dust and dirt, and wipe it

with a damp cloth occasionally to keep it looking new.

If your watch is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the watch's internal components can cause a malfunction and might invalidate its warranty.

REPLACING THE BATTERY

Your watch comes with one CR2032 lithium battery installed. If the display dims, replace the battery.

1. Use a Phillips screwdriver to remove the four screws from the battery compartment cover on the back of the watch. Be careful not to lose them.
2. Remove the cover.
3. Remove one of the screws on the battery holder's cover.
4. Slide the cover to one side and remove the old battery. Install a new battery with the positive (+) side up.
5. Replace the battery holder cover and secure it with the screw.
6. Replace the battery compartment cover and secure it with the screws. 

SPECIFICATIONS

Power Source	CR2032 Lithium Battery
Time Accuracy	±0.67 Sec./Day
Current Drain	Less Than 7mA
Pulse Accuracy	± 5% Tolerance
Operating Temperature ...	32° – 122°F (0° – 50°C)
Battery Life (With continuous Pulse Meter use)	60 Hours
Dimensions (HWD)	9 ¹³ / ₁₆ × 1 ¹¹ / ₁₆ × 5 ⁵ / ₈ Inches (250 × 43 × 17 mm)
Weight (Including Battery)	1.59 oz (45 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

RadioShack Corporation
Fort Worth, Texas 76102

63-609
06A03
Printed in Taiwan

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>